

KOLLMORGEN
Seidel

Synchronous Servomotors

Series GOLDLINE™ BH



Technical description, Installation, Commissioning
Edition 07/2000

Already published editions

Edition	Comments
09 / 98	First edition
03 / 99	Completion of the motor series
08 / 99	Motor length (with brake)
07 / 2000	BH-426-D replaced by BH-426-H

**Technical changes to improve the performance of the equipment
may be made without prior notice!**

Printed in the Federal Republic of Germany 07/2000

Mat.No.: 91678

All rights reserved. No part of this work may be reproduced in any form (by printing, photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Seidel Corporation.

	Drawing	Page
Contents		3
Safety Notes		5
Important Notes		6
Manufacturer Declaration		7
I General		
I.1 About this manual		9
I.2 Prescribed usage of the Motors		9
I.3 Design of the motors		10
I.4 General technical data		10
I.5 Standard features		11
I.5.1 Style		11
I.5.2 Shaft end, A-side		11
I.5.3 Flange		11
I.5.4 Protection class		11
I.5.5 Protective device	- E.4.929,4/09.	11
I.5.6 Insulation material class		12
I.5.7 Vibration class		12
I.5.8 Connection method		12
I.5.9 Resolver		12
I.5.10 Holding brake	- A.4.031,1/35.	12
I.6 Options		13
I.7 Selection criteria	- A.4.033,4/07.	13
I.8 Technical data		14
I.8.1 Definitions		14
I.8.2 Technical data GOLDLINE™ BH		15
II Installation and commissioning		
II.1 Important notes		17
II.2 Assembly / Wiring		18
II.2.1 Connection methods		20
II.3 Commissioning		21

Contents**Drawing Page****III Drawings**

III.1	Motors with sockets	23
III.1.1	Dimensions GOLDLINE™ BH1xx..4xx	23
III.1.2	Radial-/axial forces at the shaft end	- A.4.033,3/01, 4/05 .. 23
III.1.3	Wiring GOLDLINE™ BH-1xx..4xx	- A.4.033,4/03 .. 24
III.1.4	Performance curve GOLDLINE™ BH-122-A	25
III.1.5	Performance curve GOLDLINE™ BH-124-B	- A.4.033,3/35, 36 .. 25
III.1.6	Performance curve GOLDLINE™ BH-126-B	26
III.1.7	Performance curve GOLDLINE™ BH-222-B	- A.4.033,3/37, 38 .. 26
III.1.8	Performance curve GOLDLINE™ BH-224-B	27
III.1.9	Performance curve GOLDLINE™ BH-226-C	- A.4.033,3/26, 39 .. 27
III.1.10	Performance curve GOLDLINE™ BH-226-E	28
III.1.11	Performance curve GOLDLINE™ BH-422-D	- A.4.033,3/40, 41 .. 28
III.1.12	Performance curve GOLDLINE™ BH-424-B	29
III.1.13	Performance curve GOLDLINE™ BH-424-D	- A.4.033,3/27, 42 .. 29
III.1.14	Performance curve GOLDLINE™ BH-426-B	30
III.1.15	Performance curve GOLDLINE™ BH-426-H	- A.4.033,3/30, 69 .. 30
III.2	Motors with terminal box	31
III.2.1	Dimensions GOLDLINE™ BH6xx..8xx	31
III.2.2	Radial-/axial forces at the shaft end	- A.4.033,3/02, 4/06 .. 31
III.2.3	Wiring GOLDLINE™ BH-6xx..8xx	- A.4.033,4/04 .. 32
III.2.4	Performance curve GOLDLINE™ BH-622-B	33
III.2.5	Performance curve GOLDLINE™ BH-624-C	- A.4.033,3/28, 44 .. 33
III.2.6	Performance curve GOLDLINE™ BH-624-D	34
III.2.7	Performance curve GOLDLINE™ BH-626-E	- A.4.033,3/29, 34 .. 34
III.2.8	Performance curve GOLDLINE™ BH-822-D	35
III.2.9	Performance curve GOLDLINE™ BH-824-A	- A.4.033,3/45, 46 .. 35
III.2.10	Performance curve GOLDLINE™ BH-824-D	36
III.2.11	Performance curve GOLDLINE™ BH-826-C	- A.4.033,3/31, 47 .. 36
III.2.12	Performance curve GOLDLINE™ BH-826-D	37
III.2.13	Performance curve GOLDLINE™ BH-828-B	- A.4.033,3/48, 49 .. 37
IV	Appendix	
IV.1	Delivery package, transport, storage, maintenance, disposal	39
IV.2	Fault-finding	40
IV.3	Index	41

Safety Notes


- Only properly qualified personnel are permitted to perform such tasks as transport, assembly, commissioning and maintenance. Properly qualified personnel are persons who are familiar with the transport, assembly, installation, commissioning and operation of motors, and who have the appropriate qualifications for their jobs. The qualified personnel must know and observe the following standards and regulations:
 - 364 resp. CENELEC HD 384 or DIN VDE 0100
 - IEC report 664 or DIN VDE 0110
 - national regulations for safety and accident prevention or BVG A2
- Read the available documentation before assembly and commissioning. Incorrect handling of the motors can result in injury and damage to persons and machinery. Keep strictly to the technical data and the information on the connection requirements (nameplate and documentation).
- It is vital that you ensure that the motor housing is safely earthed to the PE(protective earth) busbar in the switch cabinet. Electrical safety is impossible without a low-resistance earth connection.
- Do not unplug any connectors during operation. This creates the danger of death, severe injury, or extensive material damage.
- Power connections may be live even when the motor is not rotating. Never disconnect the power connections of the motor while the equipment is energised. This can cause with resulting injuries to persons and damage to the contacts.
- After disconnecting the servo amplifier from the supply voltage, wait at least five minutes before touching any components which are normally live (e.g. contacts, screw connections) or opening any connections. The capacitors in the servo amplifier can still carry a dangerous voltage up to five minutes after switching off the supply voltages. To be quite safe, measure the DC-link voltage and wait until the voltage has fallen below 40V.
- The surfaces of the motors can be very hot in operation, according to their protection category. The surface temperature can reach 100°C. Measure the temperature, and wait until the motor has cooled down below 40°C before touching it.
- Remove any fitted key (if present) from the shaft before letting the motor run independently, to avoid the dangerous results of the key being thrown out by centrifugal forces.

Symbols used in this manual

	Danger to personnel from electricity and its effects		General warning general instructions mechanical hazard
⇒	See chapter (cross-reference)	●	Special emphasis

Important Notes

- Servomotors are precision equipment. The flange and shaft are especially vulnerable during storage and assembly — so avoid brute force. Precision requires delicacy. It is important to use the locking thread which is provided to tighten up couplings, gear wheels or pulley wheels and warm up the drive components, where possible. Blows or the use of force will lead to damage to the bearings and the shaft.

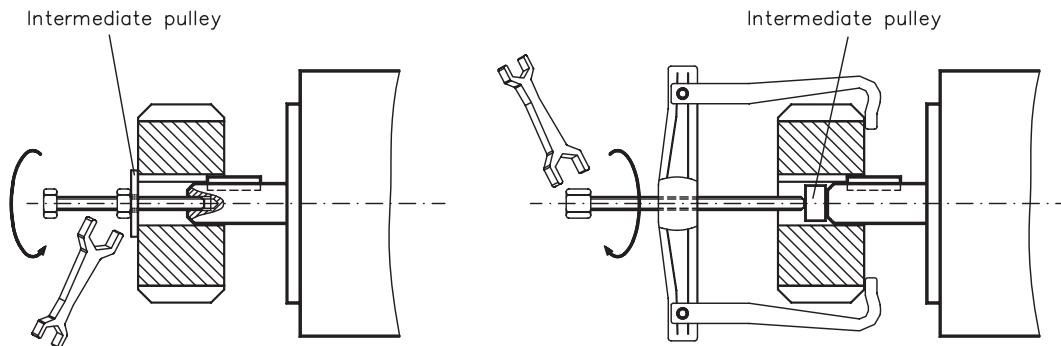

- Wherever possible, use only backlash-free, frictionally-locking collets or couplings, e.g. from the manufacturers & Cie, Gerwah, Jacob, KTR or Ringspann. Ensure correct alignment of the couplings. A displacement will cause unacceptable vibration and the destruction of the bearings and the coupling.
- For toothed belts, it is vital to observe the permissible radial forces. An excessive radial load on the shaft will significantly shorten the life of the motor.
- Avoid axial loads on the motor shaft, as far as possible. Axial loading significantly shortens the life of the motor.
- In all cases, do not create a mechanically constrained motor shaft mounting by using a rigid coupling with additional external bearings (e.g. in a gearbox).
- For mounting style V3 (shaft end upwards), make sure that no liquid can enter the upper bearing.
- Take note of the no. of motor poles and the no. of resolver poles and ensure that the correct setting is made in the servo amplifier which is used. An incorrect setting can lead to the destruction of the motor, especially with small motors.

Manufacturer Declaration

According to the EG-Machine-guideline 89/392/EWG, appendix II B

we, the company

Kollmorgen Seidel GmbH & Co. KG
Wacholderstr. 40-42
40489 Düsseldorf

declare, that the product

Motor series GOLDLINE™ BH

is intended exclusively, in its standard version, for installation in another machine and that its commissioning is forbidden until it has been established that the machine into which this product is to be installed conforms to the provisions of the EC Directive in its version 89/392/EEC.

We confirm that the above-mentioned product conforms to the following standards:

73/23/EWG	Low voltage directive
VDE 0530 / DIN 57530	Provisions for rotating machinery
DIN 42950	Design
DIN 748	Cylindrical shaft ends
DIN 6885	Fitted key
DIN 42955	True running, coaxiality and concentricity
DIN ISO 2373	Vibration class

Issued by: Management

Lawrence D. Kingsley

This Declaration does not contain any assurance of properties. The notes on safety and protection in the operating instructions must always be observed.

This page is deliberately left blank.

I General

I.1 About this manual

This manual describes the GOLDLINE™ BH series of synchronous servomotors.
The manual is divided into 4 chapters:

- | | |
|---|-------------|
| ● Description of the motors, technical data | Chapter I |
| ● Installation, commissioning of the motors | Chapter II |
| ● Dimensions, Wiring diagrams and performance curves | Chapter III |
| ● Transport, storage, maintenance, disposal of the motors | Chapter IV |



This Manual is intended for the use of qualified staff with professional knowledge of electrical and mechanical engineering.

The motors are operated in drive systems together with servo amplifiers from the SERVOSTAR™ 600 family. Please observe the entire system documentation, consisting of:

- Installation and commissioning instructions for the servo amplifier
- Installation and commissioning instructions for any expansion card which is connected
- Operating manual for the Operator Software of the servo amplifier
- Technical description of the GOLDLINE™ BH series of motors

I.2 Prescribed usage of the Motors

The GOLDLINE™ BH series of synchronous servomotors is designed especially for drives for industrial robots, machine tools, textile and packing machinery and similar with high requirements for dynamics.

The user is **only** permitted to operate the motors under the ambient conditions which are defined in this documentation.

The GOLDLINE™ BH series of motors is **exclusively** intended to be driven by servo amplifiers from the SERVOSTAR™ 600 series under speed and / or torque control.

The motors are installed as components in electrical apparatus or machines and can only be commissioned and put into operation as integral components of such apparatus or machines.

The motors must never be connected directly to the mains supply.

The thermal contact which is integrated in the motor windings must be observed and evaluated.

The conformity of the servo-system to the standards mentioned in the manufacturers declaration on page 7 is only guaranteed when the components (servo amplifier, motor, leads etc.) that are used have been supplied by us.

I.3

Design of the motors

Synchronous servomotors in the GOLDLINE™ BH series are brushless DC motors for demanding servo applications. When combined with our digital servo amplifiers they are especially suited for positioning tasks in industrial robots, machine tools, transfer lines etc. with high requirements for dynamics and stability.

The servomotors have permanent magnets in the rotor. The rare earth neodymium-iron -boron magnetic material is an important factor in making it possible to drive these motors in a highly dynamic fashion. A three-phase winding which is driven by the servo amplifier is integrated into the stator. The motor does not have any brushes since commutation is performed electronically by the servo amplifier.

The temperature of the winding is monitored by temperature sensors in the stator-windings and is signalled via an electrically isolated contact (normally closed).

A **resolver** is built into the motors as a feedback element. The servo amplifiers in the SERVOSTAR™ 600 series evaluate the resolver (hence rotor) position and supply sinusoidal currents to the motors.

The motors can be delivered with or without a built-in holding brake. Retrofitting of the brake is not possible.

The motors are enamelled in matt black (RAL 9005). This finish is not resistant against solvents (e.g. trichlorethylene, nitro-thinners, or similar).

I.4


General technical data

Climate category	3K3 to EN 50178
Ambient temperature (at rated values)	5...+40°C for site altitude up to 1000m amsl It is vital to consult our applications department for ambient temperatures above 40°C and encapsulated mounting of the motors.
Permissible humidity (at rated values)	85% rel. humidity, no condensation
Power derating (currents and torques)	1%/K in range 40°C..50°C up to 1000m amsl for site altitude above 1000m amsl and 40°C 6% up to 2000m amsl 17% up to 3000m amsl 30% up to 4000m amsl 55% up to 5000m amsl No derating for altitudes above 1000m amsl with temperature reduction of 10K / 1000m
Max. permissible flange temperature	65°C ± 10% at rated values
Ball-bearing life	≥ 20.000 operating hours
Technical data	⇒ I.8
Storage data	⇒ IV.1

I.5 Standard features

I.5.1 Style

The basic style for the GOLDLINE™ BH synchronous motors is style IM B5 according to DIN42950. The permitted mounting positions may be read from the technical data of the motor series.

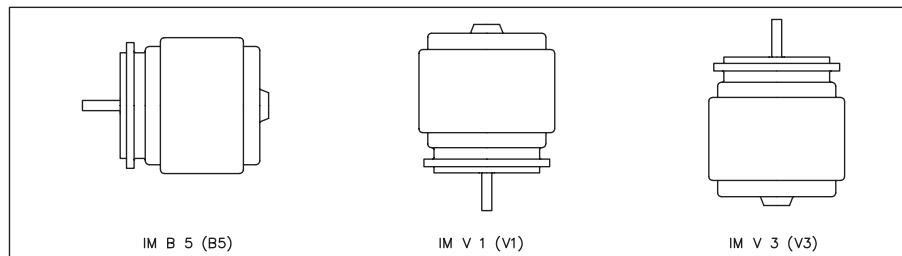

I.5.2 Shaft end, A-side

Power transmission is made through the cylindrical shaft end A (fit k6) to DIN 748, with a locking thread and with a fitted keyway according to DIN6885, shape A.

If the motors drive via pinions or toothed belts, then high radial forces will occur. The permissible values at the end of the shaft may be read from the diagram in chapter III.1.2 and III.2.2. The maximum values at rated speed you will find at the technical data. Power take-off from the middle of the free end of the shaft allows a 10% increase in F_R .

The curves are based on a bearing life of 20.000 operating hours.

The axial force F_A must not exceed $F_R/3$.

Double-coned collets have proved to be ideal zero-backlash coupling devices, combined, if required, with metal bellows couplings.

I.5.3 Flange

Flange dimensions to IEC standard, fit j6, accuracy according to DIN 42955.
Tolerance class : N

I.5.4 Protection class

Standard version	IP65
Standard shaft bushing	IP64
Shaft bushing with shaft-sealing ring (Option -J-)	IP65

I.5.5 Protective device

The standard version of each motor is fitted with a thermostat (electrically isolated, normally closed). You will find the switching point at the technical data. The thermostat does **not** provide any protection against short, heavy overloading. Provided that our preassembled resolver cable is used, the thermostat contact is integrated into the monitoring system of the digital servo amplifier SERVOSTAR™ 600.

The flange temperature must not exceed 65°C in rated operation.

I.5.6 Insulation material class

You will find the insulation material class according to DIN 57530 at the technical data.

I.5.7 Vibration class

The motors are made to vibration class N according to DIN ISO 2373 .

I.5.8 Connection method

Motor series	Resolver	Power
BH-1xx-x...4xx-x	connector	connector
BH-6xx-x...8xx-x	connector	terminal box

The mating connectors are not part of the delivery package. We can supply preassembled resolver and power leads (⇒ II.2.1).

I.5.9 Resolver

The motors are equipped with two-pole hollow-shaft resolvers.

I.5.10 Holding brake

The motors are optionally available with a holding brake mounted.

Type designation : BH-xxx-x-G


A permanent magnet brake (24V DC) is integrated into the G-motors. When this brake is de-energized it blocks the rotor. **The holding brakes are designed as standstill brakes** and are not suited for repeated operational braking. If the brake is released then the rotor can be moved without a remanent torque, the operation is not free from backlash! The motor length increases when a holding brake is mounted.

The holding brake can be controlled directly by SERVOSTAR™ 600-servo amplifier (no personal safety !), the winding is suppressed in the servo amplifier — additional circuitry is not required.

If the holding brake is not controlled directly by the servo amplifier, an additional wiring (e.g. varistor) is required. Consult our applications department beforehand.

A personal safe operation of the holding brake requires an additional contact (normally opened) in the braking circuit and an anti-surge-device (e.g. Varistor) for the brake.


Wiring example for SERVOSTAR™ 600:

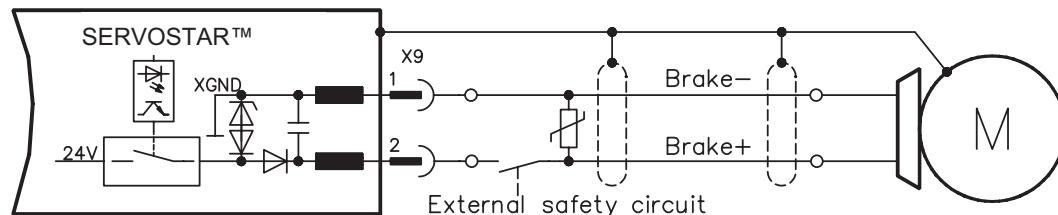

I.6

Options

- J- Radial shaft-sealing rings:
A radial shaft-sealing ring can be supplied at extra charge to seal against oil mist and oil spray. This increases the protection rating of the shaft bushing to IP65. The sealing ring is not suitable for dry running.
- 426- encoder adaptor for ROD426/ROQ425 with coupling (6mm shaft diameter) and eccentric washers

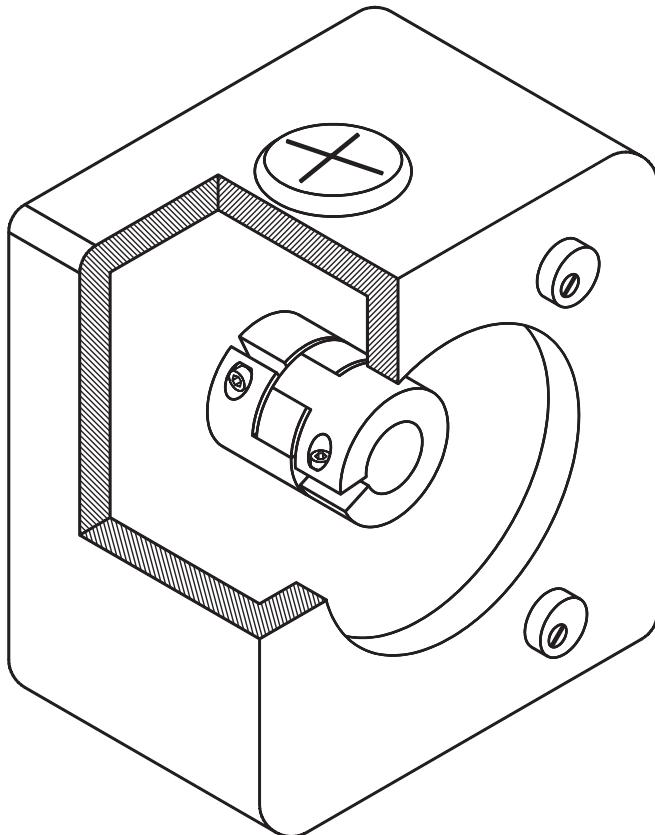

I.7

Selection criteria

The three-phase servomotors are designed to operate with Seidel servo amplifiers from the SERVOSTAR™ 600 series. Together, both units form a closed speed or torque control loop.

The most important selection criteria are:

— Standstill torque	M_0	[Nm]
— Rated speed	n_n	[min⁻¹]
— Moment of inertia of motor and load	J	[kgcm²]
— Effective torque (calculated)	M_{rms}	[Nm]

When calculating the motors and servo amplifiers which are required, take account of the static load **and** the dynamic load (acceleration/braking). Collected formulae and examples of the calculations are available from our applications department.

I.8 Technical data

I.8.1 Definitions

Standstill torque M_0 [Nm]

The standstill torque can be maintained indefinitely at a speed $n=0$ min $^{-1}$ and rated ambient conditions.

Rated torque M_n [Nm]

The rated torque is produced when the motor is drawing the rated current at the rated speed. The rated torque can be produced indefinitely at the rated speed in continuous operation (S1).

Standstill I_{0rms} [A]

The standstill current is the effective sinusoidal current which the motor draws during standstill to produce the standstill torque.

Rated current I_{nrms} [A]

The rated current is the effective sinusoidal current which the motor draws at the rated speed in order to produce the rated torque.

Peak current (pulse current) I_{0max} [A]

The peak current (effective sinusoidal value) should not exceed 3.5-times the rated current. The actual value is determined by the peak current of the servo amplifier which is used.

Torque constant K_{Trms} [Nm/A]

The torque constant defines how much torque in Nm is produced by the motor with 1A r.m.s. current. The relationship is $M=I \times K_T$

Voltage constant K_{Erms} [V/1000min $^{-1}$]

The voltage constant defines the induced motor EMF, as an rms value between two terminals, per 1000 r.p.m.

Rotor moment of inertia J [kgcm 2]

The constant J is a measure of the acceleration capability of the motor. For instance, at I_0 the acceleration time t_b from 0 to 3000 r.p.m. is given as:

$$t_b \text{ [s]} = \frac{3000 \times 2\pi \times m^2}{M_0 \times 60s \times 10^4 \times cm^2} \times J \quad \text{with } M_0 \text{ in Nm and } J \text{ in kgcm}^2$$

Thermal time constant t_{th} [min]

The constant t_{th} defines the time for the cold motor, under a load of I_0 , to heat up to an overtemperature of 0.63×115 Kelvin. This temperature rise happens in a much shorter time when the motor is loaded with the rated current.

Release delay time t_{BRH} [ms] / Application delay time t_{BRL} [ms] of the brake

These constants define the response times of the holding brake when operated with the rated voltage from the SERVOSTAR™ 600 servo amplifier.

I.8.2 Technical data GOLDLINE™ BH

	Sym	Dim	GOLDLINE™ BH-122-A	GOLDLINE™ BH-124-B	GOLDLINE™ BH-126-B	GOLDLINE™ BH-222-B	GOLDLINE™ BH-224-B	GOLDLINE™ BH-226-C	GOLDLINE™ BH-226-E	GOLDLINE™ BH-422-D	GOLDLINE™ BH-424-B	GOLDLINE™ BH-424-D	GOLDLINE™ BH-426-B	GOLDLINE™ BH-426-H
Data														
Standstill torque	M_0	Nm	0,7	1,3	1,9	2,1	3,8	5,5	5,6	5,8	11,3	11,1	15,8	15,7
Standstill current	$I_{0\text{rms}}$	A	1,0	1,8	2,6	1,3	2,2	4,4	3,0	4,0	4,2	6,3	8,1	9,1
Rated speed at 400V	n_n	min ⁻¹	6000	6000	6000	3000	3000	4000	2500	3600	2000	3000	2500	3000
Torque constant	$K_{T\text{rms}}$	Nm/A	0,70	0,74	0,74	1,62	1,70	1,25	1,86	1,45	2,69	1,75	1,95	1,73
Voltage constant	$K_{E\text{rms}}$	mV/min ⁻¹	42,6	44,9	44,9	98	103	75,4	112	87,4	162	106	118	105
Mains voltage	U_n	V								400 / 480				
Rated torque at 400V	M_n	Nm	0,6	1,2	1,7	2,0	3,5	4,8	3,9	5,2	10,8	10	14,4	13
Rated current	I_n	A	0,85	1,6	2,3	1,2	2	3,8	2,6	3,4	4	5,6	7,2	7,5
Rated power	P_n	kW	0,38	0,76	1,1	0,63	1,1	2,0	1,3	1,9	2,2	3,1	4,4	4,7
Peak current	$I_{0\text{max}}$	A	3,6	6,3	9	4,6	8	16	11,5	14,4	14	22,5	27	29,5
Motor pole no	p_{Mot}	-								4				
Resolver pole no.	p_{Res}	-								2				
Winding resistance Phase-Phase	R_{20}	Ω	34,9	12,4	8,2	35,4	12,5	3,9	8,5	6,1	6,3	3,3	2,1	1,9
Winding inductance Phase-Phase	L	mH	120	58	38	272	152	44	92	89	134	60	48	39,7
Insulation class	-	-								H (DIN 57530)				
Switch point thermal contact	-	°C								170±5				
Mechanics (Dimensions ⇒ III.1.1)														
Design	-	-								IM B5(V1,V3), (DIN 42950)				
Rotor moment of inertia	J	kgcm ²	0,3	0,46	0,76	1,0	1,7	2,5	2,5	3,2	7	6,6	10	10
Static friction torque	M_R	Nm	0,04	0,05	0,07	0,08	0,09	0,1	0,1	0,24	0,26	0,26	0,29	0,29
Radial load permitted at shaft end with n_n	F_R	N		200		260		280		300	400	500	400	500
Axial load permitted at shaft end with n_n	F_A	N		70				100					170	
Tolerance class flange	-	-								N (DIN 42955)				
Vibration class	-	-								N (DIN ISO2373)				
Thermal time constant	t_{TH}	min	10	11	12	18	20	20	21	22	25	25	28	28
Weight standard	G	kg	2,5	3,2	3,9	4,1	6,2	7,6	7,6	8,4	12,5	12,5	16	16
Order number standard	-	-	91452	91454	91456	91458	91460	89130	91463	91465	90684	91468	89128	91472
Connectors														
EMV-RES connector	-	-								Socket, 12 poles				
RES cable, shielded	-	mm ²								4 x 2 x 0,25				
Power connection	-	-								Socket, 8 poles				
Motor cable, shielded	-	mm ²								4x1...4x1,5 (+ 2x0,75 for brake)				
Holding brake														
Holding torque	M_{BR}	Nm		2,3				6			8			
Operating voltage	U_{BR}	V=							24					
electrical power	P_{BR}	W		20				30			22			
Moment of inertia	J_{BR}	kgcm ²		0,02				0,02			0,59			
Release delay time	t_{BRH}	ms		200				250			250			
Application delay time	t_{BRI}	ms		100				100			100			
Weight of the brake	G_{BR}	kg		1,1				1,6			2,4			
Order number with -G-	-	-	91453	91455	91457	91459	91461	91462	91464	91466	91467	91469	91471	91473
max. Ø of the motor cable	-	mm							13,5					

	Sym	Dim	GOLDLINE™ BH-622-B	GOLDLINE™ BH-624-D	GOLDLINE™ BH-624-C	GOLDLINE™ BH-626-E	GOLDLINE™ BH-822-D	GOLDLINE™ BH-824-D	GOLDLINE™ BH-824-A	GOLDLINE™ BH-826-C	GOLDLINE™ BH-826-D	GOLDLINE™ BH-828-B
Data												
Standstill torque	M_0	Nm	14,9	25,8	27,6	35,4	34,7	66	66	93	93	124
Standstill current	$I_{0\text{rms}}$	A	8,4	12,4	19	20	18,1	32	37	39,7	52	50
Rated speed at 400V	n_n	min ⁻¹	3000	2500	3600	3000	3000	2500	3000	2500	3000	2500
Torque constant	$K_{T\text{rms}}$	Nm/A	1,77	2,07	1,48	1,8	1,92	2,08	1,8	2,34	1,8	2,5
Voltage constant	$K_{E\text{rms}}$	mV/min ⁻¹	107	125	90	108	116	126	108	141	103	150
Mains voltage	U_n	V					400 / 480					
Rated torque at 400V	M_n	Nm	12,7	23,7	18,4	24,9	30	48,1	43,9	55,1	47,5	75,7
Rated current	I_n	A	6,7	11,1	12,2	14,4	15,1	23	22,5	20,3	24	35
Rated power	P_n	kW	3,7	7,2	7,5	8,2	9,1	12,3	12	12,4	12,8	17,2
Peak current	$I_{0\text{max}}$	A	37,7	44	62	74	66,8	118	137	145	200	175
Motor pole no.	p_{Mot}	-					6					
Resolver pole no.	p_{Res}	-					2					
Winding resistance Phase-Phase	R_{20}	Ω	1,91	1,01	0,53	0,43	0,583	0,233	0,155	0,167	0,088	0,112
Winding inductance Phase-Phase	L	mH	32	23	10	10,7	20,8	11	7,3	9	4,7	4,7
Insulation class	-	-					H (DIN 57530)					
Switch point thermal contact	-	°C					170±5					
Mechanics (Dimensions ⇒ III.2.1)												
Design	-	-					IM B5(V1,V3), (DIN 42950)					
Rotor moment of inertia	J	kgcm ²	10,3	20,3	20,3	30,4	48,8	84	84	126	126	168
Static friction torque	M_R	Nm	0,49	0,52	0,52	0,9	0,64	0,9	0,9	1,38	1,4	1,8
Radial load permitted at shaft end with n_n	F_R	N		650				870				1050
Axial load permitted at shaft end with n_n	F_A	N		210				290				330
Tolerance class flange	-	-					N (DIN 42955)					
Vibration class	-	-					N (DIN ISO2373)					
Thermal time constant	t_{TH}	min	28	33	33	38	40	48	48	55	55	57
Weight standard	G	kg	16,8	23	23	30	35,8	51	51	67	67	82
Order number standard	-	-	91474	90685	90299	90301	91479	90525	90687	91483	90688	90689
Connectors												
EMV-RES connector	-	-					Socket, 12 poles					
RES cable, shielded	-	mm ²					4 x 2 x 0,25					
Power connection	-	-		Screw M4, in terminal box			Screw M5, in terminal box					
Motor cable, shielded	-	mm ²		4x2,5 (+ 2x1 for brake)				4x10		4x16		
Holding brake												
Holding torque	M_{BR}	Nm					48					
Operating voltage	U_{BR}	V=										
electrical power	P_{BR}	W					30					
Moment of inertia	J_{BR}	kgcm ²					1,27					
Release delay time	t_{BRH}	ms					250					
Application delay time	t_{BRL}	ms					100					
Weight of the brake	G_{BR}	kg		4,4				4,7				
Order number with -G-	-	-	91475	91477	91476	91478	91480	91482	91481	91484	91485	91486
max. Ø of the motor cable	-	mm		16,5 / PG21				35 / PG36				

II Installation and commissioning

II.1 Important notes

- Check that the servo-amplifier and motor match each other. Compare the rated voltage and rated current of the unit. Carry out the wiring according to the wiring diagram in the Installation and Commissioning Instructions for the servo amplifier. The connections to the motor are shown in the chapters III.1.3 and III.2.3. Notes on the connection methods can be found in chapter II.2.1.
- Ensure that there is proper earthing of the servo amplifier and the motor.
- Route the power and control cables as separately as possible from one another (separation > 20 cm). This will improve the immunity of the system to electromagnetic interference. If a motor power cable is used which includes integral brake control leads, then these brake control leads must be shielded. The shielding must be connected at both ends (see under Installation Instructions for the servo amplifier).
- Install all cables carrying a heavy current with an adequate cross-section, as per EN 60204. The recommended cross-section can be found in the Technical data.



Caution!

If a servo amplifier of the series SERVOSTAR™ 600 is used and the motor cable exceeds 25m, a boxed choke (type 3YL-20, manufactured by Seidel) and motor leads with the following diameters must be used

servo amplifier	chokebox	Max. cable diameter
SERVOSTAR™ 601...606	3YL-20	4 x 1mm ²
SERVOSTAR™ 610	3YL-20	4 x 1,5mm ²
SERVOSTAR™ 614	3YL-20	4 x 2,5 mm ²
SERVOSTAR™ 620	3YL-20	4 x 2,5 mm ²
SERVOSTAR™ 640	inapplicable	4 x 10 mm ²
SERVOSTAR™ 670	inapplicable	4 x 16 mm ²

- Connect up all shielding via a wide surface-area contact (low impedance) and metallized connector housings or EMC-PG glands.
- Check the compliance to the permitted radial and axial forces F_R and F_A . When you use a toothed belt drive, the **minimal** permitted diameter of the pinion e.g. follows from the equation: $d_{\min} \geq \frac{M_0}{F_R} \times 2$.
- Ensure that there is adequate heat transfer in the surroundings and the motor flange, so that the maximum permissible flange temperature of 65°C is not exceeded in S1 operation.



Caution!

Never undo the electrical connections to the motor while it is energised. A dangerous voltage, resulting from residual charge, can be still present on the capacitors up to 300 seconds after switch-off of the mains supply. Measure the DC-link voltage and wait until it has fallen below 40V. Even when the motor is not rotating, control and power leads may be live.

II.2

Assembly / Wiring

Only qualified staff with knowledge of mechanical engineering are permitted to assemble the motor.

Only staff qualified and trained in electrical engineering are allowed to wire up the motor.

The procedure is described as an example. A different method may be appropriate or necessary, depending on the application of the equipment.

**Warning !**

Protect the motor from unacceptable stresses.

Take care, especially during transport and handling, that components are not bent and that insulation clearances are not altered.

Always make sure that the motors are de-energized during assembly and wiring, i.e. No voltage may be switched on for any piece of equipment which is to be connected.

Ensure that the switch cabinet remains turned off (barrier, warning signs etc.).


The individual voltages will only be turned on again during commissioning

**Note !**

The ground symbol , which you will find in the wiring diagrams, indicates that you must provide an electrical connection, with as large a surface area as possible, between the unit indicated and the mounting plate in the switch cabinet. This connection is to suppress HF interference and must not be confused with the PE (protective earth) symbol (protective measure to EN 60204).

To wire up the motor, use the wiring diagrams in the Installation and Commissioning Instructions of the SERVOSTAR™ 600 servo amplifier which is used.

The following notes should help you to carry out the assembly and wiring in an appropriate sequence, without overlooking anything.

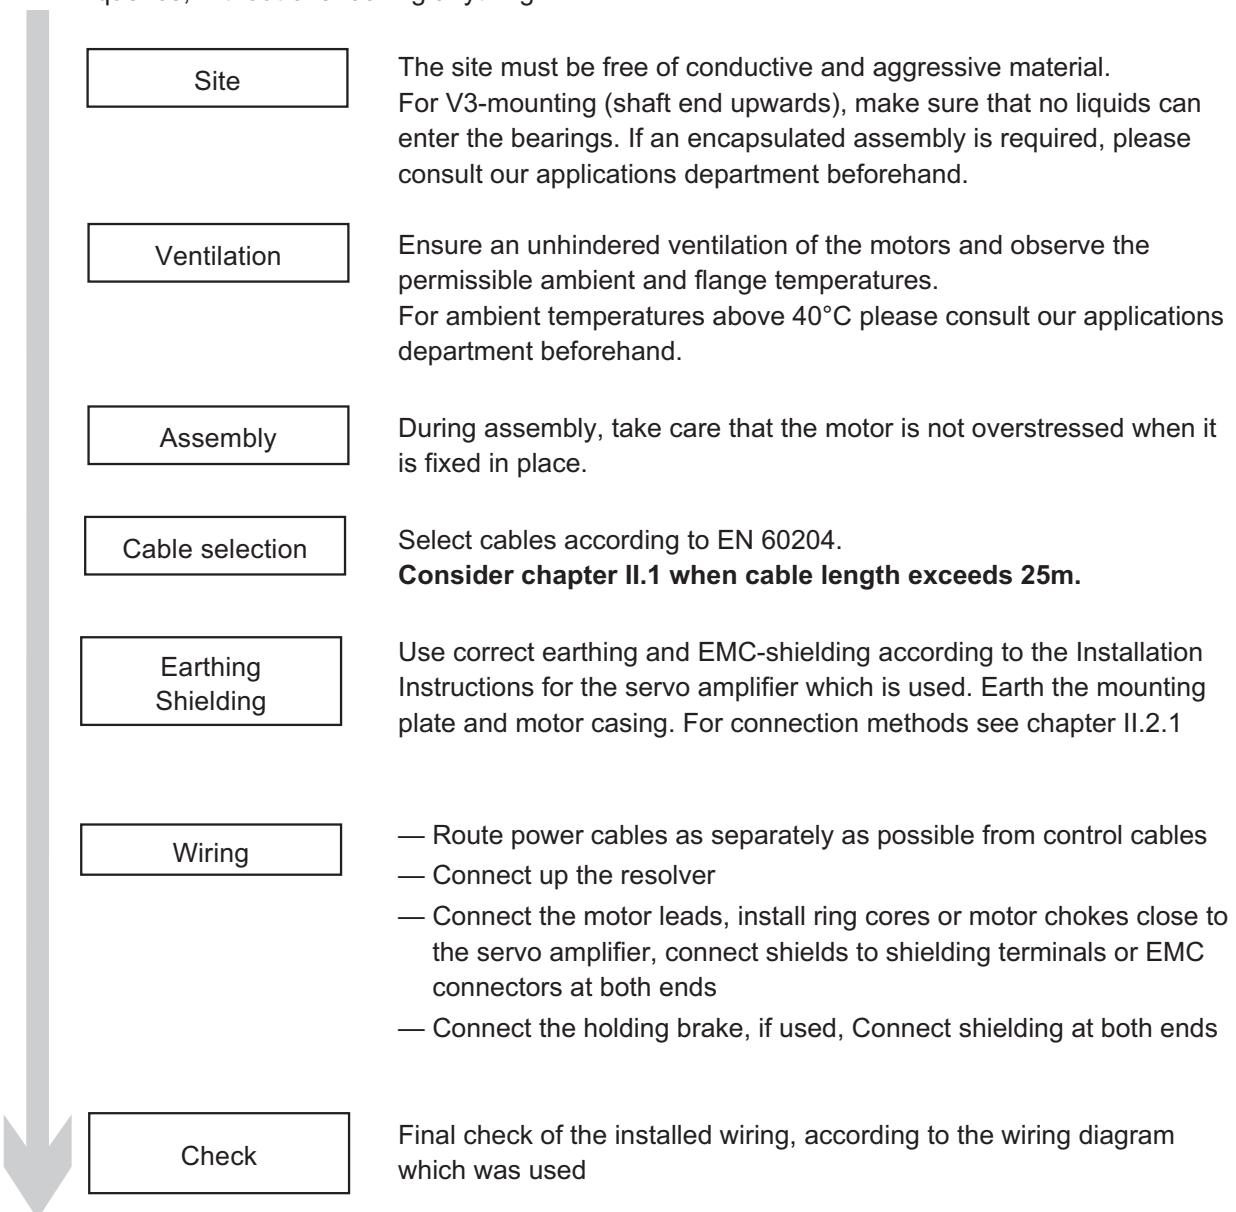

II.2.1

Connection methods

- Carry out the wiring in accordance with the valid standards and regulations.
- Only use our pre-confectioned shielded leads for the resolver and power connections.
- Connect up the shielding according to the wiring diagrams in the Installation Instructions for the servo amplifier.
- Incorrectly installed shielding inevitably leads to EMC interference.

In the table below you find all leads supplied by us. Further information referring to chemical, mechanical and electrical qualities can be received from our applications department.

Insulating material

Sheathing - PUR (Polyurethane, identification 11Y)
 core insulation - PETP (Polyesteraphthalate, identification 12Y)

Capacity

Motor lead - less than 150 pF/m
 Resolver lead - less than 120 pF/m

Techn. Data

- All leads are suitable for trailing.
- Technical data refer to mobile usage of leads.
 Life time : 1 Million bending cycles
- The temperature range refers to the operation temperature.
- Identification :
 - N = numbered cores
 - F = cores with colour code according to DIN 47100
 - B = cores with letter identification
 - () = shielding

Cores [mm ²]	identification	Temperature-range [°C]	Cable diameter [mm]	Bending radius [mm]	Remarks
(4x1,0)	F	-30 / +80	10,5	105	Motor lead
(4x1,5)	B	-30 / +80	11,3	115	
(4x2,5)	N	-5 / +70	12,7	125	
(4x4)	N	-5 / +70	12,8	130	
(4x6)	N	-5 / +70	16,1	160	
(4x10)	N	-5 / +70	19,0	190	
(4x16)	N	-5 / +70	23,3	230	
(4x1,0+(2x0,75))	F	-30 / +80	12	120	Motor lead with integral brake control leads
(4x1,5+(2x0,75))	B	-10 / +80	12,5	125	
(4x2,5+(2x1))	B	-30 / +80	13,8	140	
(4x2x0,25)	F	-30 / +80	6,9	60	Resolver lead

II.3

Commissioning

The procedure for commissioning is described as an example. A different method may be appropriate or necessary, depending on the application of the equipment.

Only specialist personnel with extensive knowledge in the areas of electrical engineering / drive technology are allowed to commission the drive unit of servo amplifier and motor.



Caution !

Check that all live connection points (terminal boxes) are safe against accidental contact. Deadly voltages can occur, up to 900V.

Never undo the electrical connections to the motor when it is live.

The residual charge in the capacitors of the servo amplifier can produce dangerous voltages up to 300 seconds after the mains supply has been switched off.

The surface temperature of the motor can reach 100°C in operation.

Check (measure) the temperature of the motor.

Wait until the motor has cooled down below 40°C before touching it.

Make sure that, even if the drive starts to move unintentionally, no danger can result for personnel or machinery.

Remove or fix any fitted key (if present) from the shaft before letting the motor run independently, to avoid the dangerous results of the key being thrown out by centrifugal forces and injuring personnel.

- 
- Check the assembly and orientation of the motor.
 - Check the drive components (clutch, gear unit, belt pulley) for the correct seating and setting (observe the permissible radial and axial forces).
 - Check the wiring and connections to the motor and the servo amplifier. Check that the earthing is correct.
 - Test the function of the holding brake, if used.
(apply 24V, the brake must be released).
 - Check whether the rotor of the motor revolves freely
(release the brake, if necessary). Listen out for grinding noises.
 - Check that all the required measures against accidental contact with live and moving parts have been carried out.
 - Carry out any further tests which are specifically required for your system.
 - Now commission the drive according to the commissioning instructions for the servo amplifier.
 - In multi-axis systems, individually commission each drive unit
(servo amplifier + motor).

This page is deliberately left blank.

III


Drawings

III.1

Motors with sockets


III.1.1

Dimensions GOLDLINE™ BH1xx..4xx

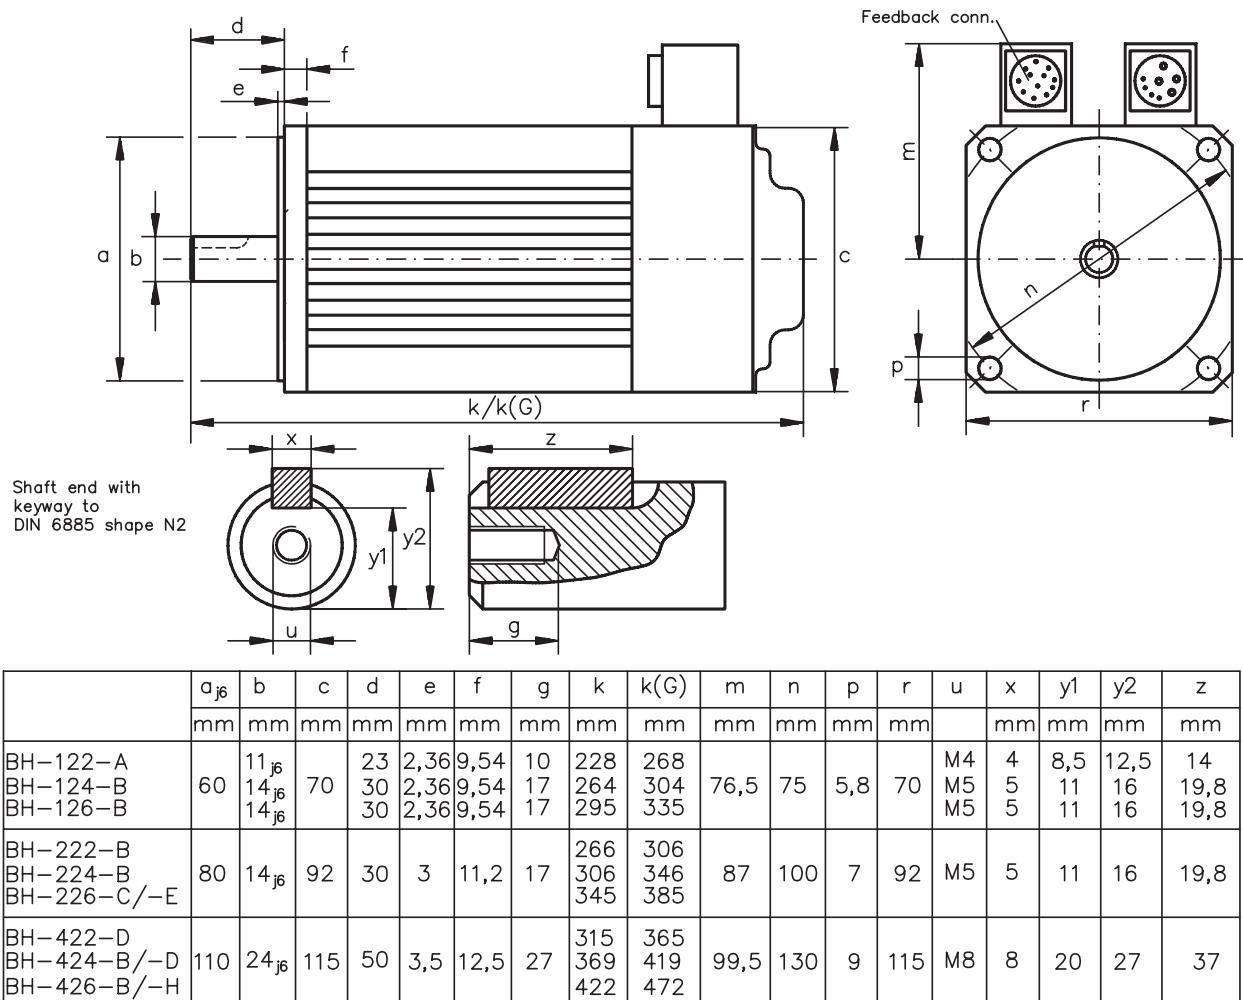


III.1.2

Radial-/axial forces at the shaft end

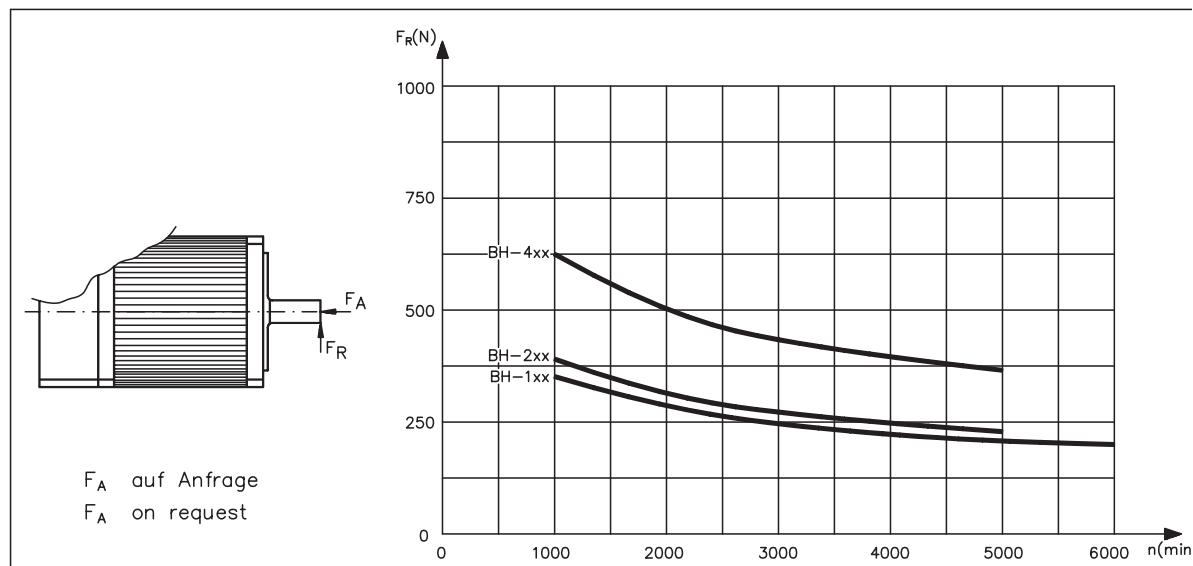

III.1.3


Wiring GOLDLINE™ BH-1xx..4xx

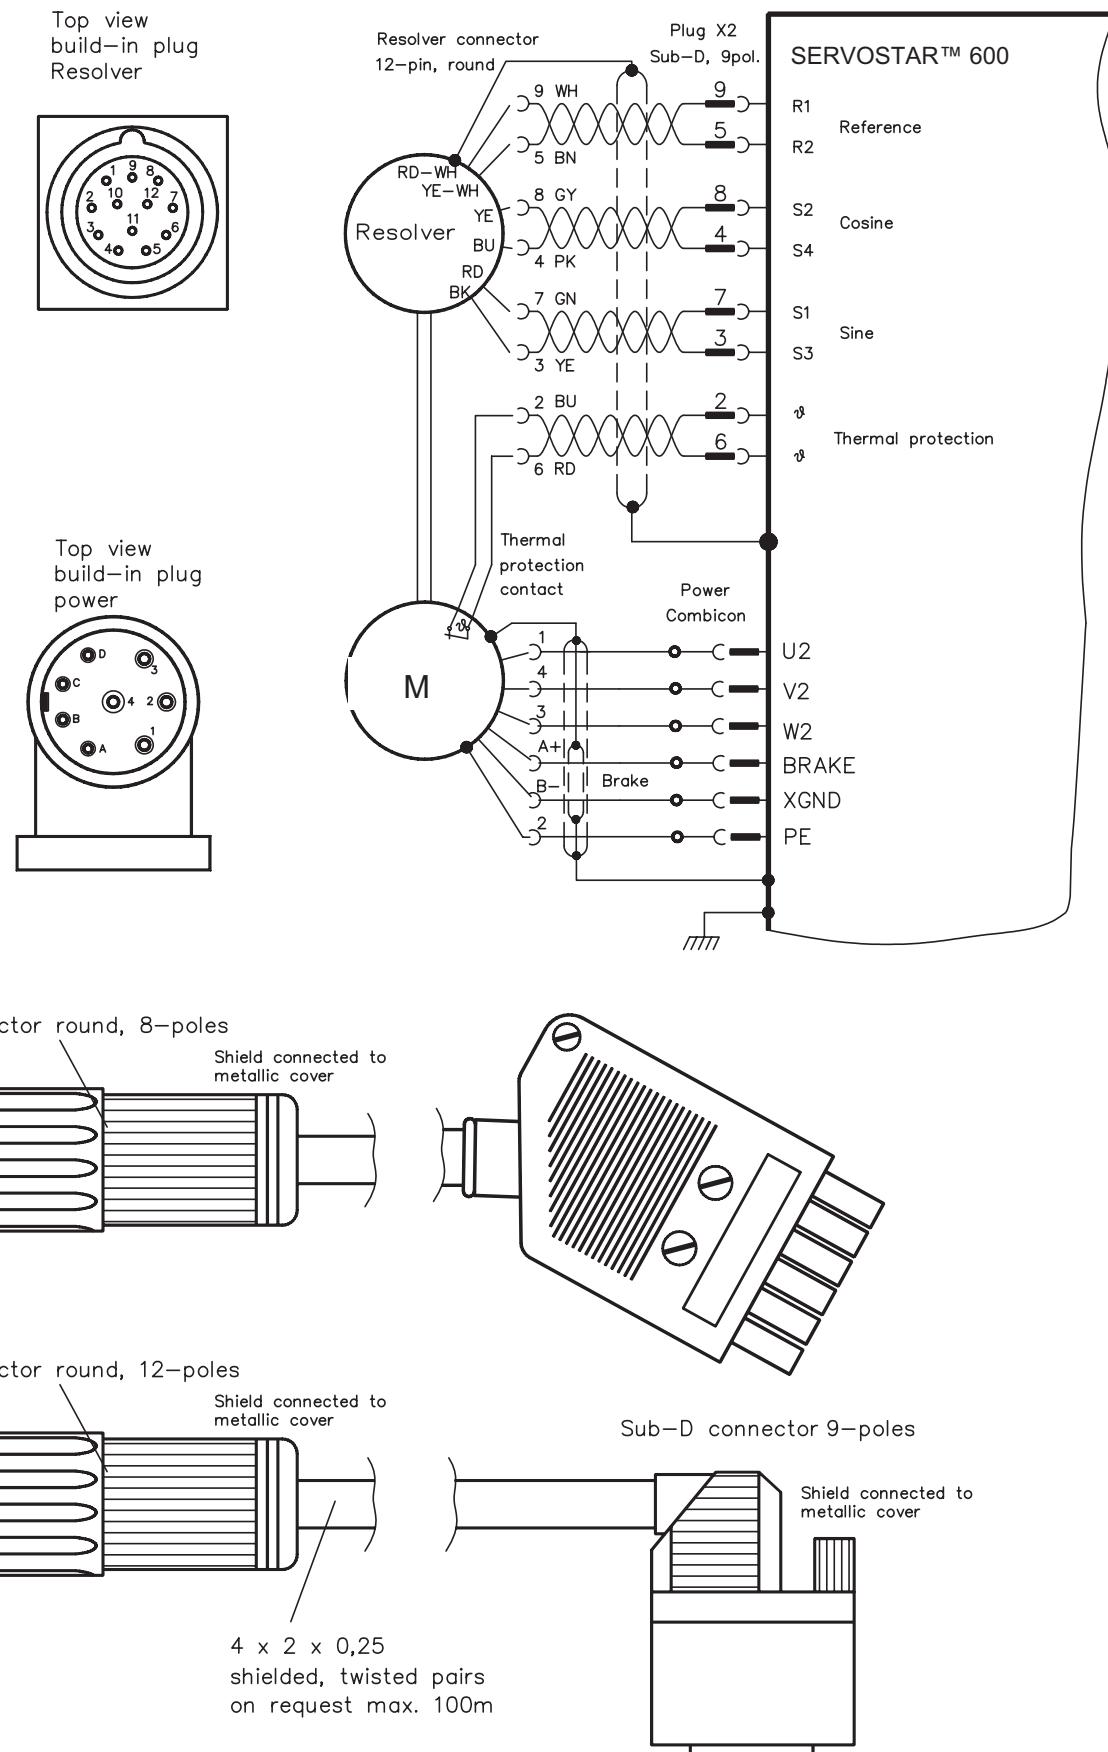

colour coding acc. to IEC 757


III.1.4

Performance curve GOLDLINE™ BH-122-A

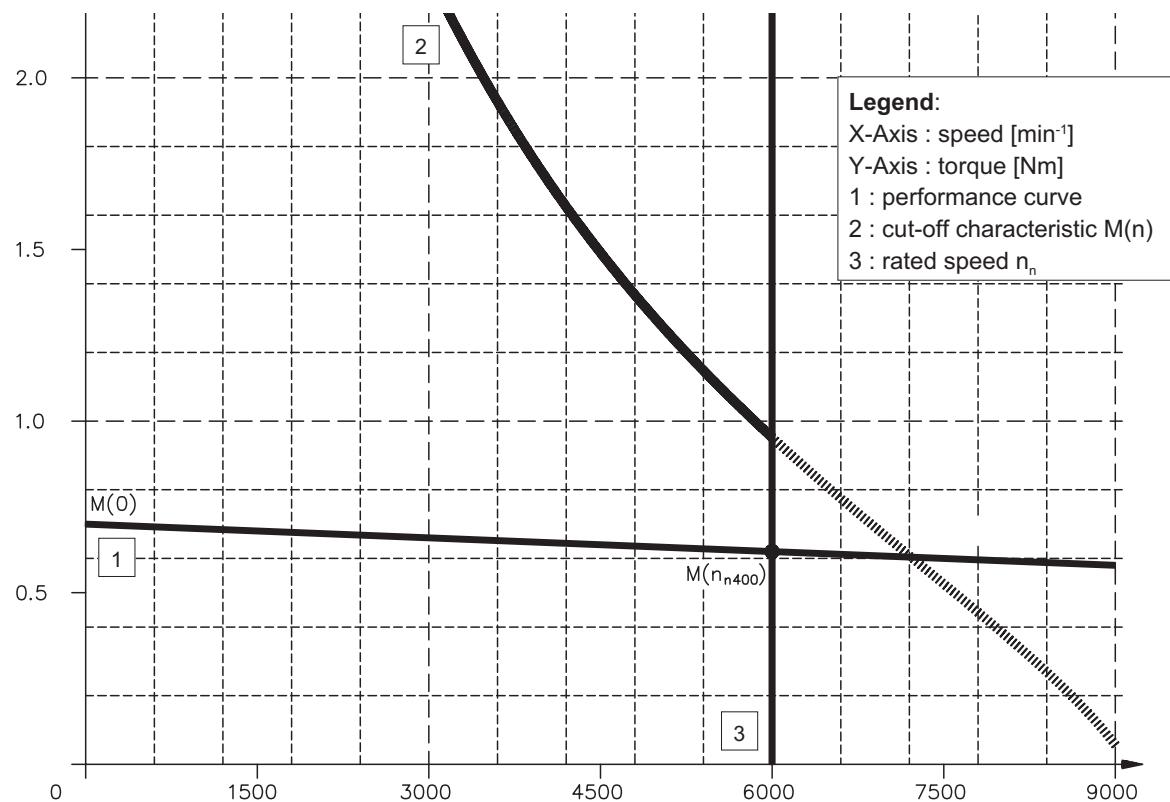


III.1.5

Performance curve GOLDLINE™ BH-124-B

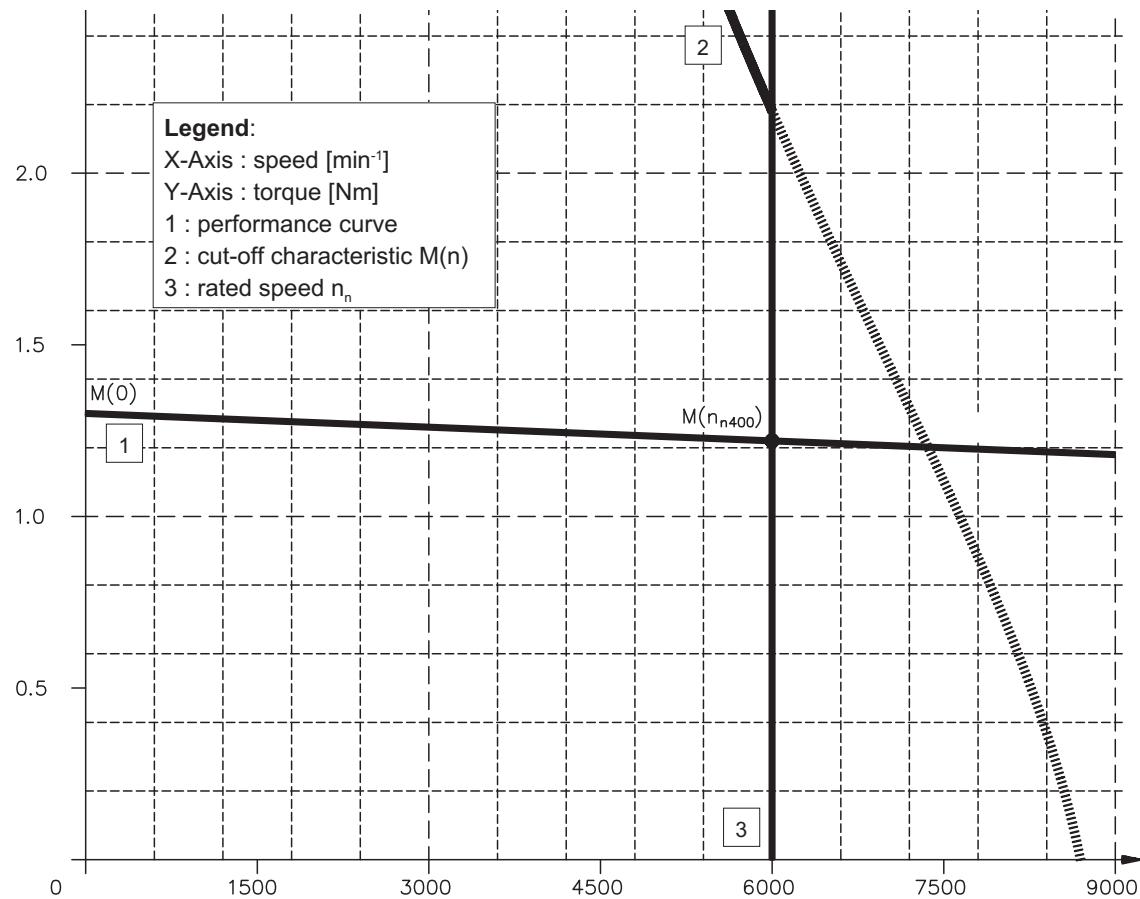


III.1.6

Performance curve GOLDLINE™ BH-126-B

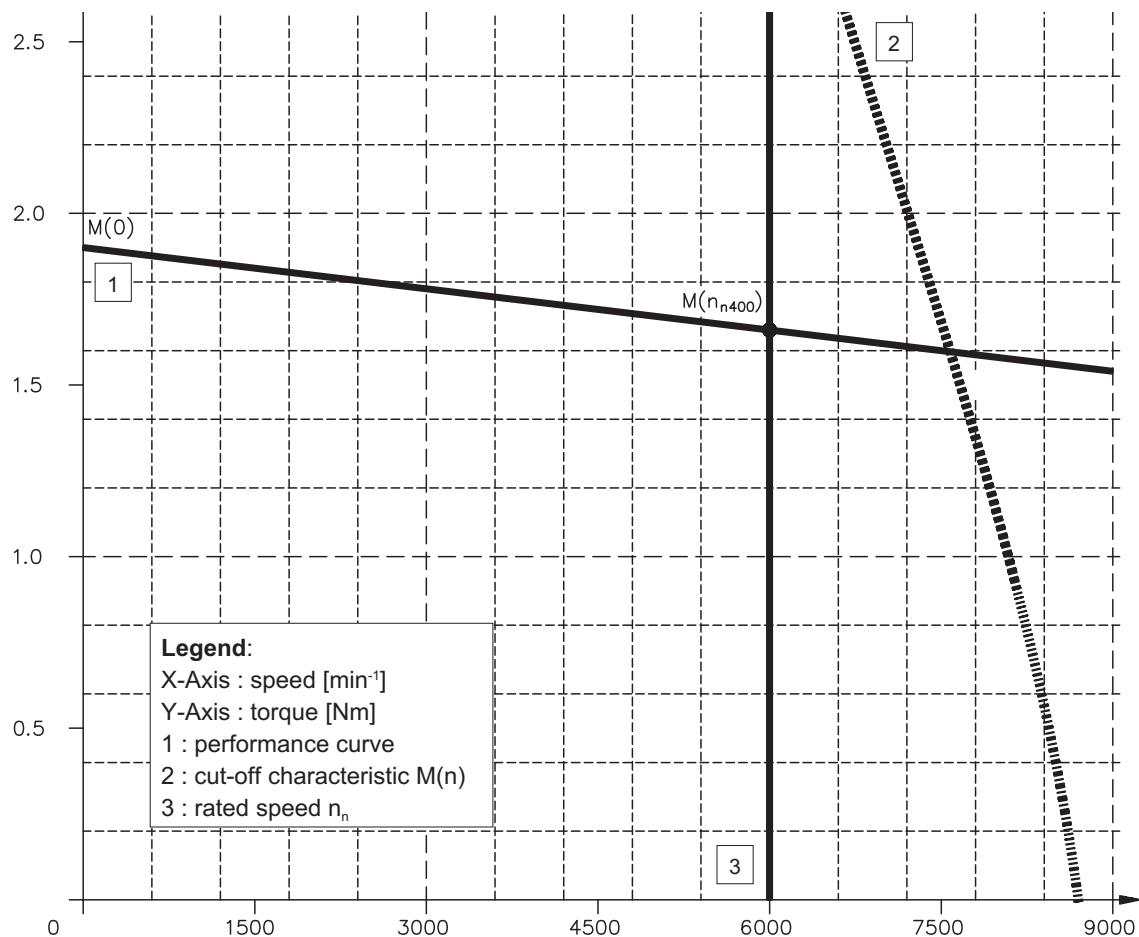


III.1.7

Performance curve GOLDLINE™ BH-222-B

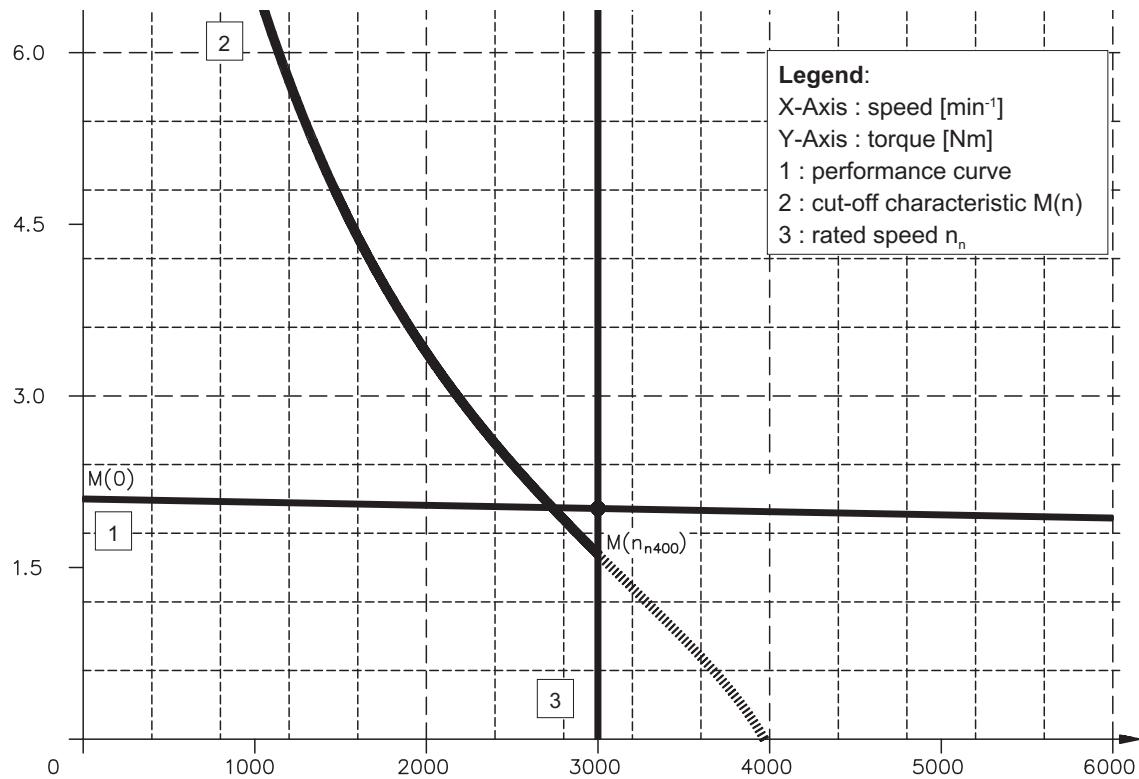


III.1.8

Performance curve GOLDLINE™ BH-224-B

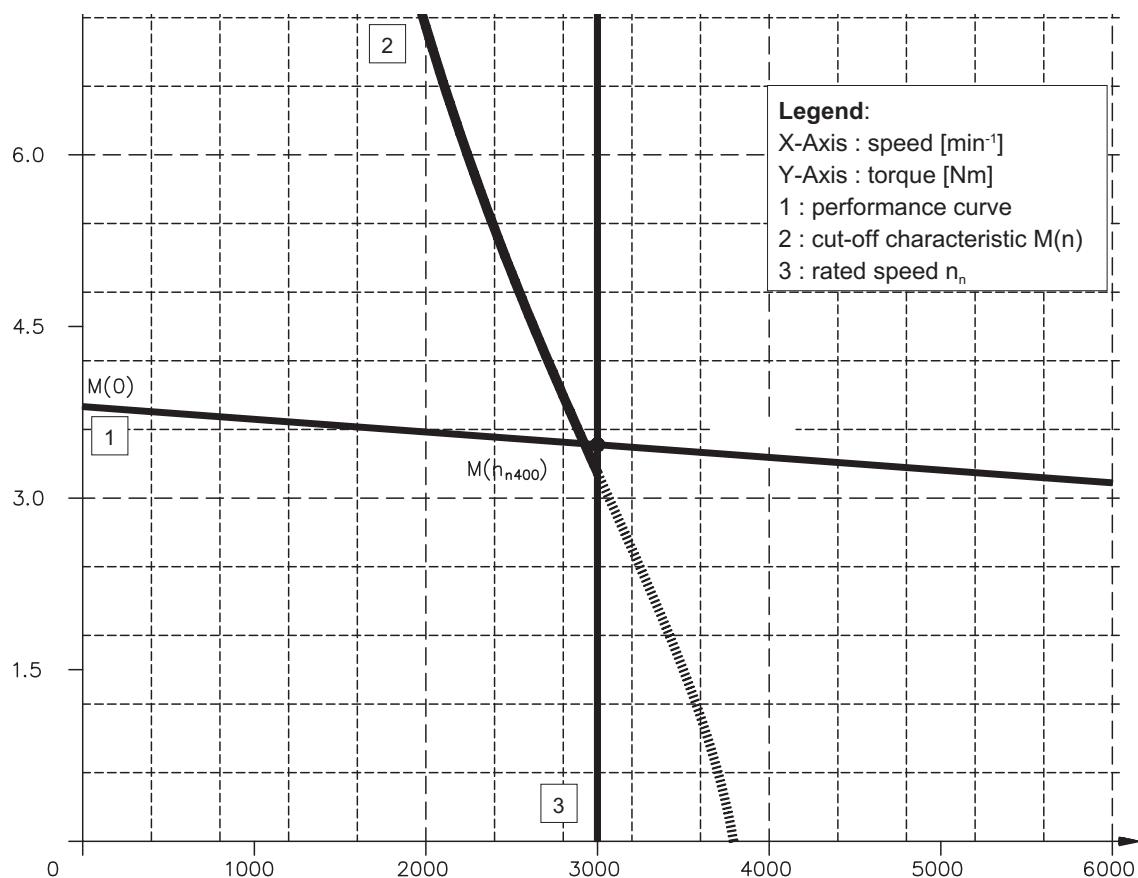


III.1.9

Performance curve GOLDLINE™ BH-226-C

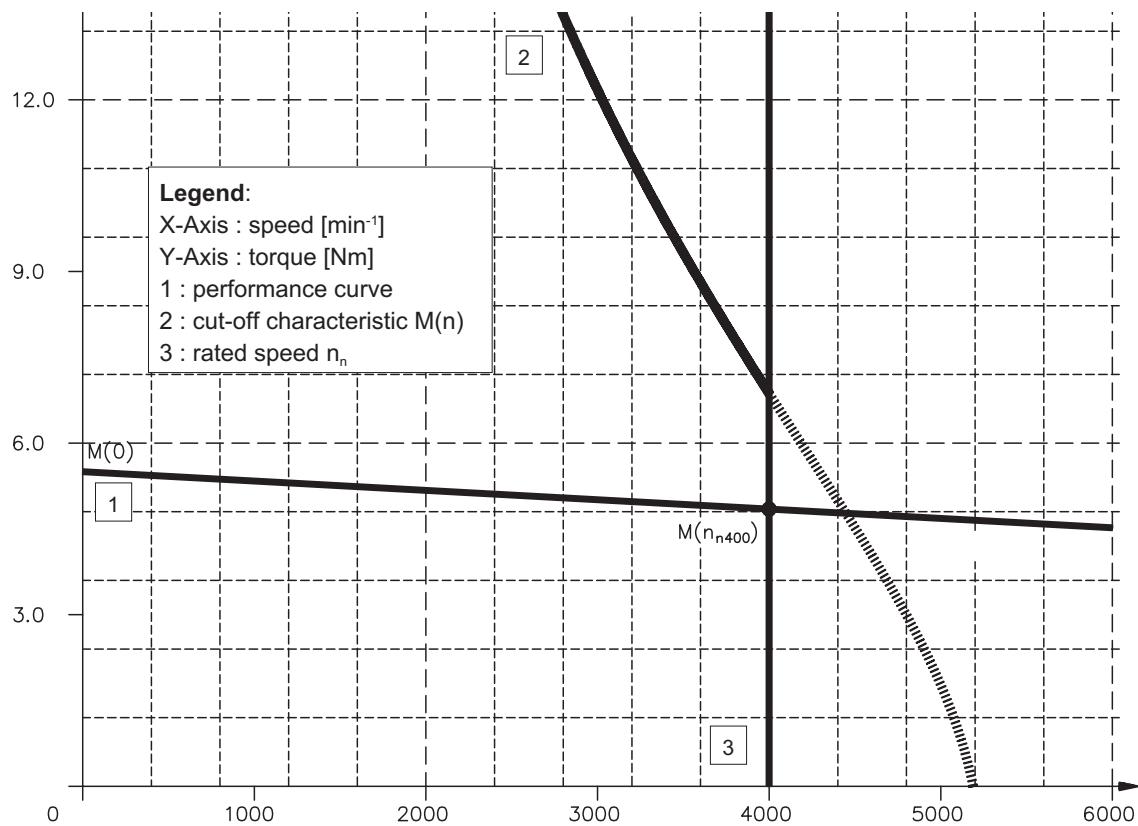


III.1.10

Performance curve GOLDLINE™ BH-226-E

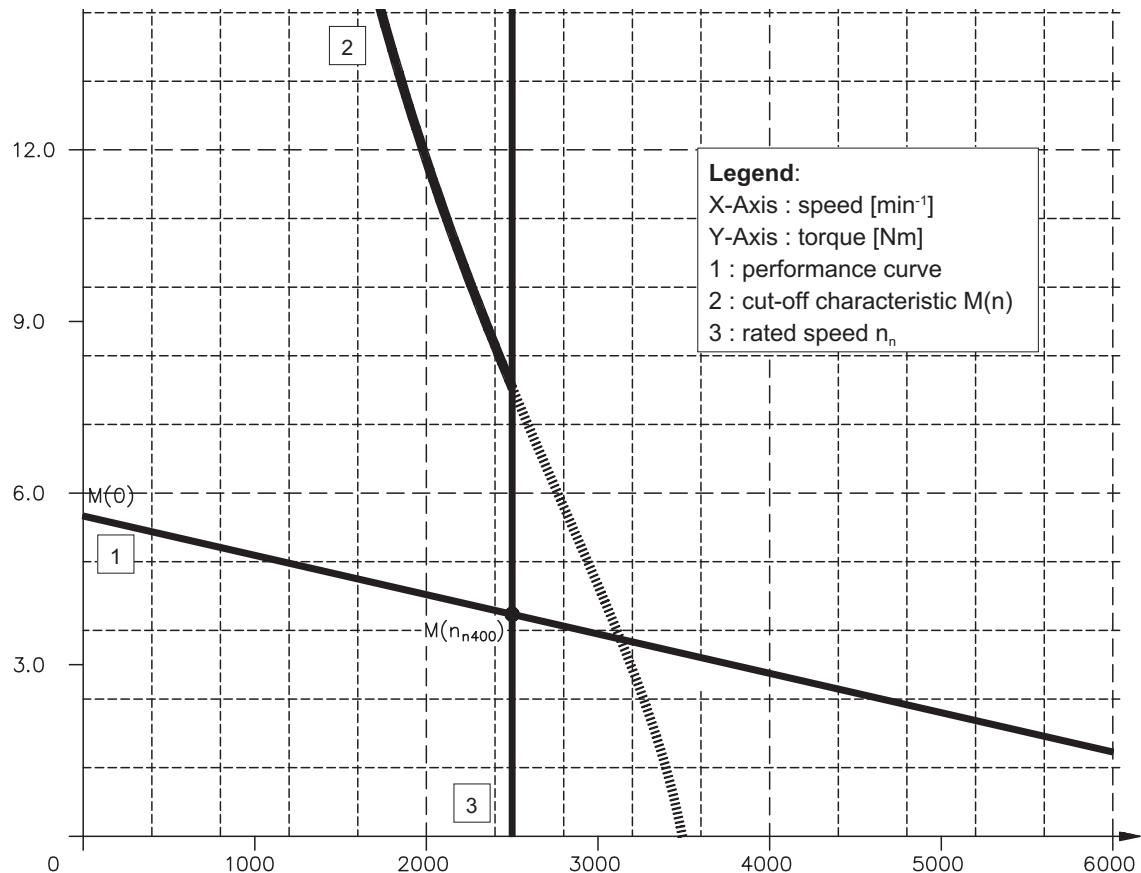


III.1.11

Performance curve GOLDLINE™ BH-422-D

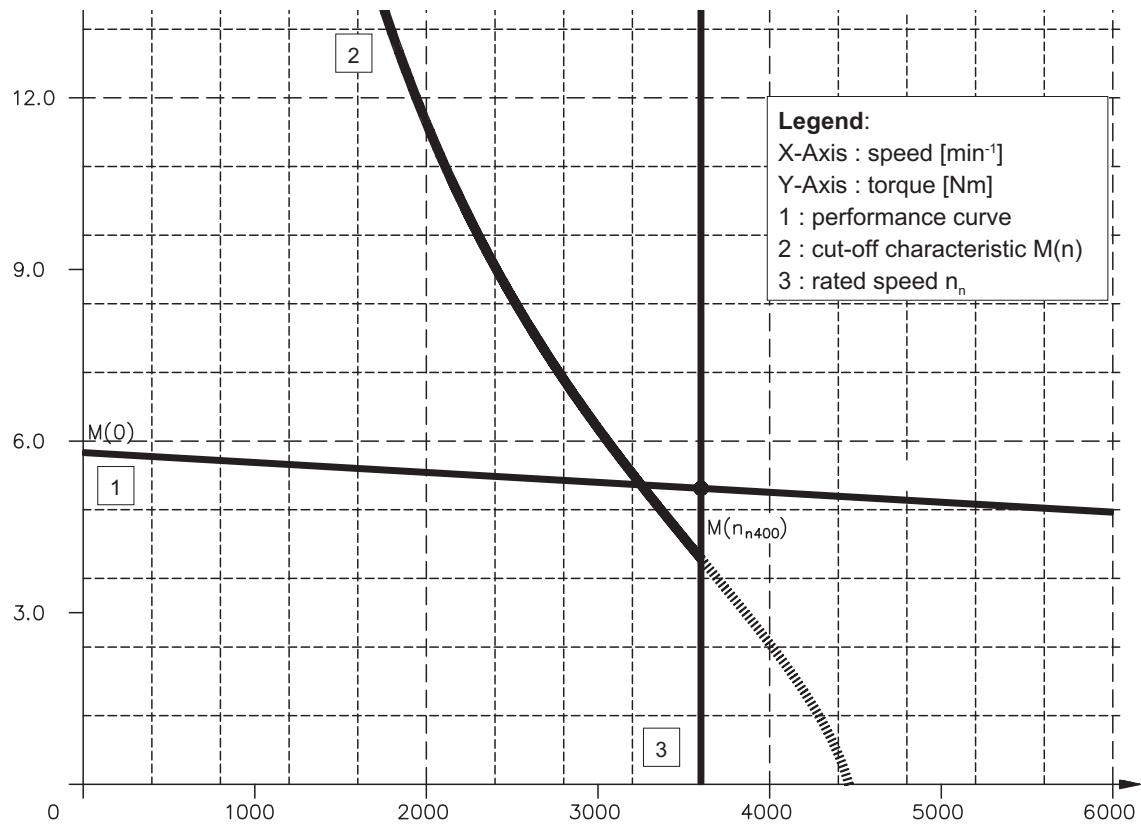


III.1.12

Performance curve GOLDLINE™ BH-424-B

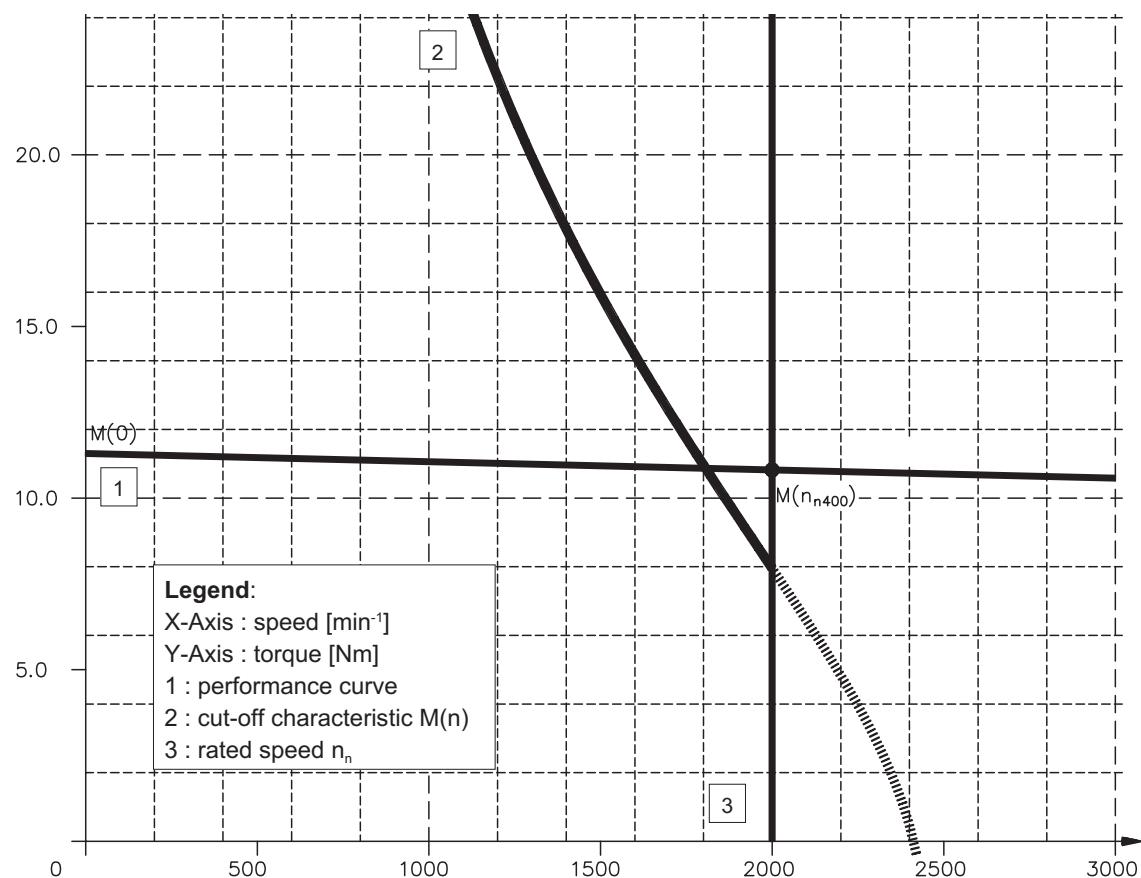


III.1.13

Performance curve GOLDLINE™ BH-424-D

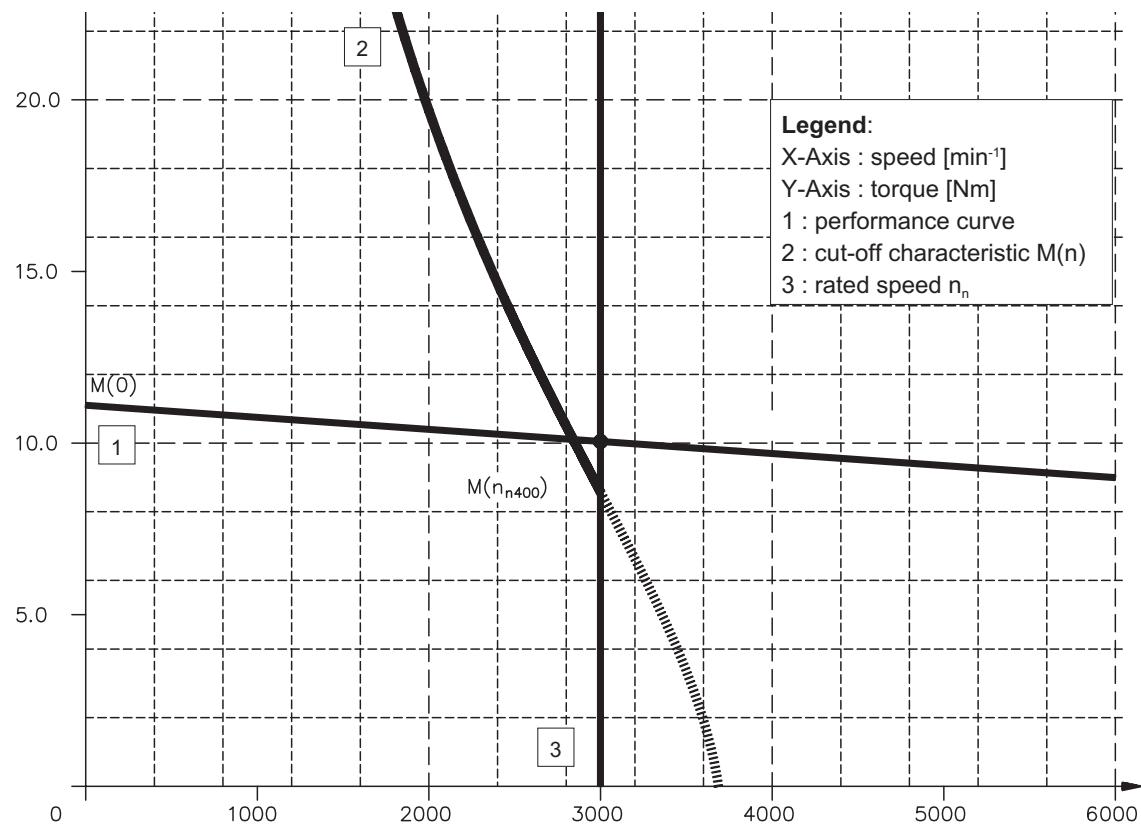


III.1.14

Performance curve GOLDLINE™ BH-426-B

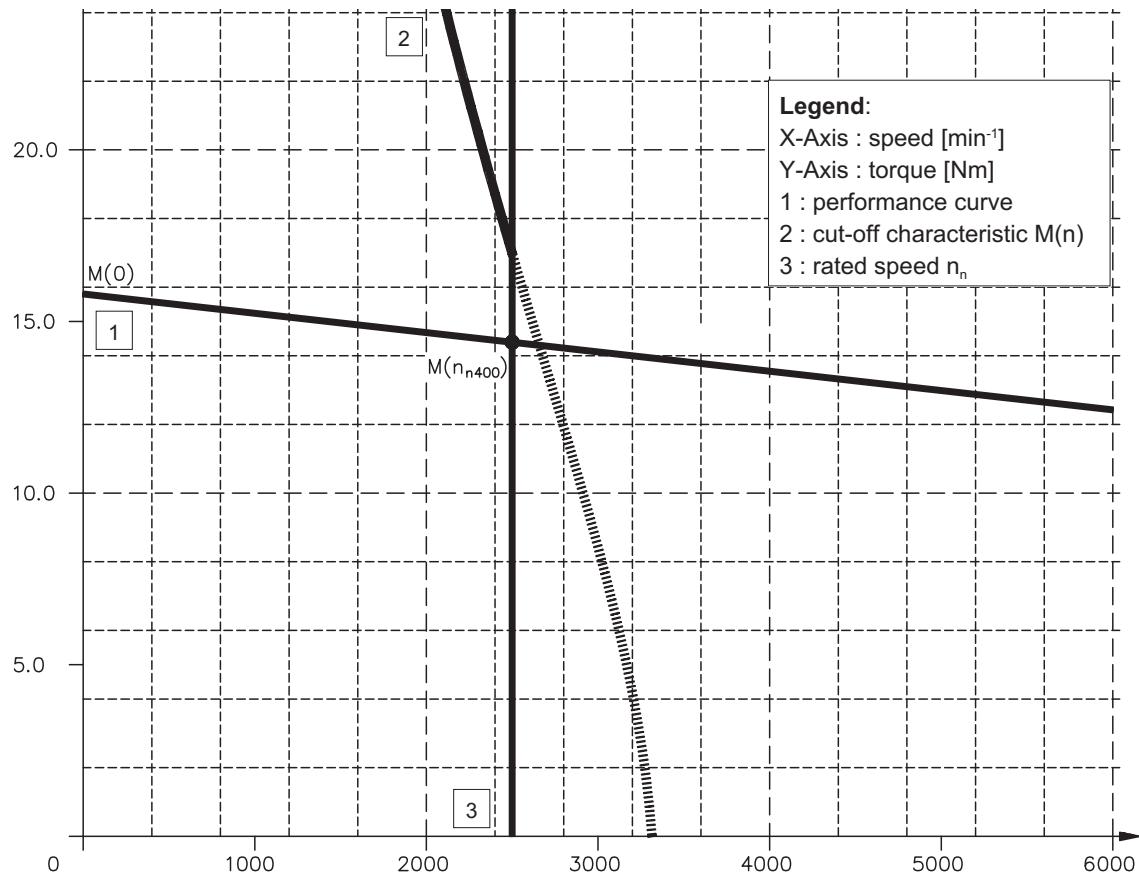

III.1.15

Performance curve GOLDLINE™ BH-426-H

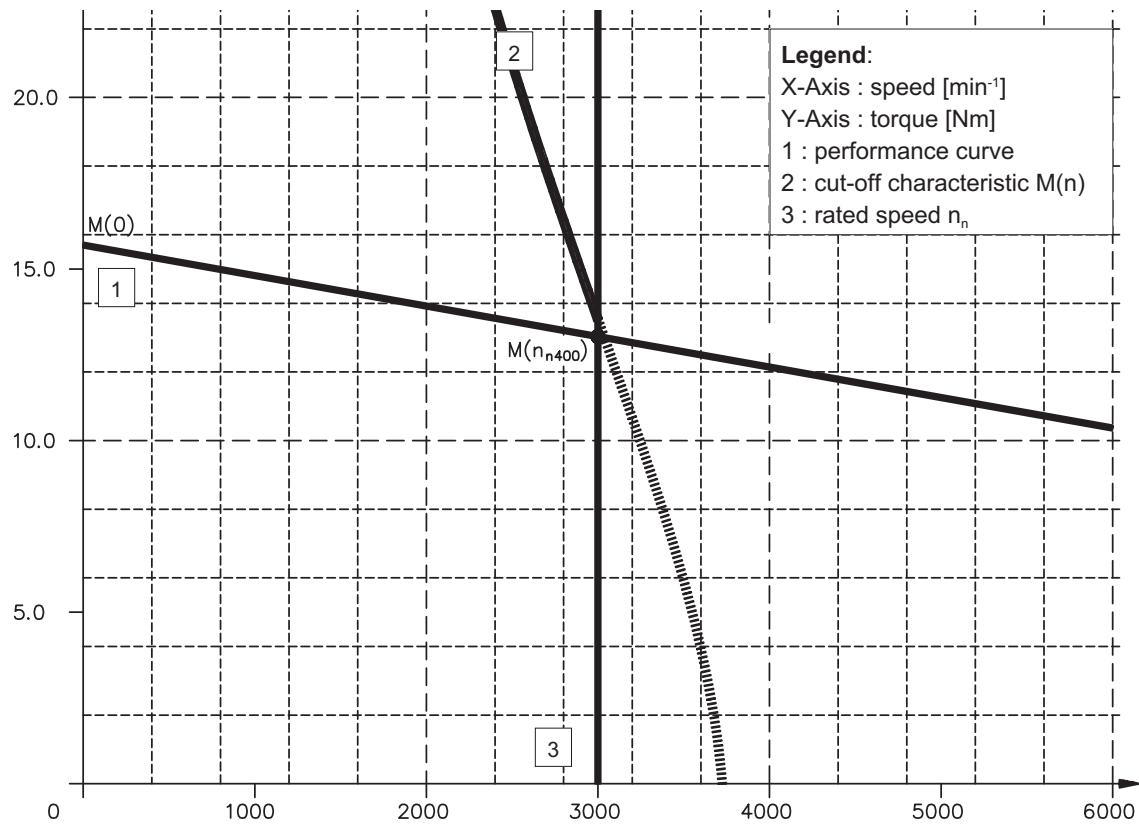


III.2

Motors with terminal box

III.2.1


Dimensions GOLDLINE™ BH6xx..8xx

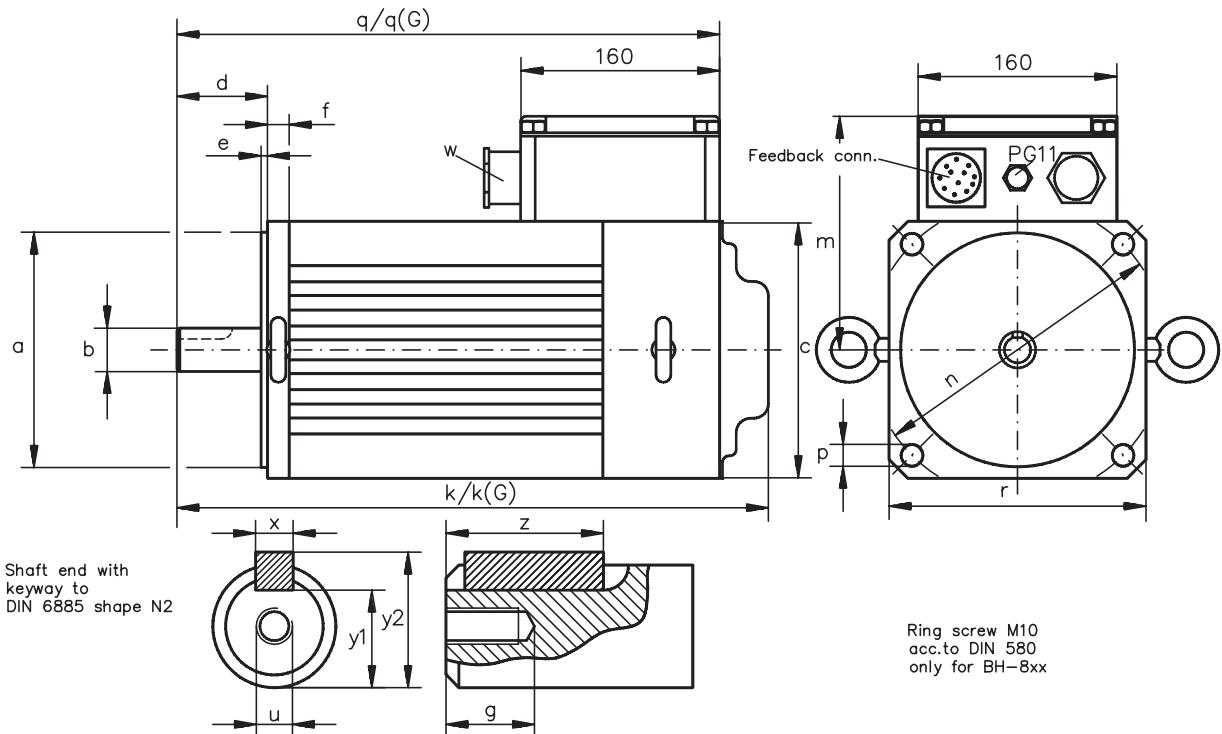

	a_{j6}	b	c	d	e	f	g	k	$k(G)$	m	n	p	q	$q(G)$	r	u	w	x	y1	y2	z
	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	PG	mm	mm	mm	mm	
BH-622-B	24 _{j6}	142	50	3,5	18	27	350	407					332	389		M8	8	20	27	37	
BH-624-C/-D	24 _{j6}	142	50	3,5	18	27	418	475	161	165	11	400	457	142	M8	8	20	27	37		
BH-626-E	32 _{k6}	50				42	486	543					468	525		M12	10	27	35	39	
BH-822-D	32 _{j6}	190	58			42	418	475					400	457			10	27	35	39	
BH-824-A/-D	32 _{k6}	82	58	4	19	42	508	565	185	215	14	490	547		M12	36	10	27	35	39	
BH-826-C/-D	48 _{k6}	82	82				621	678					603	660		190	14	42,5	51,5	60	
BH-828-B	48 _{k6}						742	799					724	781			14	42,5	51,5	60	


III.2.2

Radial-/axial forces at the shaft end

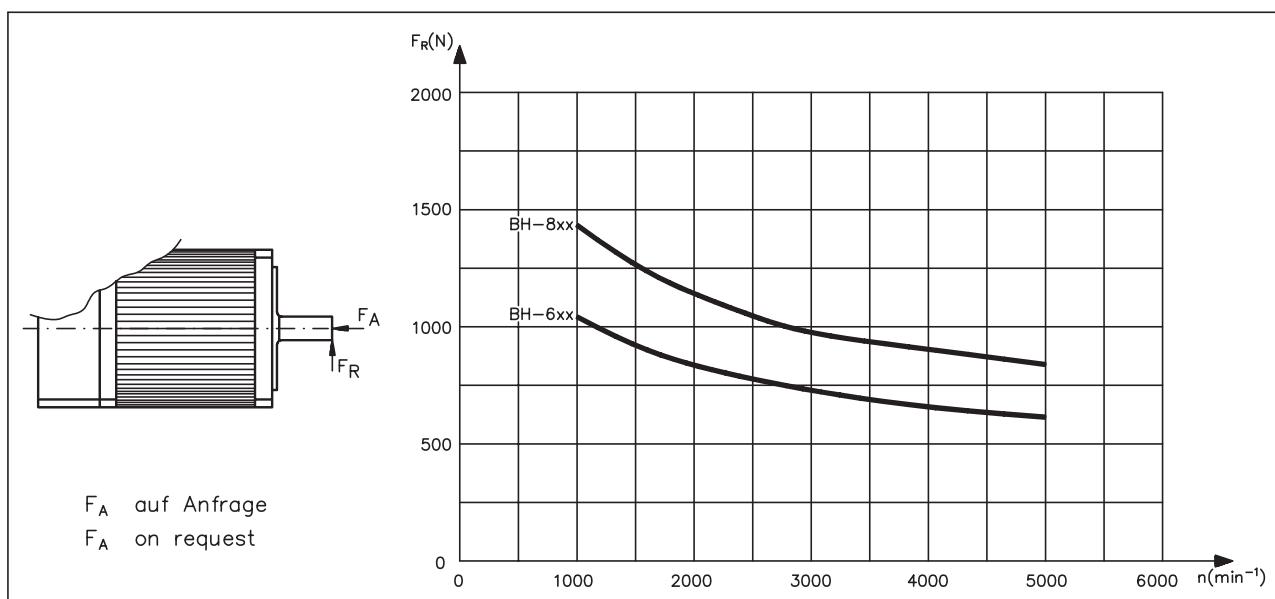


III.2.3

Wiring GOLDLINE™ BH-6xx..8xx

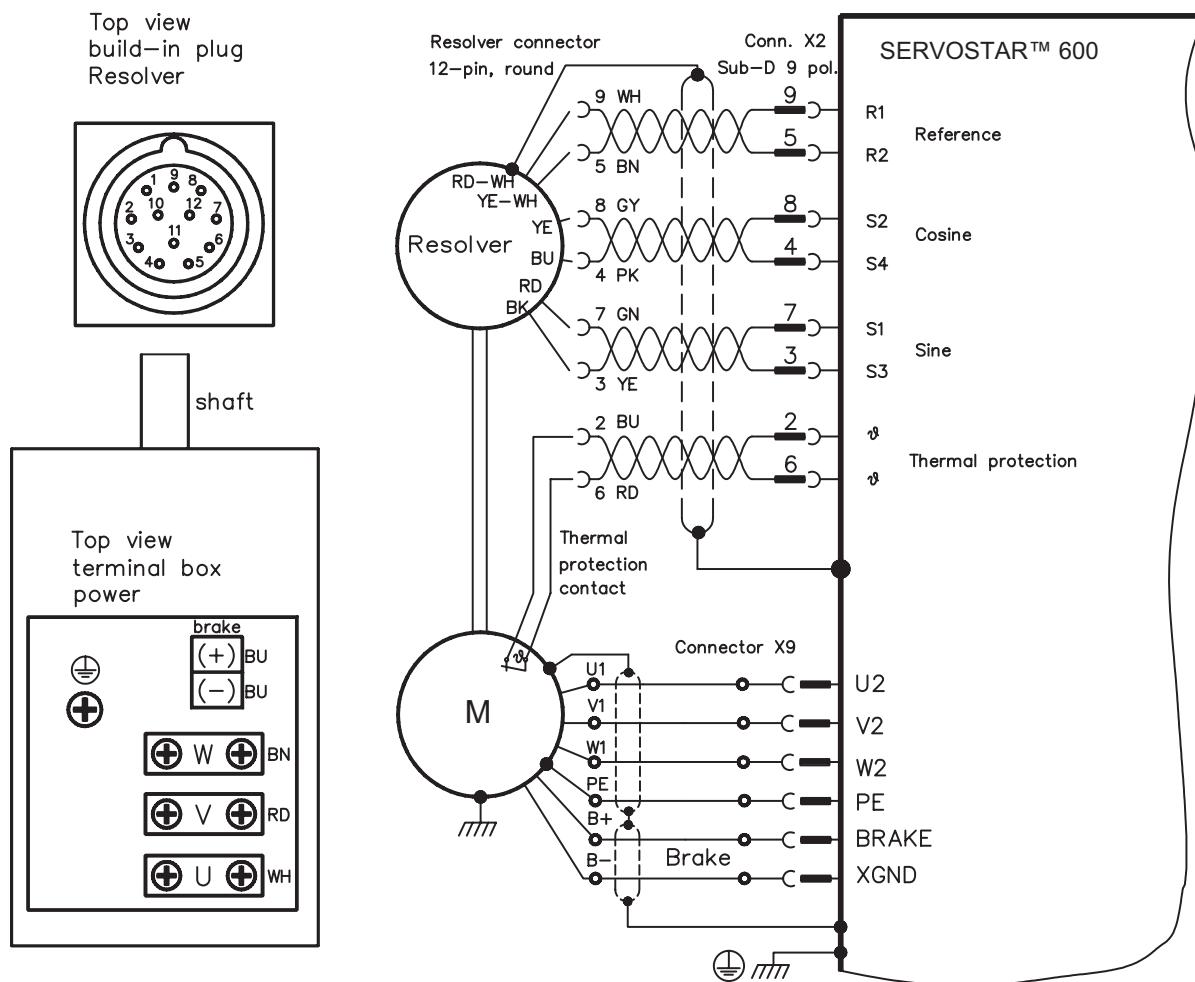


connector round, 12-poles

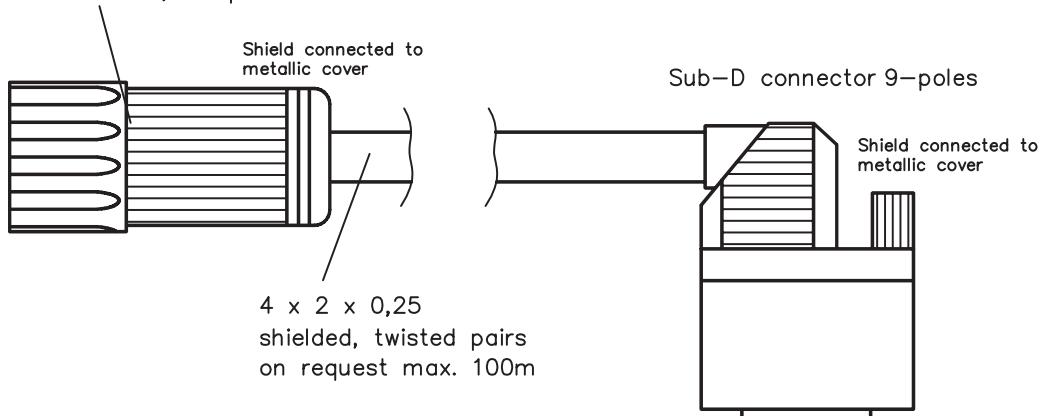

colour coding acc. to IEC 757


III.2.4

Performance curve GOLDLINE™ BH-622-B

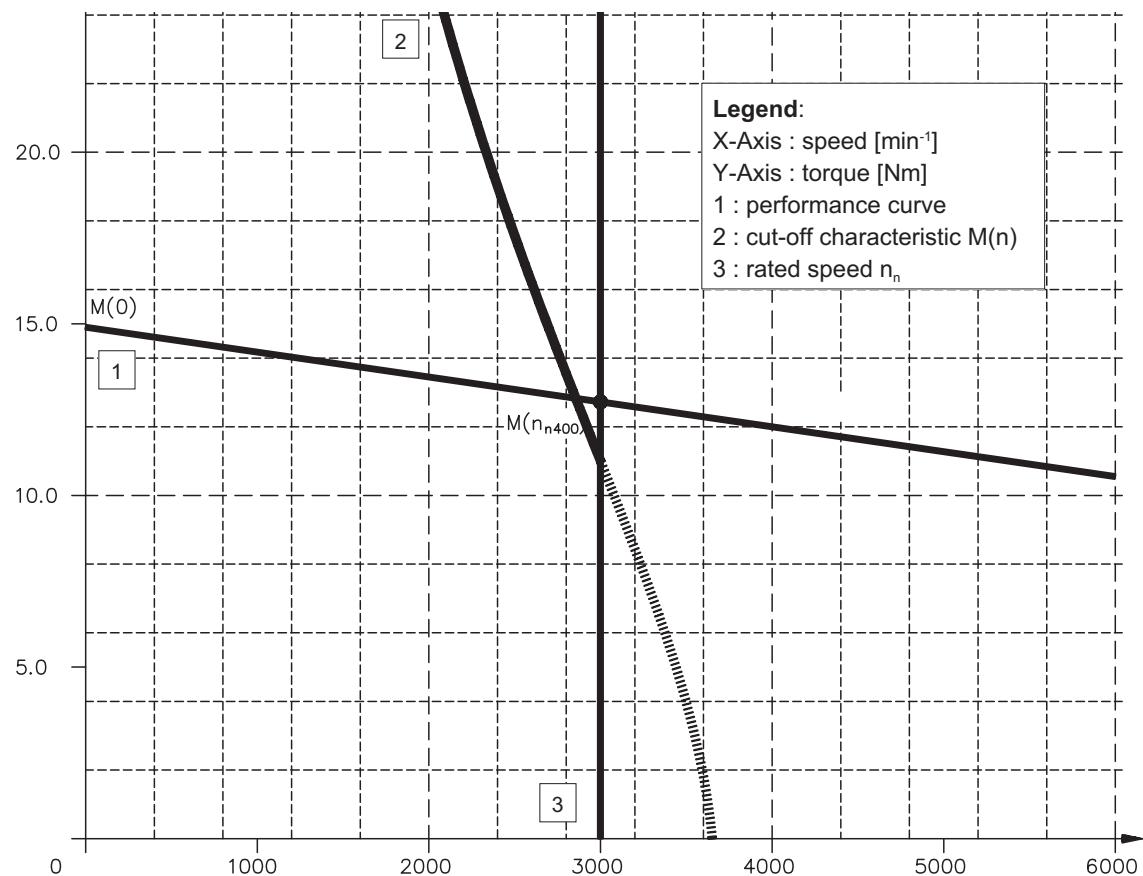


III.2.5

Performance curve GOLDLINE™ BH-624-C

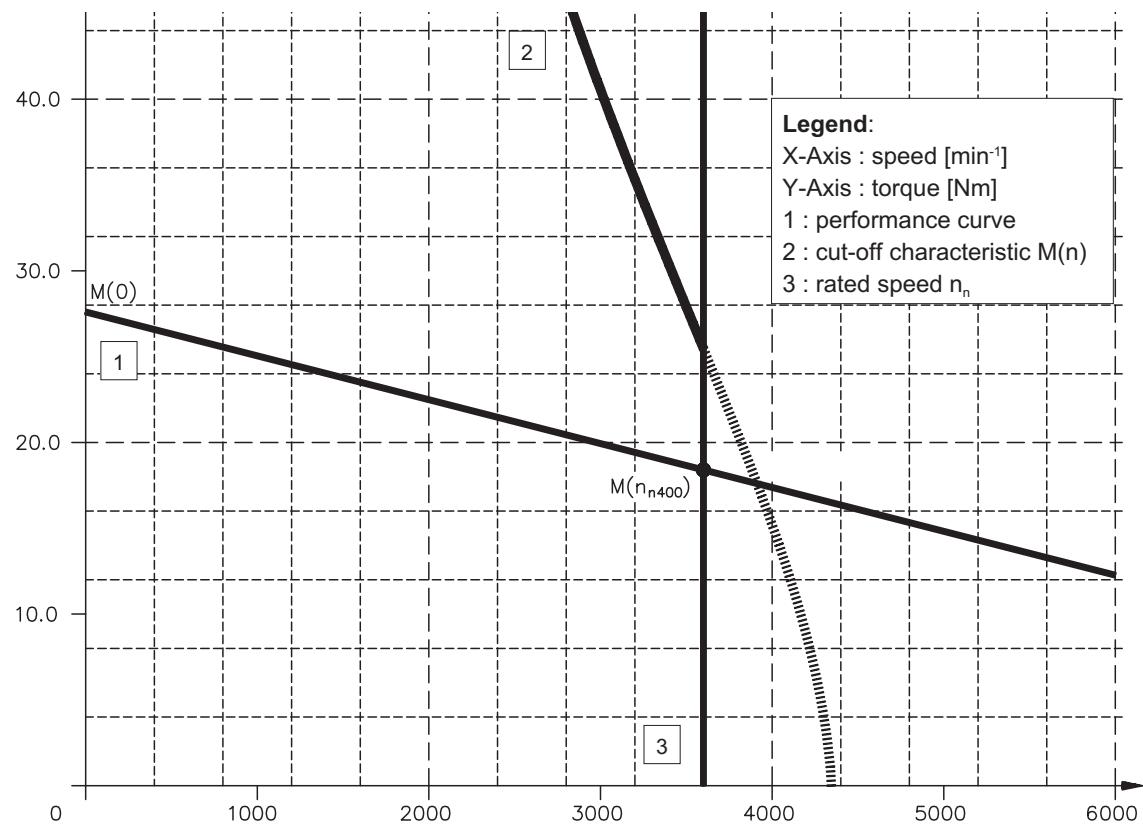


III.2.6

Performance curve GOLDLINE™ BH-624-D

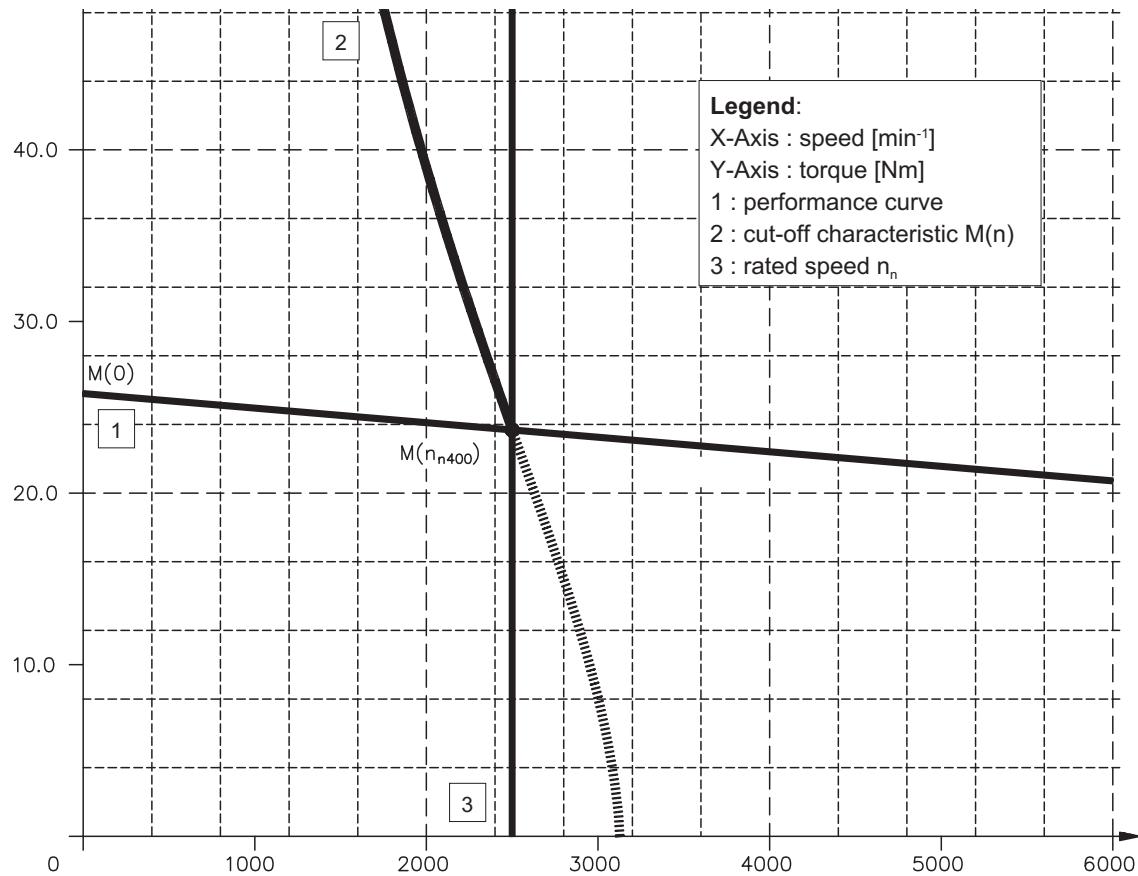


III.2.7

Performance curve GOLDLINE™ BH-626-E

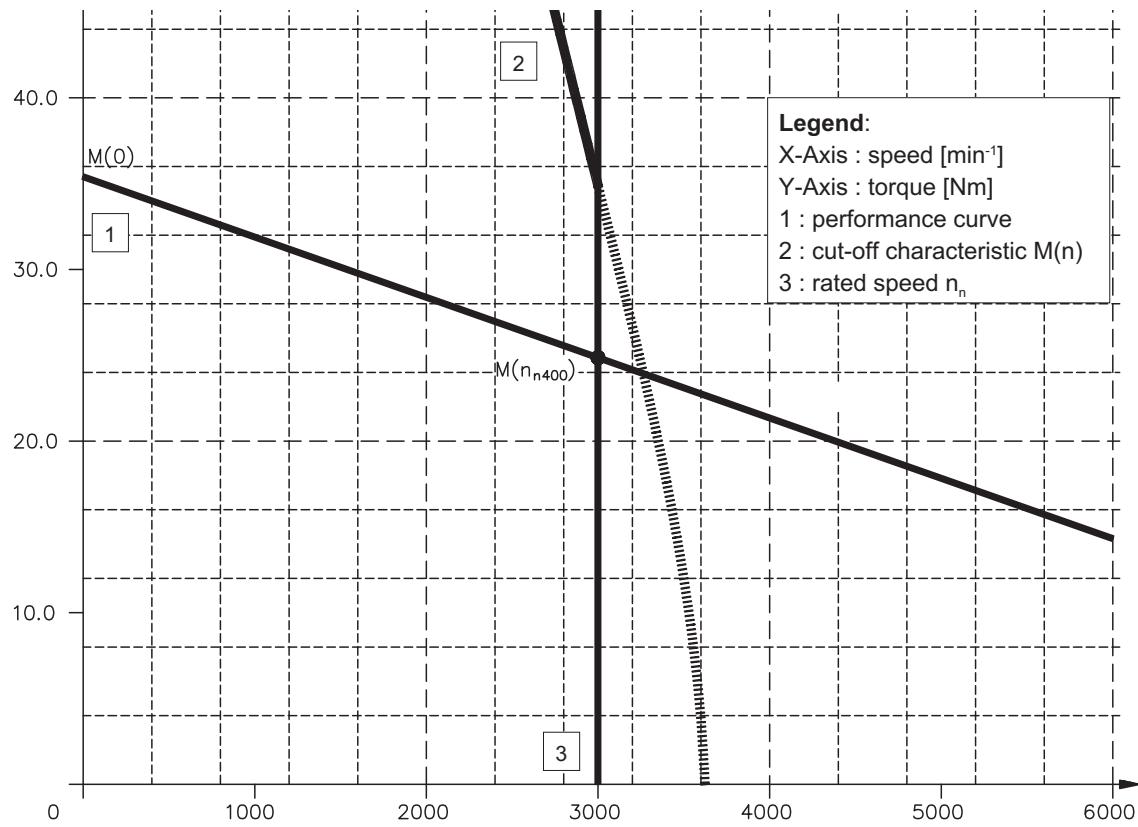


III.2.8

Performance curve GOLDLINE™ BH-822-D

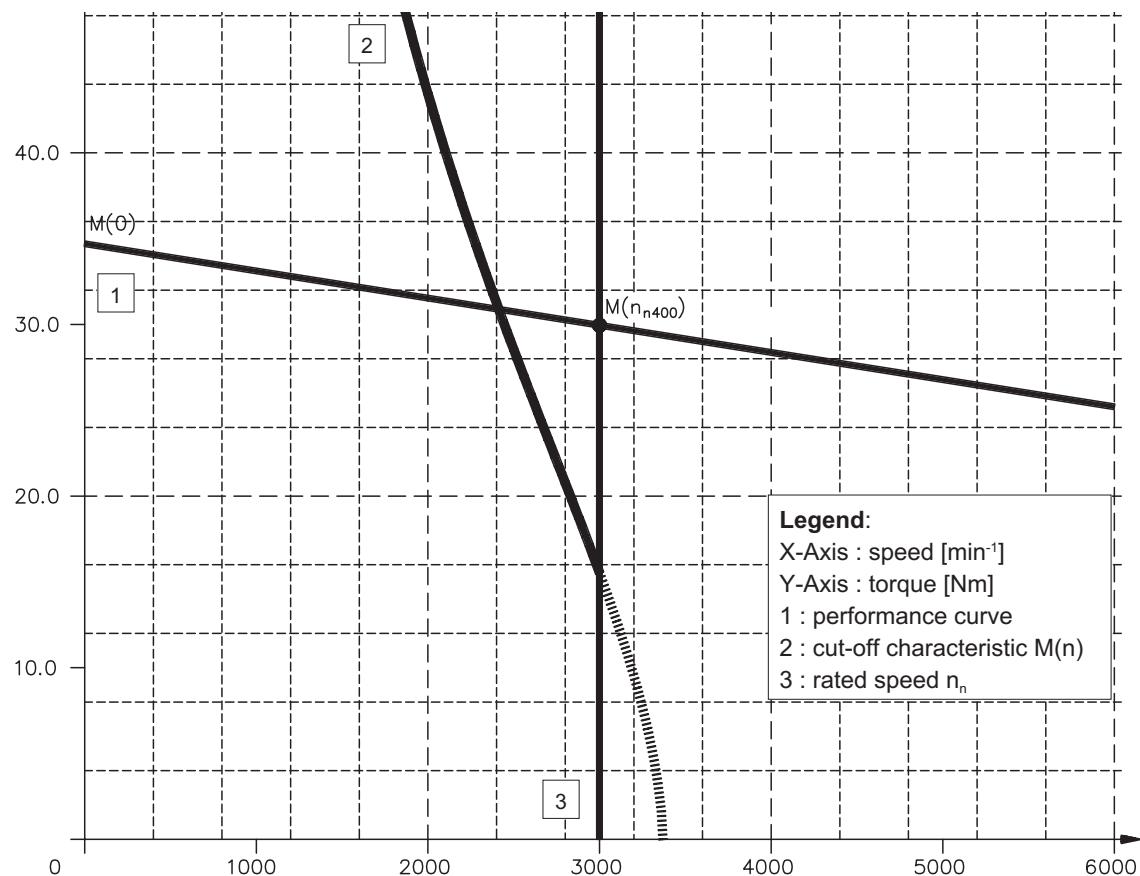


III.2.9

Performance curve GOLDLINE™ BH-824-A

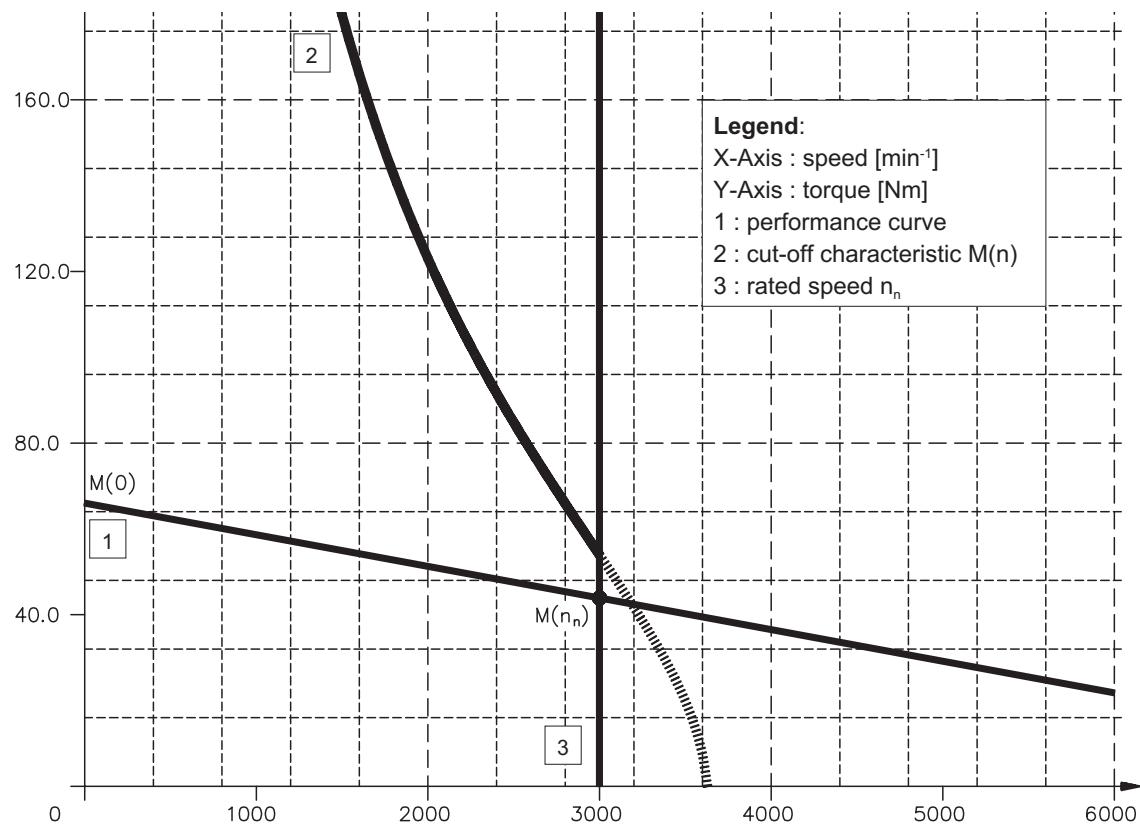


III.2.10

Performance curve GOLDLINE™ BH-824-D

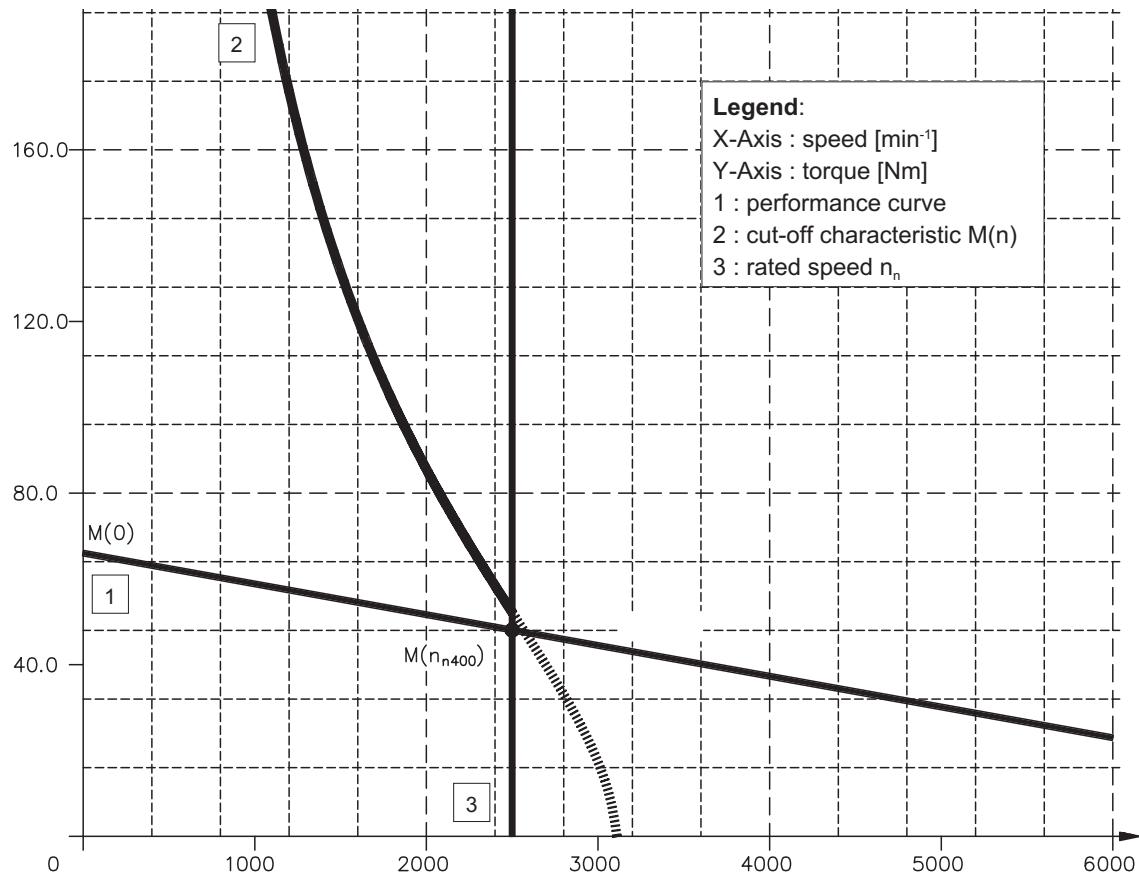


III.2.11

Performance curve GOLDLINE™ BH-826-C

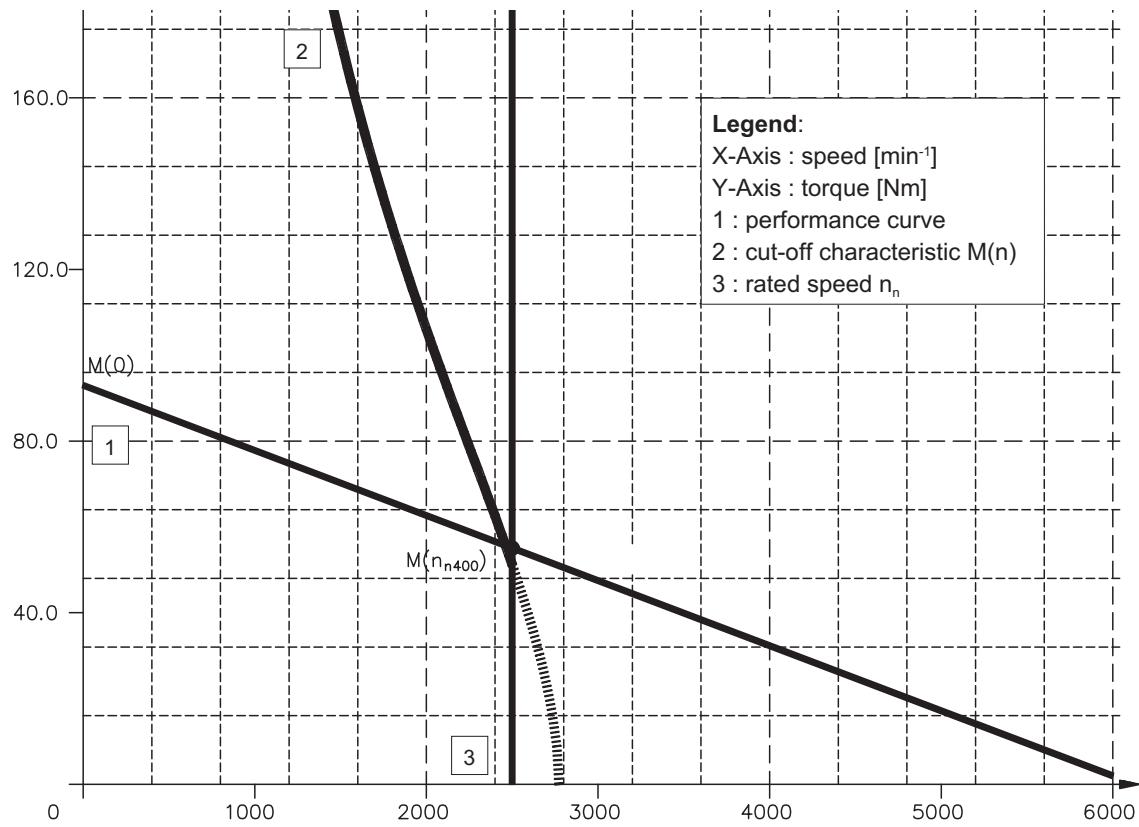


III.2.12

Performance curve GOLDLINE™ BH-826-D

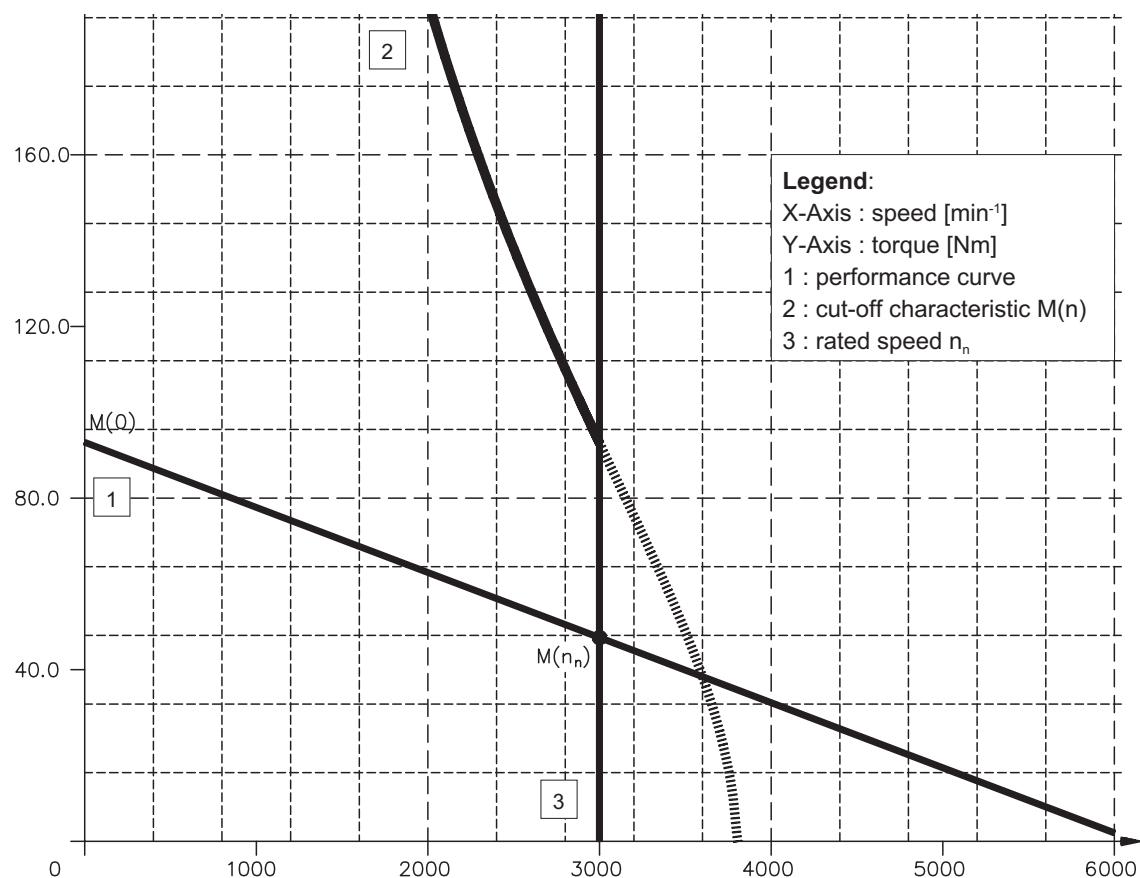

III.2.13

Performance curve GOLDLINE™ BH-828-B servo motor showing torque vs speed.

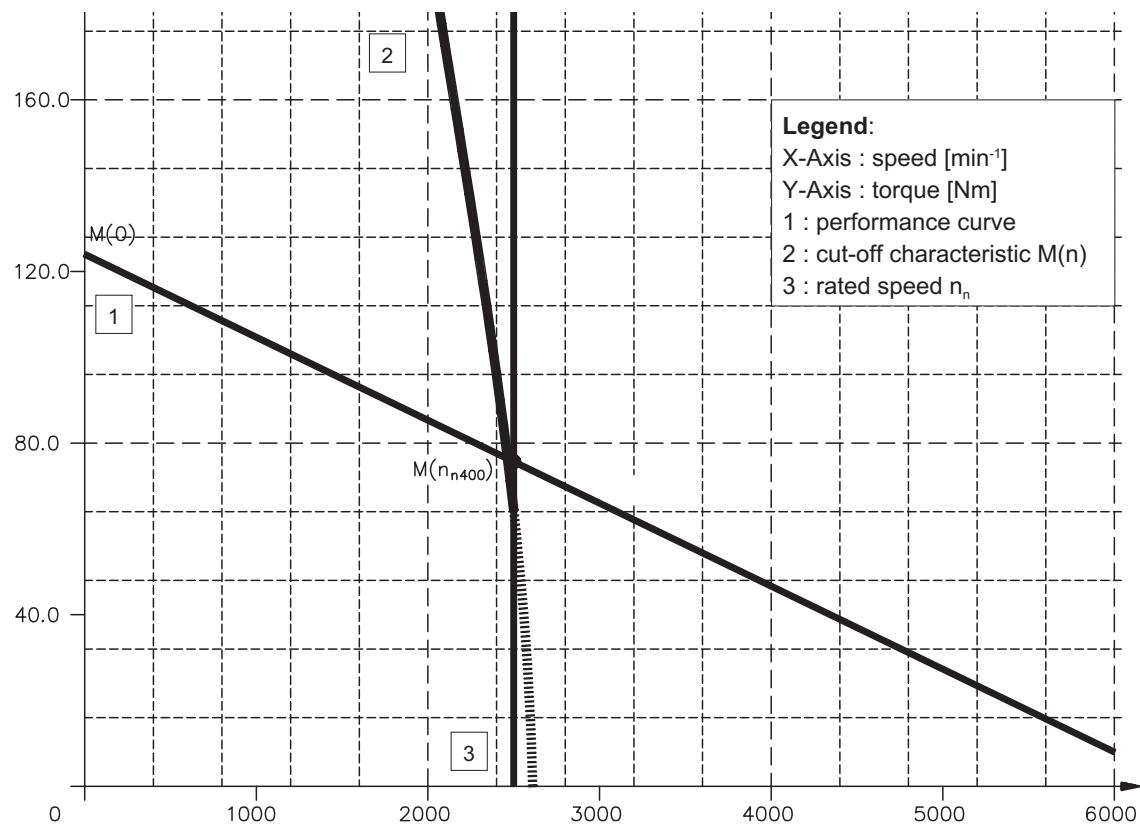

This page is deliberately left blank.

IV**Appendix****IV.1****Delivery package, transport, storage, maintenance, disposal**

Delivery package:— Motor from the GOLDLINE™ BH series

- Technical description (documentation), 1 copy per delivery
- Motor package leaflet (short info)

Transport:

- Climate category 2K3 to EN 50178
- Transport temperature —25...+70°C, max. 20K/hr change
- Transport humidity rel. humidity 5% - 95%, no condensation
- only by qualified personnel
- only in the manufacturer's original recyclable packaging
- avoid shocks, especially on the shaft end
- if the packaging is damaged, check the motor for visible damage.
- Inform the carrier and, if appropriate, the manufacturer.

Packaging:

Motor type	Carton	Palett or skeleton box	Max.stackheight
BH-1xx	X		4
BH-2xx	X		4
BH-4xx	X		3
BH-6xx	X		2
BH-8xx		X	1

Storage:

- Climate category 1K4 to EN 50178
- Storage temperature —25...+55°C, max. variation 20K/hr.
- Humidity rel. humidity 5% - 95%, no condensation
- only in the manufacturer's original recyclable packaging
- max. stacking height see table under Packaging
- Storage time unlimited

Maintenance:

- Only by qualified personnel
- The ball bearings have a grease packing which is adequate for 20,000 hours of operation under normal conditions. The bearings should be replaced after 20,000 hours of operation under rated conditions.
- Check the motor for bearing noise every 2500 operating hours, respectively each year. If any noises are heard, then the operation of the motor must stop, the bearings must be replaced.
- Opening the motor invalidates the warranty.

Cleaning:

- If the housing is dirty: clean with Isopropanol or similar.
do not immerse or spray

Disposal:

- The disposal should be carried out by a certified disposal company. Ask us for addresses.

IV.2

Fault-finding

The following table is to be seen as a "First Aid" box. There can be a large number of different reasons for a fault, depending on the particular conditions in your system. The fault causes described below are mostly those which directly influence the motor. Peculiarities which show up in the control loop behaviour can usually be traced back to an error in the parameterization of the servo amplifier. The documentation for the servo amplifier and the operator software provides information on these matters.

For multi-axis systems there may be further hidden reasons for faults.

Our applications department can give you further help with your problems.

Fault	Possible cause	Measures to remove the cause of the fault
Motor doesn't rotate	<ul style="list-style-type: none"> — servo amplifier not enabled — Break in setpoint lead — Motor phases in wrong sequence — Brake not released — Drive is mechanically blocked 	<ul style="list-style-type: none"> — Supply ENABLE signal — Check setpoint lead — Correct the phase sequence — Check brake controls — Check mechanism
Motor runs away	<ul style="list-style-type: none"> — Motor phases in wrong sequence — Wrong resolver adjustment 	<ul style="list-style-type: none"> — Correct the phase sequence — Check the resolver offset and adjust it correctly
Motor oscillates	<ul style="list-style-type: none"> — Break in the shielding of the resolver cable — amplifier gain to high 	<ul style="list-style-type: none"> — Replace resolver cable — use motor default values
Error message: brake	<ul style="list-style-type: none"> — Short-circuit in the supply voltage lead to the motor holding brake — Faulty motor holding brake 	<ul style="list-style-type: none"> — Remove the short-circuit — Replace motor
Error message: output stage fault	<ul style="list-style-type: none"> — Motor cable has short-circuit or earth short — Motor has short-circuit or earth short 	<ul style="list-style-type: none"> — Replace cable — Replace motor
Error message: resolver	<ul style="list-style-type: none"> — Resolver connector is not properly plugged in — Break in resolver cable, cable crushed or similar 	<ul style="list-style-type: none"> — Check connector — Check cables
Error message: motor temperature	<ul style="list-style-type: none"> — Motor thermostat has switched — Loose resolver connector or break in resolver cable 	<ul style="list-style-type: none"> — Wait until the motor has cooled down. Then investigate why the motor becomes so hot. — Check connector, replace resolver cable if necessary
Brake does not grip	<ul style="list-style-type: none"> — Required holding torque too high — Brake faulty — Motor shaft axially overloaded 	<ul style="list-style-type: none"> — Check the dimensioning — Replace motor — Check the axial load, reduce it. — Replace motor, since the bearings have been damaged

IV.3 Index

Text	Page	Text	Page
A		S	
Ambient temperature	10	Safety notes	5
Assembly	19	Servo amplifier	10
Axial force	11	Shielding	19
Axial forces		Site	19
GOLDLINE BH 1xx..4xx	23	Standstill current	14
GOLDLINE BH 6xx..8xx	31	Standstill torque	14
B		Storage	39
Break response times	14	Storage humidity	39
C		Storage temperature	39
Commissioning	21	Storage time	39
Connection method.	12	Style	11
Contents.	3, 4	Symbols	5
Coupling	11	T	
D		Technical data	15
Delivery package	39	Thermal time constant	14
Dimensions		Thermostat	11
GOLDLINE BH 1xx..4xx	23	Torque constant	14
GOLDLINE BH 6xx..8xx	31	Transport	39
Disposal	39	V	
E		Ventilation	19
Earthing.	19	Vibration class	12
F		Voltage constant	14
Flange temperature.	10	W	
G		Wiring.	19
Ground symbol	18	GOLDLINE BH 1xx..4xx	24
H		GOLDLINE BH 6xx..8xx	32
Holding brake.	12		
I			
Insulation material class	12		
M			
Maintenance	39		
Manufacturer declaration	7		
Motor lead	20		
O			
Options	13		
P			
Peak current	14		
Power derating	10		
Protection class.	11		
Protective device	11		
R			
Radial force.	11		
Radial forces			
GOLDLINE BH 1xx..4xx	23		
GOLDLINE BH 6xx..8xx	31		
Rated current.	14		
Rated torque	14		
Resolver	12		
Resolver lead.	20		
Rotor moment of inertia	14		

Vertrieb und Service / Sales and Service / Agence et Services

Bundesrepublik Deutschland / Germany / Allemagne	Dänemark / Denmark / Danemark	Italien / Italy / Italie
Kollmorgen Seidel GmbH & Co. KG Verkaufsniederlassung Nord Wacholderstr. 40-42 40489 Düsseldorf Tel.: +49(0)203 - 99 79 214 Fax: +49(0)203 - 99 79 182	DIGIMATIC ApS Peder Skrams Vej 31A 5220 Odense SØ Tel.: +45 - 70 20 16 70 Fax: +45 - 70 20 16 71	Danaher Motion, s.r.l. Via Brugheri Zl 20030 Bovisio Masciago (MI) Tel. +39 (0) 0362 594260 Fax +39 (0) 0362 594263
Kollmorgen Seidel GmbH & Co. KG Verkaufsniederlassung West Llienstraße 3 42719 Solingen Tel.: +49(0)212 - 2 30 77 99 Fax: +49(0)212 - 2 30 77 97	Finnland / Finland / Finlande Drivematic OY Hevesenkenkä 4 28430 Pori Tel.: +358 - 20 11 23 - 111 Fax: +358 - 20 11 23 - 358	Niederlande / Netherlands / Pays-Bas Dynamic Drives Wattstraat 26f 2723 RC Zoetermeer Tel.: +31(0)79 - 59 39 214 Fax: +31(0)79 - 59 39 840
Kollmorgen Seidel GmbH & Co. KG Verkaufsniederlassung Mitte Bussardweg 38 61118 Bad Vilbel Tel.: +49(0)6101 - 55 866 00 Fax: +49(0)6101 - 55 866 06	Frankreich / France / France Kollmorgen Seidel GmbH & Co. KG Parc technologique St.Jacques 2 rue Pierre et Marie Curie 54320 Maxéville Tel.: +33(0)3 83 95 44 80 Fax: +33(0)3 83 95 44 81	Schweden / Sweden / Suéde S D T AB 25467 Helsingborg Tel.: +46(0)42 - 380 800 Fax: +46(0)42 - 380 813 Stockholm 12030 Stockholm Tel.: +46(0)8 - 640 77 30 Fax: +46(0)8 - 641 09 15 Göteborg 42671 Västra Frölunda Tel.: +46(0)31 - 69 62 60 Fax: +46(0)31 - 69 62 69
Kollmorgen Seidel GmbH & Co. KG Verkaufsniederlassung Süd-West Lessingstr. 41 75015 Bretten Tel.: +49(0)7252 - 97 39 040 Fax: +49(0)7252 - 97 39 055	Kollmorgen Seidel GmbH & Co. KG 216 Lotissement Les Peiffendes Le Sonnant d'Uriage 38410 Uriage Tel.: +33(0)4 76 59 22 30 Fax: +33(0)4 76 59 22 31	Schweiz / Switzerland / Suisse Kollmorgen Seidel GmbH & Co. KG Buhrain 30 8052 Zürich Tel.: +41(0)1 - 300 29 65 Fax: +41(0)1 - 300 29 66
Kollmorgen Seidel GmbH & Co. KG Verkaufsniederlassung Süd-Ost Landsbergerstr. 17 86947 Weil Tel.: +49(0)8195 - 99 92-50 Fax: +49(0)8195 - 99 92-33	Großbritannien / Great Britain / Royaume-Uni Inmotion Technologies Bridge Mills Holmfirth Huddersfield HD9 3TW Tel : +44 (0) 14 84 68 83 25 Fax: +44 (0) 14 84 68 83 26	Spanien / Spain / Espagne BROTOMATIC S.L. C/San Miguel de Acha, 2 Pab.3 01010 Vitoria (ALAVA) Tel.: +34 945 - 24 94 11 Fax: +34 945 - 22 78 32
Servo-Dyn Technik GmbH Münzgasse 10 01067 Dresden Tel.: +49(0)351 - 49 05 793 Fax: +49(0)351 - 49 05 794	Heason Technologies Group Claremont Lodge Fontwell Avenue Eastergate Chichester PO20 6RY Tel.: +44(0)12 43 - 54 54 00 Fax: +44(0)12 43 - 54 45 90	

Systempartner / System partners / Partenaires du système

Bundesrepublik Deutschland / Germany / Allemagne	Niederlande / Netherlands / Pays-Bas	Tschechien / Czech Rep. / Tchéquie
Werner P. Hermes Ingenieurbüro Turmstr. 23 40750 Langenfeld Tel.: +49(0)212 - 65 10 55 Fax: +49(0)212 - 65 10 57	Kiwiet Ingenieurbüro Helenaveenseweg 35 5985 NK Panningen (Grashoek) Tel.: +31(0)77 - 30 76 661 Fax: +31(0)77 - 30 76 646	TG drives s.r.o Jenneweinova 37 61700 Brno Tel : 05 - 45 23 49 35 Fax: 05 - 45 23 47 35
EAT GmbH Elektronische Antriebstechnik Hanferstraße 23 79108 Freiburg Tel: +49(0)761 - 13 03 50 Fax:+49(0)761 - 13 03 555	Schweiz / Switzerland / Suisse Bobry Servo Electronic AG Zentralstr. 6 6030 Ebikon Tel.: +41(0)41- 440 - 77 22 Fax : +41(0)41 - 440 - 69 43	Türkei / Turkey / Turquie Robotek Otomasyon Teknolojileri Ali Nihat Tarlan CAD. Kartal Sk. No: 16/7 Üstbostancı YSTANBUL Tel: +90 216 464 50 64 pbx Fax: +90 216 464 50 72
IBK Ingenieurbüro Keßler GmbH Dachtmisser Str. 10 21394 Kirchgellersen Tel: +49(0)4135 - 12 88 Fax:+49(0)4135 - 14 33	Ungarn / Hungary / Hongrie Q-TECH Mérnöki Szolgáltató Kft. 1161 Budapest Batthyány u. 8. Tel.: +36 (1) 405 - 33 38 Fax: +36 (1) 405 - 91 34	Griechenland / Greece / Grèce Alpha Motion 5 - 7 Alkamenoys Str. 104.39 Athens Tel.: +30 1 82 27 47 00 Fax: +30 1 82 53 787
MACCON GmbH Kühlbachstr. 9 81543 München Tel: +49(0)89 - 65 12 20-0 Fax:+49(0)89 - 65 52 17	Italien / Italy / Italie Servo Tecnica Viale Lombardia 20 20095 Cusano Milanino (MI) Tel.: +39 (0)02 - 66 42 01 Fax: +39 (0)02 - 66 40 10 20	Australien / Australia / Australie Motion Technologies PTY. Ltd. 1/65 Alexander Avenue Taren Point NSW 2229 Sydney Tel.: +61 (0)295 24 47 82 Fax: +61 (0)295 25 38 78
Großbritannien / Great Britain / Royaume-Uni	M.C.A. s.r.l. Via f. Turati 21 20016 Pero (Mi) Tel.: +39(0)02 - 33 91 04 50 Fax: +39(0)02 - 33 90 85 8	
Motor Technology Ltd. Unit 1 Chadkirk Industrial Estate Otterspool Road Romiley, Stockport Cheshire SK6 3LE Tel.: +44(0)161 - 42 73 641 Fax : +44(0)161 - 42 71 306		

Kollmorgen Seidel GmbH & Co. KG

Hausanschrift
Wacholderstr. 40-42
D - 40489 Düsseldorf
Internet : <http://www.danaher-motion.de>

Postanschrift
Postfach 34 01 61
D-40440 Düsseldorf

Tel.: +49(0)203 - 99 79 - 0
Fax: +49(0)203 - 99 79 - 155
E-Mail: sales-eu@danaher-motion.de