

AKD[®]2G-Sxx with Functional Safety Option 2

SS1, STO, SBC, SDB, SBT - SIL3, FSoE

Installation Manual, English



Manual Edition: F, December 2025

Safety Edition: S206, February 2025

Valid for AKD[®]2G-S Hardware Revision A

Part Number 907-200019-00

Original Document



For safe and proper use, follow these instructions.
Keep for future use.



KOLLMORGEN

A REGAL REKNORD BRAND

Record of Document Revisions

Edition	Remarks
...	Table with lifecycle information of this document (→ # 387)
A, 05/2021	First edition
B, 07/2022	SD Card text updated, Letter of Volatility link added, chapter "Shielding on drive" improved, Incr. Encoder feedback on X21 added, BiSS-C and SSI feedbacks on X41 (SFA) added, new motor connector image, chapter "Motion Bus interface" updated, PROFINET certified and available, chapter "Gearing" restructured, chapter "Feedback connector" restructured, SCCR rating for MV breaker changed, EtherNet/IP table updated, chapter "Mechanical Installation": Texts restructured and dimension table adapted, chapter "Mains supply": semi-conductor added, fusing chapter restructured, EAC approval removed, max. cable length per feedback type added, X23 feedback connector graphic expanded, conformity with UK added
C, 03/2024	7V24S drive contents added, including updated cover image, connector position image, general wiring diagrams, specifications and data, X3A and X3B connector content, X4 and X5 content, individual X23 / X41 feedback wiring diagrams and specifications added, added connection to various mains supply network pages, limitations table edited, addition to part number scheme, added connector options availability table, added Projection of molten particles hazard warning, updated Safety Manual version compatibility table, updated AC and DC bus drive groupings to define number of axes limits, updated DIO X22 and X23 diagrams and bullets to better define termination and differential or single-ended options, updated 7V24S 24 A drives UL Approvals table to align with 65kA Certification, update EEO X22 diagrams.
D, 10/2024 (INTERNAL)	Removed content referring to DVD, new limitations for SMM1 and 2, new support page, wiring diagram corrected for drive test without load, addition to REACH and RoHS conformity
E, 02/2025	Note on mission time added to chapter "Disposal", Removed content referring to DVD, new limitations for SMM 1.04 and SMM R_02-07-000, new support page, wiring diagram corrected for servo drive test without load, addition to REACH and RoHS conformity
F, 12/2025	new limitations added, SFD-M feedback added

Hardware Revision (HR)

AKD2G	Firmware	WorkBench	KAS IDE	Remarks
A	from 02-00-00-000	from 2.00.0.0000	from 3.01	First revision

Trademarks

- Regal Rexnord and Kollmorgen are trademarks of Regal Rexnord Corporation or one of its affiliated companies.
- is a trademark of Kollmorgen Corporation.
- SafeMotion is a registered trademark of Kollmorgen Corporation.
- SMM is a registered trademark of Kollmorgen Corporation.
- EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH.
- EtherCAT® and Safety over EtherCAT® are registered trademarks and patented technologies, licensed by Beckhoff Automation GmbH, Germany.
- EtherNet/IP™ is a registered trademark of ODVA, Inc.
- Modbus is a registered trademark of SCHNEIDER ELECTRIC USA, INC..
- HIPERFACE® is a registered trademark of Max Stegmann GmbH.
- PROFINET® is a registered trademark of PROFIBUS and PROFINET International (PI).
- Windows is a registered trademark of Microsoft Corporation.

Current patents

- US Patent 2017/0211640 (method and apparatus for power saving, fail-safe control of an electromechanical brake), patent pending
- US Patent 16,247,478 (method and apparatus for limiting the output voltages of switching mode power supplies), patent pending
- US Patent 8,154,228 (Dynamic Braking For Electric Motors)
- US Patent 8,214,063 (Auto-tune of a Control System Based on Frequency Response)
- US Patent 10,374,468 (System and method for improved DC power line communication)

Patents referring to fieldbus functions are listed in the matching fieldbus manual.

Technical changes which improve the performance of the device may be made without prior notice!

This document is the intellectual property of Kollmorgen Corporation ("Kollmorgen"). All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

The information in this document is believed to be accurate and reliable at the time of its release. Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

Table of Contents

Table of Contents	4
1 General	13
1.1 About this Installation Manual	14
1.2 Symbols Used	15
1.2.1 Warning Symbols	15
1.2.2 Drawing Symbols	16
1.3 Abbreviations Used	16
2 Product Safety	19
2.1 You should pay attention to this	20
2.2 Use as Directed	22
2.3 Prohibited Use	22
2.4 Warning Note Labels	23
2.4.1 Notes placed on the product	23
2.4.2 Adhesive label in the package	23
2.5 Shock-hazard Protection	23
2.5.1 Leakage current	23
2.5.2 Residual current protective device (RCD)	24
2.5.3 Isolating transformers	24
2.6 Stop / Emergency Stop / Emergency Off	25
2.6.1 Stop	25
2.6.2 Emergency Stop	26
2.6.3 Emergency Off	26
3 Product Life Cycle Handling	27
3.1 Transport	28
3.2 Packaging	28
3.3 Storage	28
3.4 Installation, Setup, and Normal operation	28
3.5 Decommissioning	29
3.6 Maintenance and Cleaning	29
3.6.1 Cleaning Procedure	29
3.7 Disassembly	29
3.8 System Repair	31
3.8.1 Exchange of the Device	31
3.8.2 Exchange of Other Servo Drive System Parts	31
3.9 Disposal	31
4 Package	33
4.1 Package Supplied	34
4.2 Nameplate	34
4.3 Part Number Scheme	35
4.3.0.1 Connector Options Availability	36
5 Technical Description and Data	37
5.1 The AKD2G Family of Digital Servo Drives	38
5.2 Ambient Conditions, Ventilation and Mounting Position	40
5.3 Mechanical Data	40
5.4 Performance Data	41
5.5 Electrical data	41
5.5.1 Single axis variants (S)	41
5.5.1.1 Mains supply data, 1 phase AC, type AKD2G-Sxx- (S)	41
5.5.1.2 Mains supply data, 3 phase AC, type AKD2G-Sxx- (S)	42
5.5.1.3 Mains supply data, DC, type AKD2G-Sxx- (S)	42
5.5.1.4 Output data, type AKD2G-Sxx- (S)	43
5.5.2 Dual axis variants (D: I1=I2)	46

5.5.2.1	Mains supply data, 1 phase AC, type AKD2G-Sxx- (D)	46
5.5.2.2	Mains supply data, 3 phase AC, type AKD2G-Sxx- (D)	46
5.5.2.3	Mains supply data, DC, type AKD2G-Sxx- (D)	46
5.5.2.4	Output data, type AKD2G-Sxx- (D)	47
5.5.3	Steady State Control Current per Brake Option	49
5.6	Electrical Motor Braking	49
5.6.1	Drive dynamic braking	49
5.6.2	Regenerative braking	49
5.6.2.1	Functional description	49
5.6.2.2	Technical data - 240V servo drives	50
5.7	LCD Display and Push-buttons (B1, B2)	51
5.8	Rotary Switches (S1, S2)	55
5.9	SD Card Slot	56
6	Mechanical Installation	57
6.1	Important Notes	58
6.2	Guide to Mechanical Installation	58
6.3	Dimensions	58
7	Electrical Installation	61
7.1	Important Notes	62
7.2	Guide to Electrical Installation	62
7.3	Wiring	64
7.3.1	General	64
7.3.2	Mating connectors	64
7.3.3	Cable and Wire Requirements	65
7.3.3.1	Cable material	65
7.3.3.2	Cable length	65
7.3.3.3	T-Connector wiring	65
7.3.3.4	Cable cross sections and requirements	66
7.3.4	Protective Earth Connection	68
7.4	EMI Noise Reduction	68
7.4.1	Reducing EMI noise	69
7.4.2	Shielding with External Shielding Busbar	69
7.4.2.1	Shielding Concept	69
7.4.2.2	Shielding Busbar	70
7.4.3	Shielding Connection to the Servo Drive	71
7.4.3.1	Shielding Concept	72
7.4.3.2	Grounding plates and shield connection clamps	73
7.4.3.3	Motor connector X1/X2 with shielding connection	73
7.5	Connection Overview	73
7.5.1	Connector Position AKD2G-Sxx-6VxxS	73
7.5.2	Connector Position AKD2G-Sxx-7VxxS	75
7.5.2.1	AKD2G 480 Vac, 3 to 12 Amp drives	75
7.5.2.2	AKD2G 480 Vac, 24 Amp servo drive	76
7.5.3	Connector Position AKD2G-Sxx-6VxxD	77
7.5.4	Connector Position AKD2G-Sxx-7VxxD	78
7.5.5	Wiring overview, single axis drive	79
	AKD2G Sxx-xxS 3-12 Amp Drives	79
	AKD2G Sxx-724S 24 Amp Drives	80
7.5.6	Wiring overview, dual axis drive	81
	AKD2G Sxx-xxD 3-12 Amp Drives	81
7.5.7	Connector pinout	81
7.5.7.1	X1 and X2: Motor, Brake, Feedback 1	82
7.5.7.2	X3: Mains, regen resistor, DC-Bus	83
7.5.7.3	X3A/X3B: Mains, regen resistor, DC-Bus	84

7.5.7.4 X4: Second Brake	85
7.5.7.5 X5: Feedback 2	85
7.5.7.6 X10: 24 VDC	85
7.5.7.7 X11, X12: EtherNet Fieldbus	86
7.5.7.8 X13, X14: CAN bus (optional)	86
7.5.7.9 X20: Service	86
7.5.7.10 X21: I/O, Feedback 4	87
7.5.7.11 X22: I/O, EEO2, Feedback 5	88
7.5.7.12 X23: I/O, EEO1, Feedback 3	90
7.5.7.13 X41: SFA Feedback converter, EEO3/EEO4 EXX3/EXX4 (accessory)	91
7.6 Power and Logic Voltage Supply (X3/X10)	92
7.6.1 Electrical Supply Connection	92
7.6.1.1 Connection to various mains supply networks AKD2G-Sxx-6V (100V to 240V)	92
7.6.1.2 Connection to various mains supply networks AKD2G-Sxx-7V (240V to 480V)	94
7.6.2 Mains power supply connector X3/X3A	95
7.6.2.1 Wiring examples mains power supply	96
7.6.2.2 Fusing	101
7.6.3 Auxiliary voltage power supply connector X10	106
7.6.3.1 Fusing	107
7.6.3.2 Wiring example 24 VDC supply	107
7.7 DC Bus link connector X3/X3B	107
7.7.1 Fusing	109
7.7.2 Wiring example with T connectors	109
7.7.3 Wiring example with busbar	110
7.8 Regen resistor connector X3/X3B	110
7.8.1 Fusing and Wiring	110
7.9 Motor Power, Brake, and Feedback Connection	111
7.9.1 Motor connectivity, some examples	111
7.9.2 Single motor cable connection	112
7.9.2.1 Motor Power, Brake and Feedback connectors X1, X2	112
7.9.2.2 Feedback connectors X5, X41, X21, X22, X23	114
7.9.2.3 Secondary Brake connector X4	114
7.9.3 Dual motor cable connection	114
7.9.3.1 Motor power and motor brake connectors X1, X2	116
7.9.3.2 Feedback connectors X1, X2, X5, X41, X21, X22, X23	116
7.9.3.3 Secondary Brake connector X4	118
7.9.4 Motor Holding Brake Connection	118
7.9.4.1 Secondary Brake connector X4	120
7.10 Feedback Connection	122
7.10.1 Overview	122
7.10.2 Feedback to Connector	122
7.10.3 Feedback Type to Connector	123
7.10.4 Maximum Cable Lengths by Feedback Type	123
7.10.5 Feedback Connectors X1, X2	124
7.10.6 Feedback Connector X5	124
7.10.7 Feedback Connector X21	126
7.10.8 Feedback Connector X22	127
7.10.9 Feedback Connector X23	128
7.10.9.1 X23 Connector Pinout Summary	128
7.10.10 X23 Feedback Wiring Pinout Diagrams	130
7.10.10.1 X23 SFD Feedback	130
7.10.10.2 X23 Resolver Feedback	131
7.10.10.3 X23 BiSS (Mode B) Analog Feedback	132
7.10.10.4 X23 BiSS (Mode C) Digital Feedback	133

7.10.10.5	X23 EnDAT 2.1 Feedback (with 1V p-p analog signals)	134
7.10.10.6	X23 EnDAT 2.2 Digital Feedback	135
7.10.10.7	X23 HIPERFACE Feedback	136
7.10.10.8	X23 Sine Encoder Feedback	137
7.10.10.9	X23 Sine Encoder with Hall Feedback	138
7.10.10.10	X23 Incremental Encoder Feedback	139
7.10.10.11	X23 Incremental Encoder with Hall Feedback	140
7.10.10.12	X23 Hall Feedback	141
7.10.10.13	X23 SSI Feedback	141
7.10.10.14	X23 Step / Direction and CW / CCW Feedback	142
7.10.11	Feedback Connector X41 (SFA, accessory)	143
7.10.11.1	X41 Connector Pinout Summary	144
7.10.12	X41 Feedback Wiring Pinout Diagrams	145
7.10.12.1	X41 SFD Feedback	145
7.10.12.2	X41 Resolver Feedback	146
7.10.12.3	X41 BiSS (Mode B) Analog Feedback	147
7.10.12.4	X41 BiSS (Mode C) Digital Feedback	148
7.10.12.5	X41 EnDAT 2.1 Feedback (with 1 V p-p analog signals)	149
7.10.12.6	X41 EnDAT 2.2 Digital Feedback	150
7.10.12.7	X41 HIPERFACE Feedback	151
7.10.12.8	X41 Sine Encoder Feedback	152
7.10.12.9	X41 Sine Encoder with Hall Feedback	153
7.10.12.10	X41 Incremental Encoder Feedback	154
7.10.12.11	X41 Incremental Encoder with Hall Feedback	155
7.10.12.12	X41 Hall Feedback	156
7.10.12.13	X41 SSI Feedback	156
7.11	Gearing	157
7.11.1	Overview	157
7.11.2	Input - Electronic Gearing	157
7.11.3	Output - Emulated Encoder Output (EEO)	157
7.11.4	Master-Slave control	160
7.11.4.1	Examples	160
7.12	Ethernet Fieldbus Interface Connector X11/X12	162
7.12.1	EtherCAT® and Safety over EtherCAT®	162
7.12.2	PROFINET	163
7.12.3	EtherNet/IP	164
7.13	CAN-Bus Interface connector X13/X14	165
7.13.1	CAN-Bus Topology	165
7.13.2	CAN-Bus Wiring	166
7.13.3	Baud rate for CAN-Bus	167
7.13.4	Node Address for CAN-Bus	167
7.13.5	CAN-Bus Termination	167
7.14	Service Interface connector X20	167
7.14.1	Possible Network Configurations	168
7.15	Modbus TCP connector X20	169
7.16	I/O Connectors X21/X22/X23	169
7.16.1	Technical data	171
7.16.2	Analog Input	173
7.16.3	Analog Output	175
7.16.4	Digital Inputs	175
7.16.4.1	Digital-In 1 and 2	176
7.16.4.2	Digital-In 3 to 12	177
7.16.4.3	Digital-In/Out 1 and 2	178
7.16.4.4	Digital-In/Out 3 to 6	179

7.16.5 Digital Outputs	180
7.16.5.1 Digital-Out 5 to 6	180
7.16.5.2 Digital-Out 7 and 8	181
7.16.5.3 Digital-In/Out 1 and 2	182
7.16.5.4 Digital-In/Out 3 to 6	183
7.16.5.5 Digital-Out 9, Relay contacts	184
8 Setup	185
8.1 Important Notes	186
8.2 Guide to Servo Drive Setup	187
8.2.1 Initial Procedure for Servo Drive Test	187
8.2.1.1 Unpacking, mounting, and wiring the AKD2G	187
8.2.1.2 Minimum wiring for servo drive test without load, example	187
8.2.1.3 Confirm connections (example: directly to PC)	188
8.2.1.4 System integration - AKD2G only	188
8.2.1.5 Install and start WorkBench	189
8.2.1.6 Setup the axis in WorkBench	189
8.2.1.7 Enable the axis (Hardware)	189
8.2.1.8 Move the motor axis	189
8.2.1.9 Tune the axis	190
8.2.2 WorkBench Installation	190
8.2.2.1 Use as directed	190
8.2.2.2 Software description	191
8.2.2.3 Hardware requirements	191
8.2.2.4 Operating systems	191
8.2.2.5 Installation under Windows 7/8/10/11	192
8.3 Switch-On and Switch-Off Behavior	192
8.3.1 Switch-on Behavior in Standard Operation	193
8.3.2 Switch-off Behavior	194
8.3.2.1 Switch-off behavior using the AXIS#.DIS command	194
8.3.2.2 Switch-off behavior using a digital input (controlled stop)	196
8.3.2.3 Switch-off behavior using STO input (uncontrolled stop)	196
8.3.2.4 Switch-off behavior in the event of a fault	197
8.4 Fault and Warning Messages	199
8.4.1 Fault and warning messages AKD2G	199
8.5 Troubleshooting	200
9 Safety Manual for FS2	202
9.1 General Notes	204
9.1.1 Use as directed	205
9.1.2 Prohibited use	205
9.1.3 Abbreviations used for functional safety	206
9.1.4 Enclosure, wiring	207
9.2 Updating the SMM Firmware	209
9.3 Commissioning	211
9.3.1 First time commissioning	212
9.3.2 Recommissioning	213
9.3.3 Diagnostic Testing of safe inputs, safe outputs and STO	213
9.3.4 Diagnostic Testing of safe brake control	213
9.4 Safety Functions Option 2 (I/O, FSoE, SIL3 PLe)	214
9.4.1 Safety Properties Overview	214
9.4.1.1 Activation by FSoE	215
9.4.1.2 Activation by Safety Functions	215
9.4.1.3 Activation By Safe Digital Inputs	216
9.4.1.4 Safety Function Response Time Calculation	220
9.4.2 Technical Data	221

9.4.2.1	Safe Digital Inputs	221
9.4.2.2	Safe Digital Outputs	222
9.4.2.3	Factory Defaults without FSoE	222
9.4.2.4	OSSD	224
9.4.2.5	FSoE	226
9.4.2.6	Motor Brake Requirements	228
9.4.3	STO (Safe Torque Off)	229
9.4.3.1	Description	229
9.4.3.2	Activation	230
9.4.3.3	Restart	230
9.4.3.4	Timing	231
9.4.3.5	Related Parameters	231
9.4.3.6	Setup in WorkBench	233
9.4.3.7	Fault Reaction/ Failure Messages	233
9.4.3.8	Safety Diagnostic for the Safe I/O view in WorkBench	233
9.4.3.9	Safety Properties	233
9.4.4	SS1-t (Safe Stop 1)	234
9.4.4.1	Description	234
9.4.4.2	Activation	234
9.4.4.3	Safety Properties	235
9.4.4.4	Restart	235
9.4.4.5	Timing	235
9.4.4.6	Related Parameters	236
9.4.4.7	Setup in WorkBench	237
9.4.4.8	Fault Reaction / Failure Messages	237
9.4.4.9	Safety State / Status Signals	237
9.4.5	SBC (Safe Brake Control)	238
9.4.5.1	Description	238
9.4.5.2	Test Pulses	239
9.4.5.3	Activation	239
9.4.5.4	Restart	240
9.4.5.5	SBC Muting Function	241
9.4.5.6	Timing: SS1 followed by SBC without SDB	243
9.4.5.7	Timing: SS1 followed by SBC with SDB	244
9.4.5.8	Setup in WorkBench	245
9.4.5.9	Fault Reaction / Failure Messages	247
9.4.5.10	Safety State / Status Signals	247
9.4.5.11	Safety Properties	247
9.4.6	SBT (Safe Brake Test)	248
9.4.6.1	Description	248
9.4.6.2	Activation	250
9.4.6.3	Related Parameters	250
9.4.6.4	Timing	251
9.4.6.5	Setup in WorkBench	252
9.4.6.6	Fault Reaction / Failure Messages	252
9.4.6.7	Safety State / Status Signals	253
9.4.7	SDB (Safe Dynamic Brake)	254
9.4.7.1	Description	254
9.4.7.2	Activation	255
9.4.7.3	Restart	256
9.4.7.4	Timing	256
9.4.7.5	Related Parameters	257
9.4.7.6	Setup in WorkBench	257
9.4.7.7	Fault Reaction / Failure Messages	257

9.4.7.8	Safety State / Status Signals	259
9.4.7.9	Safety Properties	259
9.5	Settings	260
9.5.1	Display, Push-Buttons and Rotary Switches	260
9.5.2	Default Safety Parameters	261
9.5.3	SafeID	261
9.5.4	FSoE Node Address	262
9.5.5	Instances	262
9.5.6	WorkBench Safety Function Setup	263
9.5.6.1	Project Building (Online)	264
9.5.6.2	Parameters Editor	265
9.5.6.3	Downloading Safety Parameter Packages	269
9.5.6.4	Safety Configuration Diagram	273
9.5.6.5	Parameters Viewer	273
9.5.6.6	Diagnostics	273
9.5.6.7	SafeMotion Settings	275
9.6	Validation	276
9.6.1	Validation of SafeID	276
9.6.2	Validation of Safety Parameters	276
9.6.3	Validation of Safe I/O Installation	276
9.6.4	Validation Report	277
9.7	Operation	278
9.7.1	Operation States	279
9.7.2	Field Replacement	279
9.8	Safety Faults, Safety Warnings	280
9.8.1	Failure Categories	281
9.8.2	SMM Failure Classification and Behavior	281
9.8.3	Drive Safety Faults	282
9.8.4	Safety Warnings	282
9.8.5	Troubleshooting Functional Safety	283
9.9	Functional Safety Parameter Reference	284
9.9.1	Safety Parameters, sorted alphanumeric	289
9.9.1.1	AXIS#.SAFE.BRAKE#.STATE	290
9.9.1.2	AXIS#.SAFE.ERROR.ACTIVE	291
9.9.1.3	AXIS#.SAFE.FSOE.APPLPARAMLENGTH	292
9.9.1.4	AXIS#.SAFE.FSOE.COMMPARAMLENGTH	293
9.9.1.5	AXIS#.SAFE.FSOE.CONNECTIONID	294
9.9.1.6	AXIS#.SAFE.FSOE.CONNECTIONTYPE	295
9.9.1.7	AXIS#.SAFE.FSOE.LASTEROR	296
9.9.1.8	AXIS#.SAFE.FSOE.PROTOCOLVERSION	297
9.9.1.9	AXIS#.SAFE.FSOE.SAFETYADDR	298
9.9.1.10	AXIS#.SAFE.FSOE.SRACRC	299
9.9.1.11	AXIS#.SAFE.FSOE.STATE	300
9.9.1.12	AXIS#.SAFE.FSOE.WATCHDOGTIME	301
9.9.1.13	AXIS#.SAFE.FUNCTIONGRAPH	302
9.9.1.14	AXIS#.SAFE.FUNCTIONSTATUS	303
9.9.1.15	AXIS#.SAFE.RESTARTACK.REQUESTED	306
9.9.1.16	AXIS#.SAFE.SBC.ACTIVE	307
9.9.1.17	AXIS#.SAFE.SBT.ERROR	308
9.9.1.18	AXIS#.SAFE.SBT.MOVE	309
9.9.1.19	AXIS#.SAFE.SBT.SBA.ACTIVE	310
9.9.1.20	AXIS#.SAFE.SBT.STATE	311
9.9.1.21	AXIS#.SAFE.SS1_#.ACTIVE	312
9.9.1.22	AXIS#.SAFE.SS1_#.DEC	313

9.9.1.23	AXIS#.SAFE.SS1_#.INTERNALSTATE	314
9.9.1.24	AXIS#.SAFE.SS1_#.MODE	315
9.9.1.25	AXIS#.SAFE.STO.ACTIVE	316
9.9.1.26	AXIS#.SAFE.STO.REPORTFAULT	317
9.9.1.27	AXIS#.SAFE.TEMPWARNING.ACTIVE	318
9.9.1.28	AXIS#.SAFEPARAM.AXISCFGEN	319
9.9.1.29	AXIS#.SAFEPARAM.SBC.BRAKETIMEDELAY	320
9.9.1.30	AXIS#.SAFEPARAM.SBC.BRAKE#ATTACHED	321
9.9.1.31	AXIS#.SAFEPARAM.SBC.MUTINGSOURCE	322
9.9.1.32	AXIS#.SAFEPARAM.SBT.FUNCTIONACTIVATION	323
9.9.1.33	AXIS#.SAFEPARAM.SBT.MAXAPPLLOAD	324
9.9.1.34	AXIS#.SAFEPARAM.SBT.MAXMOTIONBRAKE#	325
9.9.1.35	AXIS#.SAFEPARAM.SBT.MAXTIMEINTERVAL	326
9.9.1.36	AXIS#.SAFEPARAM.SBT.TORQUEDURATION	327
9.9.1.37	AXIS#.SAFEPARAM.SDB.DELAYBEFORESWITCHING	328
9.9.1.38	AXIS#.SAFEPARAM.SDB.FUNCTIONACTIVATION	329
9.9.1.39	AXIS#.SAFEPARAM.SDB.READBACKSOURCE	330
9.9.1.40	AXIS#.SAFEPARAM.SS1_#.FSOE	331
9.9.1.41	AXIS#.SAFEPARAM.SS1_#.FUNCTIONACTIVATION	332
9.9.1.42	AXIS#.SAFEPARAM.SS1_#.SAFEINPUT	333
9.9.1.43	AXIS#.SAFEPARAM.SS1_#.TIMETOSTO	334
9.9.1.44	AXIS#.SAFEPARAM.STO.FSOE	335
9.9.1.45	AXIS#.SAFEPARAM.STO.FUNCTIONACTIVATION	336
9.9.1.46	AXIS#.SAFEPARAM.STO.RESTARTACKMODE	337
9.9.1.47	AXIS#.SAFEPARAM.STO.RESTARTACKSOURCE	338
9.9.1.48	AXIS#.SAFEPARAM.STO.SAFEINPUT	339
9.9.1.49	BRAKE#.SAFE.SBT.ELAPSED	340
9.9.1.50	BRAKE#.SAFE.SBT.STATE	341
9.9.1.51	SAFE.CFGERROR	342
9.9.1.52	SAFE.CHANGEPASSWORD	343
9.9.1.53	SAFE.CLEARSAFEID	344
9.9.1.54	SAFE.CRC	345
9.9.1.55	SAFE.DEVICECRC	346
9.9.1.56	SAFE.ERROR	347
9.9.1.57	SAFE.ERRORINSTANCE	349
9.9.1.58	SAFE.ID	350
9.9.1.59	SAFE.IDANDCRC	351
9.9.1.60	SAFE.INVALIDATEPARAMS	352
9.9.1.61	SAFE.MONITOR#.AXIS	353
9.9.1.62	SAFE.MONITOR#.DATA	354
9.9.1.63	SAFE.MONITOR#.INSTANCE	355
9.9.1.64	SAFE.MONITOR#.SOURCE	356
9.9.1.65	SAFE.STATE	357
9.9.1.66	SAFE.SWITCH	358
9.9.1.67	SAFE.VALIDATEPARAM	359
9.9.1.68	SAFE.VALIDATIONLOG	360
9.9.1.69	SAFE.VERIFYFW	362
9.9.1.70	SAFEPARAM.IOFAILUREACKSOURCE	363
9.9.1.71	SAFEPARAM.SAFEFIELDDBUS.ACTIVATION	364
9.9.1.72	SAFEPARAM.SIN.DISTINCTPULSE	365
9.9.1.73	SAFEPARAM.SINDUAL#.EN	366
9.9.1.74	SAFEPARAM.SOUTDUAL#.EN	367
9.9.1.75	SAFEPARAM.SOUTDUAL#.SOURCE	368
9.9.1.76	SAFEPARAM.SOUT#.SOURCE	371

9.9.1.77	SINDUAL#.STATE	374
9.9.1.78	SIN#.STATE	375
9.9.1.79	SOUTDUAL#.STATE	376
9.9.1.80	SOUT#.STATE	377
10	Approvals	378
10.1	Conformance with UL/cUL	379
10.1.1	3-12 A drives	379
10.1.2	7V24S 24 A drives	381
10.2	Conformance with EU	383
10.2.1	Functional Safety	383
10.2.2	Conformance with RoHS	384
10.2.3	Conformance with REACH	384
10.2.3.1	Waste Framework Directive Substances of Concern in Products (SCIP) Database	384
10.3	Conformance with UK	384
11	Index	385
12	Record of Document Revisions	387
12.1	Limitations	388
13	Copyrights, Trademarks, Patents, and Disclaimers	390
	Support and Services	393

1 General

1.1 About this Installation Manual	14
1.2 Symbols Used	15
1.3 Abbreviations Used	16

1.1 About this Installation Manual

This Installation Manual describes the AKD2G series of digital servo drives and includes information to safely install the product.

Manual updates can be downloaded from the Kollmorgen website (www.kollmorgen.com).

Product information for use consists of:

- **Safety Notes:** Multilingual document with safety information
- **Installation Manual:** Describes the product series of digital drives and includes information to safely install it. Contact Kollmorgen customer support for a printed copy of the installation manual.
- **WorkBench Online Help:** Describes how to use your drive in common applications. It also provides tips for maximizing the system performance with your product. The *Online Help* includes the *Parameter and Command Reference Guide* which provides information for the parameters and commands used to program your drive.
- **CAN-BUS Communication:** Describes how to use your drive in CANopen applications.
- **EtherCAT® Communication:** Describes how to use your drive in EtherCAT applications.
- **EtherNet/IP™ Communication:** Describes how to use your drive in EtherNet/IP applications.
- **Sercos® III Communication:** Describes how to use your drive in Sercos applications.
- **PROFINET® RT Communication:** Describes how to use your drive in PROFINET RT applications.
- **SynqNet Communication:** Describes how to use your drive in SynqNet applications.
- **Accessories Manual:** Provides information for accessories like cables and regen resistors used with your product. Regional variants of this manual available.

This document is valid for AKD2G single axis drive or dual axis drive with 110 V to 240 V or 240 V to 480 V mains voltage.

- Output stages: 3 A or 6 A, 12 A or 24 A rated current
- Programmability options: Base drive or Position Indexer drive
- Connectivity options: analog, CANopen, EtherCAT, PROFINET, EtherNet/IP
- I/O options: Extended I/O (X22), Feedback&EEO (X23)
- Functional Safety Option: FS2 with STO, SS1-t, SBC, SBT, SDB; SIL3 PLe

1.2 Symbols Used

1.2.1 Warning Symbols

Symbol	Indication
 DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
 NOTICE	Indicates situations which, if not avoided, could result in property damage.
 NOTE	This symbol indicates important notes.
	High Noise Pollution. The type of danger is specified by the text next to the symbol.
	Warning of a danger (general). The type of danger is specified by the text next to the symbol.
	Warning of danger from electricity and its effects.
	Warning of danger from hot surface.
	Warning of danger from suspended loads.
	Warning of danger from automatic start.
	Warning of danger from molten particle projection.

1.2.2 Drawing Symbols

Symbol	Description	Symbol	Description
	Signal ground		Diode
	Chassis ground / EMC-grounded		Relay
	Protective earth		Relay switch off delayed
	Resistor		Normally open contact
	Fuse		Normally closed contact
	State-of-the-art firewall		EMC filter

1.3 Abbreviations Used

Abbreviations related to functional safety (→ # 206).

Abbreviation	Meaning
(→ # 53)	"see page 53" in this document
→ xyz	"see chapter xyz" in this document
Ω	Ohms
A#, AXIS#	A# or AXIS# are placeholders for the axis number. Used with parameters or signal names.
AGND	Analog ground
AquadB	In quadrature output, used for incremental encoder emulation
AMSL	Above mean sea level
Axis	Depends on context, either one servo drive output stage or one load axis of the full motion system.
CAT	Category
CE	Communauté Européenne
COM	Serial interface for a personal computer
DGND	Digital ground
EEPROM	Electrically erasable programmable memory
EEO	Emulated Encoder Output
EMC	Electromagnetic compatibility
EMF	Electromagnetic force
FS1, FS2, FS3	Functional Safety Option 1, 2, 3
FSoE	Fail safe over EtherCAT
KAS	Kollmorgen Automation Suite
KAS IDE	Setup software (Kollmorgen Automation Suite Integrated Development Environment)
KDN	Kollmorgen Developer Network
LED	Light-emitting diode
LSB	Low significant byte (or bit)
MSB	Most significant byte (or bit)
NI	Zero pulse
OSSD	Output Signal Switching Device

PE	Protective earth
PELV	Protective Extra Low Voltage
PLC	Programmable logic control
PWM	Pulse-width modulation
RAM	Random access memory (volatile memory)
RBrake/RB	Regen resistor (also called a brake resistor)
RBext	External regen resistor
RBint	Internal regen resistor
RCD	Residual current device
RES	Resolver
S1	Continuous operation
tbd	To be determined (in progress)
VAC	Volts, alternating current
VDC	Volts, direct current

2 Product Safety

To avoid possible damage, read and follow the instructions.

2.1 You should pay attention to this	20
2.2 Use as Directed	22
2.3 Prohibited Use	22
2.4 Warning Note Labels	23
2.5 Shock-hazard Protection	23
2.6 Stop / Emergency Stop / Emergency Off	25

2.1 You should pay attention to this

This section helps to recognize risks and avoid dangers to people and objects.

Specialist staff required!

The devices are intended for industrial applications.

Machine builders must employ qualified personnel. Qualified personnel are people who have been trained to transport, install, commission, and operate electrical drives.

- Transport, storage, unpacking: Only by personnel with knowledge of handling electrostatically sensitive components.
- Mechanical installation: Only by personnel with mechanical expertise.
- Electrical installation: Only by personnel with expertise in electrical engineering.
- Basic tests / setup: Only by personnel with expertise in electrical engineering and drive technology.

The qualified personnel must know and observe ISO 12100 / IEC 60364 / IEC 60664 and national accident prevention regulations.

Read the documentation!

Read the available documentation before installation and commissioning. Improper handling of the devices can cause harm to people or damage to property. The operator of systems using the drive system must ensure that all personnel who work with the drive read and understand the manual before using the drive.

Check Hardware Revision!

Check the Hardware Revision Number of the product (see product label). This number is the link between your product and the manual. The product Hardware Revision Number must match the Hardware Revision Number on the cover page of the manual.

Pay attention to the technical data!

Adhere to the technical data and the specifications on connection conditions. If permissible voltage values or current values are exceeded, the devices can be damaged. Unsuitable motor or wrong wiring will damage the system components. Check the combination of drive and motor. Compare the rated voltage and current of the units.

Perform a risk assessment!

The manufacturer of the machine must generate a risk assessment for the machine, and take appropriate measures to ensure that unforeseen movements cannot cause injury or damage to any person or property. Additional requirements on specialist staff may also result from the risk assessment.

Automatic restart!



Risk of death or serious injury for humans working in the machine. The servo drive might restart automatically after power on, voltage dip or interruption of the supply voltage, depending on the parameter setting.

If the parameter `AXIS#.ENDEFAULT` is set to 1, then place a warning sign on the machine (Warning: Automatic Restart at Power On) and ensure, that power on is disabled, while humans are in a dangerous zone of the machine. In case of using an undervoltage protection device, you must observe EN 60204-1:2006 chapter 7.5.

ATTENTION: The servo drive is ready to operate with pre-configured STO function.

Observe electrostatically sensitive components!

The devices contain electrostatically sensitive components which may be damaged by incorrect handling.

Electrostatically discharge your body before touching the device. Avoid contact with highly insulating materials (artificial fabrics, plastic film etc.). Place the device on a conductive surface.

Hot surface!

Risk of minor burns! Drives may have hot surfaces during operation. The housing can reach temperatures above 80 °C. Measure the temperature and wait until the housing has cooled down below 40 °C before touching it.

Earthing!

Risk of electric shock! Ensure that the drive is safely earthed to the PE (protective earth) busbar in the switch cabinet. Without low-resistance earthing personal protection is at risk.

Leakage Current!

Since the leakage current to PE is more than 3.5 mA, double the PE connection or use a connecting cable with a cross-section >10 mm² to be compliant with IEC 61800-5-1.

Deviating measures according to regional standards might be possible.

High voltages!

The equipment produces high electric voltages up to 900V. Lethal danger exists at live parts of the device. Do not open or touch the equipment during operation. Keep all covers and cabinet doors closed. Built-in protection measures such as insulation or shielding may not be removed. Work on the electrical installation may only be performed by trained and qualified personnel, in compliance with the regulations for safety at work, and only with switched off mains supply, and secured against restart.

Never undo any electrical connections to the servo drive while it is live. There is a danger of electrical arcing with damage to contacts and personal injury. Wait at least 5 minutes after disconnecting the servo drive from the main supply power before touching potentially live sections of the equipment (such as contacts) or removing any connections.

Always measure the voltage in the DC bus link and wait until the voltage is below 50 V before handling components.

Ejection of molten particles!

If particles fall into the drive or the drive has been damaged, molten drive component particles may be ejected causing injuries. Shut down the drive and wear appropriate protective gear during maintenance work, troubleshooting and fault rectification. (System Repair, → # 31)

Functional Safety!

You are responsible for the assessment of the safety functions.

For Safety Options 2 and 3 according to ISO 13849 or IEC 62061 (IEC 61508).

Reinforced Insulation

Thermal sensors, motor holding brakes and feedback systems built into the connected motor must have reinforced insulation (according to IEC 61800-5-1) against system components with power voltage, according to the required application test voltage. All Kollmorgen components meet these requirements.

Never modify the drive!

Never open the cover of the drive, as the electronic components installed there generate dangerous high voltages. Even after disconnection from the mains, the components often still carry high voltage.

Therefore, the drive may only be opened by authorized specialist personnel.

Kollmorgen shall not be held accountable for any defects, malfunctions or degradations resulting from users opening up the device. In case of damage or malfunction, send the drive for repair or replacement.

High noise pollution!



Fans generate noise of up to 76 dBA when operating at maximum load. This can lead to hearing damage. Keep the cabinet doors closed during operation. Use ear protection if the control cabinet has to be opened during servicing. The operator must provide ear protection and monitor its use depending on the daily noise exposure level determined.

2.2 Use as Directed

The AKD2G drives are exclusively intended for driving suitable synchronous servo motors with closed-loop control of torque, speed, and/or position.

Your servo drive is a component that is built into electrical plants or machines and can only be operated as integral component of these plants or machines. The manufacturer of the machine used with a servo drive must conduct a risk assessment for the machine. When the servo drive is built into a machine or plant, it must not be used until it has been established that the machine or plant fulfills the requirements of the regional rules, laws and regulations.

Cabinet and wiring

Only operate your device in a closed control cabinet suitable for the ambient conditions (→ # 40). Make sure to keep the temperature within the cabinet below 40 °C (or 60 °C when using extended range operation with derating) with help of ventilation or cooling.

Only use copper conductors for wiring. The conductor cross-sections can be derived from the standard IEC 60204-1 (alternatively for AWG cross-sections: NEC Table 310-16, 75 °C column).

Power supply

The servo drives can be supplied by 1, 2 or 3 phase (TN-S or TT) or DC industrial supply networks.

Servo drives in the AKD2G series can be supplied as follows:

- AKD2G-Sxx-6Vxx:
1, 2 or 3 phase industrial supply networks (not more than 10 kA symmetrical rated current at 120V and 240V) or DC supply.
- AKD2G-Sxx-7Vxx:
3 phase industrial supply networks (not more than 10kA symmetrical rated current at 240V, 400V and 480V) or DC supply.

Connection to other voltage types of supply networks is possible with an additional isolating transformer.

Repeated overvoltages between phases (L1, L2, L3) and the housing of the drive must not exceed 1000V peak. In accordance with EN 61800-3, voltage spikes (< 50 µs) between phases must not exceed 1000V. Voltage spikes (< 50 µs) between a phase and the housing must not exceed 2000V.

Motor voltage rating

The rated voltage of the motors must be at least as high as the DC bus link voltage divided by $\sqrt{2}$ produced by the servo drive ($U_{nMotor} \geq U_{DC}/\sqrt{2}$).

Functional Safety

NOTICE

- The network, to which the servo drive is connected, must be secured according to state-of-the-art information technology security requirements.
- The user IT specialists shall analyze whether further security requirements are applicable to ensure functional safety.

Read chapter "Use as Directed" in the Functional Safety section before using safety functionality.

2.3 Prohibited Use

Other use than that described in the previous "Use as Directed" section is not intended and can lead to personnel injuries and equipment damage.

The servo drive may not be used with a machine that does not comply with appropriate

- national laws,
- rules,
- regulations and
- applicable standards.

The use of the servo drive in the following environments is also prohibited:

- potentially explosive areas
- environments with corrosive and/or electrically conductive acids, alkaline solutions, oils, vapors, dusts
- ships or offshore applications

NOTICE

Do not connect the servo drive directly to the Internet. If the network, to which the servo drive is connected, is not secured according to state-of-the-art information technology, this could be a functional safety risk.

2.4 Warning Note Labels

2.4.1 Notes placed on the product



Wait 5 minutes
after removing power
before servicing.

2.4.2 Adhesive label in the package

NOTICE

Follow the instructions given on the adhesive labels in the package.
If a warning note label is damaged, replace it immediately.

2.5 Shock-hazard Protection

2.5.1 Leakage current

Leakage current via the PE conductor results from the combination of equipment and cable leakage currents. The leakage current frequency pattern includes a number of frequencies, whereby the residual-current circuit breakers definitively evaluate the 50/60 Hz current. For this reason, the leakage current cannot be measured using a conventional multimeter. Contact our application department for help to calculate the leakage current in your application.

NOTE

Since the leakage current to PE is more than 3.5mA, in compliance with IEC 61800-5-1 the PE connection must either be doubled or a connecting cable with a cross-section $>10\text{mm}^2$ must be used. Use the PE terminal and the PE connection screws in order to fulfill this requirement.

Use the following measures to minimize leakage currents:

- Reduce the length of the engine cable.
- Use low capacitance motor cables (→ # 65).

2.5.2 Residual current protective device (RCD)

In conformity with IEC 60364-4-41 - Regulations for installation and IEC 60204 - Electrical equipment of machinery, you can use residual current protective devices (RCDs) provided the requisite regulations are complied with. The servo drive is a 3-phase system with a B6 bridge. Use RCDs which are sensitive to all currents in order to detect any DC fault current.

Rated residual currents in the RCDs:

10 to 30 mA	Protection against "indirect contact" (personal fire protection) for stationary and mobile equipment, as well as for "direct contact".
30 to 50 mA	Protection against "indirect contact" (personal fire protection) for stationary equipment

Recommendation:

Protect each servo drive individually using a 30mA RCD which is sensitive to all currents to secure against direct contact (with motor cables shorter than 5m).

If you use a selective RCD, the more intelligent evaluation process will prevent spurious tripping of the RCD.

2.5.3 Isolating transformers

When protection against indirect contact is absolutely essential despite a higher leakage current, or when an alternative form of shock-hazard protection is sought, the servo drive can also be operated by using an isolating transformer. Use a ground-leakage monitor to detect short circuits.

Note: Keep the length of wiring between the transformer and the servo drive as short as possible.

2.6 Stop / Emergency Stop / Emergency Off

The control functions Stop, Emergency Stop, and Emergency Off are defined by IEC 60204.

Notes for functional safety aspects of these functions can be found in ISO 13849 and IEC 62061(IEC 61508).

NOTE

The parameter `AXIS#.DISMODE` must be set to implement the different stop categories for software disabling. Consult the *WorkBench Online Help* for configuring the parameter.



WARNING

Vertical load could fall!

Serious injury could result when the load is not properly blocked. The internal brake function does not ensure functional safety.

- Functional Safety can be ensured with configured SBC (→ # 238) only.
- For SIL 3 a second (external) motor brake for an axis is required. For single axis servo drives this brake can be connected to X4 (→ # 120). For dual axis servo drives the additional brake must be controlled from another source (e.g. from the other axis or externally from a safety controller). The brakes can be mapped to an axis with WorkBench.
- The Hardware Enable does not initiate a controlled stop but switches off the power stage immediately.
- Set parameter `AXIS#.MOTOR.BRAKEIMM` to 1 with vertical axes, to apply the brake immediately after faults or Hardware Disable.
- Risk assessment of the application determines the necessary measures.

2.6.1 Stop

The stop function shuts down the machine in normal operation and is defined by IEC 60204.

NOTE

The Stop Category must be determined by a risk evaluation of the machine.

Stop function must have priority over assigned start functions. The following stop categories are defined:

Stop Category 0

Shut-down by immediate switching-off the energy supply to the servo drive machinery (this is an uncontrolled shut-down).

For stop without using safety functions like STO, set `AXIS#.DISMODE` to 0.

The safety function STO stops the servo drive as required by Stop Category 0 (IEC 60204).

Stop Category 1

A controlled shut-down, whereby the energy supply to the servo drive machinery is maintained to perform the shut-down, and the energy supply is only interrupted when the shut-down has been completed.

For stop without using safety functions like SS1, set `AXIS#.DISMODE` to 2.

The safety function SS1 stops the servo drive as required by Stop Category 1 (IEC 60204).

Stop Category 2

A controlled shut-down, whereby the energy supply to the servo drive machinery is maintained. This category shall be realized with a safety function like SS2. Safety function SS2 stops the servo drive as required by Stop Category 2 (IEC 60204).

Stop Category 0 and Stop Category 1 stops must be operable independently of the operating mode, whereby a Category 0 stop must have priority.

If necessary, provision must be made for the connection of protective devices and lock-outs. If applicable, the stop function must signal its status to the control logic. A reset of the stop function must not create a hazardous situation.

2.6.2 Emergency Stop

The Emergency Stop function is used for the fastest possible shutdown of the machine in a dangerous situation. The Emergency Stop function is defined by IEC 60204. Principles of emergency stop devices and functional aspects are defined in ISO 13850.

The Emergency Stop function will be triggered by the manual actions of a single person. It must be fully functional and available at all times. The user must understand instantly how to operate this mechanism (without consulting references or instructions).

NOTE

The Stop Category for the Emergency Stop must be determined by a risk evaluation of the machine.

In addition to the requirements for stop, the Emergency Stop must fulfill the following requirements:

- Emergency Stop must have priority over all other functions and controls in all operating modes.
- The energy supply to any servo drive machinery that could cause dangerous situations must be switched off as fast as possible, without causing any further hazards (Stop Category 0) or must be controlled in such a way, that any movement that causes danger, is stopped as fast as possible (Stop Category 1).
- The reset must not initiate a restart.

2.6.3 Emergency Off

The Emergency Off function is used to switch-off the electrical power supply of the machine. This is done to prevent users from any risk from electrical energy (for example electrical impact). Functional aspects for Emergency Off are defined in IEC 60364-5-53.

The Emergency Off function will be triggered by the manual actions of a single person.

NOTE

The result of a risk evaluation of the machine determines the necessity for an Emergency Off function.

Emergency Off is done by switching off the supply energy by electro-mechanical switching devices. This results in a category 0 stop. If this stop category is not possible in the application, then the Emergency Off function must be replaced by other measures (e.g., by protection against direct touching).

3 Product Life Cycle Handling

3.1	Transport	28
3.2	Packaging	28
3.3	Storage	28
3.4	Installation, Setup, and Normal operation	28
3.5	Decommissioning	29
3.6	Maintenance and Cleaning	29
3.7	Disassembly	29
3.8	System Repair	31
3.9	Disposal	31

3.1 Transport

Transport the AKD2G in accordance with IEC 61800-2 as follows:

- Transport only by qualified personnel in the manufacturer's original recyclable packaging.
- **NOTICE:** Avoid shocks while transporting.
- Vibration/Shock: AKD2G is tested for environmental class 2M1 of IEC 60721-3-2.
- Store at or below a maximum stacking height of 8 cartons. (Storage, → # 28)
- Transport only within specified temperature ranges:
-25 to +70 °C, max. rate of change 20 K/hour, class 2K3.
- Transport only within specified humidity:
max. 95% relative humidity at +40°C, no condensation, class 2K3.

NOTICE

The servo drives contain electrostatically sensitive components that can be damaged by incorrect handling. Electrostatically discharge yourself before touching the servo drive. Avoid contact with highly insulating materials, such as artificial fabrics and plastic films. Place the servo drive on a conductive surface.

If the packaging is damaged, check the unit for visible damage. Inform the shipper and the manufacturer of any damage to the package or product.

3.2 Packaging

The AKD2G packaging consists of recyclable cardboard with inserts and a label on the outside of the box.

Model	Package (mm) HxWxL	Total Weight (kg)
AKD2G-Sxx-6V03 to 6V12	158 x 394 x 292	4.2
AKD2G-Sxx-7V03 to 7V12	158 x 394 x 292	4.3
AKD2G-Sxx-7V24	158 x 394 x 292	7.6

NOTE

Mating connectors are **not** included in the package of a standard servo drive.
Mating connectors are included when the servo drive is ordered with accessories (append "-A" to the model number).

3.3 Storage

Store the AKD2G in accordance with EN 61800-2 as follows:

- Store only in the manufacturer's original recyclable packaging.
- Store at or below a maximum stacking height of 8 cartons.
- Store only within the specified temperature ranges:
 - -25 to +55 °C, max. rate of change 20 K/hour, class 1K4.
- Store only within the specified humidity:
 - 5 to 95% relative humidity, no condensation, class 1K3.
- Store in accordance with the following duration requirements:
 - Less than 1 year: without restriction.
 - More than 1 year: capacitors must be re-formed before setting up and operating the servo drive.
 - Re-forming procedures are described in the Kollmorgen Support Network ([Forming](#)).

3.4 Installation, Setup, and Normal operation

- Mechanical installation (→ # 57)
- Electrical installation (→ # 61)

- Setup (→ # 185)

Normal operation tested for environmental class 3K3 according to EN 61800-2 (→ # 40).

The manufacturer of the machine defines the necessary end user expertise based on the risk assessment for the machine and describes the requirements for normal operation based on the application.

3.5 Decommissioning

NOTICE

Only professional staff who are qualified in electrical engineering are allowed to decommission parts of the system.

Danger: Lethal Voltages!

There is a danger of serious personal injury or death by electrical shock or electrical arcing.

1. Switch off the main switch of the switchgear cabinet.
2. Secure the system against restarting.
3. Block the main switch.
4. Wait at least 5 minutes after disconnecting.

[Letter of Volatility for AKD Drives](#): This letter of volatility describes volatile and non-volatile media as well as storage media on the AKD. Use this document to comply with security requirements.

[Letter of Volatility for AKD2G Drives](#): This letter of volatility describes volatile and non-volatile media as well as storage media on the AKD2G. Use this document to comply with security requirements.

For the Letter of Volatility go to [Letter of Volatility for AKD Drives](#).

For the Letter of Volatility go to <https://www.kollmorgen.com/en-us/developer-network/letter-volatility-akd2g-drives>.

3.6 Maintenance and Cleaning

The device does not require maintenance, it should be inspected once a year by professional staff.

NOTICE

Do not immerse or spray the device.
Avoid that liquid enters the device.
The inside of the unit can only be cleaned by the manufacturer.
Opening the device voids the warranty.

3.6.1 Cleaning Procedure

1. Decommission the device.
See (Decommissioning, → # 29).
2. Casing: Clean with Isopropanol or similar cleaning solution.
Caution: Highly Flammable! Risk of injury by explosion and fire.
 - Observe the safety notes given on the cleaning liquid package.
 - Wait at least 30 minutes after cleaning before putting the device back into operation.
3. Protective grill on fan: Clean with a dry brush.

3.7 Disassembly

NOTICE

Only professional staff who are qualified in electrical engineering are allowed to disassemble parts of the system.

1. Decommission the device.
See (Decommissioning, → # 29).
2. Check temperature.
Caution: High Temperature! Risk of minor burns.

During operation, the heat sink of the drive may reach temperatures above 80 °C (176 °F).
Before touching the device, check the temperature and wait until it has cooled below 40 °C (104 °F).

3. Remove the connectors.
Disconnect the potential earth connection last.
4. Demount: Loosen the fastening screws.
Remove the device.

3.8 System Repair

NOTICE

Only professional staff who are qualified in electrical engineering are allowed to exchange parts of the drive system.

Caution: Automatic Restart! During replacement work a combination of hazards and multiple episodes may occur.

- Work on the electrical installation may only be performed by trained and qualified personnel, in compliance with the regulations for safety at work, and only with use of prescribed personal safety equipment.

3.8.1 Exchange of the Device

Only the manufacturer can repair the device.

Opening the device or housing voids the warranty.

1. Decommission the device.
See (Decommissioning, → # 29).
2. Demount the device.
See (Disassembly, → # 29).
3. Send the device to the manufacturer.
See (Disposal, → # 31).
4. Install a new device as described in the Installation Manual.
5. Setup the system as described in the Installation Manual.

3.8.2 Exchange of Other Servo Drive System Parts

Use this procedure if parts of the servo drive system (e.g., cables) must be replaced.

1. Decommission the device.
See (Decommissioning, → # 29).
2. Exchange the parts.
3. Check all connections for correct fastening.
4. Setup the system as described in the Installation Manual.

3.9 Disposal

NOTICE

- Dispose the unit after the mission time at the latest. Information on the start of the mission time can be found here: (Nameplate, → # 34)
- To dispose the unit properly, contact a certified electronic scrap disposal merchant.

In accordance with the WEEE-2012/19/EU guideline and similar, the manufacturer accepts returns of old devices and accessories for professional disposal. The sender needs to cover the costs for the transport.

Contact Kollmorgen to clarify the logistics.

Send the device in the original packaging to the manufacturer address:

North America	South America
KOLLMORGEN 201 West Rock Road Radford, VA 24141, USA	Altra Industrial Motion do Brasil Equipamentos Industriais LTDA. Avenida João Paulo Ablas, 2970 Jardim da Glória, Cotia – SP CEP 06711-250, Brazil
Europe	Asia
KOLLMORGEN s.r.o Evropská 864664 42 Modřice, Brno Czech Republic	KOLLMORGEN Room 302, Building 5, Lihpao Plaza, 88 Shenbin Road, Minhang District, Shanghai, China.

4 Package

4.1 Package Supplied	34
4.2 Nameplate	34
4.3 Part Number Scheme	35

4.1 Package Supplied

The package includes:

- AKD®2G
- Printed copy of *AKD®2G Safety Notes*
- Panel safety label

NOTE

Mating connectors are **not** included in the package of a standard drive. Mating connectors are included when the drive is ordered with accessories (append “-A” to the model number). Mating connectors listed below are never delivered with the drive. These mating connectors are usually part of the cables:

- Motor mating connector (X1, X2),
- SubD (X23, X41) for Feedback,
- RJ25 (X13, X14) for CAN Bus, and
- RJ45 (X11, X12, X20) Service and EtherNet Fieldbus.

Accessories sold separately

Please order accessories separately if required, see regional Accessories Manual.

- EMC filters for mains supply voltage, categories C2 or C3
- External regen resistor
- Mating connector kits
- Motor mating connector
- Hybrid motor cables with connectors
- Motor cable, assembled motor cables are available for all regions
- Feedback cable, assembled feedback cables are available for all regions
- SFA (Smart Feedback Adapter)
- EtherNet service cable

4.2 Nameplate

A nameplate is attached to the side of the servo drive. Example:

KOLLMORGENTM

201 W. Rock Road
Radford, VA 24141

Customer Support:
North America: +1 (540) 633-3400
Europe: +49 (0) 2102-9394-0
Italy: +39 (0) 362-594260

Model No: AKD2G-SPE-6V06D-A1F3-0000



Serial No: R2-1900-00000 HW Rev: A



MAC Address: 00-23-1B-00-00-00

Ratings at 40°C (See manual for ratings >40°C)

	INPUT	OUTPUT
Voltage	120/240 Vac	0-240 Vac
Frequency	50/60 Hz	0-599Hz
Phase	1 Ph/3 Ph	3 Ph
FL Current	13/9.7 Arms	6/6 Arms
Power @ 240 Vac	3.1/4.0 KVA	

Enclosure Protection Rating: IP20



UK
CA
CE


LISTED
IND.CONT.EQ.
E141084

RoHS

Before use, refer to CD for installation and safety information.
Assembled in USA

www.kollmorgen.com

Patents, Patents Pending


4.3 Part Number Scheme

Use the part number scheme for product identification only.

Do not use it for the order process because not all features can always be combined among each other.

NOTE

- Mating connectors are **not** included in the package of a standard servo drive.
- Mating connectors are included when the servo drive is ordered with accessories (append “-A” to the model number).
- Mating connectors X1, X2, RJ25, RJ45, SubD are always part of the used cables.

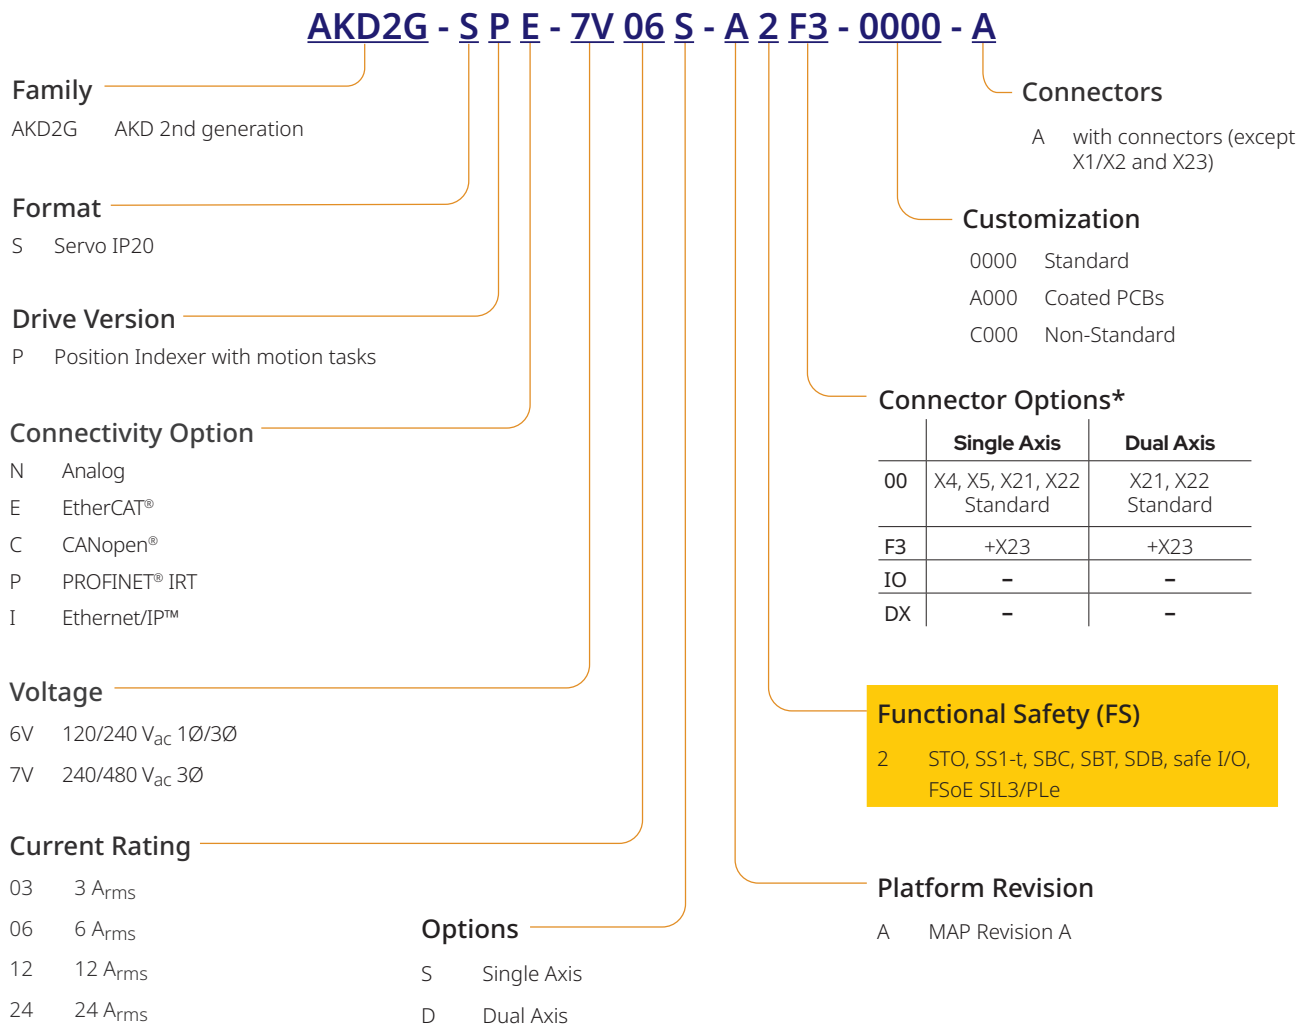

***See connector options feedback, I/O, and brake availability on the following page.**

Example AKD2G-SPE-7V06S-A2F3-0000

AKD2G IP20 housing, position indexer, EtherCAT, 240 V to 480 V mains supply, 6 A rated current, single axis, Platform Revision A, safe stop functionality SIL3 PLe with FSoE, with all possible connectors (X21, X22, X4, X5, X23), uncoated, no mating connectors.

Example AKD2G-SPE-6V06D-A2F3-A000-A

AKD2G IP20 housing, position indexer, EtherCAT, 120 V to 240 V mains supply, 2 x 6 A rated current, dual axis, Platform Revision A, safe stop functionality SIL3 PLe with FSoE, with all possible connectors (X21, X22, X23), PCBs coated, with mating connectors.

4.3.0.1 Connector Options Availability

Connector Options – Feedback Availability							X1, X2 or X5 + SFA Cable ①	
	X1	X2	X5	X21	X22	X23	SFA-R00	SFA-E00
HIPERFACE DSL	✓	✓	✓					
SFD						✓		✓
SFD-M/SFD3	✓	✓	✓					
Resolver						✓	✓	
BiSS B (Analog)/C (Digital)					C only	✓		✓
EnDAT 2.1(Analog)/2.2 (Digital)					2.2 only	✓		✓
HIPERFACE						✓		✓
Sin/Cos						✓		✓
Sin/Cos +Hall						✓		✓
Incr. Encoder				✓	✓	✓		✓
Incr. Encoder +Hall						✓		✓
Hall						✓		✓
SSI					✓	✓		✓
Step/Direction				✓	✓	✓		
CW/CCW				✓	✓	✓		

Connector Options – I/O Availability

	X21	X22	
Analog-In (AIN)	1 Differential input channel		
Analog-Out (AOUT)	1 Channel		
Digital-In (DIN)	8 Channels Total 2 IEEE EN61131-2 Standard, Fast, Differential Input Channels	4 IEEE EN61131-2 Standard Channels	
Digital-Out (DOUT)	1 channel (relay) + FS1 only 4 Standard DOUT	4 Channels – 2 Fast Channels (Volt Free)	
Digital In/Out (DIO)	–	2 RS-485/Single-Ended Channels	
Encoder Emulation Output ②	–	EEO2	
Electronic Gearing Input	✓	✓	
STO	FS1 Axis 1	FS1 Axis 2	
Safety In (SIN)	2 Channels, Slow – FS2, FS3 only	2 Channels, Slow – FS2 & FS3 only	
Safety Out (SOUT)	4 Channels Slow – FS2 & FS3 only	–	
	Digital In/Out (DIO)	Zero Pulse Available	Encoder Emulation Output②
X23	4 Channels Total 2 Differential/Single-ended input channels 2 Single-ended input channels	✓	EEO1
SFA ① – X41 via X1			EEO3
SFA ① – X41 via X2 or X5			EEO4

Connector Options – Secondary Brake Availability: X4 only

① The SFA (Smart Feedback Adapter) is optional and supplied separately.

② WorkBench configuration

5 Technical Description and Data

5.1	The AKD2G Family of Digital Servo Drives	38
5.2	Ambient Conditions, Ventilation and Mounting Position	40
5.3	Mechanical Data	40
5.4	Performance Data	41
5.5	Electrical data	41
5.6	Electrical Motor Braking	49
5.7	LCD Display and Push-buttons (B1, B2)	51
5.8	Rotary Switches (S1, S2)	55
5.9	SD Card Slot	56

5.1 The AKD2G Family of Digital Servo Drives

Available AKD2G-SP (Position Indexer) versions

Connectivity	Rated Voltages	Current	Axis	Rev	Funct. Safety
N :- Analog	6V :	03 : 3 A	S :- Single	A	2 : SIL3 basis
C :- CANopen	120/240VAC 1~	06 : 6 A	D :- Dual I1=I2		
E :- EtherCAT	240VAC 3~	12 : 12 A			
P :- PROFINET	170/340 VDC	24 : 24 A			
I :- EtherNet/IP	7V :				
	240/400/480VAC 3~				
	340/565/680 VDC				

Connector Options

Single Axis	Dual Axis
00 : Basis (X21, X22, X4, X5)	00 : Basis (X21, X22)
IO : Basis +X22	
F3 : Basis +X23	F3 : Basis +X23
DX : Basis +X22, +X23	

Standard features

- Single axis or dual axis in one housing
- Supply voltages:
 - DC
 - AC single phase, split phase, three phase AC neutral or leg grounded
 - Single or group supply, single or group mains fusing
- Ethernet Fieldbus on board, TCP/IP service channel and Modbus on board
- SFD3, SFD-M, HIPERFACE DSL motor feedback support on board
- Support for many conventional motor feedback types
- Step / Direction input on board
- Encoder emulation on board
- Use with synchronous servomotors, linear motors, and induction machines

Power section

- Single or three phase AC supply, 5% to 110% of rated AC voltage over 47 to 63 Hz. Connection to higher AC voltage mains only by using isolating transformer.
- DC supply, voltage range 5% to 110% of rated DC voltage. Fusing to be provided by the user.
- Three phase bridge rectifier, integral soft-start circuit.
- DC bus link voltage can be connected in parallel for power sharing.
- Floating current sensors measure actual motor current
- Regenerative circuit with dynamic distribution of the generated power between several servo drives on the same DC bus link circuit.
- Internal regen resistor for all models, optional external regen resistor if required.

Functional Safety Options

- FS2: STO, SS1-t, SBC, SBT, SDB; SIL3 PLe, command by I/O or FSoE (→ # 214).

Electrical safety

- Appropriate insulation / creepage distances and electrical isolation for safe electrical separation, per IEC 61800-5-1, between the power input / motor connections and the signal electronics.
- Soft-start, over voltage detection, short-circuit protection, phase-loss detection.
- Temperature monitoring of the servo drive and motor.
- Electronic motor overload protection: foldback mechanism or optional fault response.

Auxiliary supply voltage 24VDC

- From an external, safety approved 24 V $\pm 10\%$ power supply (PELV).

Parameter setting

- WorkBench Software for setup by using TCP/IP.
- Download control parameter packages by using CoE
- Download safety parameter packages by using FSoE

Full digital control

- Digital current loop (update 1.28 μs / command 62.5 μs)
- Digital velocity loop (update period 62.5 μs)
- Digital position loop (update period 250 μs)

Inputs/Outputs (X21/X22/X23)

- 2 programmable analog input ($\rightarrow$ # 173)
- 2 programmable analog output ($\rightarrow$ # 175)
- 12 programmable digital inputs ($\rightarrow$ # 175)
- 4 programmable digital outputs ($\rightarrow$ # 180)
- 6 programmable digital input/outputs ($\rightarrow$ # 180)
- 4 programmable safe inputs ($\rightarrow$ # 221)
- 4 programmable safe outputs ($\rightarrow$ # 222)

Connector Options

- **F3:** X23 connector for conventional motor feedbacks (Resolver, SFD, Tamagawa Smart Abs, Comcoder, 1Vp-p Sin-Cos encoders, incremental encoders, EnDAT 2.1/2.2 and HIPERFACE).

Customization

- 0000: uncoated PCBs, standard
0xxx: uncoated PCBs, customized coding
- A000: coated PCBs, standard
Axxx: coated PCBs, customized coding

Connectivity

- Feedback inputs ($\rightarrow$ # 122)
- Encoder emulation output ($\rightarrow$ # 157)
- Digital Inputs/Outputs ($\rightarrow$ # 169)
- Service Interface ($\rightarrow$ # 167)
- Modbus Interface ($\rightarrow$ # 169)
- CANopen ($\rightarrow$ # 165)
- EtherNet Fieldbus interface ($\rightarrow$ # 162)

Accessories

- **SFA** (Smart Feedback Adapter) ($\rightarrow$ # 143).
- Hybrid motor cables, motor power cables, motor feedback cables.

- External regen resistors.

For accessories refer to your regional *Accessories Manual*.

5.2 Ambient Conditions, Ventilation and Mounting Position

Storage, Transport	(→ # 28)
Normal operation	Environmental class 3K3 according to IEC 61800-2
Surrounding temperature in operation	Internal regen resistor used: • 0 to +40 °C under rated conditions • +40 to +50 °C with output current derating 3% per Kelvin Internal regen resistor not used: • 0 to +50 °C under rated conditions • +50 to +60 °C with output current derating 2% per Kelvin •
Humidity in operation	Relative humidity 5 to 85%, no condensation, IEC 61800-2 class 3K3
Site altitude	• Up to 1,000m AMSL (above mean sea level): no restriction • 1,000 to 2,000m AMSL: power derating 1.5%/100m • Maximum altitude: 2,000m AMSL
Pollution level	Pollution level 2 as per IEC 60664-1
Vibration	Class 3M1 according to IEC 61800-2
Shock	Class L according to IEC 61800-2
Servo drive protection	IP 20 according to IEC 60529
Servo drive EMC immunity	Increased immunity according to EN 61800-5-2
Mounting	Vertical position, in a cabinet with protection of at least IP 54 Minimum cabinet size (WxHxD): 406 x 406 x 254 mm
Ventilation	Built-in fan in all servo drive variants
NOTICE	The servo drive shuts down in case of excessively high temperature in the control cabinet. Make sure sufficient forced ventilation is supplied within the control cabinet.

5.3 Mechanical Data

	Unit	6V03S, 6V06S, 6V12S	6V03D, 6V06D	7V03S, 7V06S	7V03D, 7V06D, 7V12S	7V24S
Width	mm	76	76	75	75	100
Height, without connectors	mm	235	235	272	272	335
Height, with connectors	mm	303	303	340	340	450
Depth, without connectors	mm	221	221	221	221	274
Depth, with connectors	mm	232	232	232	232	291

NOTE

Dimension drawing see section Mechanical Installation (→ # 57).

5.4 Performance Data

		AKD2G-Sxx-				
Performance Data	Units	6V03S/D 6V06S/D 6V12S	7V03S/D 7V06S	7V06D	7V12S	7V24S
High/Quiet PWM Switching Frequency (optional setting)(dynamic)	kHz	15.0	11.2	9.8	9.8	9.8
Nominal/High Load PWM Switching Frequency (dynamic)	kHz	10.3	8.1	6.5	5.9	6.5
High Load Stalled PWM Switching Frequency (dynamic)	kHz	5.1	4.1	3.3	2.9	3.3
Max. Voltage rise speed dU/dt	kV/μs	7.0	7.0	7.0	7.0	7.0
Current Loop Update Period	μs	1.28*	1.28*	1.28*	1.28*	1.28*
Velocity Loop Update Period	μs	62.5	62.5	62.5	62.5	62.5
Position Loop Update Period	μs	250	250	250	250	250
Max. Current Loop Bandwidth	Hz	3000	2400	1900	1700	1900
Max. Velocity Loop Bandwidth	Hz	750	650	600	550	600
Max. Position Loop Bandwidth	Hz	350	350	350	350	350
Max. Motor Electrical Frequency	Hz	599	599	599	599	599

* Control updates every 1.28 μs. Current command is updated every 62.5 μs.

5.5 Electrical data

5.5.1 Single axis variants (S)

5.5.1.1 Mains supply data, 1 phase AC, type AKD2G-Sxx- (S)

Input data	Units	6V03S	6V06S	6V12S
Operational supply voltage (line to line)	VAC	12 to 265		
Rated supply voltage	VAC	100 to 240		
Rated supply input frequency (±5%)	Hz	50 to 60		
Permitted switch on/off frequency	1/h	30		
Rated input VA at 240 V	kVA	1.0	1.7	3.1
Rated input current	A	4.0	7.1	13
Max. inrush current	A	10		
Rated DC bus link voltage	VDC	300		

5.5.1.2 Mains supply data, 3 phase AC, type AKD2G-Sxx- (S)

Input data	Units	6V03S	6V06S	6V12S	7V03S	7V06S	7V12S	7V24S
Operational supply voltage (Line to Line)	VAC	12 to 265			24 to 525			
Rated supply voltage	VAC	100 to 240			200 to 480			
Rated supply input frequency (±5%)	Hz	50 to 60						
Permitted switch on/off frequency	1/h	30						
Rated input VA at 240 V (* at 480 V)	kVA	1.3	2.2	4.0	2.7*	4.4*	7.2*	15.2*
Rated input current	A	3.2	5.3	9.7	3.2	5.3	8.7	18.3
Max. inrush current	A	10						
Rated DC bus link voltage	VDC	140 to 340			280 to 680			

5.5.1.3 Mains supply data, DC, type AKD2G-Sxx- (S)

Input data	Units	6V03S	6V06S	6V12S	7V03S	7V06S	7V12S	7V24S
Operational supply voltage (DC+ to DC-)	VDC	17 to 370			34 to 740			
Rated supply voltage	VDC	100 to 340			200 to 680			
Permitted switch on/off frequency	1/h	30						
Rated input power at 340 V (* at 680 V)	kW	0.62	1.25	2.5	1.25*	2.5*	5.0*	10*
Rated input current	A	2.0	4.0	8.0	2.0	4.0	8.0	16
Max. inrush current through AC input	A	10						
Rated DC bus link voltage	VDC	100 to 340			200 to 680			

5.5.1.4 Output data, type AKD2G-Sxx- (S)

	Units	6V03S	6V06S	6V12S	7V03S	7V06S	7V12S	7V24S	
Continuous output current (± 3%)	Arms	3	6	12	3	6	12	24	
Peak output current (for 5s, ±3%)	Arms	9	18	30	9	18	30	72	
Continuous motor shaft output power at rated input current									
at 1 x 120 VAC	kW	0.22	0.44	0.875	-	-	-	-	
at 1 x 240 VAC	kW	0.44	0.875	1.8				2.5	
at 3 x 120 VAC	kW	0.31	0.625	1.25	-	-	-	-	
at 3 x 240 VAC	kW	0.625	1.25	2.5	0.625	1.25	2.5	5.0	
at 3 x 400 VAC	kW	-	-	-	1.05	2.1	4.2	8.3	
at 3 x 480 VAC	kW	-	-	-	1.25	2.5	5.0	10.0	
at 170 VDC	kW	0.31	0.625	1.25	-	-	-	-	
at 340 VDC	kW	0.625	1.25	2.5	0.625	1.25	2.5	5.0	
at 565 VDC	kW	-	-	-	1.05	2.1	4.2	8.3	
at 680 VDC	kW	-	-	-	1.25	2.5	5.0	10.0	
Peak output power (for 1 s)									
at 1 x 120 VAC	kW	1.1	2.1	4.1	-	-	-	-	
at 1 x 240 VAC	kW	2.1	4.2	6.3	-	-	-	12	
at 3 x 120 VAC	kW	1.5	3	4.5	-	-	-	-	
at 3 x 240 VAC	kW	3.0	6.0	9.0	3.0	6.0	10	24	
at 3 x 400 VAC	kW	-	-	-	5.0	10	16.5	40	
at 3 x 480 VAC	kW	-	-	-	6.0	12	20	48	
at 170 VDC	kW	1.5	3	4.5	-	-	-	-	
at 340 VDC	kW	3.0	6.0	9.0	3.0	6.0	10	24	
at 565 VDC	kW	-	-	-	5.0	10	16.5	40	
at 680 VDC	kW	-	-	-	6.0	12	20	48	
Fan noise emission at 1m, min/max	dB(A)	< 50 / 60						< 50 /76	
Thermal dissipation, disabled	W	12	12	12	12	12	12	15	
Thermal dissipation at rated current	W	50	80	140	65	105	210	395	
Motor inductance									
minimum at 120 VAC	mH	1.2	0.6	0.3	-	-	-	-	
minimum at 240 VAC	mH	2.4	1.2	0.6	3.1	1.5	1.1	0.5	
minimum at 400 VAC	mH	-	-	-	5.1	2.6	1.8	0.85	
minimum at 480 VAC	mH	-	-	-	6.1	3.1	2.1	1.0	
maximum	mH	240	120	60	610	310	180	80	
Regeneration Braking	(→ # 49)								
Brake output									
Voltage (±10%)	VDC	24							
Voltage power saving	VDC	12 to 24							
Output under current fault	mA	100 (required for fault detection)							

	Units	6V03S	6V06S	6V12S	7V03S	7V06S	7V12S	7V24S
Output over current fault	A	2.25 (required for fault detection)						
Output current, maximum	A	2.1						

5.5.2 Dual axis variants (D: I1=I2)

5.5.2.1 Mains supply data, 1 phase AC, type AKD2G-Sxx- (D)

Input data	Units	6V03D	6V06D
Operational supply voltage (line to line)	VAC	12 to 265	
Rated supply voltage	VAC	100 to 240	
Rated supply input frequency ($\pm 5\%$)	Hz	50 to 60	
Permitted switch on/off frequency	1/h	30	
Rated input VA at 240 V	kVA	1.7	3.1
Rated input current	A	7.2	13
Max. inrush current	A	10	
Rated DC bus link voltage	VDC	140 to 340	

5.5.2.2 Mains supply data, 3 phase AC, type AKD2G-Sxx- (D)

Input data	Units	6V03D	6V06D	7V03D	7V06D
Operational supply voltage (ine to line)	VAC	12 to 265		24 to 525	
Rated supply voltage	VAC	100 to 240		200 to 480	
Rated supply input frequency (±5%)	Hz	50 to 60			
Permitted switch on/off frequency	1/h	30			
Rated input VA at 240 V (* at 480 V)	kVA	2.2	4.0	4.4*	7.2*
Rated input current	A	5.3	9.7	5.3	8.7
Max. inrush current (at 240 V/480 V, 20°C)	A	10			
Rated DC bus link voltage	VDC	140 to 340		280 to 680	

5.5.2.3 Mains supply data, DC, type AKD2G-Sxx- (D)

Input data	Units	6V03D	6V06D	7V03D	7V06D
Operational supply voltage (DC+ to DC-)	VDC	17 to 370		34 to 740	
Rated supply voltage	VDC	140 to 340		280 to 680	
Permitted switch on/off frequency	1/h	30			
Rated input power at 340 V (* at 680 V)	kW	1.25	2.5	2.5*	5*
Rated input current	A	4	8	4	8
Max. inrush current through AC input	A	10			
Rated DC bus link voltage	VDC	140 to 340		200 to 680	

5.5.2.4 Output data, type AKD2G-Sxx- (D)

Drive current and power output values are listed for Axis1/Axis2.

Parameter	Units	6V03D	6V06D	7V03D	7V06D
Continuous output current (± 3%)	Arms	3/3	6/6	3/3	6/6
Peak output current (for 5s, ±3%)	Arms	9/9	18/18	9/9	18/18
Continuous motor shaft output power at rated input current					
at 1 x 120 VAC	kW	0.22/0.22	0.44/0.44	-	-
at 1 x 240 VAC	kW	0.44/0.44	0.875/0.875		
at 3 x 120 VAC	kW	0.31/0.31	0.625/0.625	-	-
at 3 x 240 VAC	kW	0.625/0.625	1.25/1.25	0.625/0.625	1.25/1.25
at 3 x 400 VAC	kW	-	-	1.05/1.05	2.1/2.1
at 3 x 480 VAC	kW	-	-	1.25/1.25	2.5/2.5
at 170 VDC	kW	0.31/0.31	0.625/0.625	-	-
at 340 VDC	kW	0.625/0.625	1.25/1.25	0.625/0.625	1.25/1.25
at 565 VDC	kW	-	-	1.05/1.05	2.1/2.1
at 680 VDC	kW	-	-	1.25/1.25	2.5/2.5
Peak output power (for 1 s)					
at 1 x 120 VAC	kW	1.1/1.1	2.1/2.1	-	-
at 1 x 240 VAC	kW	2.1/2.1	4.2/4.2	-	-
at 3 x 120 VAC	kW	1.5/1.5	3.0/3.0	-	-
at 3 x 240 VAC	kW	3.0/3.0	6.0/6.0	3.0/3.0	6.0/6.0
at 3 x 400 VAC	kW	-	-	5.0/5.0	10/10
at 3 x 480 VAC	kW	-	-	6.0/6.0	12/12
at 170 VDC	kW	1.5/1.5	3.0/3.0	-	-
at 340 VDC	kW	3.0/3.0	6.0/6.0	3.0/3.0	6.0/6.0
at 565 VDC	kW	-	-	5.0/5.0	10/10
at 680 VDC	kW	-	-	6.0/6.0	12/12
Fan noise emission at 1m, min/max	dB(A)	< 50 / 60			
Thermal dissipation, disabled	W	15	15	15	15
Thermal dissipation at rated current	W	90	150	120	210
Motor inductance					
minimum at 120 VAC	mH	1.2/1.2	0.6/0.6	-	-
minimum at 240 VAC	mH	2.4/2.4	1.2/1.2	3.1/3.1	1.9/1.9
minimum at 400 VAC	mH	-	-	5.1/5.1	3.2/3.2
minimum at 480 VAC	mH	-	-	6.1/6.1	3.8/3.8
maximum	mH	240/240	120/120	610/610	380/380
Regeneration Braking	(→ # 49)				
Brake output					
Voltage (±10%)	VDC	24			
Voltage power saving	VDC	12 to 24			
Output under current fault	mA	100 (required for fault detection)			
Output over current fault	A	2.25 (required for fault detection)			

Parameter	Units	6V03D	6V06D	7V03D	7V06D
Output current, maximum	A	2.1 per brake			

5.5.3 Steady State Control Current per Brake Option

Auxiliary 24 VDC (±10%, check voltage drop) Supply Voltage (PELV)	Units	Current
Base current for all AKD2G Sxx-xV 3-12A drives with NO brake	A	< 1
Base current for an AKD2G Sxx-7V24S servo drive with NO brake	A	< 1.5
Additional current load per brake (maximum 2 brakes)*	A	< 1.8

* To calculate current for a servo drive plus a brake, add base drive current plus the current value for each brake.

For example:

1. AKD2G-Sxx-6V06D with two brakes: Net 24 V current $< 1 + 2 \cdot (1.8) = 4.6$ A
2. AKD2G-Sxx-7V24S with one brake: Net 24 V current $< 1.5 + 1.8 = 3.3$ A

5.6 Electrical Motor Braking

5.6.1 Drive dynamic braking

Drive Dynamic braking is a method to slow down a servo system by dissipating the mechanical energy driven by the motor back EMF.

NOTE

Drive dynamic braking is not functional safe. Safe dynamic braking (SDB) requires an external SDB-Contactor (→ # 254).

The drive has a built in advanced drive dynamic braking mode which operates fully in hardware. When activated, the drive powers the motor terminals with voltages to maximize the stopping force per amount of motor current. This advanced method forces all of the dynamic braking current to be stopping current and insures the fastest stopping per ampere of motor terminal current.

- When current is not being limited, the mechanical energy is being dissipated in the motor winding resistance.
- When current is being limited, energy is returned to the drive bus capacitors.
- The drive also limits the maximum dynamic braking motor terminal current by using the *AXIS#.DBLIMIT* parameter to insure that the drive, motor, and customer load do not see excessive currents/forces.

Whether and how the drive uses dynamic drive braking depends on *AXIS#.DISMODE*.

5.6.2 Regenerative braking

When the amount of returned energy from the motor builds the bus capacitor voltage up enough the drive activates the regenerative braking circuit to start dumping the returned energy in the regen resistor (also called regenerative resistor or brake resistor). The AKD2G drives offer internal resistor plus the ability to connect an external resistor depending on the application requirements.

NOTE

For more information on external regen resistors, see the *Accessories Manual*.

5.6.2.1 Functional description

1. Individual drives, not coupled through the DC bus link circuit (+DC, -DC)

When the energy fed back from the motor has an average or peak power that exceeds the preset level for the brake power rating, the drive generates the warning "W2010 Regen Energy Critical". If the power exceeds the set fault level, the regenerative circuit will switch off and the drive will disable.

2. Several drives coupled through the DC bus link (+DC, -DC)

NOTE

Only with group installation

Using the built-in regenerative circuit, several drives of the same series can be operated from a common DC-bus link (→ # 107), without any additional measures. 90% of the combined power of all the coupled drives is always available for peak and continuous power. If the power of the drive with the lowest switch-off threshold (resulting from tolerances) exceeds the set fault level, the regenerative circuit will switch off on that drive.

Switch-off on over voltage: With the regenerative circuit switched off, the returned energy is not dissipated and therefore the DC-bus link level increases. The drive reports an over-voltage fault if the DC-bus voltage threshold is exceeded. When this happens, the drive power stage is immediately disabled and the load coasts to a stop with the fault message "F2006 Bus Over voltage".

The ready to operate contact (terminals X21/B5-B6) is opened (→ # 184).

NOTE

Observe the regeneration time (some minutes) after full load with peak brake power.

5.6.2.2 Technical data - 240V servo drives

Technical data for the regenerative circuit depends on the drive type and the mains voltage. Supply voltages, capacitance, and switch-on voltages are all nominal values.

Brake circuit

Model	Rated data	Units	AC Supply 120V / 240V
6Vxxy all types	Regen start voltage at rated supply voltage	V	380
	Overvoltage limit	V	420
	Maximum regenerative duty cycle	%	35*
	Internal regen resistor	Ω	15
	Continuous power, internal resistor	W	100
	Peak brake power, internal resistor (0.5s)	kW	3 / 9
	External regen resistor (recommended 15 Ω)	Ω	≥10
	Continuous brake power, external resistor	kW	3
	Peak brake power, external (1s)	kW	5 / 14
6V03S, 6V06S	Absorption energy in capacitors (±20%)	Ws	6 / 23
	DC Bus Capacitance	μF	1640
6V12S, 6V03D, 6V06D	Absorption energy in capacitors (± 20%)	Ws	9 / 35
	DC Bus Capacitance	μF	2460

* depends on connected regen resistor power.

Brake circuit


Model	Rated data	Units	AC Supply	
			240V	400V/480V
7V03S, 7V06S, 7V12S, 7V03D, 7V06D	Regen start voltage at rated supply voltage	V	380	633 / 760
	Overvoltage limit	V	420	840
	Maximum regenerative duty cycle	%	35*	
	Internal regen resistor	Ω	33	
	Continuous power, internal resistor	W	100	
	Peak brake power, internal resistor (0.5s)	kW	4	17
	External regen resistor (recommended 33 Ω)	Ω	≥ 25	
	Continuous brake power, external resistor	kW	2	6
	Peak brake power, external (1s)	kW	6	24
7V03S, 7V06S	Absorption energy in capacitors ($\pm 20\%$)	Ws	3	30 / 18
	DC Bus Capacitance	μF	235	
7V12S, 7V03D, 7V06D	Absorption energy in capacitors ($\pm 20\%$)	Ws	6	50 / 35
	DC Bus Capacitance	μF	470	

Model	Rated data	Units	AC Supply	
			240V	400V/480V
7V24S	Regen start voltage at rated supply voltage	V	380	633 / 760
	Overvoltage limit	V	420	840
	Maximum regenerative duty cycle	%	35*	
	Internal regen resistor	Ω	15	
	Continuous power, internal resistor	W	140	
	Peak brake power, internal resistor (0.5s)	kW	9	38
	External regen resistor (recommended 15 Ω)	Ω	≥ 10	
	Continuous brake power, external resistor	kW	3	10
	Peak brake power, external (1s)	kW	14	55
	Absorption energy in capacitors ($\pm 20\%$)	Ws	15	125 / 80
	DC Bus Capacitance	μF	1200	

* depends on connected regen resistor power.

5.7 LCD Display and Push-buttons (B1, B2)

The servo drive offers an LCD display and two push-buttons B1 / B2 for navigation.

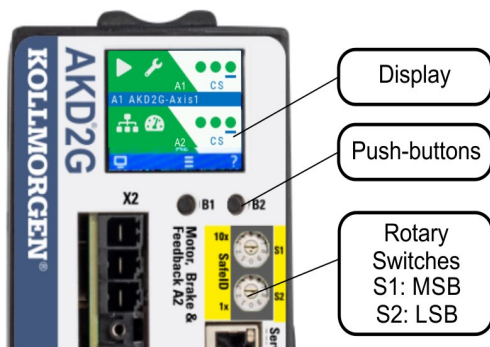

Push-button actions

A short button press invokes the action corresponding to the symbol directly above the button. On the dashboard for example,

- a short press on B1 causes the menu system to appear, and
- a short press on B2 causes a help screen to appear.
- A long press (greater than 2 seconds) on B2 returns the display to the previous screen.


B1 / B2 Functions	Description
Boot from SD card	Push both buttons during power up to boot with data from SD card. Press the buttons first, then hold it down while turning on the 24 V power supply.
Boot from flash fallback image	Remove the SD card, then press both buttons and hold them down while turning on the 24 V power supply to boot from an on-board recovery image. The fallback image includes a set of bootloader, operational, and control FPGA that implements sufficient programming support to update missing or corrupt files.
SafeID Validation	Push B2 to acknowledge SafeID validation request on the display.

LCD display

- Left Colored section
 - Color: axis status (enabled, disabled, or faulted).
 - First icon: axis command source (analog, service, electronic gearing, or fieldbus).
 - Second icon: axis operation mode (torque, velocity, or position).
 - Axis ID: A1 or A2.
- Right Non-colored section:
 - No Fault/Warning: three virtual LEDs corresponding to axis disable sources (Safe Torque Off, Hardware Enable, and Controlled Stop).
 - Faults or warnings: fault or warning code.
- Center blue bar:
 - Servo drive and axis names
 - IP address
 - Servo drive model number
 - Firmware version
- Bottom blue bar:
 - indicates whether the service port is connected to WorkBench, and
 - shows the actions that will be invoked by pushing the B1 / B2 buttons.


Dual axis LCD display

For dual-axis servo drives, the top section shows axis 1 information, the bottom section those for axis 2.

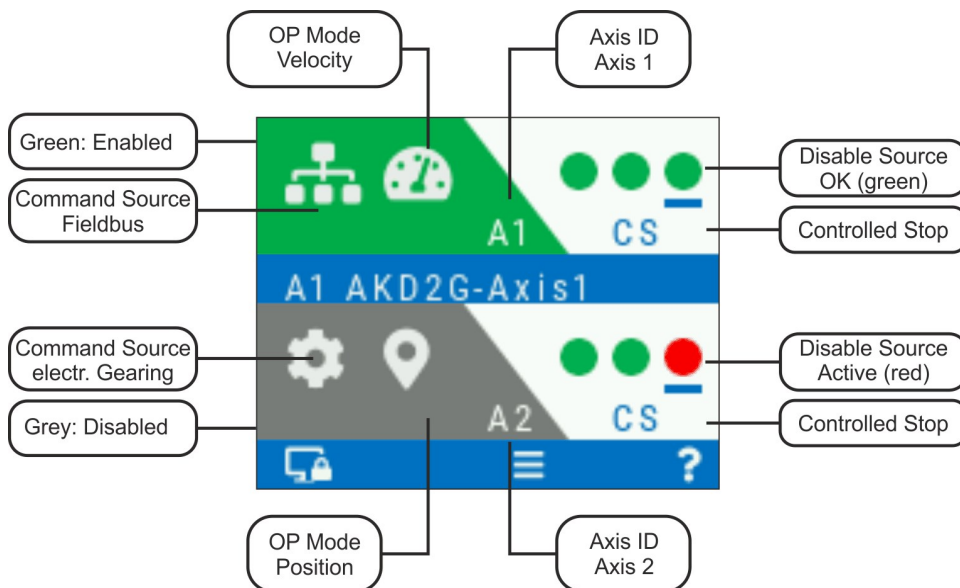

Single axis LCD display


For single axis servo drives, the top section shows axis 1 information while the section between the center and bottom bars is a data area where some important actual values of the axis are visible: position, velocity, current.

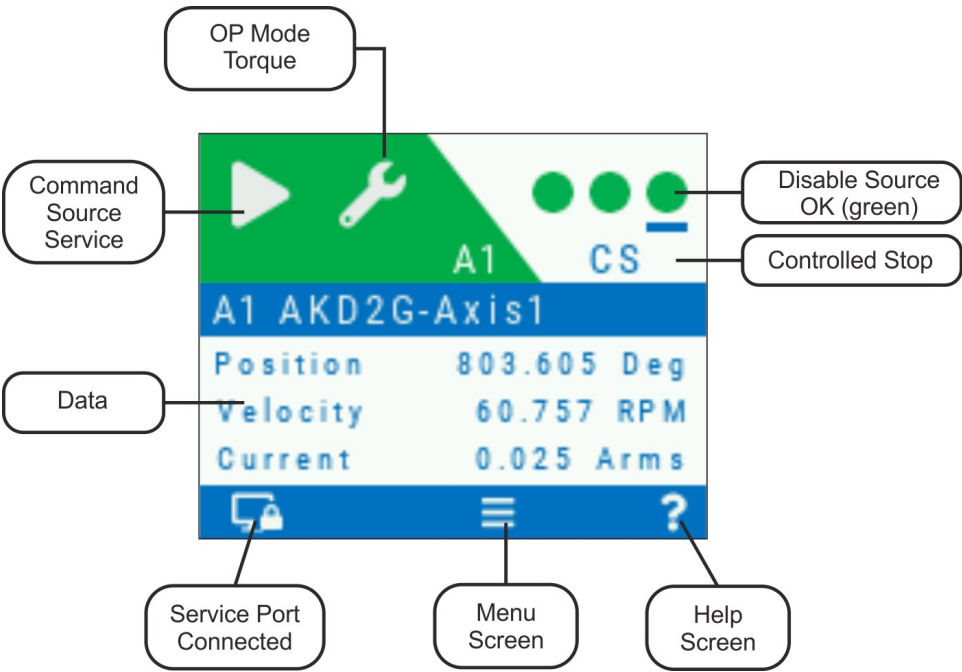



Faults and Warnings

The display shows the code of the fault or warning that occurred. If a fault occurs, the color of the left section switches to red. Navigate with B1 / B2 to the Fault screen to see a short description of the fault or warning.

Example: dual axes, Fault Axis 2

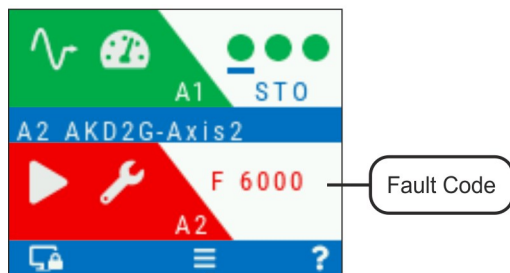


Example: single axis, Warning Axis 1

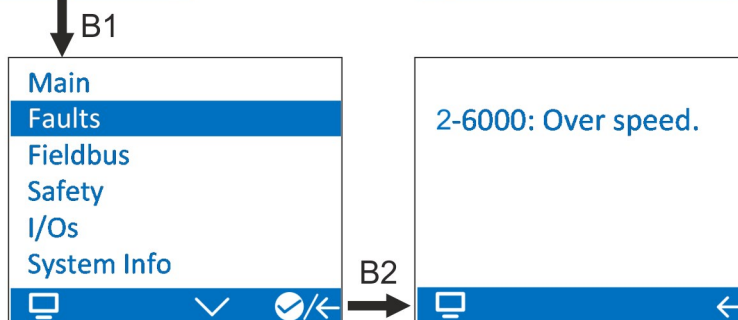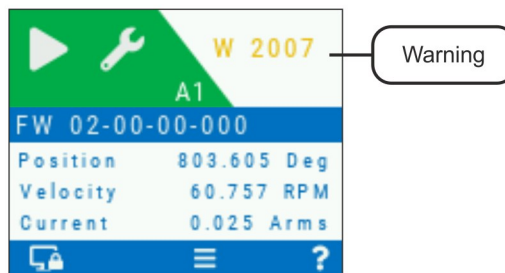

See WorkBench Onlinehelp for more details.

5.8 Rotary Switches (S1, S2)

AKD2G with safety option 2 offer two decimal rotary switches for setting the SafeID and FSoE node address.

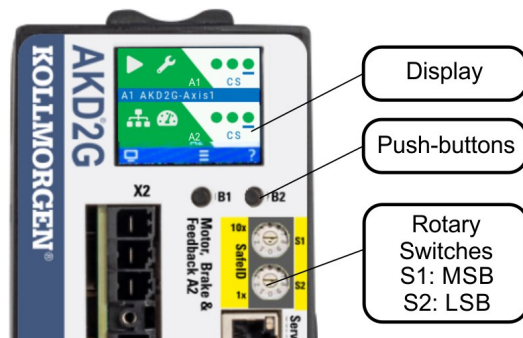

Refer to section "Functional Safety" for complete information (→ # 260).

5.9 SD Card Slot



- AKD2G contains an SD card slot
- to recover the servo drive from failure and
 - to backup and restore firmware and parameters and
 - to store AKD2G logs.
- These features can be accessed from the servo drive display using push-buttons B1/B2.

Supported SD card types

SD cards are formatted by the manufacturer. The following table outlines the SD card types and AKD2G support.

SD Type	File System	Capacity	Supported
SD (SDSC)	FAT16	1MB to 2GB	YES
SDHC	FAT32	4GB to 32GB	YES
SDXC	exFAT (Microsoft)	>32GB to 2TB	NO

Features

Refer to the WorkBench online help for complete information.

- **To recoverAKD2G from an SD card:**
Remove 24V. Press the buttons B1 and B2 to apply 24V. Release buttons after the display is updated.
- **Backup/Restore operations:**
Only possible when no program is running and the servo drive is disabled.
Note that if a fault occurs during Backup/Restore operations, the fault number shows up in the display, error codes (→ # 199).
 - Servo Drive Firmware Backup/Restore
 - Servo Drive Parameters Save/Restore
 - Storing drive logs
 - Storing drive troubleshooting information in case of failure.
 - Servo drive recovery in case of failure.

6 Mechanical Installation

6.1 Important Notes	58
6.2 Guide to Mechanical Installation	58
6.3 Dimensions	58

6.1 Important Notes



CAUTION

High EMC Voltage Level!

Risk of electrical shock, if the servo drive (or the motor) is not properly EMC-grounded.

- Use electrically conductive mounting plates, e. g. made of aluminum or galvanized steel.
- In unfavorable circumstances, use copper mesh tape between the earthing bolts and earth potential to deflect currents.



WARNING

Ejection of molten particles!

If particles fall into the drive or the drive has been damaged, molten drive component particles may be ejected causing injuries. Shut down the drive and wear appropriate protective gear during maintenance work, troubleshooting and fault rectification.(→ # 31)

NOTICE

Protect the drive from impermissible stresses. In particular, do not let any components become bent or any insulation distances altered during transport and handling. Avoid contact with electronic components and contacts.

6.2 Guide to Mechanical Installation

You need at least the following tools to install your drive:

- M5 hexagon socket-cap screws (ISO 4762)
- 4 mm hexagon ball head screwdriver
- No. 2 Phillips head screwdriver
- Small slotted screwdriver

Your specific installation may require additional tools.

NOTICE

- Do not mount the drive right next to devices that produce magnetic fields. Strong magnetic fields can directly affect internal components. Install the drive with distance to such devices and/or shield the magnetic fields.

Install the drive unit as follows:

1. Mount the drive in a closed control cabinet (ambient conditions (→ # 40). The site must be free from conductive or corrosive materials. For the mounting position in the cabinet see (→ # 58).
2. Check that the ventilation of the drive is unimpeded and keep within the permitted ambient temperature (→ # 40). Keep the required space clearance above and below the drive (→ # 58).
3. Ensure that there is an adequate flow of cool, filtered air into the bottom of the control cabinet, or use a heat exchanger (→ # 40).
Notice: The drive will switch itself off in case of overheating.
4. If you are using a cooling system for the control cabinet, position the cooling system in a way that condensation water cannot drip onto the drive or peripheral devices.
5. Assemble the drive and power supply next to each other on the conductive, grounded mounting plate in the cabinet.
6. Ground the mounting plate, motor housing and CNC-GND of the control system. For EMC-compliant shielding and grounding see (→ # 68).


6.3 Dimensions

NOTE


Mounting: 3 x M5 hexagon socket screws to ISO 4762, 4mm hexagon ball head screwdriver

Parameter	Unit	AKD2G-Sxx-				
		6V03S, 6V06S, 6V12S	6V03D, 6V06D	7V03S, 7V06S	7V03D, 7V06D, 7V12S	7V24S
Weight (without mating connectors)	kg	2.4	2.5	2.5	2.7	6.4

General 6V
and 7V
models
with X3
connector

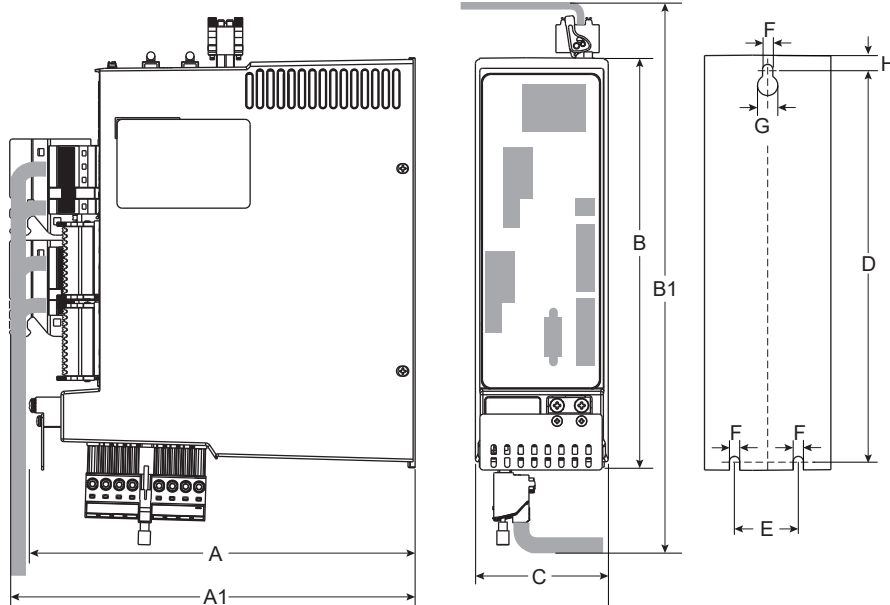


7V24S
model with
X3A
and X3B
connectors

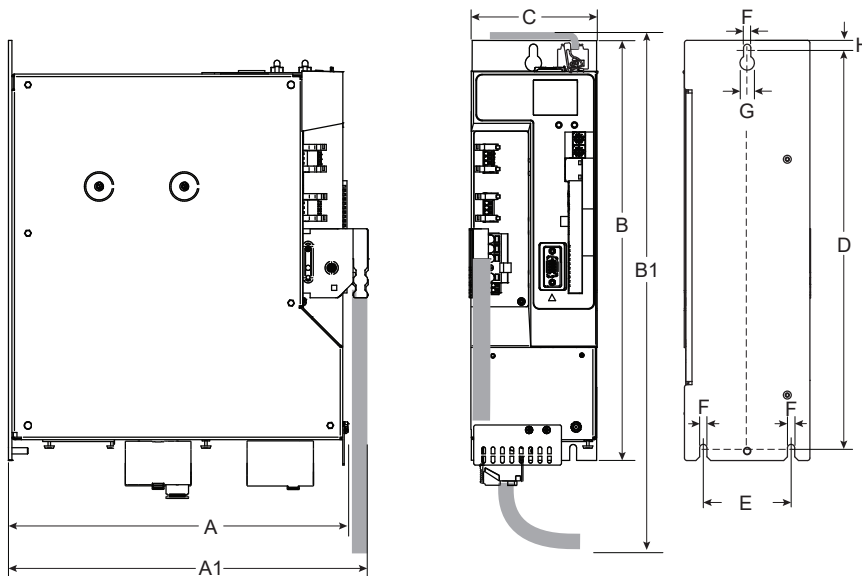

NOTE

Outline width and height dimensions are measured on footprint level (mounting plate). Dimensions on the front plate are slightly smaller.

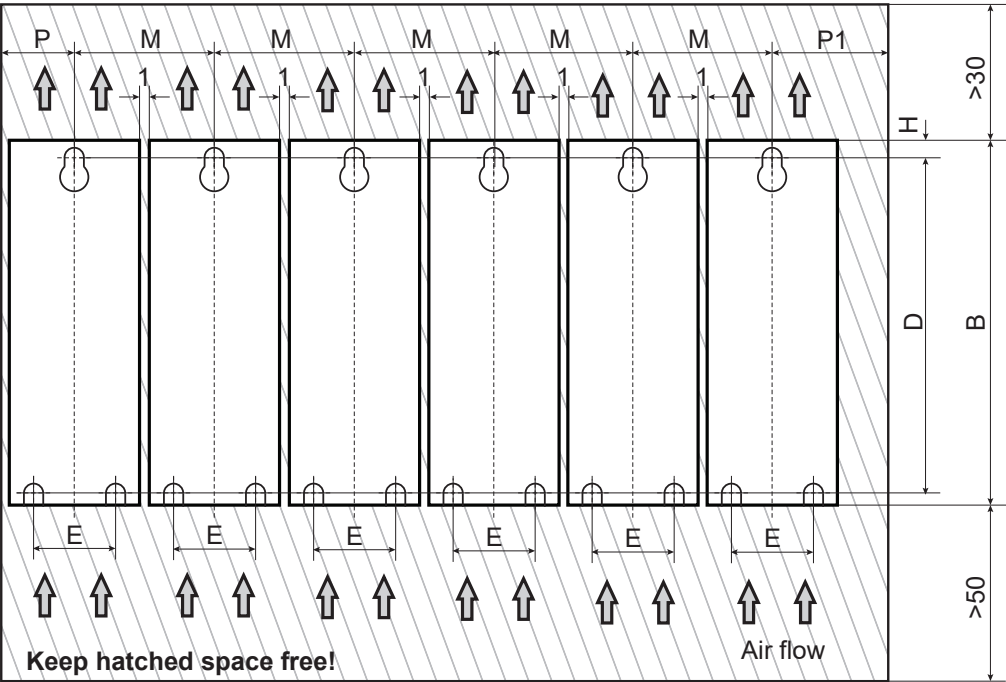

Model	Unit	A	A1	B	B1	C	D	E	F	G	H	M	P	P1
AKD2G-Sxx-6V (3 to 12 A)	mm	221	232	235	303	76	221.5	36	5.8	11.5	7	77	40	40
AKD2G-Sxx-7V (3 to 12 A)	mm	221	232	272	340	75	259	36	5.8	11.5	6	76	40	40
AKD2G-Sxx-7V (24 A)	mm	274	291	335	450*	100	319	70	5.8	11.5	6	105	55*	55

*X3A and X3B with bracket option: P ≥ 125 mm, B1 ≥ 520 mm.

7 Electrical Installation

7.1 Important Notes	62
7.2 Guide to Electrical Installation	62
7.3 Wiring	64
7.4 EMI Noise Reduction	68
7.5 Connection Overview	73
7.6 Power and Logic Voltage Supply (X3/X10)	92
7.7 DC Bus link connector X3/X3B	107
7.8 Regen resistor connector X3/X3B	110
7.9 Motor Power, Brake, and Feedback Connection	111
7.10 Feedback Connection	122
7.11 Gearing	157
7.12 Ethernet Fieldbus Interface Connector X11/X12	162
7.13 CAN-Bus Interface connector X13/X14	165
7.14 Service Interface connector X20	167
7.15 Modbus TCP connector X20	169
7.16 I/O Connectors X21/X22/X23	169

7.1 Important Notes



DANGER

High Voltage up to 900V!

There is a danger of serious personal injury or death by electrical shock or electrical arcing. Capacitors can still have dangerous voltages present up to 5 minutes after switching off the supply power. Control and power connections can still be live, even if the motor is not rotating.

- Only install and wire the equipment when it is not live.
- Make sure that the cabinet is safely disconnected (for instance, with a lock-out and warning signs).
- Never remove electrical connections to the drive while it is live.
- Wait at least 5 minutes after disconnecting the drive from the main supply power before touching potentially live sections of the equipment (e.g. contacts) or undoing any connections.
- To be sure, measure the voltage in the DC bus link and wait until it has fallen below 50V.



WARNING

Ejection of molten particles!

If particles fall into the drive or the drive has been damaged, molten drive component particles may be ejected causing injuries. Shut down the drive and wear appropriate protective gear during maintenance work, troubleshooting and fault rectification. (→ # 31)

NOTICE

Only professional staff who are qualified in electrical engineering are allowed to install the drive. Wires with color green with one or more yellow stripes must not be used other than for protective earth (PE) wiring.

NOTICE

Wrong mains voltage, unsuitable motor or wrong wiring will damage the servo drive. Check the combination of servo drive and motor. Compare the rated voltage and current of the units. Implement the wiring according to the matching connection diagram, see (→ # 79) and following.

Make sure that the maximum permissible rated voltage at the terminals L1, L2, L3 or +DC, -DC is not exceeded by more than 10% even in the most unfavorable circumstances (see IEC 60204-1).

NOTICE

Excessively high external fusing will endanger cables and devices. The fusing of the mains power and logic power must be installed by the user. Hints for the use of residual current circuit breakers (RCD) (→ # 24).

NOTICE

Since the leakage current to PE is more than 3.5 mA, in compliance with IEC61800-5-1 the PE connection must either be doubled or a connecting cable with a cross-section >10 mm² must be used. Deviating measures according to regional standards might be possible.

NOTICE

The drive status shall be monitored by the PLC to acknowledge critical situations. We recommend wiring the ready to operate relay contact in series into the emergency off circuit of the installation. The emergency off circuit must operate the supply contactor.

NOTE

It is permissible to use WorkBench to change the settings of the drive. Any other alteration will invalidate the warranty.

7.2 Guide to Electrical Installation

Kollmorgen recommends to install the drive electrical system as follows:

1. Select cables in accordance with IEC 60204 (→ # 65)
2. Install shielding and ground the drive.
For EMC-compliant shielding and grounding, see (→ # 68).
Ground the mounting plate, motor housing and CNC-GND of the control system.
3. For functional safety information, see (→ # 202).
4. Wire the drive and connectors.
Observe the "Recommendations for EMI noise reduction": (→ # 69).

- Wire the "Ready to Operate" contact into the emergency off circuit of the system.
- Connect the digital control inputs and outputs.
- Connect up analog ground (also if a fieldbus is used).
- Connect the analog input source, if required.
- Connect the motor (hybrid cable or power, brake and feedback cables).
- Connect shielding at both ends.
- If required, connect the external regen resistor (with fusing).
- Connect the mains filter FN2090/FN3288 with AKD2G-Sxx-6V (with shielded lines between filter and drive) for second environment requirements to product category C2.
- Connect the auxiliary voltage supply
- Connect the main electrical supply.
Check maximum permitted voltage value (→ # 41).
- Check proper use of residual current circuit breakers (RCD): (→ # 24).
- Connect the PC (→ # 167) for setting up the drive.

5. Check the wiring against the wiring diagrams:

Wiring reference	Page
OverviewAKD2G single axis	(→ # 79)
Overview AKD2G dual-axis	(→ # 81)
Connector pinout	(→ # 81)
Mains power supply:	(→ # 96)
Logic power supply:	(→ # 106)
DC Bus Link:	(→ # 107)
External Regen Resistor:	(→ # 110)
Motor single cable connection:	(→ # 112)
Motor dual cable connection:	(→ # 114)
Motor Holding Brake:	(→ # 118)
Feedback Connection	(→ # 122)
Encoder emulation:	(→ # 157)
Electronic gearing:	(→ # 157)
Master Slave:	(→ # 160)
EtherNet Fieldbus interface:	(→ # 162)
CAN-Bus interface:	(→ # 165)
Service interface:	(→ # 167)
Modbus interface:	(→ # 169)
Digital and analog I/O:	(→ # 169)
Functional Safety option 2:	(→ # 214)

7.3 Wiring

NOTICE

Only professional staff who is qualified in electrical engineering are allowed to install the servo drive. Wires with color green with one or more yellow stripes must not be used other than for protective earth (PE) wiring. When installing or replacing cables, use only standardized components, which comply to the cable and wire requirements (→ # 65).

7.3.1 General



DANGER High Voltage up to 900V!

There is a danger of serious personal injury or death by electrical shock or electrical arcing.

- Only install and wire the equipment when it is not live, that is, when neither the electrical supply nor the 24V auxiliary voltage nor the supply voltages of any other connected equipment is switched on.
- Make sure that the cabinet is safely disconnected (for instance, with a lock-out and warning signs). The individual voltages are switched on for the first time during setup.

NOTE

The chassis ground symbol, which is used in all the wiring diagrams, indicates that you must take care to provide an electrically conductive connection with the largest feasible surface area between the unit indicated and the mounting plate in the control cabinet. This connection is for the effective grounding of HF interference, and must not be confused with the PE-symbol (PE = protective earth, safety measure as per IEC 60204).

7.3.2 Mating connectors

NOTE

- Connectors X1, X2, X4, X5, X10T, X21, X22 are spring clamp connectors.
- X3/X3T connector with screw terminals, tightening torque 0.5...0.6 Nm (4.4...5.3 in-lbs).
- X3A/X3B connector with screw terminals, tightening torque 2 Nm (18 in-lbs).
- Connectors X4, X5, X22 and X23 are optional.

Mating connector overview

#	Description	Type	Max. Cross Section
X1/2	Motor, two wire feedback, holding brake	Connector, 4 pol. power	10 mm ² , 8 awg
		Connector, 4 pol. signal	0.5 mm ² , 21 awg
X3/X3T	Mains power, regen resistor, DC-Bus	Connector or T-type, 8 pol.	6 mm ² , 10 awg
X3A/X3B	Mains power, regen resistor, DC-Bus	Connector, 4 pol. power	6 mm ² , 10 awg
X4	Second brake	Connector, 3 pol.	1.5 mm ² , 16 awg
X5	Second feedback, two wire	Connector, 3 pol.	1.5 mm ² , 16 awg
X10T	24V power supply	T-type Connector, 2 pol.	2.5 mm ² , 14 awg
X11/12	EtherNet Fieldbus	RJ45	0.5 mm ² , 21 awg
X13/14	CAN In/Out	RJ25	0.5 mm ² , 21 awg
X20	Service Port	RJ45	0,5 mm ² , 21 awg
X21	I/O control signals	Connector, 2x11 pol.	1.5 mm ² , 16 awg
X22	I/O control signals	Connector, 2x10 pol.	1.5 mm ² , 16 awg
X23	Conventional feedback models	SubD 15pol. HD (female)	0.5 mm ² , 21 awg

7.3.3 Cable and Wire Requirements

7.3.3.1 Cable material

For information on the chemical, mechanical, and electrical characteristics of the cables please refer to the *Kollmorgen 2G Cable Guide* or contact our customer support.

NOTE

To reach the maximum permitted cable length, you have to use cable material with the following capacitance requirements:

- Motor power cable: less than 150 pF/m (phase core to shield capacitance)
- Motor Feedback cable: less than 120 pF/m (signal core to shield capacitance)
- Hybrid motor cable:
 - less than 120 pF/m (phase core/core capacitance)
 - less than 210 pF/m (phase core/shield capacitance)
 - less than 120 pF/m (signal core/core capacitance)
 - less than 210 pF/m (signal core/shield capacitance)
 - BUS Element: 45 pF/m @ 800kHz & charact. wave resistance $110 \pm 10 \Omega$ @ 10MHz

7.3.3.2 Cable length

NOTICE

Cables should not exceed the maximum lengths stated below. The recommended maximum cable length of motor cables depends on the used cable material and the feedback type. Cable functionality is only guaranteed up to the maximum length when using unmodified Kollmorgen engineered cables.

Motor cables (X1, X2, X4, X5, X23, X41)

Length of motor power cables, feedback cables and motor brake cables is equal.

AKM2G		AKM			
Performance Line Cables		Performance Line Cables		Value Line Cables	
Feedback	Max. Length [m]	Feedback	Max. Length [m]	Feedback	Max. Length [m]
SFD3/SFD-M	50	All	25	All	12
DSL	25				
EnDat 2.2	25				
Resolver	50				

I/O cables (X21, X22)

NOTICE

Maximum distance for unshielded I/O lines is 3m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

7.3.3.3 T-Connector wiring

If you use mating T-connectors for 24 VDC supply, mains voltage supply and DC-Bus link, you have to prepare the connecting cables with wire end ferrules.

You can prepare cables with cross-section 2.5mm^2 (up to 6mm^2) with a uniform length of 170mm, if the modules are lined up close together.

Use wire end ferrules with plastic collars, for example $2.5\text{mm}^2 \times 17\text{mm}$.

7.3.3.4 Cable cross sections and requirements

The tables below describe the recommended interface cross sections and cable requirements related to AKD2G in accordance with IEC 60204. For multi-axes systems, observe the specific operating conditions for your system.

Power Cables		Cross Section		Remarks
		EU	US	
Mains supply	1x3 A:	1.5 mm²	14 awg	600 V rated ,minimum 75°C
	2x3 A:	1.5 mm²	14 awg	
	1x6 A:	1.5 mm²	14 awg	
	2x6 A:	2.5 mm²	14 awg	
	1x12 A:	2.5 mm²	14 awg	
	1x24 A:	6 mm²	10 awg	
24 V supply	max.	2.5 mm²	14 awg	Single core Flexible Class 5
DC bus link, Regen resistor	3/6 A:	1.5 mm²	14 awg	1000 V rated, min. 75°C, shielded for lengths >0.20 m
	12 A:	2.5 mm²	14 awg	
	24 A:	6 mm²	10 awg	
Analog I/Os	min.	0.25 mm²	24 awg	shielded twisted pairs
Digital I/Os		0.5 mm²	20 awg	single core

Motor power cable (power) & motor combination cable (power & brake)

Cross Section [mm]		Current Carrying Capacity	Remarks
Cable	Combi Cable		
(4x1)	(4x1.0+(2x0.75))	0A < I _{0rms} ≤ 10.1A	1000 V Rated, 80°C Current carrying capacity acc. to IEC 60204-1:2006 Table 6, Column B2 The brackets (...) show the shielding.
(4x1.5)	(4x1.5+(2x0.75))	10.1A < I _{0rms} ≤ 13.1A	
(4x2.5)	(4x2.5+(2x1.0))	13.1A < I _{0rms} ≤ 17.4A	
(4x4)	(4x4.0+(2x1.0))	17.4A < I _{0rms} ≤ 23A	
(4x6)	(4x6.0+(2x1.0))	23A < I _{0rms} ≤ 30A	

Motor feedback cable

Type	Cross Section [mm]	Remarks
Resolver	(4x2x0.25)	300 V rated, 80°C Shielded twisted pairs The brackets (...) show the shielding.
EnDat 2.1, BiSS B	(6x2x0.25)	
HIPERFACE	(5x2x0.25)	
EnDat 2.2, BiSS C	(5x2x0.25)	
SFD	(3x2x0.25)	
Comcoder	(8x2x0.25)	

Motor hybrid cable

Type	Cross Section [mm]	Current Carrying Capacity	Remarks
SFD-M/SFD3/HDSL	$(4 \times 1.0 + (2 \times 0.34) + (2 \times 0.75))$	$0A < I_{0rms} \leq 10.1A$	1000 V rated, 80°C Current carrying capacity acc. to IEC 60204-1:2006 Table 6, Column B2 4 power lines & 2 brake lines & 2 SFD-M/SFD3/HDSL signal lines or 6 EnDat 2.2 signal lines
SFD-M/SFD3/HDSL	$(4 \times 1.5 + (2 \times 0.34) + (2 \times 0.75))$	$10.1A < I_{0rms} \leq 13.1A$	
SFD-M/SFD3/HDSL	$(4 \times 2.5 + (2 \times 0.34) + (2 \times 1.0))$	$13.1A < I_{0rms} \leq 17.4A$	
SFD-M/SFD3/HDSL	$(4 \times 4.0 + (2 \times 0.34) + (2 \times 1.0))$	$17.4A < I_{0rms} \leq 23A$	
SFD-M/SFD3/HDSL	$(4 \times 6.0 + (2 \times 0.34) + (2 \times 1.0))$	$23A < I_{0rms} \leq 30A$	
EnDat 2.2	$(4 \times 1.5 + (2 \times 0.75) + (2 \times 2 \times 0.14 + 2 \times 0.25))$	$10.1A < I_{0rms} \leq 13.1A$	
EnDat 2.2	$(4 \times 4.0 + (2 \times 1.0) + (2 \times 2 \times 0.14 + 2 \times 0.25))$	$17.4A < I_{0rms} \leq 23A$	

7.3.4 Protective Earth Connection


Protective Earth connection of the system components is a safety measure per IEC 60204. Ensure the proper grounding of all components with the PE rail in the control cabinet as reference potential. Connect each ground individually with the intended grounding cable (neutral point connection).

The leakage current from AKD2G against PE is more than 3.5 mA. In accordance with EN 61800-5-1, the PE connection must therefore either be double implemented or a connection cable with $>10 \text{ mm}^2$ cross-section used.

In order to keep the impedance as low as possible, we recommend a copper earthing strap for the PE connection on the PE block.

NOTE

Wire the PE connections immediately after installing the devices as the first electrical connection. Now you insert all the other lines and connectors. For disassembly, release the PE connections as the last connection.

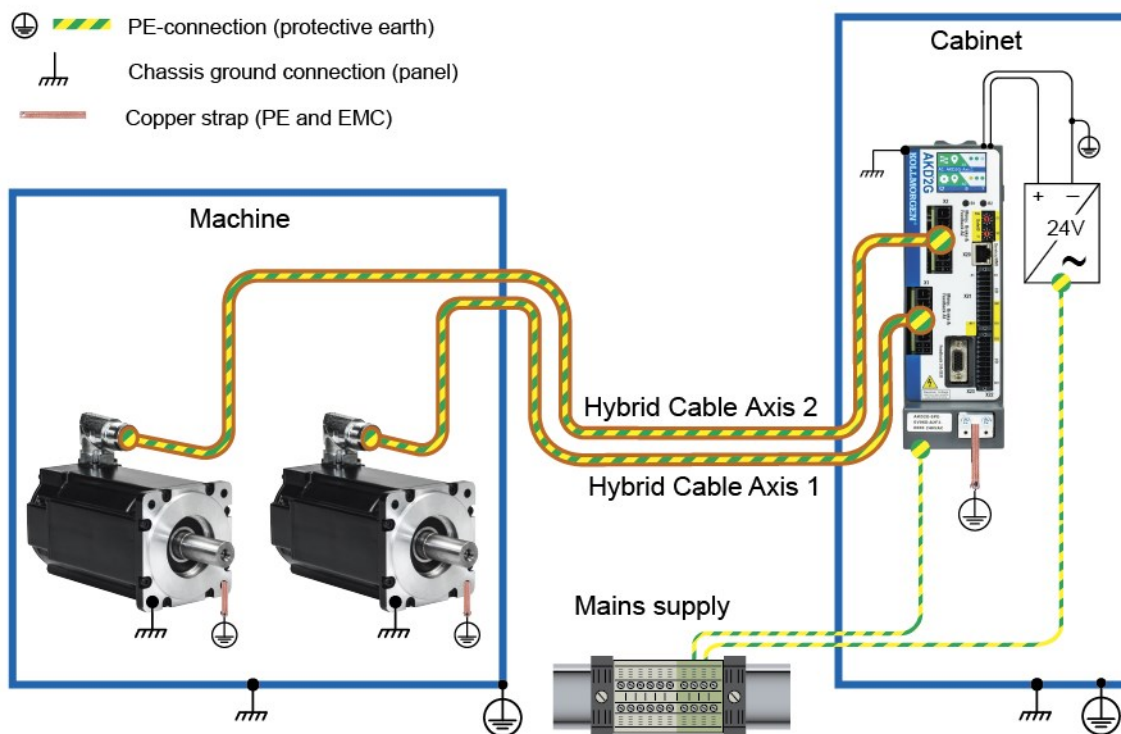

NOTE

For the use of residual current protective devices (RCD), refer to (→ # 24).

7.4 EMI Noise Reduction



CAUTION Electromagnetic fields!

Electromagnetic radiation may lead to potential hazardous danger (warming, failure of implants), when acting on electrically conductive materials.

- Work on the electrical installation may only be performed by trained and qualified personnel, in compliance with the regulations for safety at work, and only with switched off mains supply and secured against restart.
- Do not remove grounding, equipotential bonding and radiation-reducing shields.

7.4.1 Reducing EMI noise

With the help of the following instructions, you can reduce electrical interference in the application:


- **Ensure good connections between the cabinet components.** Connect the back panel and cabinet door to the cabinet body using several conductive braids. Never rely on hinges or mounting bolts for ground connections.
- **Ensure good ground connection.** Connect from cabinet to proper earth ground. Ground leads should be the same gauge as the leads to main power, but must cover the regional legal requirements, example (→ # 68).
- **Use Kollmorgen cables.** Route power and control cables separately, Kollmorgen recommends a distance of at least 200mm to improve interference immunity.
- **Ground the shielding at both ends.** Ground all shielding with large areas (low impedance), with metalized connector housings or shield connection clamps wherever possible. For cables entering a cabinet, connect shields on all 360° of the cable. Never connect a simple “pigtail.” For more information on shielding concepts, (→ # 69).
- **With separate mains filter, maintain separation of leads entering and exiting the mains filter (line power filter).** Locate the filter as close as possible to the point where the incoming power enters the cabinet. If it is necessary for input power and motor leads to cross, cross them at 90°.
- **Observe cable length limits.** Maximum distance for unshielded I/O lines is 3m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.
- **Do not extend feedback lines and hybrid cables, since the shielding would be interrupted and the signal processing may be disturbed.** Install all feedback cables with an adequate cross-section, per IEC 60204 (→ # 65) and use the requested cable material to reach maximum cable length.
- **Splice cables properly.** If you need to divide cables, use connectors with metal backshells. Ensure that both shells connect along the full 360° of the shields.
- **Use differential inputs for analog signals.** Noise susceptibility in analog signals is greatly reduced by using differential inputs. Use twisted-pair, shielded signal lines, connecting shields on both ends.
- **Shield cables between drives and filters or external regen resistors.** Install all power cables with an adequate cross-section per IEC 60204 (→ # 65) and use the requested cable material to reach maximum cable length.

7.4.2 Shielding with External Shielding Busbar

Kollmorgen recommends a star point shield connection, for example, with a shielding busbar.

7.4.2.1 Shielding Concept

Example with AKD2G-Sxx--6Vxx, EMC filter and external regen resistor.

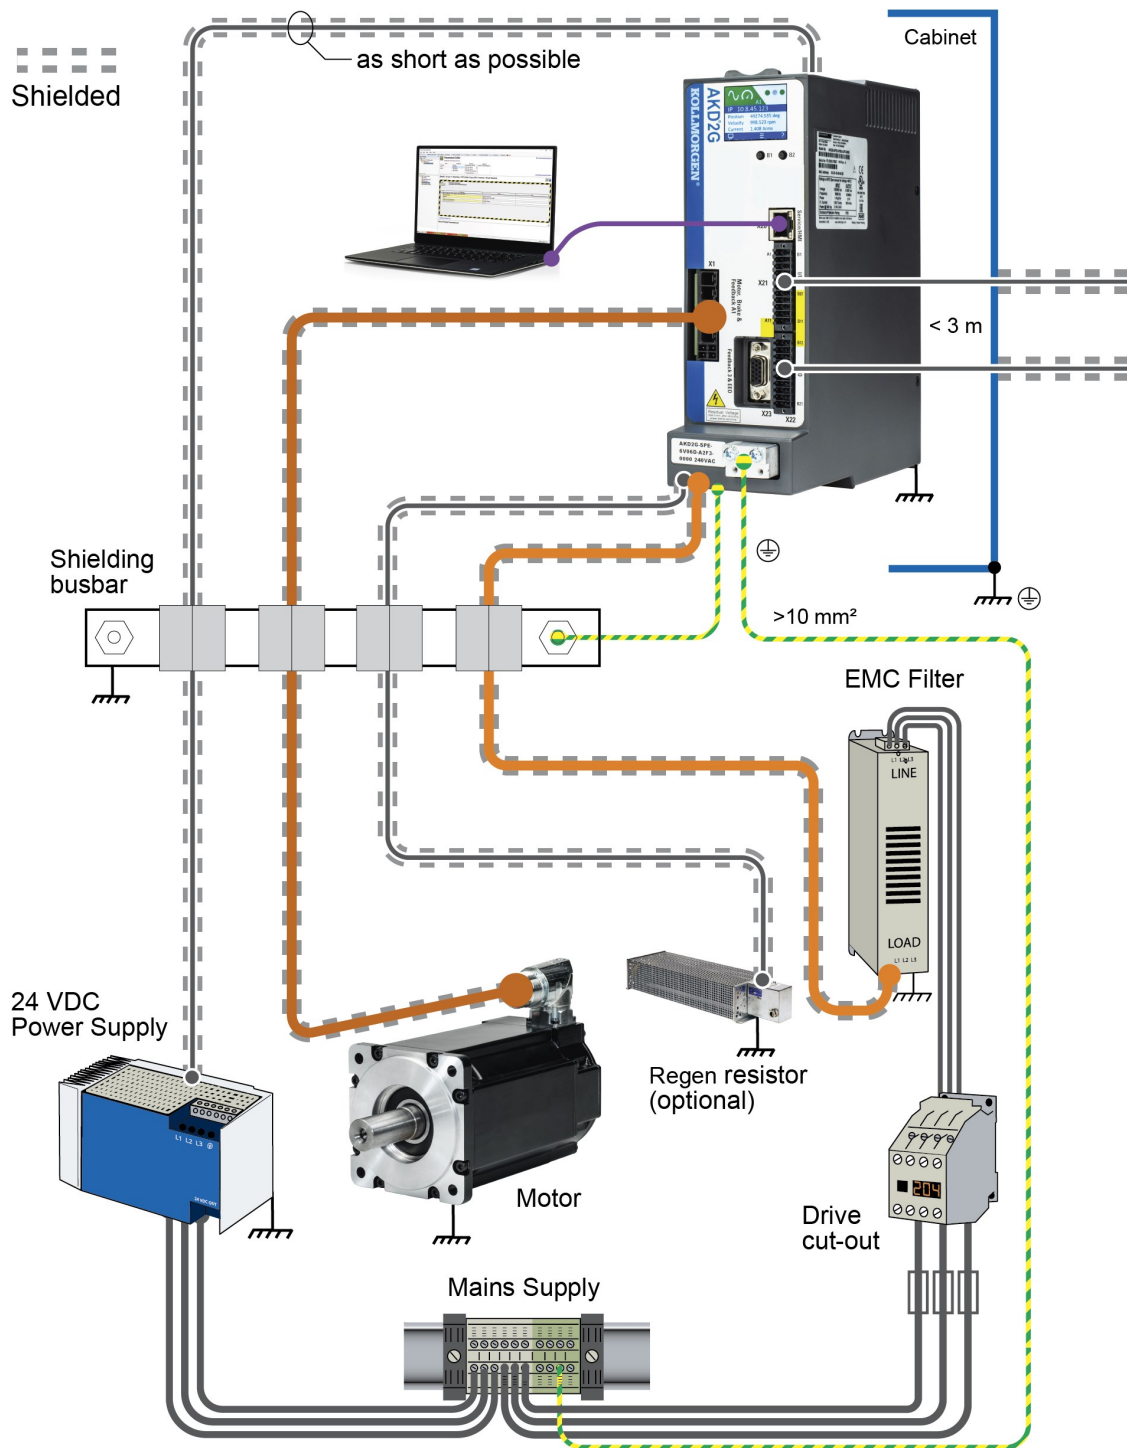


7.4.2.2 Shielding Busbar



The power cable shields (line in, motor cable, external regen resistor) can be routed to an additional busbar via shield clamps. Kollmorgen recommends using Weidmüller KLBÜ shield clamps.

A possible scenario for setting up a busbar for the above shield clamps is described below.

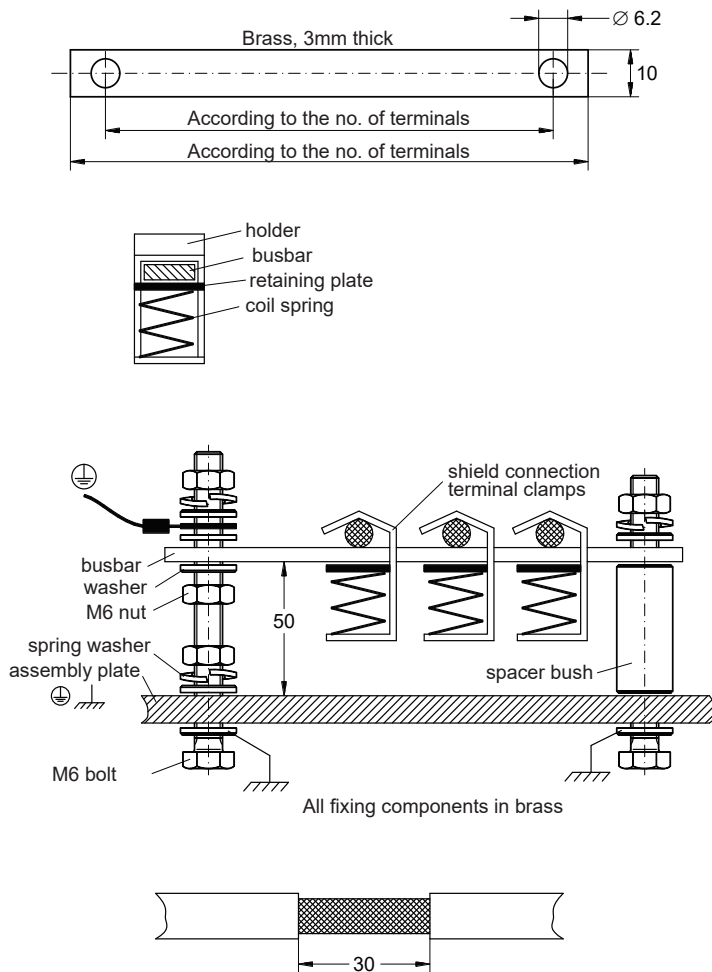


1. Cut a busbar of the required length from a brass rail (cross-section 10 x 3mm) and drill holes in it as indicated. All shield clamps required must fit between the drill holes.
CAUTION: Risk of injury due to the spring force of the coil spring. Use pincers.
2. Squeeze together the coil spring and the supporting plate and push the busbar through the opening in the holder.
3. Mount the busbar with the shield clamps fitted on the assembly plate. Use either metal spacer bushes or screws with nuts and accessories to maintain a spacing of 50mm. Earth the busbar using a single conductor with a cross-section of at least 2.5mm².
4. Strip the external cable sheath to a length of approx. 30mm, taking care not to damage the braided shield. Push the shield clamp up and route the cable to it via the busbar.

NOTICE: Make sure there is good contact between the shield clamp and the braided shield.

7.4.3 Shielding Connection to the Servo Drive

You can connect cable shielding directly to the servo drive by using grounding plates, shield connection clamps, and a motor connector with strain relief and grounding plate.

7.4.3.1 Shielding Concept

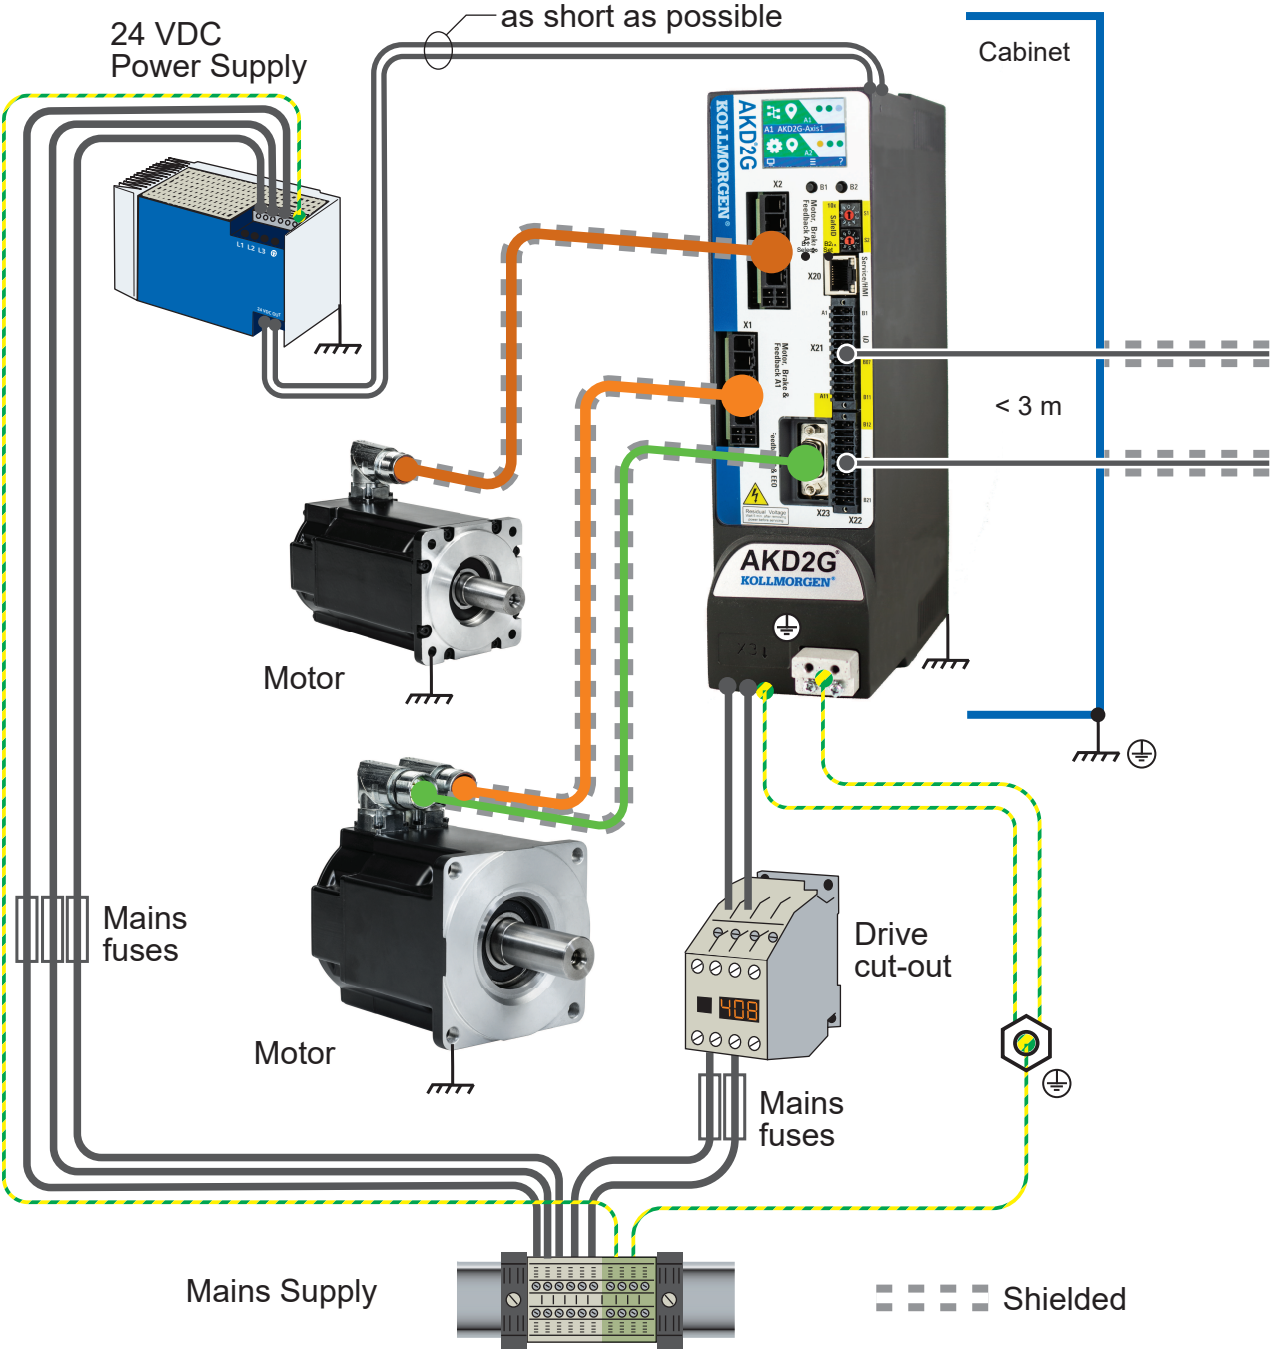

7.4.3.2 Grounding plates and shield connection clamps

A grounding plate is mounted to the servo drive.




Use shield connection clamps (see the *Accessories Manual*). These hook into the grounding plate and ensure optimum contact between the shield and the grounding plate.

Kollmorgen recommends using Phoenix Contact SK14 shield clamps with cable clamp range of 6-13mm.

7.4.3.3 Motor connector X1/X2 with shielding connection

Alternative connection of the motor power by mating connector with shield plate and strain relief. Kollmorgen motor power and hybrid motor cables are configured with shield plate.

To connect the motor power, proceed as follows:

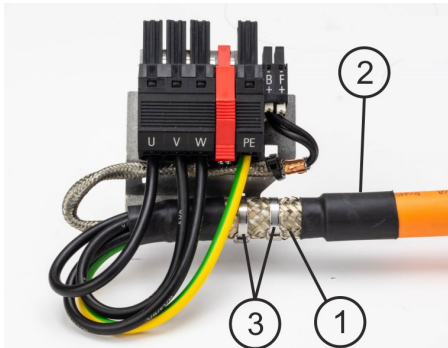

1. Strip the external cable sheath to a length of approx. 80mm, taking care not to damage the braided shield.
2. Push the braided shield (1) back over the cable and secure with a rubber sleeve (2) or shrink sleeve.
3. Shorten all the wires apart from the protective earth (PE) wire (green/yellow) by about 20mm so that the PE wire is now the longest wire.
4. Strip all wires and fit wire end ferrules.
5. Secure the braided shield of the cable with metal cable ties (3) and fasten the cable.
6. Wire the connector as shown in the connection diagram.
7. Plug in the connector to the socket on the front of the AKD2G and secure it with the red clip.


The motor power is now connected.

7.5 Connection Overview

7.5.1 Connector Position AKD2G-Sxx-6VxxS

NOTE

The graphic shows a single axis servo drive (supply voltage 110 V to 240 V).
Optional: F3 option for additional X23 (→ # 35).

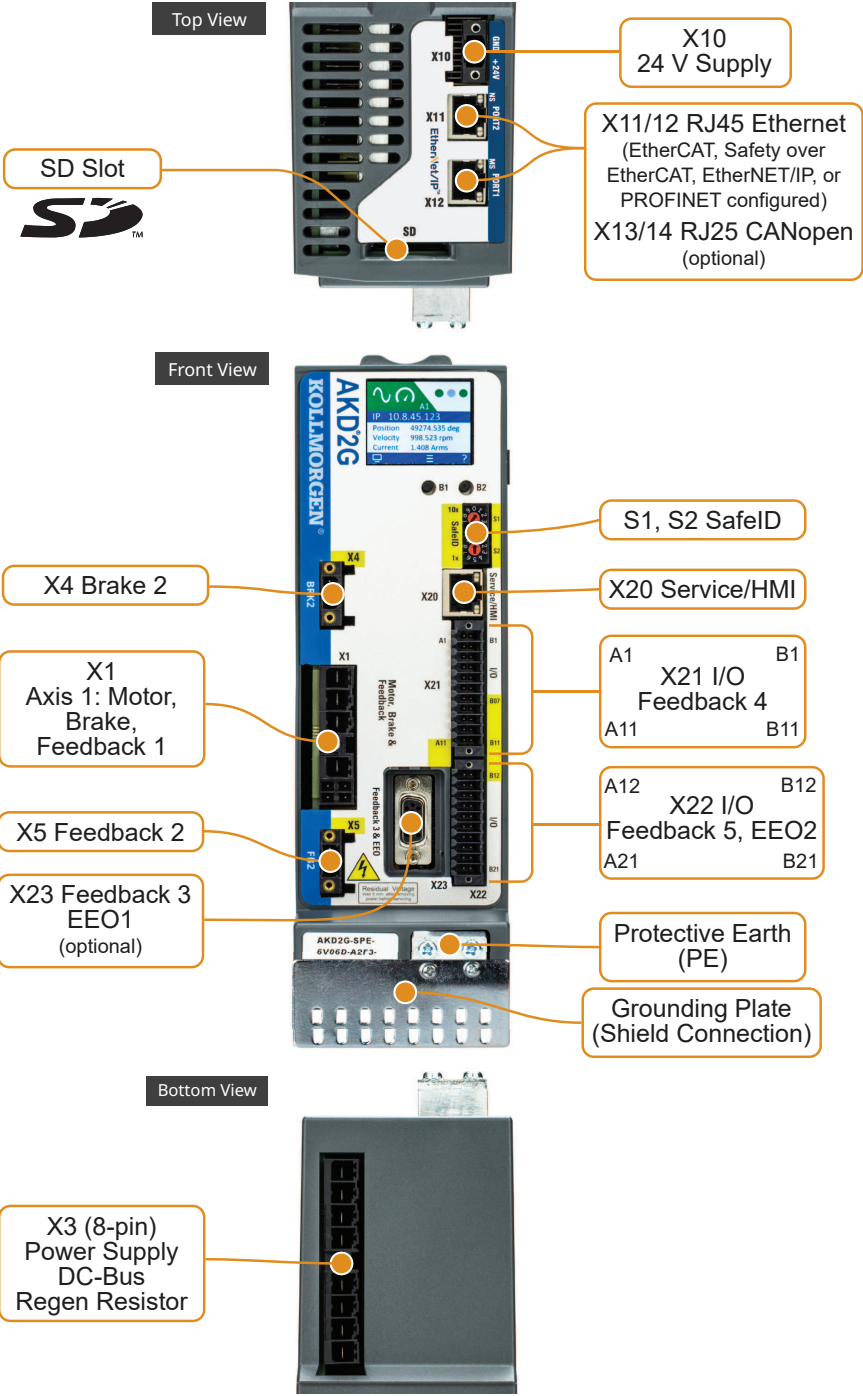


7.5.2 Connector Position AKD2G-Sxx-7VxxS

NOTE

The graphic shows a single axis servo drive (supply voltage 240 V to 480 V).
Optional: F3 option for additional X23 (→ # 35).


7.5.2.1 AKD2G 480 Vac, 3 to 12 Amp drives

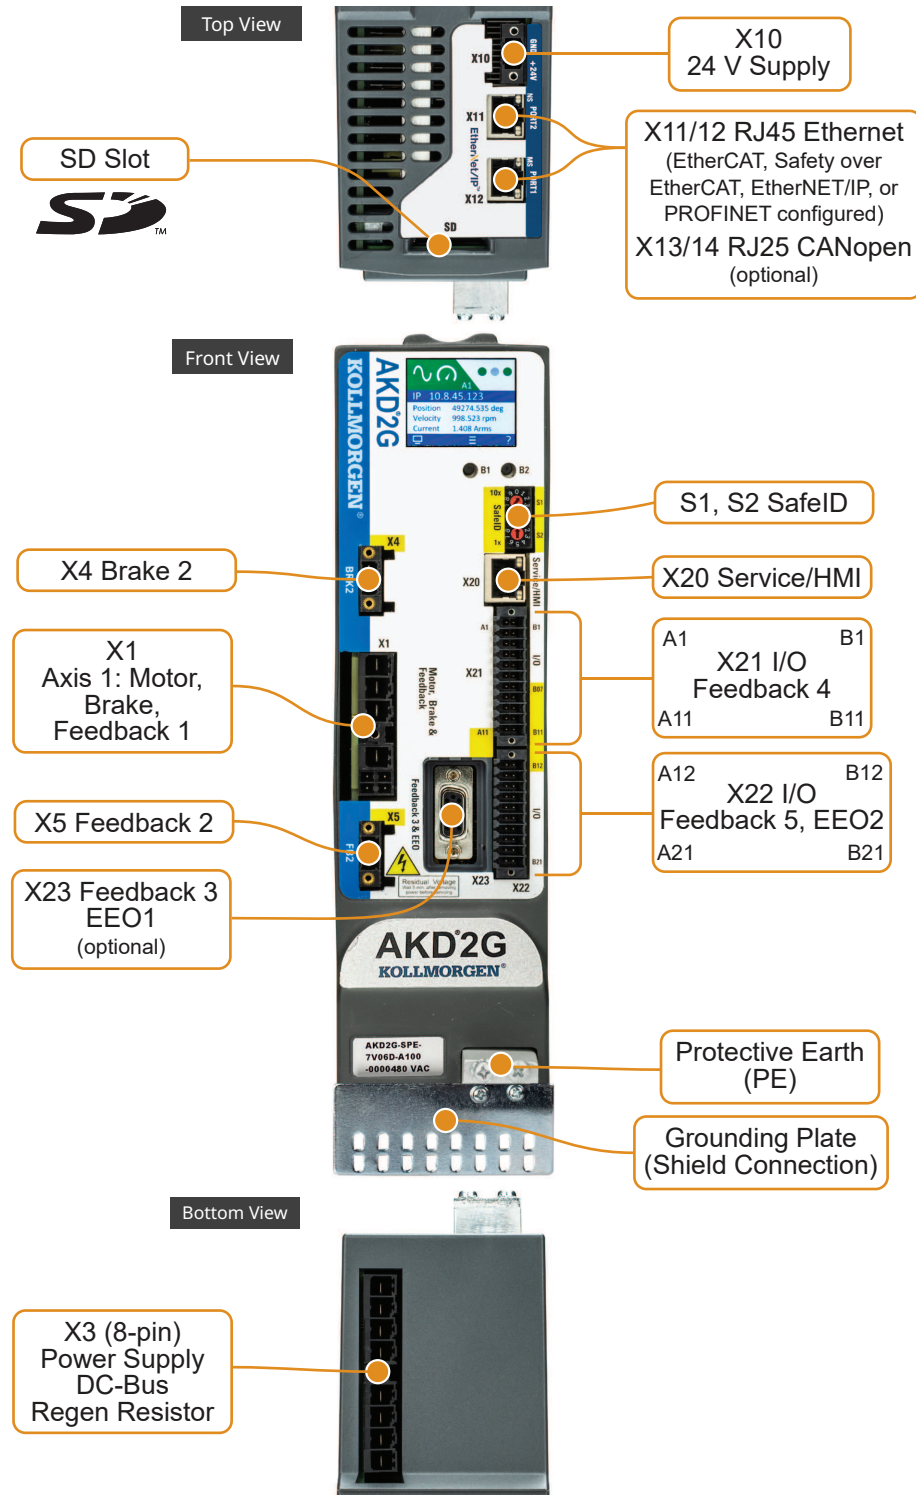

7.5.2.2 AKD2G 480 Vac, 24 Amp servo drive

NOTE


The graphics shows an AKD2G with supply voltage 480 V.
Optional: I/O, F3 or DX (→ # 35).

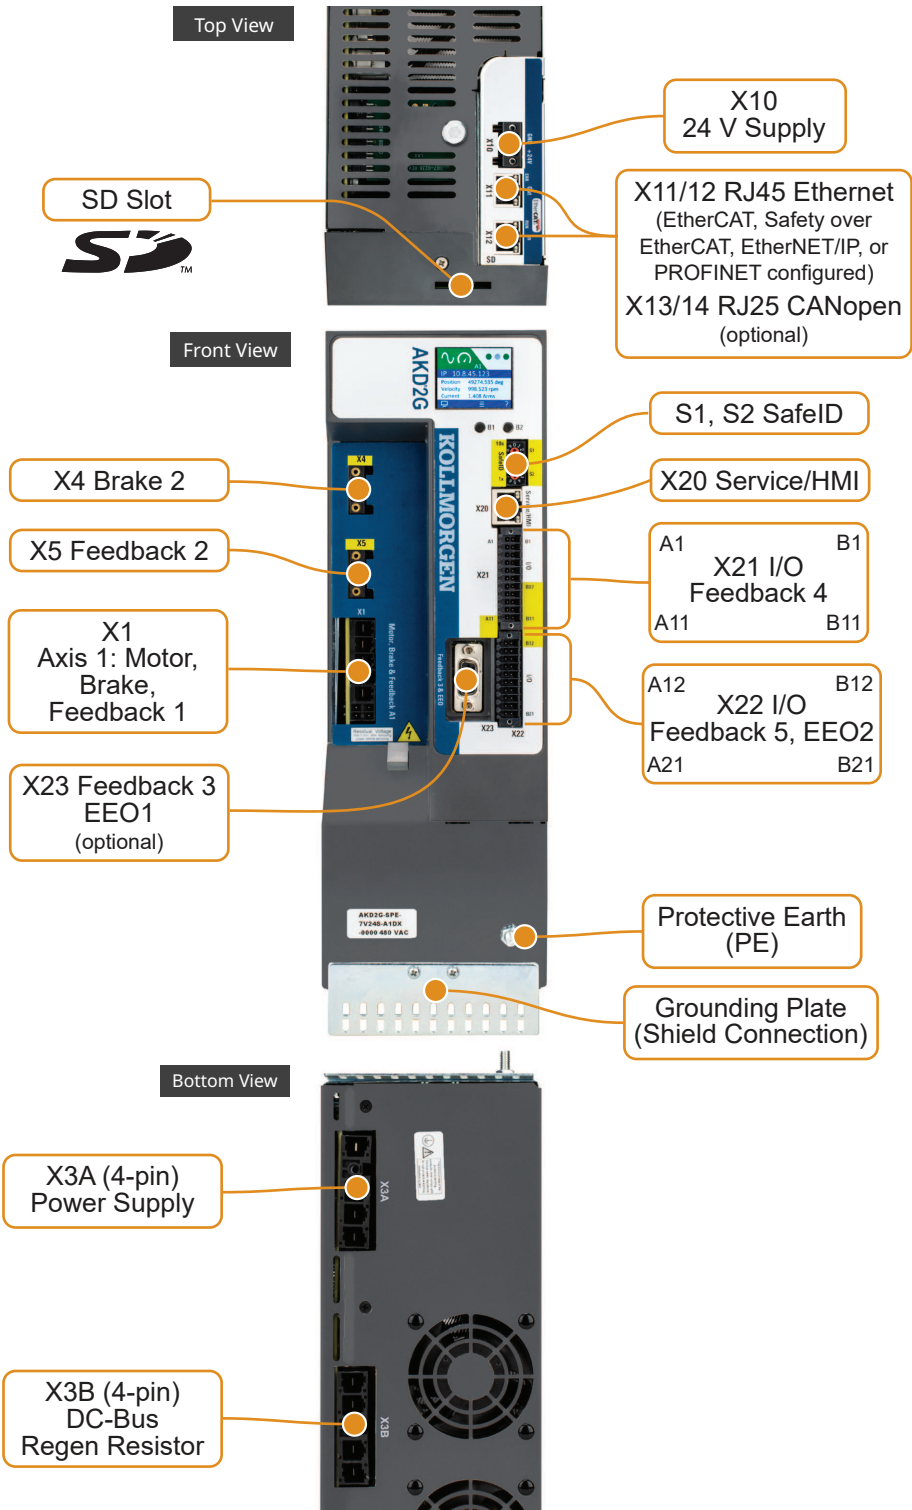

7.5.3 Connector Position AKD2G-Sxx-6VxxD

NOTE


The graphics shows a dual axis servo drive (supply voltage 110 V to 240 V).
Optional: F3 option for additional X23 (→ # 35).

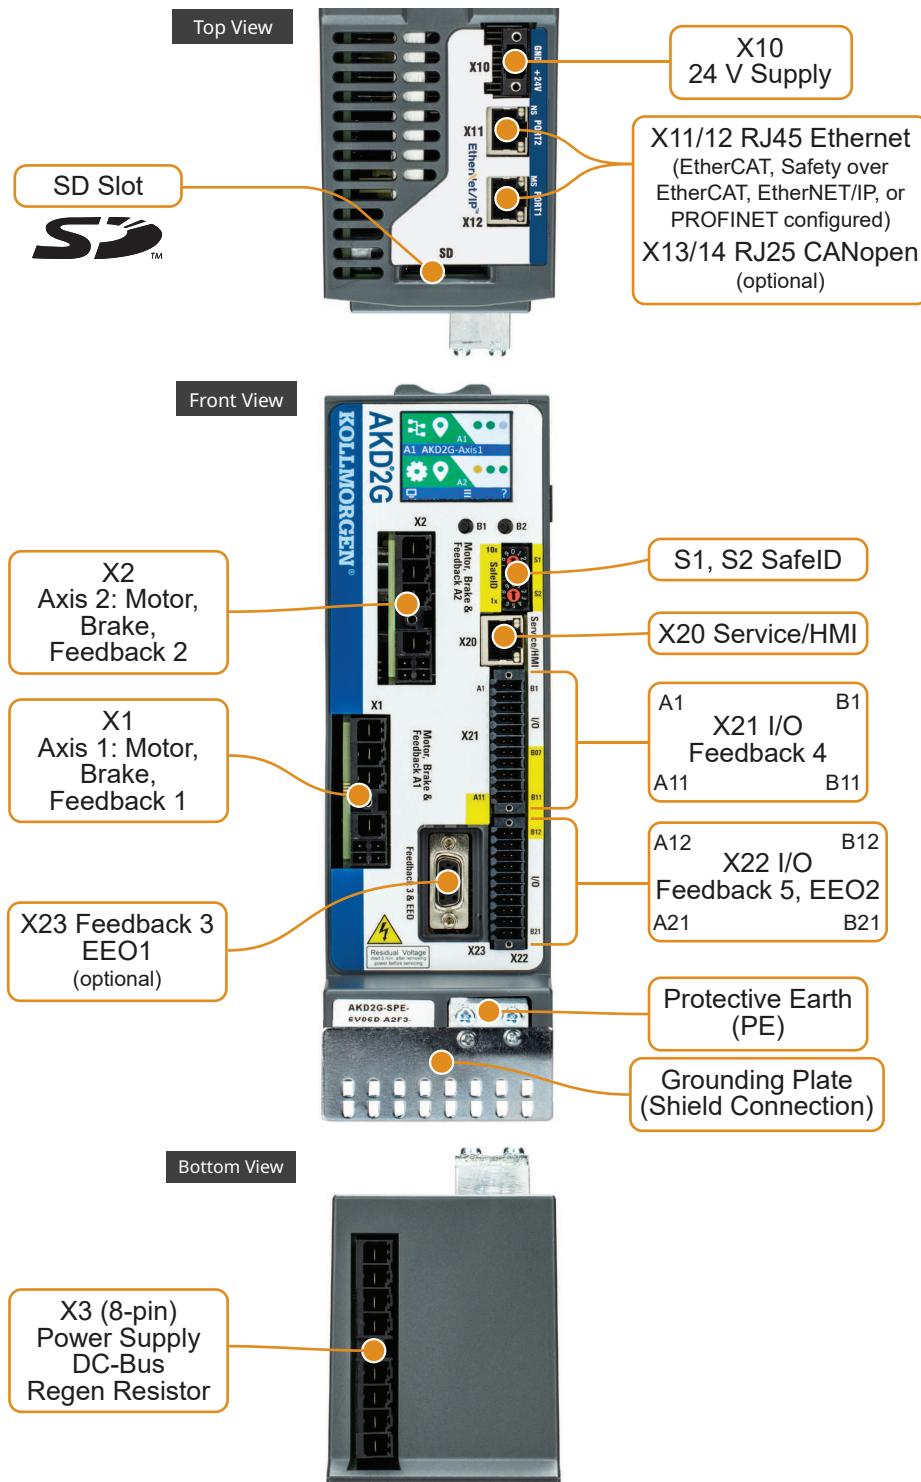

7.5.4 Connector Position AKD2G-Sxx-7VxxD


NOTE

The graphics shows a dual axis servo drive (supply voltage 240 V to 480 V).
Optional: F3 option for additional X23 (→ # 35).

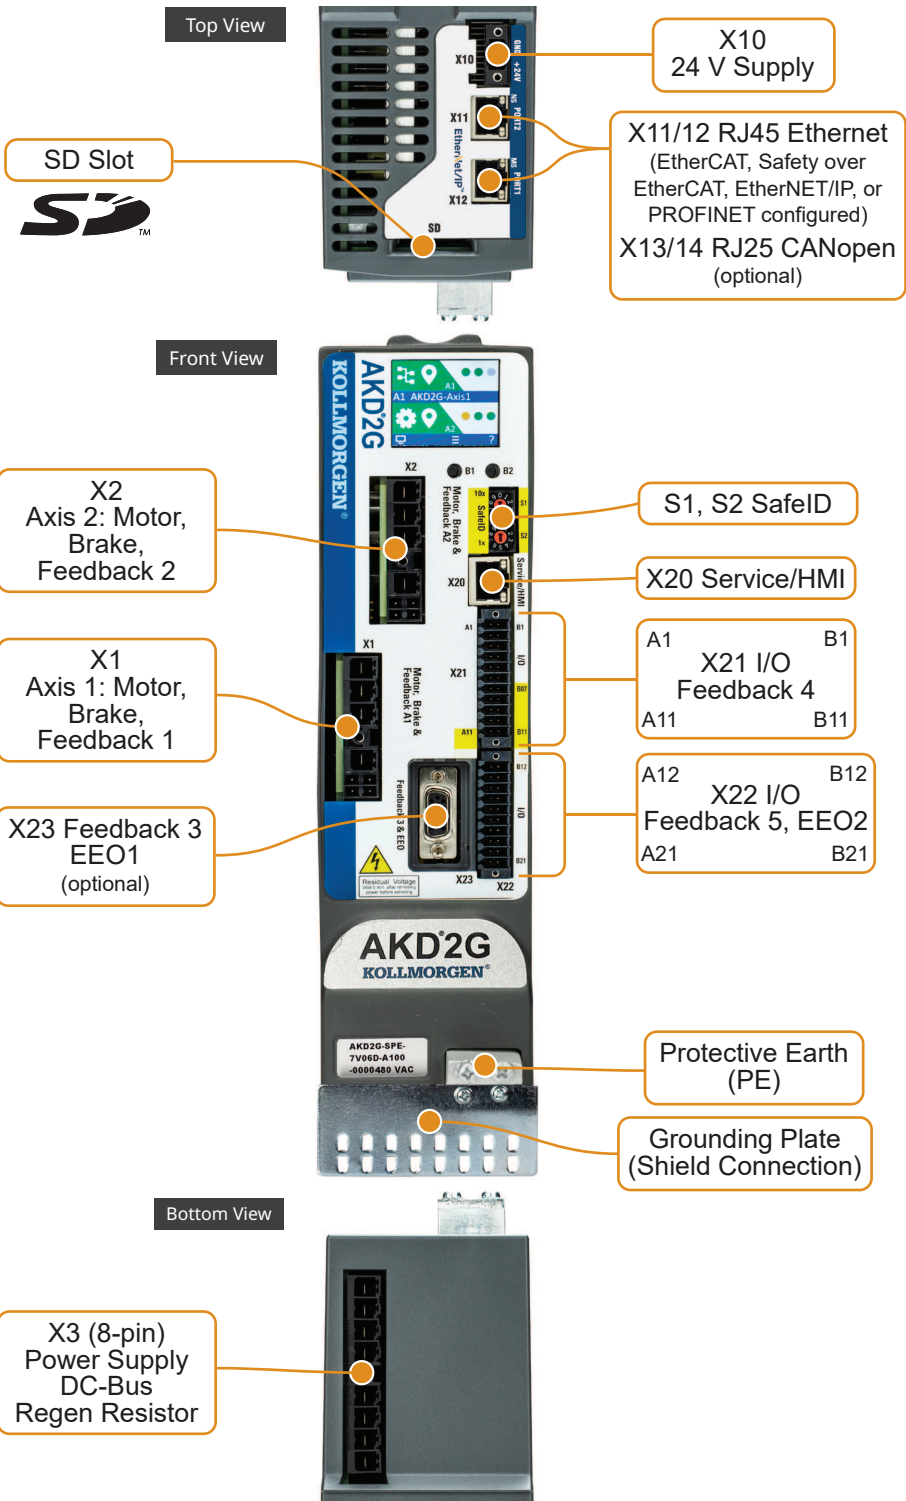


7.5.5 Wiring overview, single axis drive

AKD2G Sxx-xxS 3-12 Amp Drives

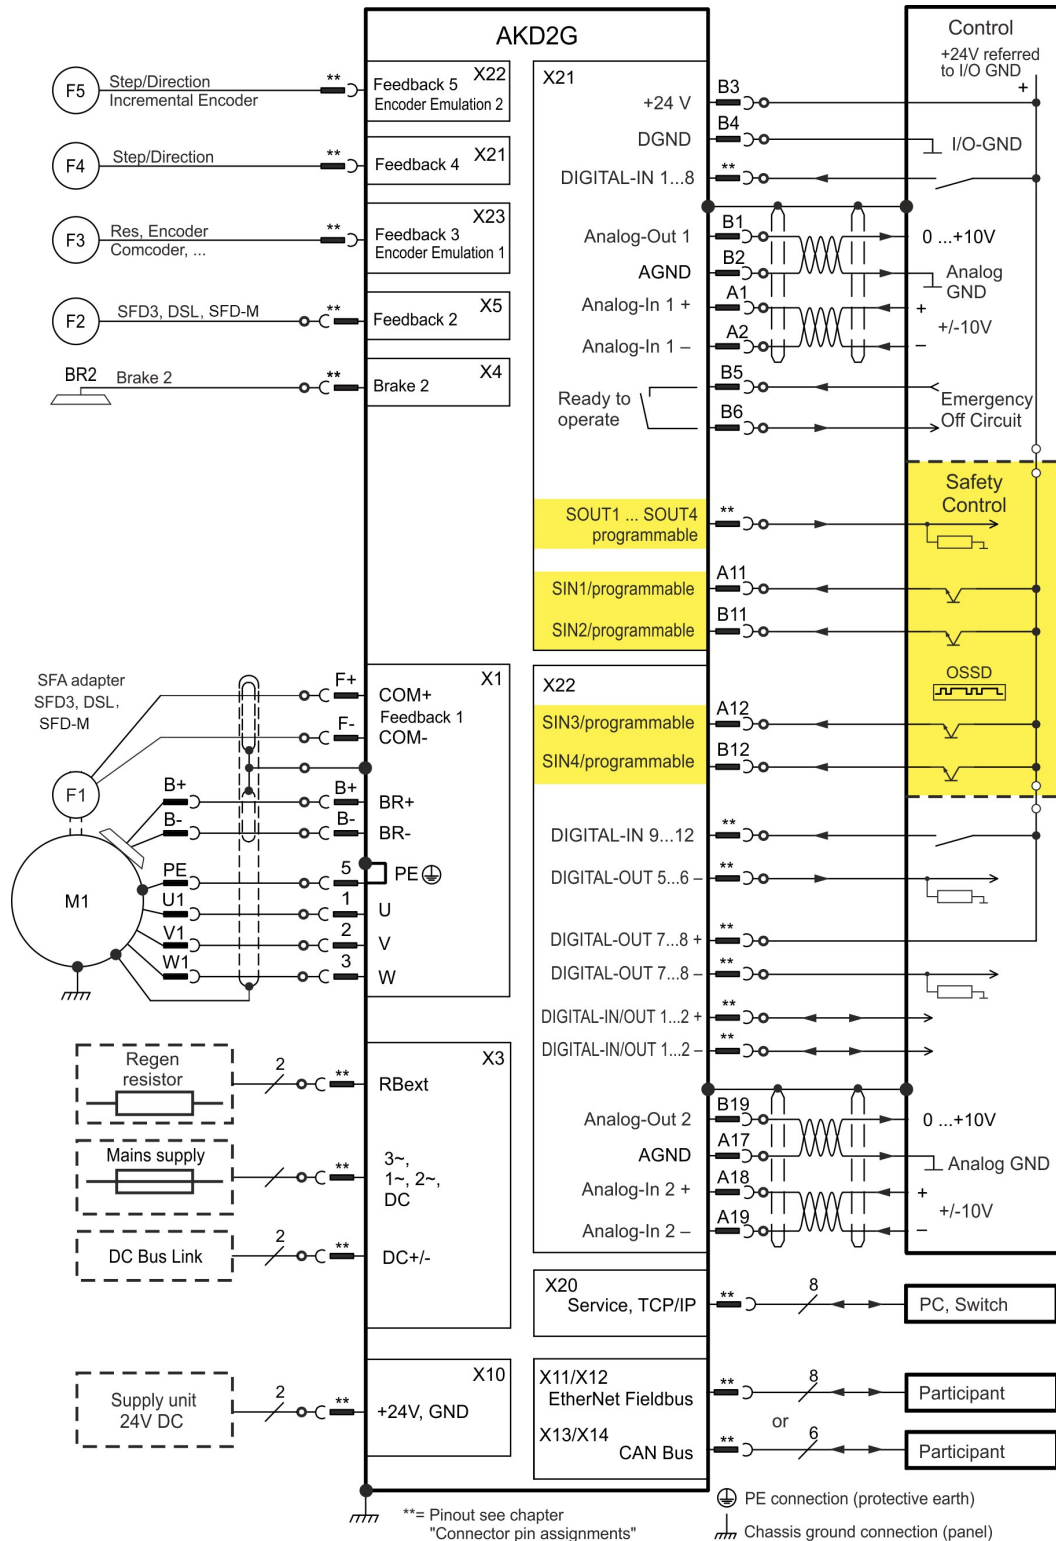


AKD2G Sxx-724S 24 Amp Drives

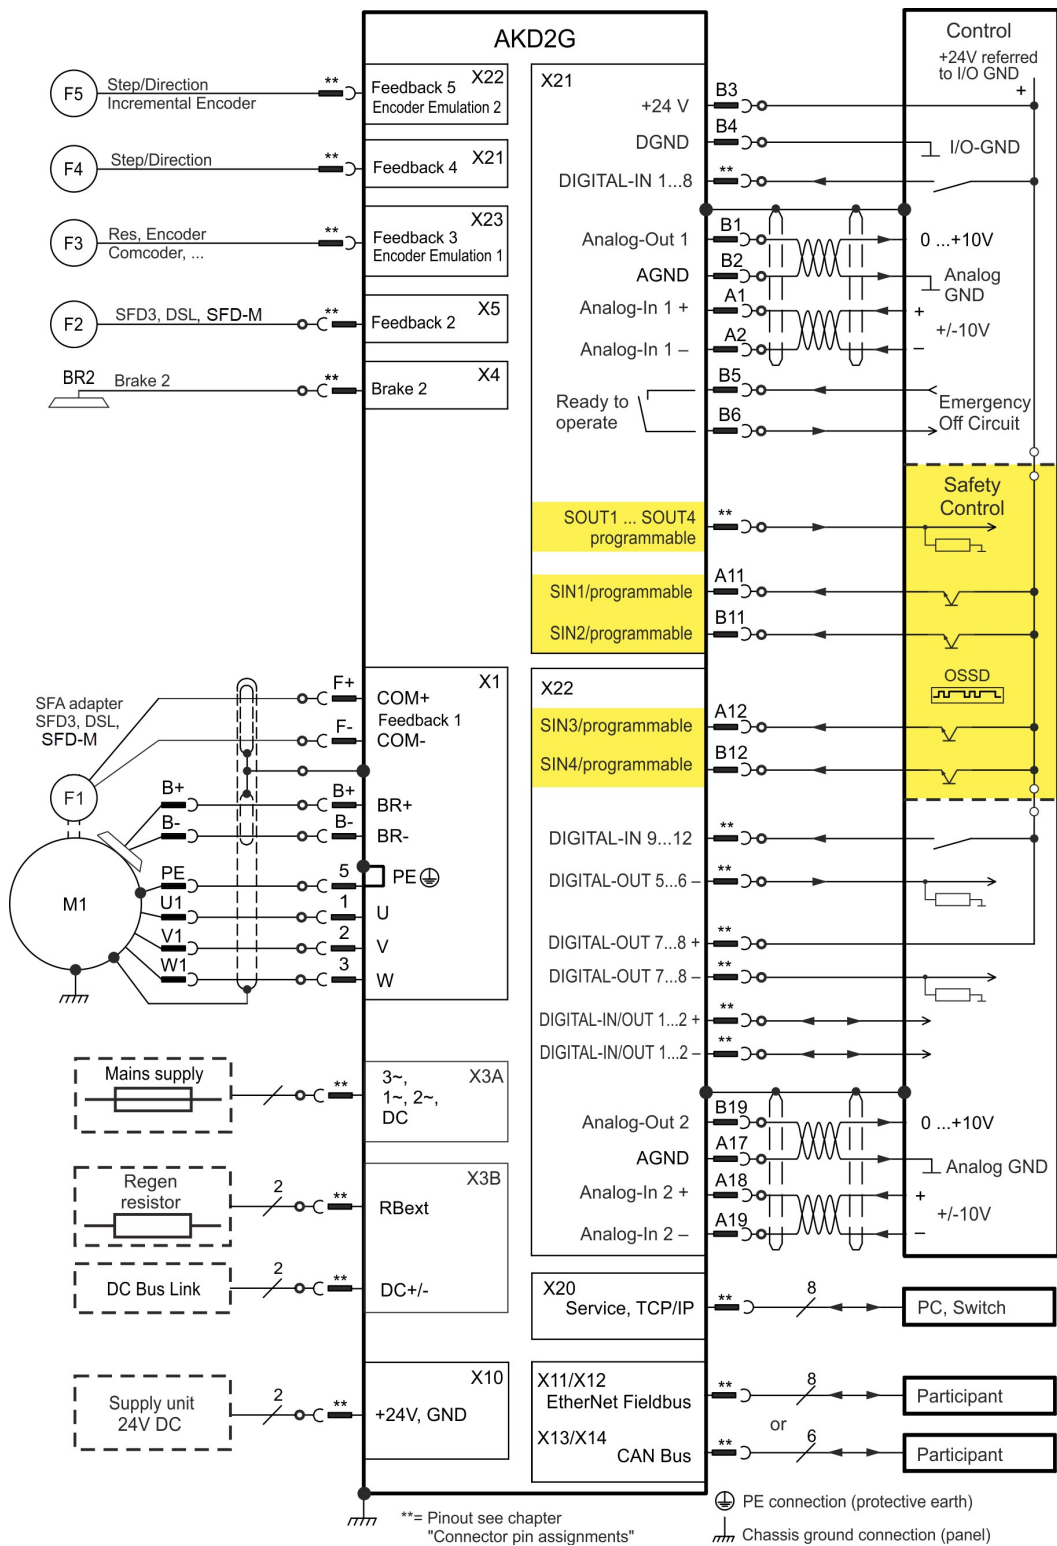

7.5.6 Wiring overview, dual axis drive


AKD2G Sxx-xxD 3-12 Amp Drives

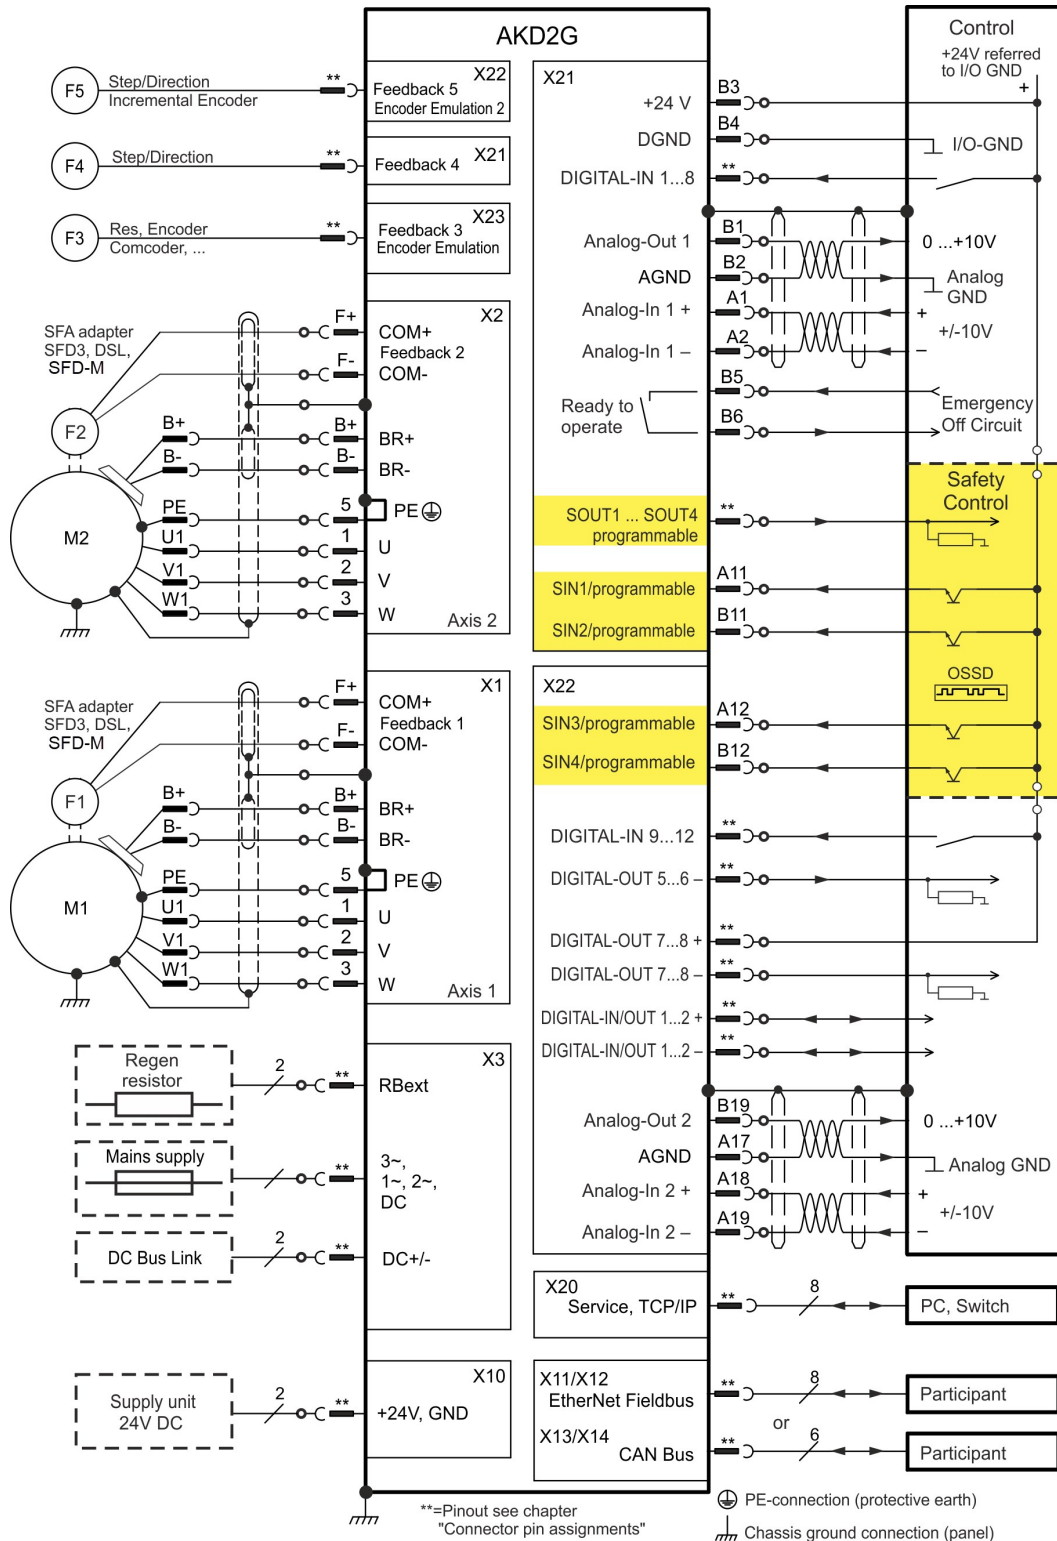

7.5.7 Connector pinout

Information to wiring, mating connectors and cables (→ # 64).


7.5.7.1 X1 and X2: Motor, Brake, Feedback 1

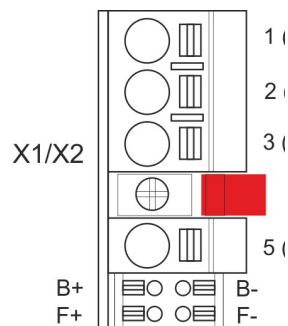

- 4 pin, pitch 7.62mm plus 2x2 pin pitch 3.81mm
- Spring clamps
- Locking screw, tightening torque 0.5Nm (4.4 inlbs)
- Motor power, Motor brake (X1: axis 1, X2: axis 2)
- X1: Input for commutation feedback 1 (→ # 124)
- X2: Input for commutation feedback 2 (→ # 124)
- Wiring example:
 - DC Bus link (→ # 107)
 - Motor single cable connection (→ # 112)
 - Motor dual cable connection (→ # 114)

Pin	Label	Signal	Description
1	U	U	Motor phase U
2	V	V	Motor phase V
3	W	W	Motor phase W
	retention latch, shield screw		
5	PE	PE	Protective earth
B+	B+	BR+	Motor holding brake +
B-	B-	BR-	Motor holding brake -
F+	F+	COM+	SFD-M + or SFD3 + or HIPERFACE DSL +
F-	F-	COM-	SFD-M - or SFD3 - or HIPERFACE DSL -


7.5.7.2 X3: Mains, regen resistor, DC-Bus

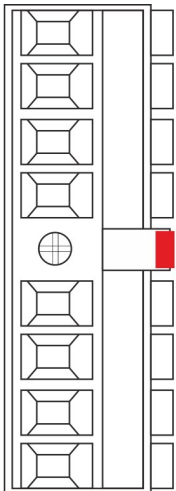

- 1 • 8 pin, pitch 7.62mm
- 2 • Screw terminals, tightening torque 0.5 to 0.6Nm (4.4 to 5.3 in-lbs)
- 3 • Locking screw, tightening torque 0.5Nm (4.4 in-lbs)
- 4 • Optional T version
- 5 • Mains supply, external regen resistor, DC-Bus
- 6 • X3/5 to X3/6 must be shorted to use the built-in regen resistor. Remove the jumper to connect an external regen resistor.
- 7 • Wiring example:
 - Power supply (→ # 95)
 - DC Bus link (→ # 107)
 - External regen resistor (→ # 110)
- 8

Pin	Label	Signal	Description
1	PE	PE	Protective earth
2	L1	L1	3~ mains supply L1, 1~ supply L, DC supply +
3	L2	L2	3~ mains supply L2
4	L3	L3	3~ mains supply L3, 1~ supply N, DC supply -
5	Ri	RBint	internal regen resistor
6	RE	-RB	external regen resistor -
7	+DC	+DC (+RBext)	DC Bus link+ and/or external regen resistor +
8	-DC	-DC	DC Bus link -

7.5.7.3 X3A/X3B: Mains, regen resistor, DC-Bus

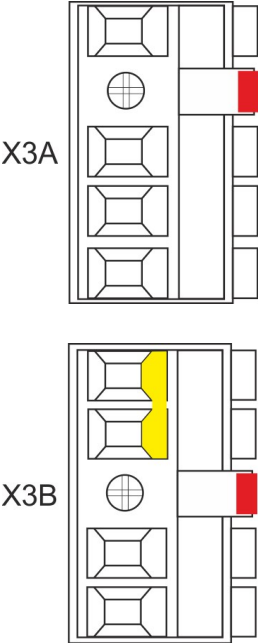

- 2x 4 pin, pitch 10.16mm
- Screw terminals, tightening torque 2Nm (18 in-lbs)
- Mains supply, external regen resistor, DC-Bus
- X3B/5 to X3B/6 must be shorted to use the built-in regen resistor. Remove the jumper to connect an external regen resistor.
- Wiring example:
 - Power supply (→ # 95)
 - DC Bus link (→ # 107)
 - External regen resistor (→ # 110)

X3A

Pin	Label	Signal	Description
1	PE	PE	Protective earth
2	L1	L1	3~ mains supply L1, 1~ supply L, DC supply +
3	L2	L2	3~ mains supply L2
4	L3	L3	3~ mains supply L3, 1~ supply N, DC supply -


X3B

Pin	Label	Signal	Description
5	Ri	RBint	internal regen resistor
6	RE	-RB	external regen resistor -
7	+DC	+DC (+RBext)	DC Bus link+ and/or external regen resistor +
8	-DC	-DC	DC Bus link -

7.5.7.4 X4: Second Brake

NOTE

Use with single axis servo drives and Safety Option 2 for safety functions, which require a second brake.

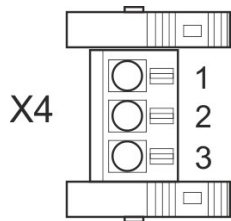


- 3 pin, pitch 3.81mm
- Spring clamps
- Second motor brake
- Required for SIL3 brake control

Pin	Signal	Description
1	PE	Protective earth
2	BR2-	Second (external) brake -
3	BR2+	Second (external) brake +

7.5.7.5 X5: Feedback 2

NOTE


Use with single axis servo drives and Safety Option 2 for application, which require a second feedback.

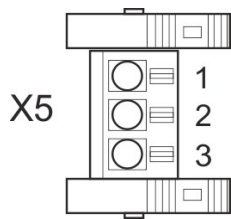

- 3 pin, pitch 3.81mm
- Spring clamps
- Input for feedback 2 (→ # 124)

Pin	Signal	Description
1	PE	Protective earth
2	COM2-	Second SFD-M/SFD3 - or Second/Safe HIPERFACE DSL -
3	COM2+	Second SFD-M/SFD3 + or Second/Safe HIPERFACE DSL +

7.5.7.6 X10: 24 VDC

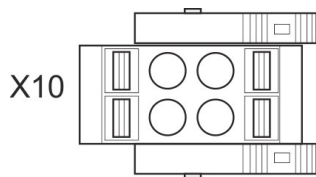

- 2 pin, pitch 5.08mm
- Spring clamps
- T version
- 24 VDC supply voltage
- Wiring example: (→ # 106)


Pin	Signal	Description
1	+ 24 V	+24 VDC supply voltage, PELV
2	GND	Ground for 24 VDC supply voltage, PELV

7.5.7.7 X11, X12: EtherNet Fieldbus

X11



X12





- RJ45 with built-in green/red dual-color LED
- EtherCAT, EtherNet/IP, PROFINET
- Interface Details: (→ # 162)

Pin	Signal	Description	Pin	Signal	Description
1	Tx+	Transmit +	5	Term.	Termination
2	Tx-	Transmit -	6	Rx-	Receive -
3	Rx+	Receive +	7	Term.	Termination
4	Term.	Termination	8	Term.	Termination

7.5.7.8 X13, X14: CAN bus (optional)

X13



X14



Out



In




- RJ25
- X14 IN port, X13 OUT port
- Up to 1 Mbit operation
- Node ID to be set by WorkBench
- Interface Details: (→ # 165)

Pin	Signal	Description	Pin	Signal	Description
1	n.c.	not used	4	CAN_low	CAN bus low signal
2	Shield	Chassis	5	CAN_GND	CAN bus ground
3	CAN_high	CAN bus high signal	6	n.c.	not used

7.5.7.9 X20: Service

X20






- RJ45 with built-in green and yellow LEDs
- 100/10 Mbit Ethernet TCP/IP, Modbus/TCP
- Supports auto-IP, DHCP and fixed IP addressing
- Supports point-to-point (i.e. Auto-IP) and connection by using network switches
- Supports automatic discovery in WorkBench if in the same sub-net.
- Interface Details: (→ # 167)

Pin	Signal	Description	Pin	Signal	Description
1	Tx+	Transmit +	5	Term.	Termination
2	Tx-	Transmit -	6	Rx-	Receive -
3	Rx+	Receive +	7	Term.	Termination
4	Term.	Termination	8	Term.	Termination

7.5.7.10 X21: I/O, Feedback 4

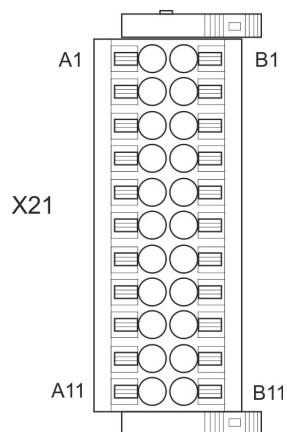

- 2 x 11 pins (left column A, right column B), pitch 3.5mm
- Spring clamps
- Analog and digital I/O
- Input for feedback 4 (→ # 126)
- Wiring examples:
 - Analog input (→ # 173)
 - Analog output (→ # 175)
 - Digital input (→ # 175)
 - Digital Output (→ # 180)
 - Feedback (→ # 126)


Digital I/O connectivity

Pin	Signal	Description
A1	Analog-In (AIN) 1 +	Analog Input +/- 10 V
A2	Analog-In (AIN) 1 -	
A3*	Digital-In (DIN) 1	Fast, isolated, sink, type EN 61131-2 type 1
A4*	Digital-In (DIN) 2	Fast, isolated, sink, type EN 61131-2 type 1
A5	Digital-In (DIN) 3	Slow, isolated, sink, type EN 61131-2 type 1
A6	Digital-In (DIN) 4	Slow, isolated, sink, type EN 61131-2 type 1
A7	Digital-In (DIN) 5	Slow, isolated, sink, type EN 61131-2 type 1
A8	Digital-In (DIN) 6	Slow, isolated, sink, type EN 61131-2 type 1
A9	Digital-In (DIN) 7	Slow, isolated, sink, type EN 61131-2 type 1
A10	Digital-In (DIN) 8	Slow, isolated, sink, type EN 61131-2 type 1
A11	SIN1	Slow, isolated, sink, fail-safe, functional safety input 1
B1	Analog-Out (AOUT) 1	Analog Output, 0 to +10 V
B2	AGND	Ground for analog I/O
B3	+24 V	+24 VDC for digital I/O and STO
B4	DGND	Ground for digital I/O and STO
B5	Digital-Out (DOUT) 9 +	Relay contact, normally open, 24 VDC, 1A
B6	Digital-Out (DOUT) 9 -	Relay contact, normally open, 24 VDC, 1A
B7	SOUT1	Isolated, high-side, safety: 172 mA, safe output
B8	SOUT2	Isolated, high-side, safety: 172 mA, safe output
B9	SOUT3	Isolated, high-side, safety: 172 mA, safe output
B10	SOUT4	Isolated, high-side, safety: 172 mA, safe output
B11	SIN2	Slow, isolated, sink, fail-safe, functional safety input 2

*Feedback 4 connectivity, Step/Direction CW/CCW (input)

Pin	Signal	Description
A3	Step, CW	Fast, isolated, sink, type EN 61131-2 type 1
A4	Direction, CCW	Fast, isolated, sink, type EN 61131-2 type 1

7.5.7.11 X22: I/O, EEO2, Feedback 5

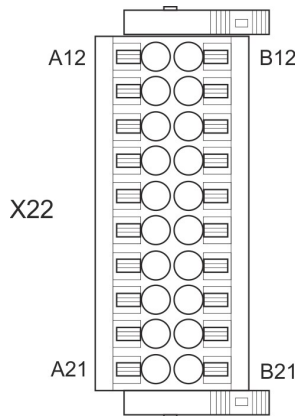

- 2 x 10 pins (left column A, right column B), pitch 3.5mm
- Spring clamps
- Analog and digital I/O
- Input for feedback 5 (→ # 127)
- Output for incremental encoder emulation (EEO2)
- Wiring examples:
 - Analog input (→ # 173)
 - Analog output (→ # 175)
 - Digital input (→ # 175)
 - Digital output (→ # 180)
 - Feedback (→ # 127)
 - Encoder emulation (EEO2) (→ # 157)
 - Master-Slave (→ # 160)

Digital I/O connectivity


Pin	Signal	Description
A12	SIN3	Slow, isolated, sink, fail-safe, functional safety input 3
A13	Digital-In (DIN) 9	Slow, isolated, sink, type EN 61131-2 type 1
A14	Digital-In (DIN) 10	Slow, isolated, sink, type EN 61131-2 type 1
A15	Digital-In (DIN) 11	Slow, isolated, sink, type EN 61131-2 type 1
A16	Digital-In (DIN) 12	Slow, isolated, sink, type EN 61131-2 type 1
A17	AGND	Ground for analog I/O
A18	Analog-In (AIN) 2+	Analog Input, +/- 10 V
A19	Analog-In (AIN) 2-	
A20*	Digital-In/Out (DIO) 1 +	RS485 input or output
A21*	Digital-In/Out (DIO) 1 -	RS485 input or output
B12	SIN4	Slow, isolated, sink, fail-safe, functional safety input 4
B13	Digital-Out (DOOUT) 5	Isolated, high-side, 100 mA
B14	Digital-Out (DOOUT) 6	Isolated, high-side, 100 mA
B15	Digital-Out (DOOUT) 7 +	Fast, isolated, sink or source, 100 mA
B16	Digital-Out (DOOUT) 7 -	
B17	Digital-Out (DOOUT) 8 +	Fast, isolated, sink or source, 100 mA
B18	Digital-Out (DOOUT) 8 -	
B19	Analog-Out (AOUT) 2	Analog Output, 0 to +10 V
B20*	Digital-In/Out (DIO) 2 +	RS485 input or output
B21*	Digital-In/Out (DIO) 2 -	RS485 input or output

***Feedback 5 (input)**

Pin	Increm. Encoder	Step/ Dir	CW/ CCW	BiSS C EnDAT 2.2	SSI	Pin	Increm. Encoder
A20	Track A +	Step +	CW +	CLK+	CLK+	A20	A+
A21	Track A -	Step -	CW -	CLK-	CLK-	A21	A -
B20	Track B +	Dir +	CCW +	DAT+	DAT+	B20	B+
B21	Track B -	Dir -	CCW -	DAT-	DAT-	B21	B -

***EEO2 (output)**

7.5.7.12 X23: I/O, EEO1, Feedback 3

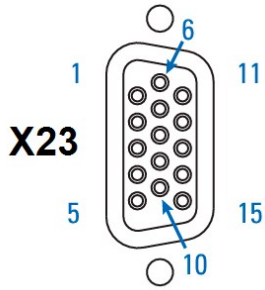

- Sub-D high density 15 pin, female
- Locking screws, tightening torque 0.4Nm (3.5 inlbs)
- Input for feedback 3 (→ # 128)
- Output for incremental encoder emulation (EEO1)
- Additional Digital-In/Out
- Wiring examples:
 - Feedback (→ # 128)
 - Encoder emulation (EEO1) (→ # 158)
 - Master-Slave (→ # 160)
 - Digital input (→ # 175)
 - Digital output (→ # 180)

Feedback 3 connectivity (input)

Pin	SFD	Resolver	BiSS B	BiSS C	EnDat [®] 2.1	EnDat [®] 2.2*	HIPERFACE [®]	Sine/ Cos	Sine/ Cos +Hall	Incr. Enc.	Incr. Enc. +Hall	Hall	SSI	Step/ Dir	CW/ CCW
1	-	-	-	-	-	-	-	-	Hall U	-	Hall U	Hall U	-	-	-
2	-	-	CLK+	CLK+	CLK+	CLK+	-	-	Hall V	-	Hall V	Hall V	-	-	-
3	-	-	CLK-	CLK-	CLK-	CLK-	-	-	Hall W	-	Hall W	Hall W	-	-	-
4	SEN+	-	SEN+	SEN+	SEN+	SEN+	I	SEN+	SEN+	SEN+	SEN+	-	-	-	-
5	SEN-	-	SEN-	SEN-	SEN-	SEN-		SEN-	SEN-	SEN-	SEN-	-	-	-	-
6	COM+	R1 Ref+	DAT+	DAT+	DAT+	DAT+	DAT+	Zero+	Zero+	Zero+	Zero+	-	D+	-	-
7	COM-	R2 Ref-	DAT-	DAT-	DAT-	DAT-	DAT-	Zero-	Zero-	Zero-	Zero-	-	D-	-	-
8	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	-	Th+	Th+	Th+
9	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	-	Th-	Th-	Th-
10	+5 V	-	+5 V	+5 V	+5 V	+5 V	8-9 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V
11	0 V	-	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V
12	-	S1 SIN+	A+	-	A+	-	SIN+	A+	A+	A+	A+	-	-	Step+	CW+
13	-	S3 SIN-	A-	-	A-	-	SIN-	A-	A-	A-	A-	-	-	Step-	CW-
14	-	S2 COS+	B+	-	B+	-	COS+	B+	B+	B+	B+	-	-	CCW+	CCW+
15	-	S4 COS-	B-	-	B-	-	COS-	B-	B-	B-	B-	-	-	CCW-	CCW-

CL = CLOCK, D = DATA, S = SENSE, Th = Thermal control, Z = Zero

■ = DC Terminated, can be overridden with DIO#.TERMDIO#.TERM

■ = Optional


■ = Information digitally communicated on COM+/- channel.

EEO1 connectivity (output)

Pin	Incremental Encoder
6	Zero+
7	Zero-
11	0 V
12	A +
13	A-
14	B+
15	B-

Digital I/O connectivity

Pin	Digital I/O
2	Digital-In/Out 6 +
3	Digital-In/Out 6 -
6	Digital-In/Out 5 +
7	Digital-In/Out 5 -
10	+5 V
11	0 V
12	Digital-In/Out 3 +
13	Digital-In/Out 3 -
14	Digital-In/Out 4 +
15	Digital-In/Out 4 -

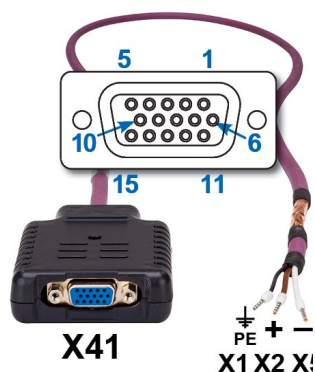7.5.7.13 X41: SFA Feedback converter, EEO3/EEO4 EXX3/EXX4 (accessory)

- Sub-D high density 15 pin, female
- Locking screws, tightening torque 0.4 Nm (3.5 in•lbs)
- 1 m cable, 3 flying leads with ferrules for connection to X1, X2, X5 (only on 24 A model)
- Input for electronic gearing
- When connected to X1: Input for feedback 1 (→ # 122)
- When connected to X2: Input for feedback 2 (→ # 122)
- When connected to X5 (only on 24 A model): Input for feedback 2 (→ # 122)
- Output for incremental encoder emulation (EEO3 / EEO4)(EXX3 / EXX4) (→ # 157) - Only available on "-EXX" (Encoder) models
- SFA adapter converts conventional feedback signals to 2 wire feedback format
- Wiring examples:
 - Feedback and Encoder emulation (→ # 143)
 - Master-Slave (→ # 160)

Feedback 1/2 connectivity (input)

Pin	SFD	Resolver	BiSS B	BiSS C	EnDat® 2.1	EnDat® 2.2*	HIPERFACE®	Sine/ Cos	Sine/ Cos +Hall	Incr. Enc.	Incr. Enc. +Hall	Hall	SSI
1	-	-	-	-	-	-	-	-	Hall U	-	Hall U	Hall U	-
2	-	-	CLK+	CLK+	CLK+	CLK+	-	-	Hall V	-	Hall V	Hall V	-
3	-	-	CLK-	CLK-	CLK-	CLK-	-	-	Hall W	-	Hall W	Hall W	-
4	SEN+	-	SEN+	SEN+	SEN+	SEN+	I	SEN+	SEN+	SEN+	SEN+	-	-
5	SEN-	-	SEN-	SEN-	SEN-	SEN-		SEN-	SEN-	SEN-	SEN-	-	-
6	COM+	R1 Ref+	DAT+	DAT+	DAT+	DAT+	DAT+	Zero+	Zero+	Zero+	Zero+	-	D+
7	COM-	R2 Ref-	DAT-	DAT-	DAT-	DAT-	DAT-	Zero-	Zero-	Zero-	Zero-	-	D-
8	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	-	Th+
9	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	-	Th-
10	+5 V	-	+5 V	+5 V	+5 V	+5 V	8-9 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V
11	0 V	-	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V
12	-	S1 SIN+	A+	-	A+	-	SIN+	A+	A+	A+	A+	-	-
13	-	S3 SIN-	A-	-	A-	-	SIN-	A-	A-	A-	A-	-	-
14	-	S2 COS+	B+	-	B+	-	COS+	B+	B+	B+	B+	-	-
15	-	S4 COS-	B-	-	B-	-	COS-	B-	B-	B-	B-	-	-

CL = CLOCK, D = DATA, S = SENSE, Th = Thermal control, Z = Zero

(1) : Resolver with AKD2G-CON-SFA-R00 only, all other feedback devices with AKD2G-CON-SFA-E00 only

- = DC Terminated, can be overridden with [DIO#.TERM](#)
- = Optional
- = Information digitally communicated on COM+/- channel.

EEO3 / EEO4 Connectivity (output)

X41 Pin	Incremental Encoder
6	Zero+
7	Zero-
11	0 V
12	A +
13	A-
14	B+
15	B-













7.6 Power and Logic Voltage Supply (X3/X10)

7.6.1 Electrical Supply Connection

7.6.1.1 Connection to various mains supply networks AKD2G-Sxx-6V (100V to 240V)


NOTICE

An isolating transformer is required for 400 to 480V networks to get a maximum voltage of 240V +10%.

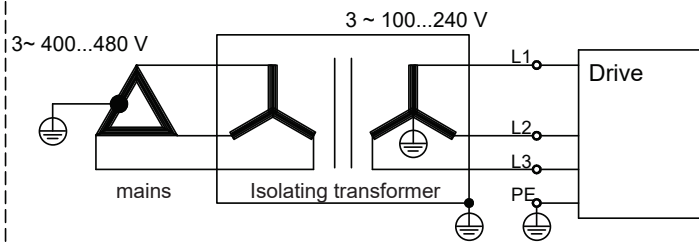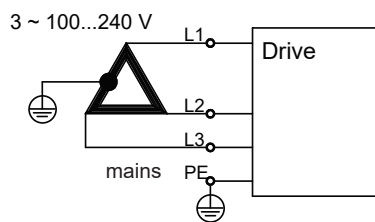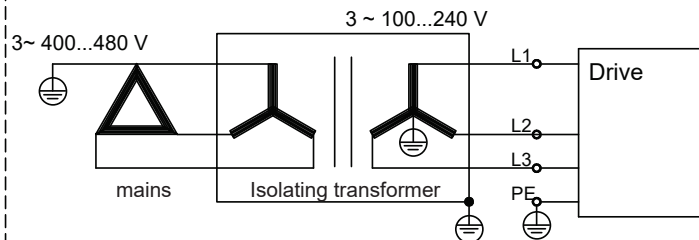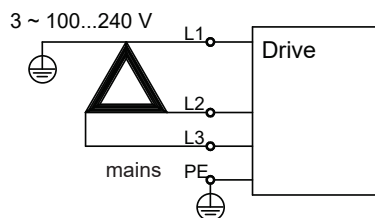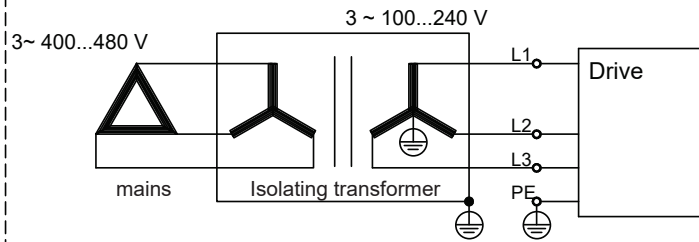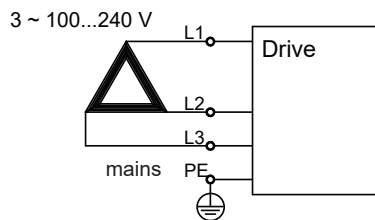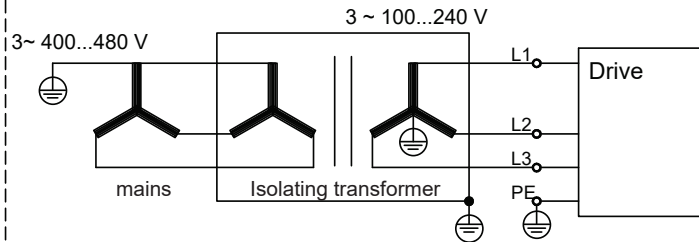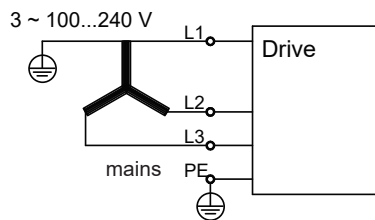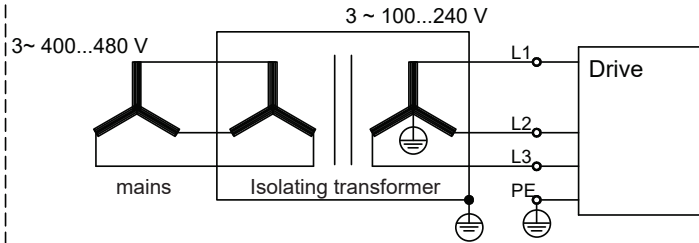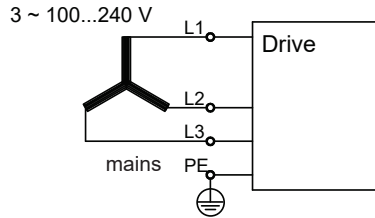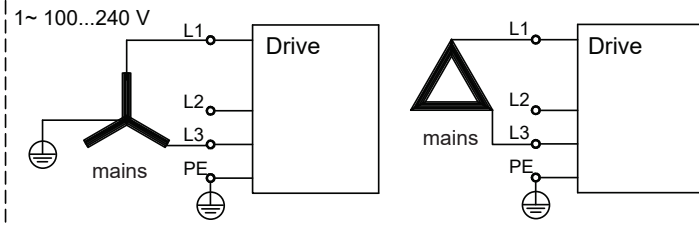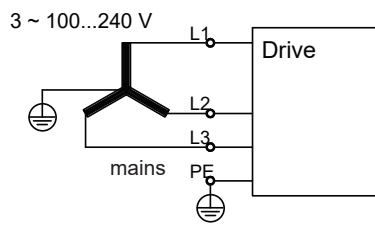

7.6.1.2 Connection to various mains supply networks AKD2G-Sxx-7V (240V to 480V)

NOTICE An isolating transformer is required for 120V networks to get a minimum voltage of 240V +10%.

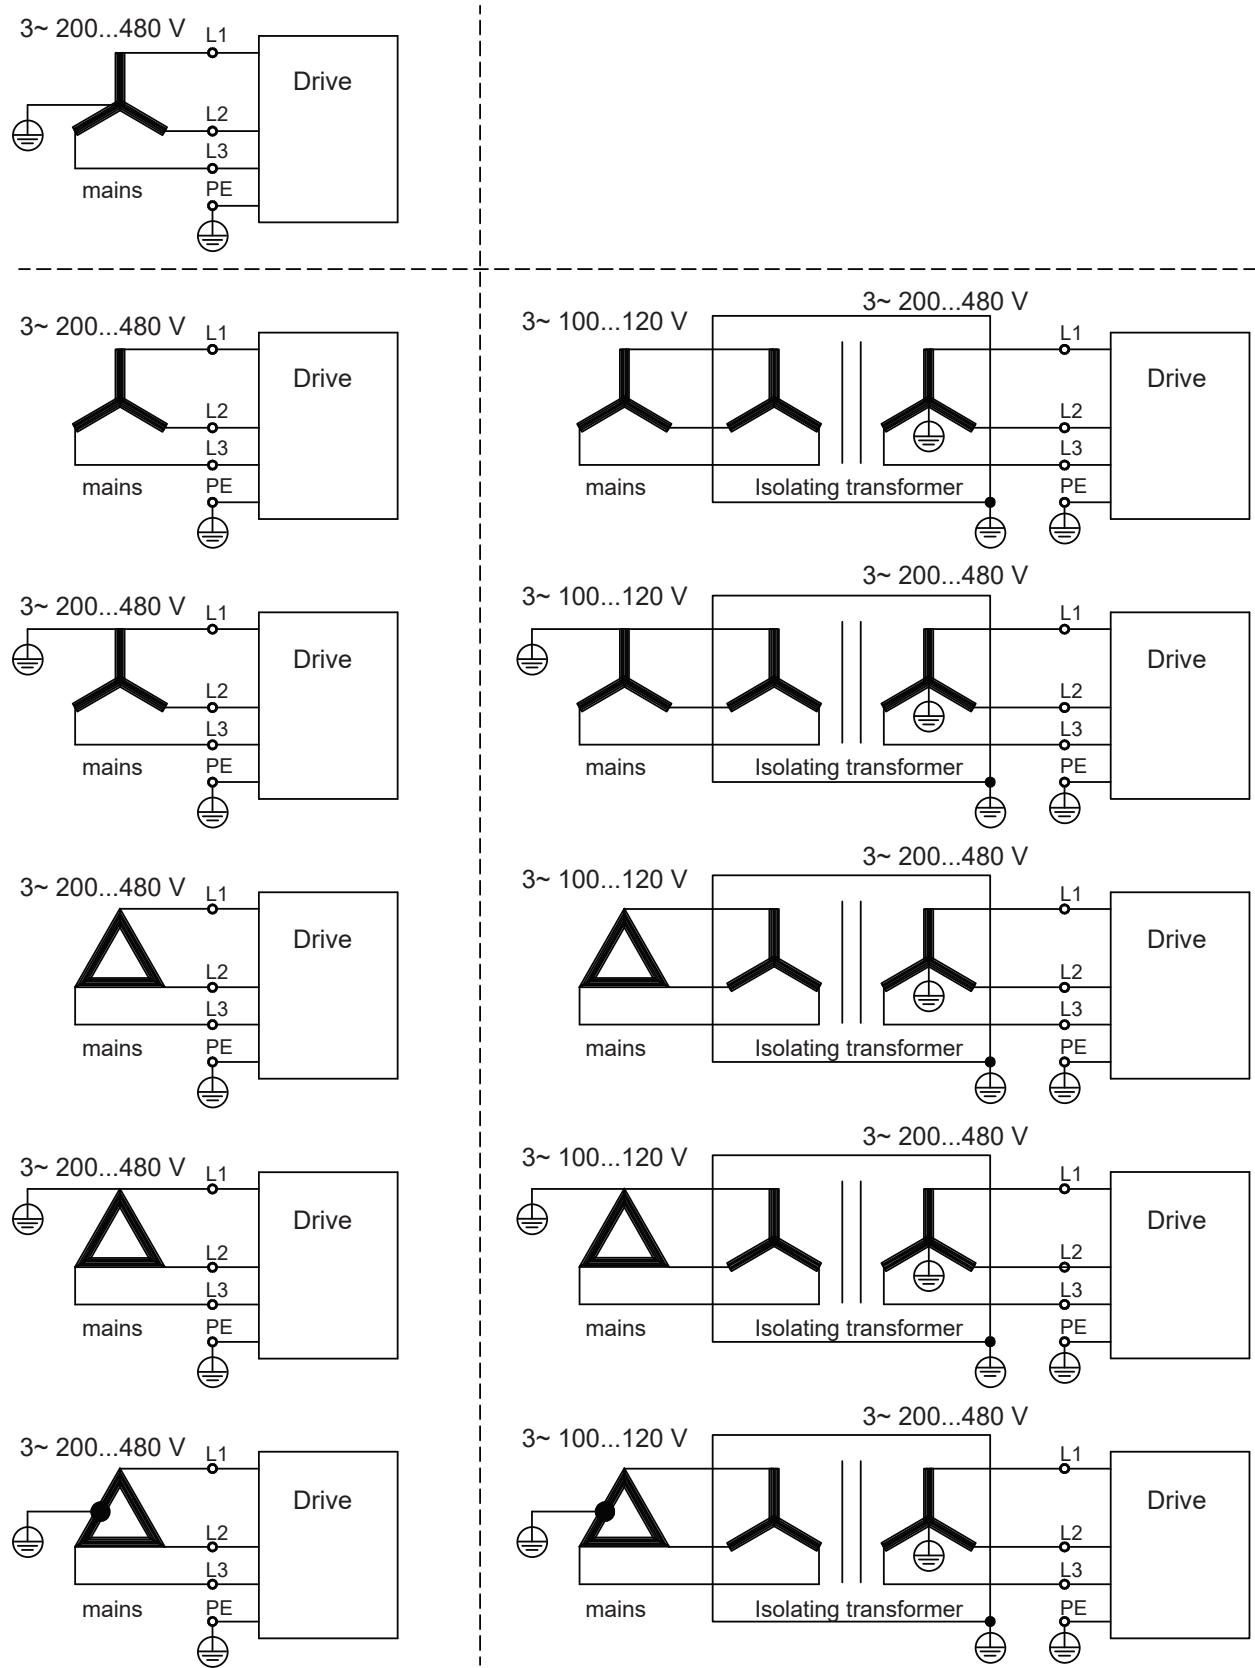

7.6.2 Mains power supply connector X3/X3A

Drives in the AKD2G series can be supplied as follows:

AKD2G-Sxx-6V

- 1, 2 or 3 phase industrial AC supply networks (TN-S or TT, see [KDN](#)): (→ # 41)
- DC supply networks: (→ # 41)


AKD2G-Sxx-7V

- 3 phase industrial AC supply networks (TN-S or TT, see [KDN](#)): (→ # 46)
- DC supply networks: (→ # 46)

For connection to corner grounded delta supply networks contact Kollmorgen customer support.

Periodic overvoltages between phases (L1, L2, L3) and the PE/housing of the drive must not exceed 1,000V peak. In accordance with IEC 61800, voltage spikes (< 50 µs) between phases must not exceed 1,000V. Voltage spikes (< 50 µs) between a phase and the PE/housing must not exceed 2,000V.

- 8/4 pin, pitch 7.62/10.16 mm
- optional T version
- Wiring example:
 - 1 phase AC supply (→ # 96)
 - 2 phase AC supply (→ # 96)
 - 3 phase AC supply (→ # 97)
 - DC supply (→ # 99)
- AKD2G-Sxx-6V requires external EMC filter for use in industrial environment, product category C.
- Mating connector data (→ # 64)
- Fusing with different system structures (→ # 101) ff

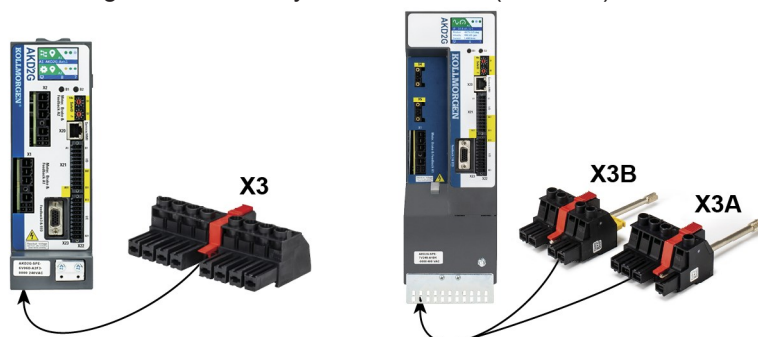


Pin	Label	Signal	1~ Supply	2~Supply	3~ Supply	DC Supply
1	PE	PE	Protective earth	Protective earth	Protective earth	Protective earth
2	L1	L1	Phase L1	Phase L1	Phase L1	+ DC
3	L2	L2	n.c.	n.c.	Phase L2	n.c.
4	L4	L3	Neutral N	Phase L2	Phase L3	- DC

For DC supply: observe notes (→ # 99).

7.6.2.1 Wiring examples mains power supply


One phase AC mains (AKD2G-Sxx-6V)

- Directly to one phase supply network with neutral line.
- Activate single phase supply (VBUS.THREEPHASE = 0).
- Set VBUS.ACNOMINAL to desired nominal AC line voltage for lines other than nominal rated VAC.
- For complete information refer to WorkBench online help, AKD2G-S User Manual, section Power Setting.
- AC line filtering to be provided by the user. Use filter type FN2090, refer to the *Accessories Manual* for more information. Use shielded cable between filter and drive.

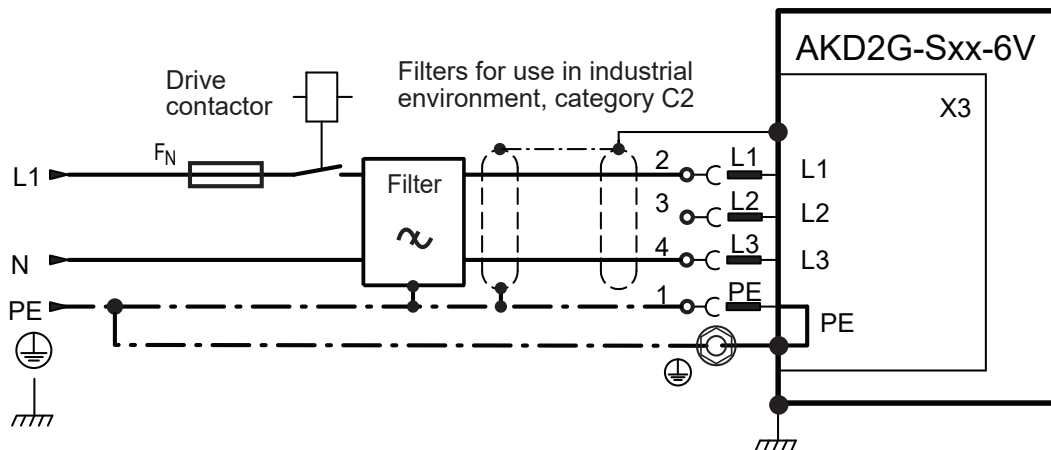


Two phases AC mains (AKD2G-Sxx-6V)

- Directly to two-phase supply network without neutral line.
- Activate single phase supply (VBUS.THREEPHASE = 0).
- Set VBUS.ACNOMINAL to desired nominal AC line voltage for lines other than nominal rated VAC.
- For complete information refer to WorkBench online help, AKD2G-S User Manual, section Power Setting.
- AC line filtering to be provided by the user. Use filter type FN2090, refer to the *Accessories Manual* for more information. Use shielded cable between filter and drive.

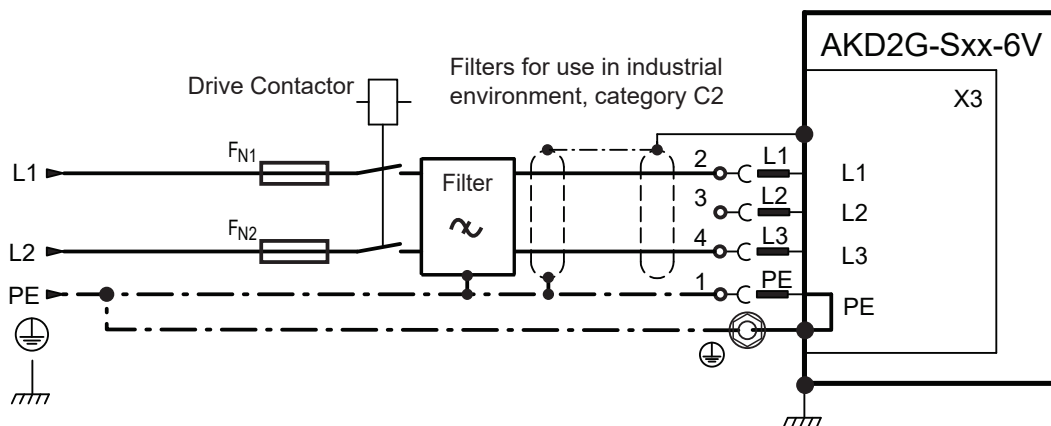


Three phases AC mains (all AKD2G-Sxx-)


- Directly to 3-phase supply network.
- Activate 3-phase supply (VBUS.THREEPHASE = 1).
- Set VBUS.AC�OMINAL to desired nominal AC line voltage for lines other than nominal rated VAC.
- For complete information refer to WorkBench online help, AKD2G-S User Manual, section Power Setting.
- AC line filtering to be provided by the user. Refer to the *Accessories Manual* for more filter description. Use shielded cable between filter and drive.
 - AKD2G-Sxx-6V:
 - Motor cable < 10 m: use filter FN 3288 in industrial environment, category C2.
 - Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C3.
 - AKD2G-Sxx-7V up to 12 Amps:
 - Motor cable < 10 m: no filter, in industrial environment, category C3.
 - Motor cable < 10 m: use filter FN 3288 in industrial environment, category C2.
 - Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C3.
 - AKD2G-Sxx-7V 24:
 - Motor cable < 10 m: no filter, in industrial environment, category C2.
 - Motor cable ≥ 10 m: no filter, in industrial environment, category C3.
 - Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C2.

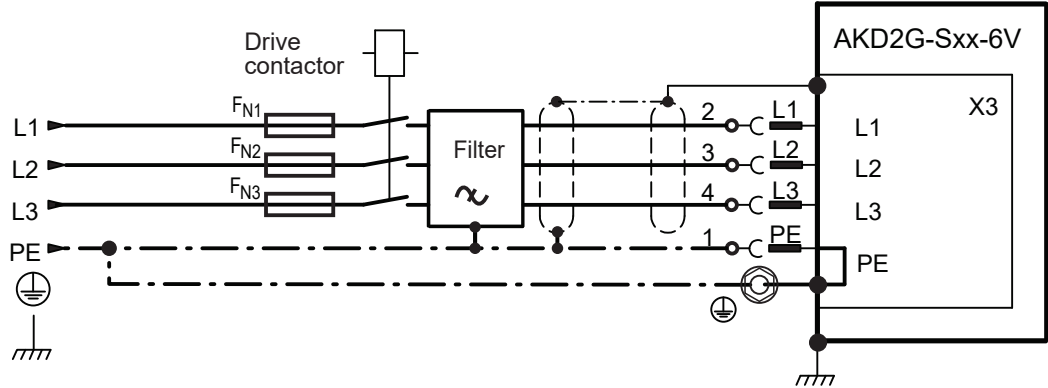

Motor Cable Length	EMI Category
< 10 m	C2
≥ 10 m	C3

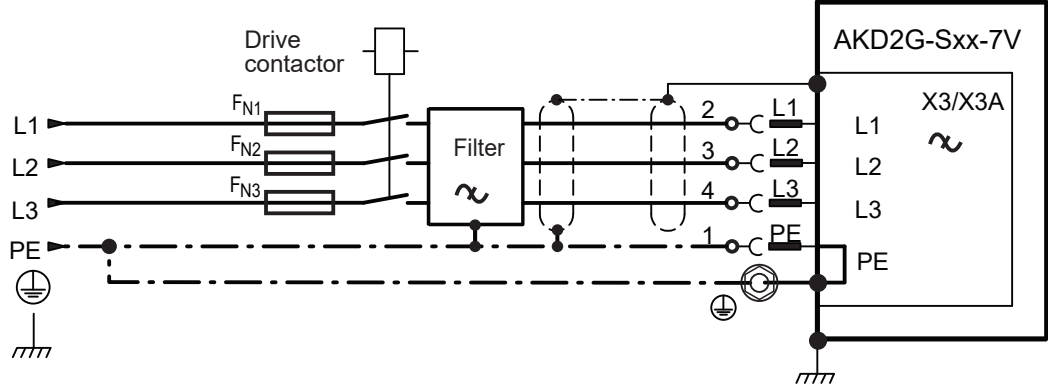

Motor Cable Length	EMI Category	
	AKD2G 3-12 A	AKD2G 24 A
< 10 m	C3	-
≥ 10 m	C2	C2

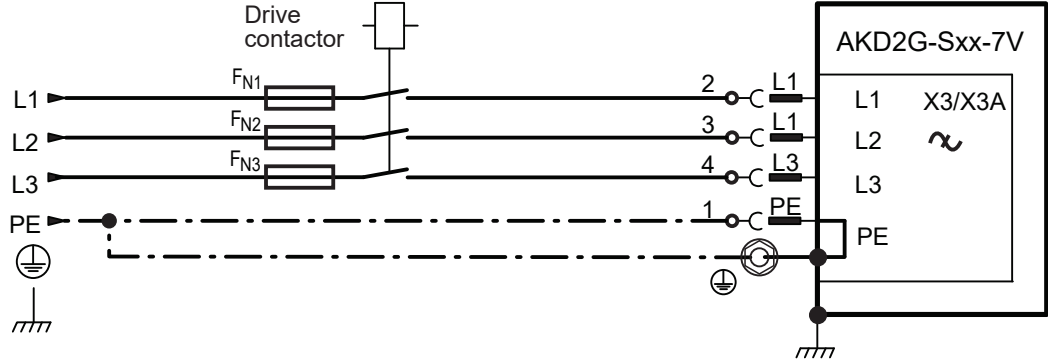


Motor Cable Length	EMI Category	
	AKD2G 3-12 A	AKD2G 24 A
< 10 m	C3	C2
≥ 10 m	-	C3

DC supply (all AKD2G-Sxx-)

- Activate DC supply (VBUS.DCOPERATION = 1) and set VBUS.DCNOMINAL.
- Any DC supply filtering for AKD2G-Sxx-6V to be provided by the user.

DC Supply to mains lines R/T (L1/L3)

DC power source is connected to the drive AC line inputs. This wiring provides soft start of the energy storage capacitors inside the drive and the AC rectifier diodes prevents motor regeneration energy from returning to the dc power source. That is, by powering the drive from the AC line input connections, the drive's energy absorption and energy dissipation mechanisms can work normally.

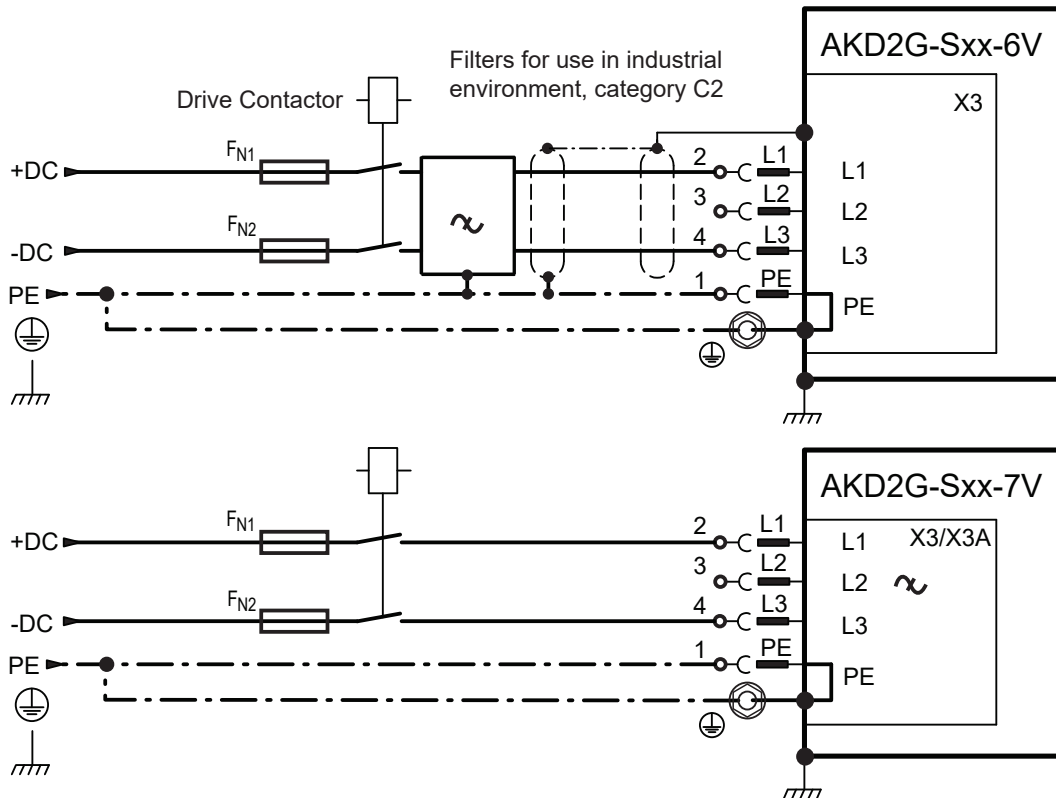


DC Supply to DC Bus lines X3/7-8

NOTICE

When wiring DC power supply to the drive DC Bus terminals X3/X3B pins 7 and 8, the user is responsible for current and power management using additional external devices. For more information refer to [KDN \(AKD2G Low Voltage DC Operation\)](#).

User responsibility:


- The power supply system design must ensure inrush current protection by limiting input current during power up.
- Provide a means to safely absorb energy from the motor when slowing down/regenerating. UL Rating for DC requires that DC is created from an AC source. Other forms of DC are not covered by the UL listing.
- DC supply polarity must be properly wired. Improper polarity of DC power will damage the drive and void warranty.

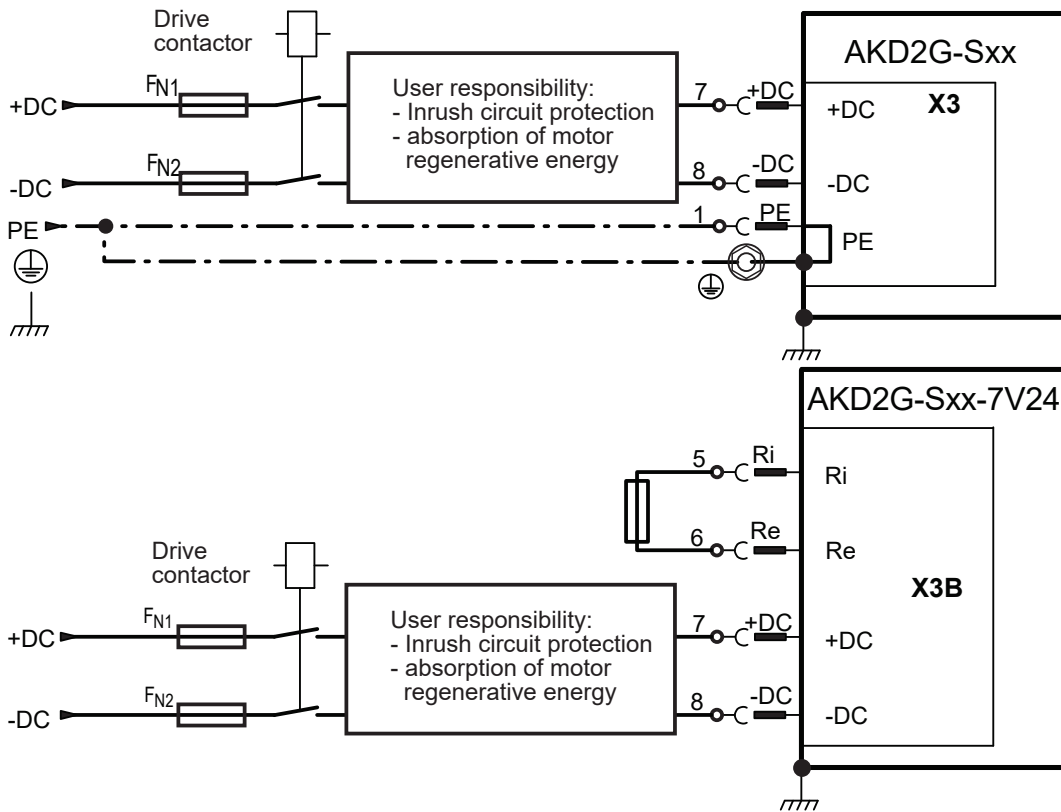

7.6.2.2 Fusing

Fuse types	Description
US fuses	- Class J, 600 VAC, 200 kA SCCR, time-delay - must be UL and CSA listed Alternate fuses and breakers to Class J must have similar or better I_p and I^2T performance per UL 508A SB4.2 at max. 10 kA SCCR rating.
EU fuses	- Types gS or gG, 400 V/500 V, time-delay - max. 10 kA SCCR
Semiconductor	max. 65 kA SCCR
Fuse holders	Use finger-safe fuse holders according to EN 60529 in combination with the standard fuse blocks.
Automatic circuit breakers	- max. 30 A - max. 10 kA SCCR
Group installation fusing	max. 30 A


AC supply, single drives, line fusing

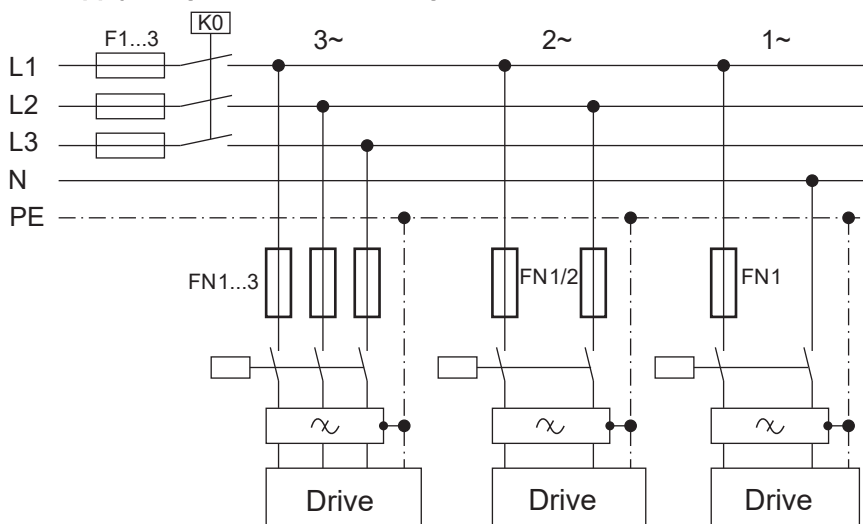

- F1, F2, F3: depends on sum of application's required input currents and cabinet requirements.
- Filters for special EMC requirements only (→ # 383).
- FN1, FN2, FN3 maximum rating: 30 A.
- FN1, FN2, FN3 recommended rating see table below:

Drive Model	FN1, FN2, FN3: Ampere rating	Example class J Eaton Bussmann	Example class J Mersen
AKD2G-Sxx-6V03S	10 A (Time-Delay)	LPJ10SP, DFJ10	AJT10, HSJ10
AKD2G-Sxx-6V06S AKD2G-Sxx-6V03D	10 A (Time-Delay)	LPJ10SP, DFJ10	AJT10, HSJ10
AKD2G-Sxx-6V12S AKD2G-Sxx-6V06D	15 A (Time-Delay)	LPJ15SP, DFJ15	AJT15, HSJ15
AKD2G-Sxx-7V03S	10 A (Time-Delay)	LPJ-10SP, DFJ-10	AJT10, HSJ10
AKD2G-Sxx-7V06S AKD2G-Sxx-7V03D	10 A (Time-Delay)	LPJ-10SP, DFJ-10	AJT10, HSJ10
AKD2G-Sxx-7V12S AKD2G-Sxx-7V06D	15 A (Time-Delay)	LPJ-15SP, DFJ-15	AJT15, HSJ15
AKD2G-Sxx-7V24S	25 A (Time-Delay)	LPJ-25SP, DFJ-25	AJT25, HSJ25
Drive Model	FN1, FN2, FN3: Ampere rating	Semi-conductor Eaton/Bussmann	Semi-conductor Mersen
AKD2G-Sxx-6V03S	10 A	FWP-10G14F	FR14GR69V10
AKD2G-Sxx-6V06S AKD2G-Sxx-6V03D	10 A	FWP-10G14F	FR14GR69V10
AKD2G-Sxx-6V12S AKD2G-Sxx-6V06D	15 A	FWP-16G14F	FR14GR69V16
AKD2G-Sxx-7V03S	10 A	FWP-10G14F	FR14GR69V10
AKD2G-Sxx-7V06S AKD2G-Sxx-7V03D	10 A	FWP-10G14F	FR14GR69V10
AKD2G-Sxx-7V12S AKD2G-Sxx-7V06D	15 A	FWP-16G14F	FR14GR69V16
AKD2G-Sxx-7V24S	32 A	FWP-32G14F	FR14GR69V32

AC supply, group of drives, line fusing

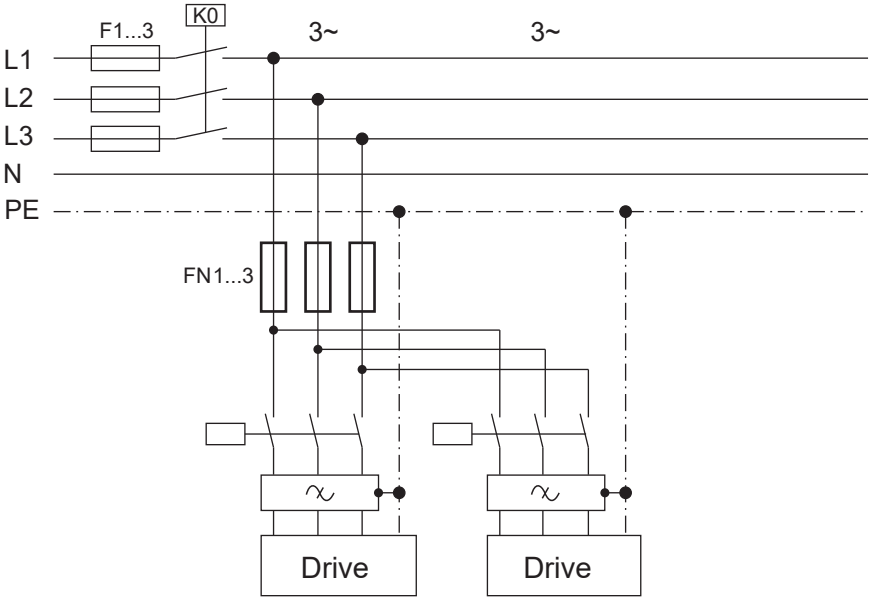


- F1, F2, F3: depends on sum of application's required input currents and cabinet requirements.
- Filters for special EMC requirements only (→ # 383).
- FN1, FN2, FN3 maximum rating: fuse size for group installation is limited to 30 A max. and 32 A max. for Semiconductor fuses.
- FN1, FN2, FN3 rating should be 1.25 * sum current.


Group sum current	FN1, FN2, FN3: Ampere rating	Eaton Bussmann	Mersen
6 A to 30 A	30 A (Time-Delay)	Example class J LPJ30SP, DFJ30	Example class J AJT30, HSJ30
	32 A	Semiconductor FWP-32G14F	Semiconductor FR14GR69V32

NOTE

The sum of the AC input currents ($A_{1...n}$) is less than 30 A (32 A when semiconductor fuses are used). Additionally, the sum of the axes currents ($I_{1...n}$) in parallel DC bus groupings must be less than 48 A. The maximum number of axes is limited to 8 drive enclosures per group installation.

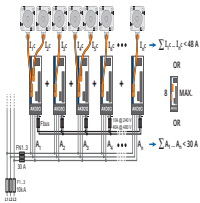


AC supply, single drives, automatic circuit breakers

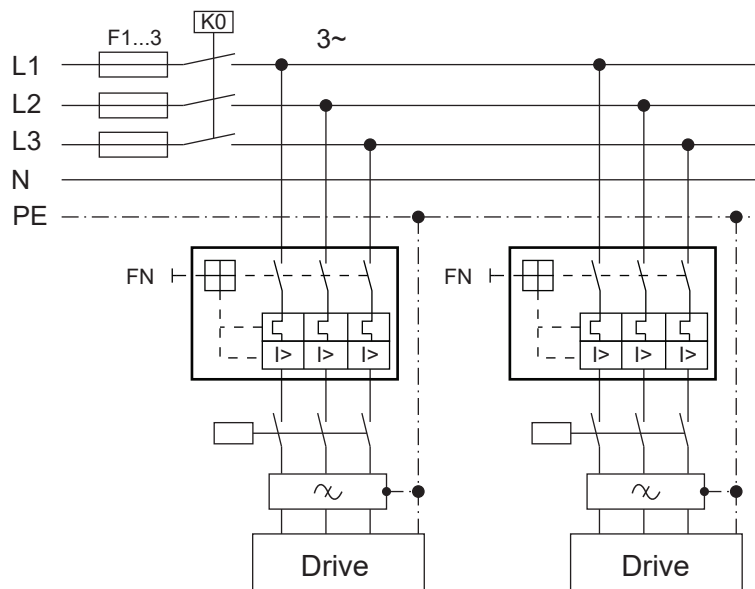

- F1, F2, F3: depends on the sum of application's required input currents and cabinet requirements.
- Filters for special EMC requirements only (→ # 383).
- FN maximum rating: 30 A
- FN recommended rating and regional approvals see table below:

Drive Model	Ampere rating	SCCR rating	Example ABB
AKD2G-Sxx-6V	15 A	10 kA	SU203M-K15
AKD2G-Sxx-7V	15 A	10 kA	SU203M-K15
AKD2G-Sxx-7V24x	30 A	10 kA	SU203M-K30


AC supply, group of drives, automatic circuit breakers

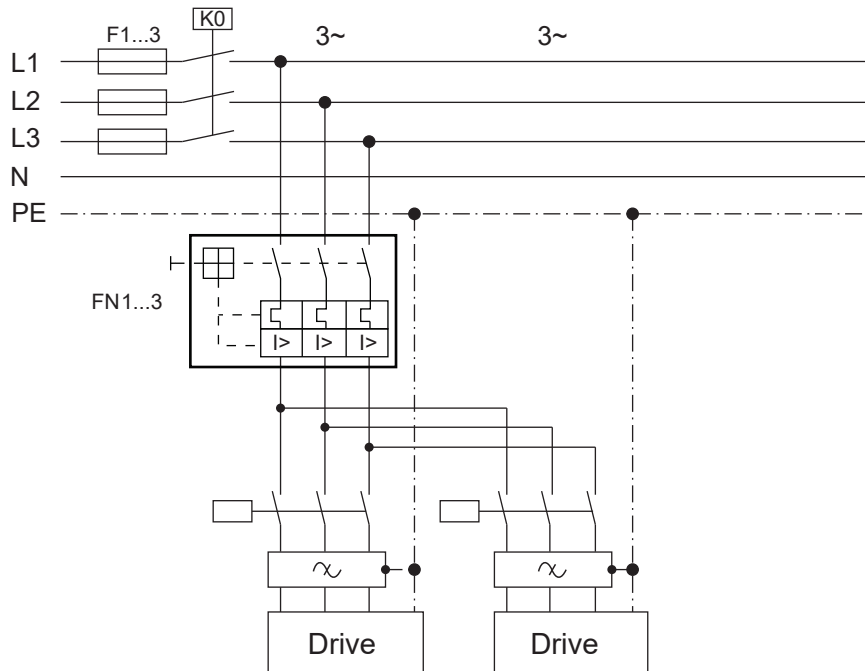

- F1, F2, F3: depends on sum of application's required input currents and cabinet requirements.
- Filters for special EMC requirements only (→ # 383).
- FN maximum rating: circuit breaker size for group installation is limited to 30 A max.
- FN rating should be $1.25 \cdot \text{sum current}$.
- FN recommended rating and regional approvals see table below:

Group sum current	Ampere rating	SCCR rating	Example UL ABB
AKD2G-Sxx-6V			
6 A to 9 A	15 A	10 kA	SU203M-K15
12 A to 15 A	20 A	10 kA	SU203M-K20
18 A to 24 A	30 A	10 kA	SU203M-K30
27 A to 36 A	30 A	10 kA	SU203M-K30
AKD2G-Sxx-7V			
6 A to 9 A	15 A	10 kA	SU203M-K15
12 A to 15 A	20 A	10 kA	SU203M-K20
18 A to 24 A	30 A	10 kA	SU203M-K30
27 A to 36 A	30 A	10 kA	SU203M-K30

DC supply, single drives, line fusing

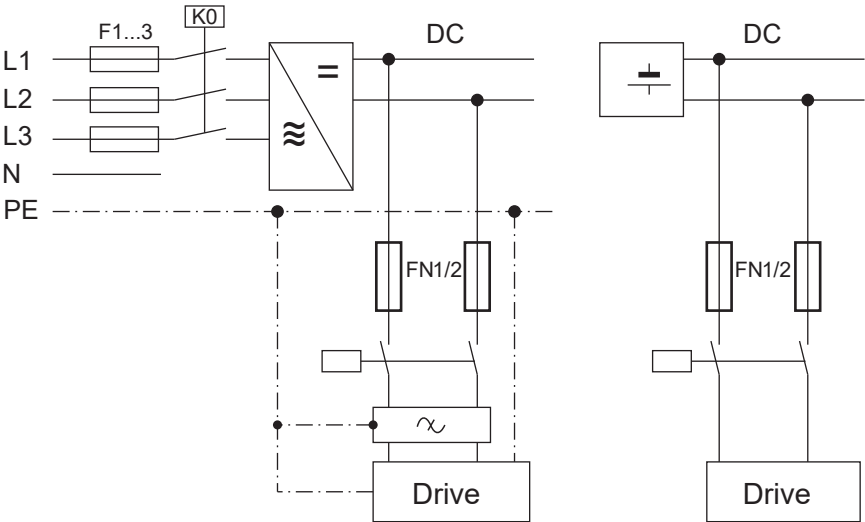

- F1, F2, F3: depends on sum of application's required input currents and cabinet requirements.
- Filters for special EMC requirements only (→ # 383).
- FN1, FN2 maximum rating 30 A
- FN1, FN2 recommended rating see table below:

Drive Model	Ampere rating	Example Eaton Bussmann	Example Mersen
AKD2G-Sxx-6V03S	10 A (Time-Delay)	DFJ-10	HP6M10
AKD2G-Sxx-6V06S AKD2G-Sxx-6V03D	15 A (Time-Delay)	DFJ-15	HP6M15
AKD2G-Sxx-6V12S AKD2G-Sxx-6V06D	15 A (Time-Delay)	DFJ-15	HP6M15
AKD2G-Sxx-7V03S	10 A (Time-Delay)	FWP-10B	HP10M10
AKD2G-Sxx-7V06S AKD2G-Sxx-7V03D	10 A (Time-Delay)	FWP-10B	HP10M10
AKD2G-Sxx-7V12S AKD2G-Sxx-7V06D	15 A (Time-Delay)	FWP-15B	HP10M15
AKD2G-Sxx-7V24S	25 A (Time-Delay)	FWP-25B	HP10M25

7.6.3 Auxiliary voltage power supply connector X10

The following diagram describes external 24 VDC power supply (PELV). The required supply current rating depends on the use of motor brake (→ # 41) or (→ # 41).



- 2 pin, pitch 5.08 mm
- T-type mating connector data (→ # 64)
- Undervoltage fault limit 19 V
- Overvoltage fault limit 30 V

Pin	Signal	Description
1	+ 24 V	+24 VDC supply voltage, PELV
2	GND	Ground for 24 VDC supply voltage, PELV

For control supply current requirement specifications see section (→ # 49).


7.6.3.1 Fusing

Use 24 VDC supply manufacturer's recommendation for fusing.

7.6.3.2 Wiring example 24 VDC supply

Maximum current for one string of daisy-chained X10T connectors is 20 A. The sum of the control currents of the connected drives should not exceed 20 A. With the data given in the table above, you can connect for example: 6 single axis drives, or 4 dual axis drives, or 3 single + 2 dual axis drives.

Wiring example with three phase power supply unit:

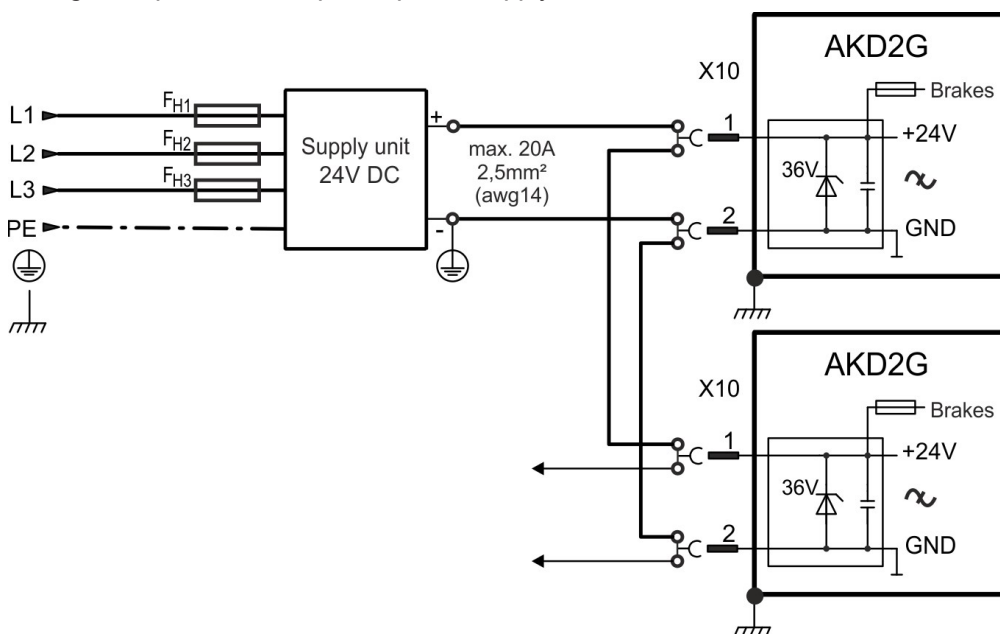

7.7 DC Bus link connector X3/X3B

The DC bus link can be connected in parallel so that the power returned from slowing down motors is divided between all the servo drives that are connected to the same DC bus link circuit. Every servo drive must have its own power connection to mains voltage sharing the same branch, over current protection devices, even if the DC bus link is used. Servo drives being operated very often should be placed beside servo drives, which need energy. That reduces current flow on longer distances.

NOTICE


The servo drives can be destroyed if DC bus link voltages are different. Only drives with mains supply that share the same AC branch, over current protection devices (identical mains supply voltage) may have the DC bus links interconnected.

Interconnection of DC bus links works best in systems powered by 3-phase AC or DC power. Consult Kollmorgen for DC bus linking with single phase AC power input.

NOTE

The sum of the application currents in the connected in parallel DC bus wires must not exceed 48 A. Wiring: Use 6mm² unshielded single cores with a max. length of 200 mm; use 6mm² shielded cables for longer lengths. In this case no fuse for line protection is required.


- 8/4 pin, pitch 7.62/10.16 mm
- Optional T version (not available for 7V24 drives)
- Mating connector data (→ # 64)

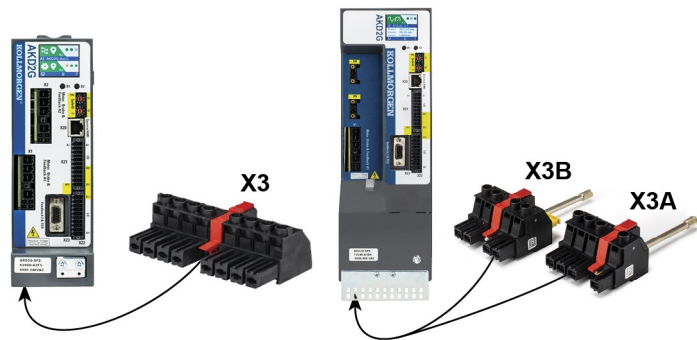

Pin	Label	Signal	Description
7	+DC	+DC	DC Bus link positive
8	-DC	-DC	DC Bus link negative

NOTE

In addition to the sum of the axes currents ($I_{1...n}$) in parallel DC bus groupings being less than 48 A, the sum of the AC input currents ($A_{1...n}$) must be less than 30 A (32 A when semiconductor fuses are used). The maximum number of axes is limited to 8 servo drive enclosures per group installation. Group AC fusing and breaker guidelines should also be followed for DC bus groupings.(→ # 103)

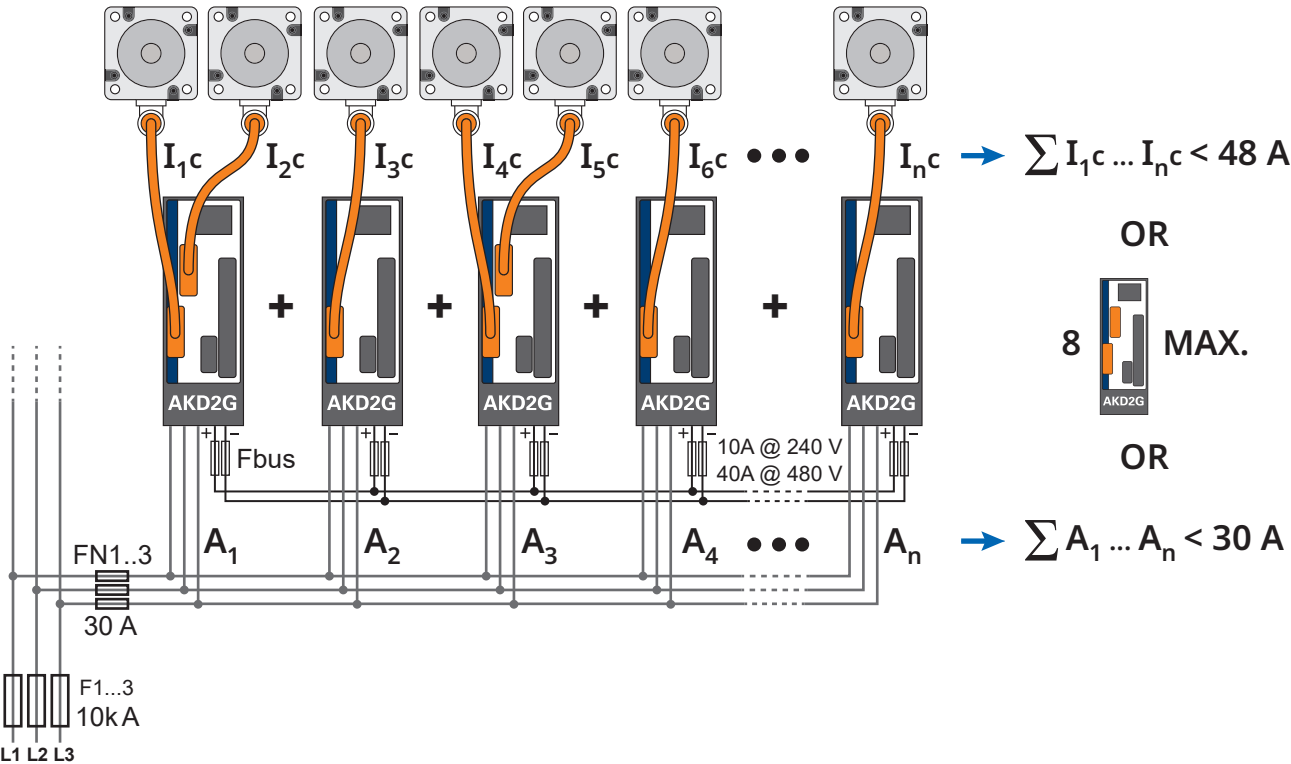

7.7.1 Fusing


External regen fusing FB1/FB2 (→ # 110). DC bus link fusing depends on topology (see (→ # 109)).

Wiring topology	Ampere rating@240V	Ampere rating@480V	Example Eaton:	Example Mersen:
AKD2G-Sxx-6V				
Group: Fgroup	max. 30 A	na	DFJ-30	HP6M30
Busbar: Fbus	max. 15 A	na	DFJ-15	HP6M15
AKD2G-Sxx-7V				
Group: Fgroup	max. 30 A		FWP-30B	HP10M30
Busbar: Fbus	max. 15 A		FWP-15B	HP10M15

NOTE


Also follow group AC fusing and breaker guidelines when sharing or grouping regen resistors. (→ # 103)

7.7.2 Wiring example with T connectors

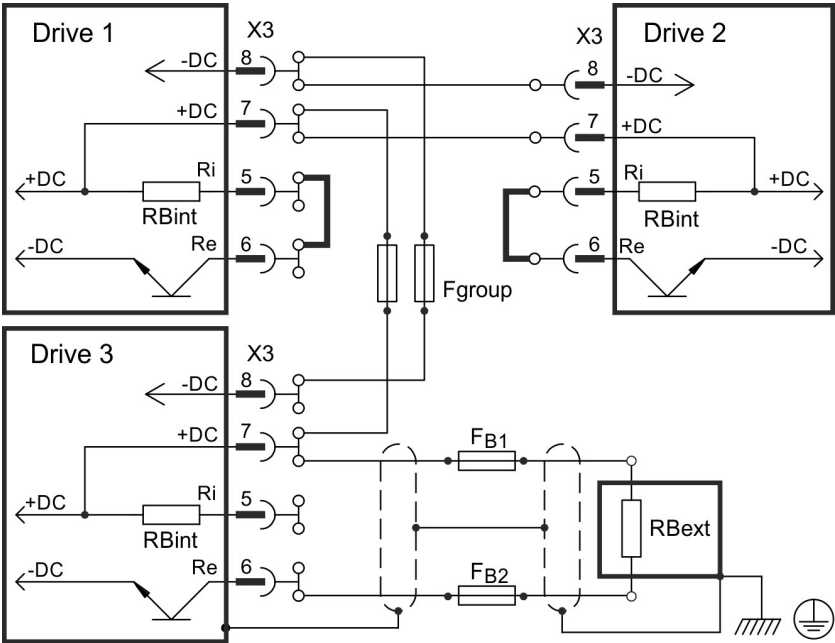


Note: T connectors are not available for 7V24 drives.

Without DC Bus fuses, other devices can become damaged or destroyed if, for example, a device fails due to an internal short circuit. If multiple drives are connected in parallel, then it is usual to insert DC Bus fuses (Fgroup) between groups of drives (with a group consisting of two or three devices, depending on the current) in order to limit any possible resulting damage. Fgroup fuses cannot avoid damage by current peaks completely.

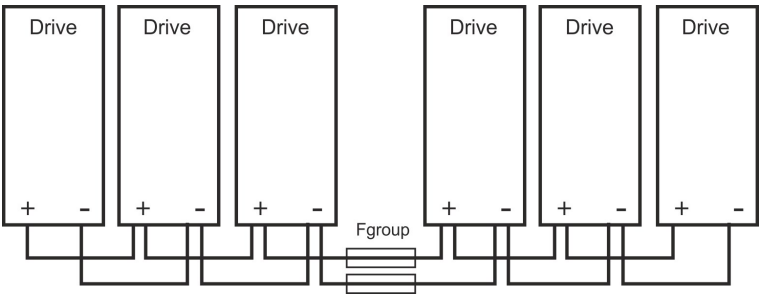

7.7.3 Wiring example with busbar

If a device fails in this system due to a short-circuit, only its fuses (Fbus) are tripped and the rest of the network continues uninterrupted. The solid busbars can conduct significantly larger currents than T connectors, because the compensating current does not flow through the connector as above.

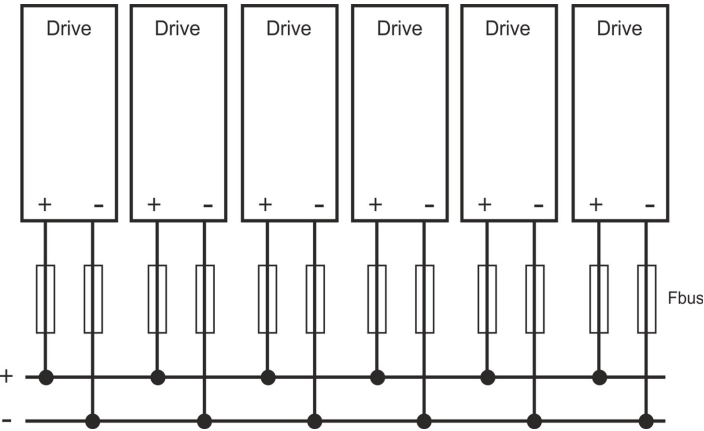


7.8 Regen resistor connector X3/X3B

For technical data on the regenerative brake circuit (→ # 49).

NOTE Fusing (such as fusible cut-outs or power switches) to be provided by the user.

- 8/4 pin, pitch 7.62/10.16 mm
- Optional T version (not available on 7V24S model)
- Mating connector data (→ # 64).
- X3/5 to X3/6 must be shorted to use the built in regen resistor. Remove the jumper to connect an external regen resistor.
- Refer to the WorkBench online help for parameter setting (REGEN.EXT, REGEN.REXT, REGEN.WATTEXT)

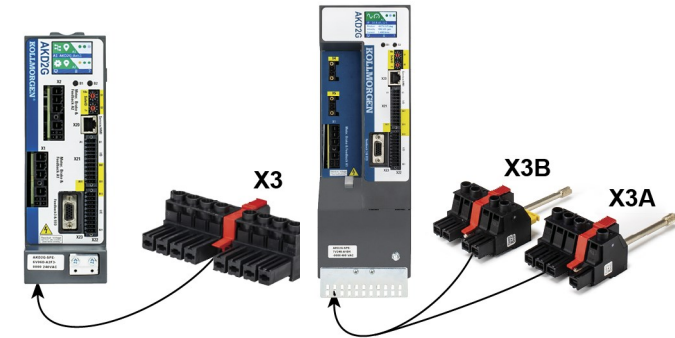


Pin	Label	Signal	Description
5	Ri	RBint	internal Regen resistor
6	Re	-RB	external Regen resistor -
7	+DC	+RBext	external Regen resistor +

7.8.1 Fusing and Wiring

FB1 / FB2 fusing

Drive Model	Ampere rating@240V	Ampere rating@480V	Example: Eaton	Example: Siba
all AKD2G-Sxx	10A	40A	FWP-xxA14F	110V to 400V: gRL(gS) 400V to 480V: aR

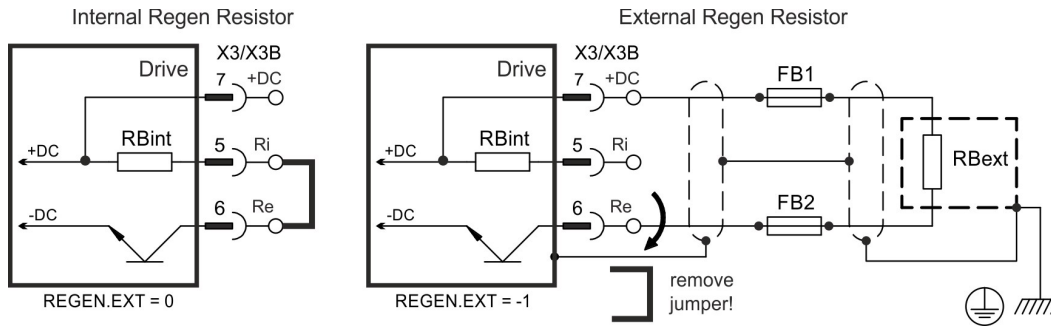

7.9 Motor Power, Brake, and Feedback Connection


The drive is able to protect the connected motor from overloading, if the parameters are set correctly and the thermal protection sensor is connected and supervised. With Kollmorgen motors the valid data are automatically set by the WorkBench motor database. Refer to parameter AXIS#.MOTOR.RTYPE for supported thermal sensors.

NOTICE


The dynamic voltage rise can lead to a reduction in the motor operating life and, on unsuitable motors, to flashovers in the motor winding.

- Only install motors with insulation class F (acc. to IEC60085) or above.
- Only install cables that meet the requirements (→ # 65).

7.9.1 Motor connectivity, some examples

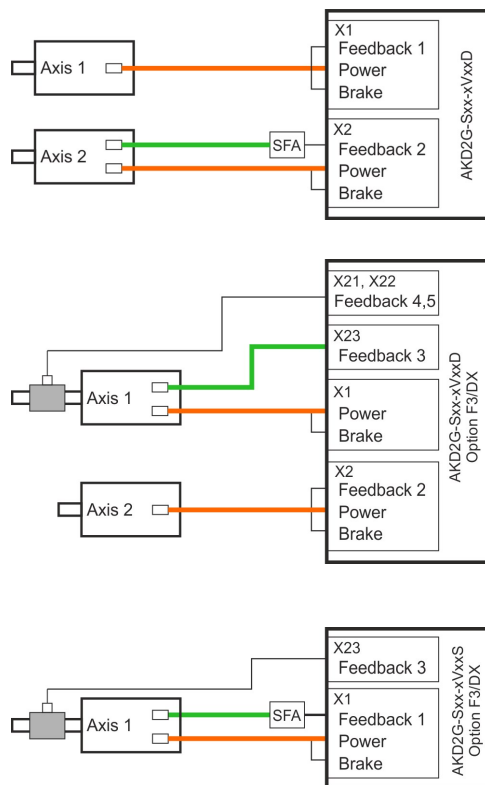

- Axis 1: single cable connection (→ # 112)
 - commutation feedback: SFD3, SFD-M or DSL
- Axis 2: dual cable connection (→ # 112)
 - commutation feedback: EnDat, HIPERFACE, Resolver etc. by using SFA
- Axis 1: dual cable connection (→ # 114)
 - commutation feedback: Resolver, SFD, EnDat, HIPERFACE, BiSS, SinCos, ComCoder, Hall, SmartAbs etc. by using X23
 - position feedback:
 - X21: Step/Direction
 - X22: Step/Direction or incremental encoder
- Axis 2: single cable connection (→ # 112)
 - commutation feedback: SFD3, SFD-M or HDL
- Axis 1: dual cable connection (→ # 114)
 - commutation feedback: EnDat, HIPERFACE, Resolver etc. by using SFA
 - position feedback: Resolver, SFD, EnDat, HIPERFACE, BiSS, SinCos, ComCoder, Hall, SmartAbs etc. by using X23

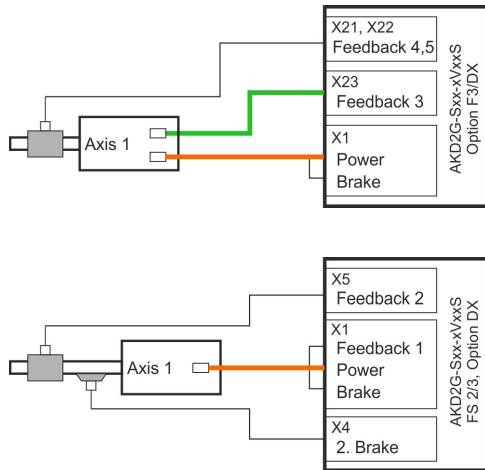


- Axis 1: dual cable connection (→ # 114)
 - commutation feedback: Resolver, SFD, EnDat, HIPERFACE, BiSS, SinCos, ComCoder, Hall, SmartAbs etc. by using X23
 - position feedback:
 - X21: Step/Direction
 - X22: Step/Direction or incremental encoder
- Axis 1: single cable connection (→ # 112)
 - commutation feedback: SFD3, SFD-M or HDSL
 - position feedback: SFD3 or SFD-M or HDSL or SFA at X5
 - secondary brake by using X4

7.9.2 Single motor cable connection


Motors with two wire feedback systems like SFD-M, SFD3 or HIPERFACE DSL can be connected to AKD2G by using a single Kollmorgen hybrid cable. Depending on the AKD2G version (single or dual axis), one or two single cable motor connections are possible.

Drive type	Commutation Axis 1	Commutation Axis 2	2nd Brake	Velocity/Position loop closure			
Single axis with Option F3	X1	-	X4	X5	X21	X22	X23
Dual axis with Option F3	X1	X2	-	-	X21	X22	X23

7.9.2.1 Motor Power, Brake and Feedback connectors X1, X2

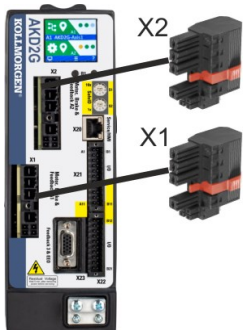

- X1 (Feedback 1) / X2 (Feedback 2)
 - Motor Power: 4 pin, pitch 7.62mm
 - Motor Brake: 2 pin, pitch 3.81mm
 - Motor Feedback: 2 pin, pitch 3.81mm
- Cable length: (→ # 65)
- Use Kollmorgen cables
- Mating connector data (→ # 64).
- Feedback types: SFD-M, SFD3, HIPERFACE DSL
 - Rated voltage 11V.
 - Rated current is 350mA simultaneously for X1 and X2.

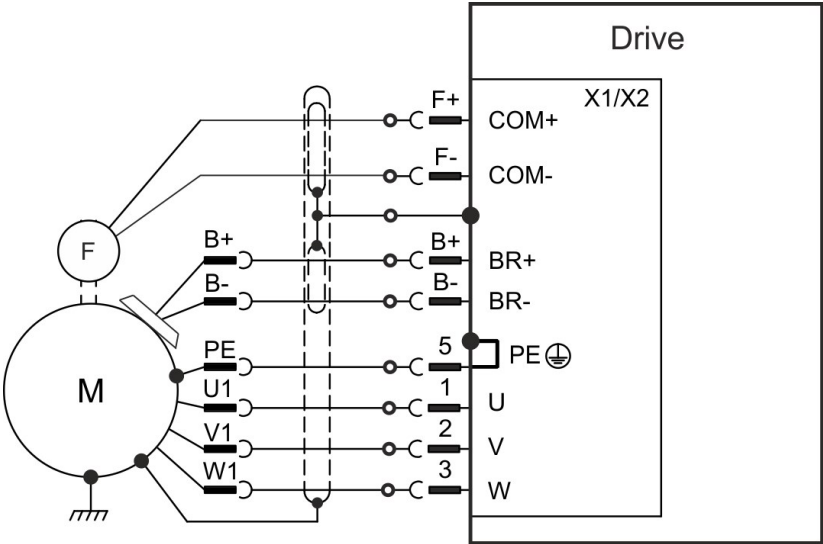

Pinout is identical for connectors X1 and X2.

Pin	Signal	Description
1	U	Motor phase U
2	V	Motor phase V
3	W	Motor phase W
5	PE	Protective earth
B+	BR+	Brake positive line (safety notes and details (→ # 118))
B-	BR-	Brake negative line (safety notes and details (→ # 118))
F+	COM+	SFD-M, SFD3, HIPERFACE DSL
F-	COM-	

7.9.2.2 Feedback connectors X5, X41, X21, X22, X23

- Velocity/Position loop closing
- Use Kollmorgen cables
- Mating connector data (→ # 64).
- Cable length: (→ # 65)

Connector	Functionality	Pinout, Wiring
X5	For single axis servo drives only. SFD-M, SFD3, DSL, SFA	(→ # 124)
X41	SFA at X5, several conventional feedback types	(→ # 143)
X21	Step/Direction, CW/CCW	(→ # 126)
X22	Step/Direction, CW/CCW, Incr. Encoder, EnDat, BiSS	(→ # 127)
X23	Several conventional feedback types	(→ # 128)

7.9.2.3 Secondary Brake connector X4


Connector X4 is standard on single axis servo drives with functional safety and is used for applications that require a second safety brake.

- Mating connector data (→ # 64).
- Cable length: (→ # 65)





Connector	Functionality	Pinout, Wiring
X4	For single axis servo drives only	(→ # 120)

7.9.3 Dual motor cable connection

Motors with conventional commutation feedback systems like resolver or sine encoder can be connected to AKD2G with separated power/brake and feedback cables. Feedback functions are assigned with parameters in WorkBench. Scaling and other settings are performed in WorkBench, too. Velocity / Position loop closing and electronic gearing / master-slave connection are possible by using X5, X21, X22, X23 depending on the servo drive version and physical restrictions.

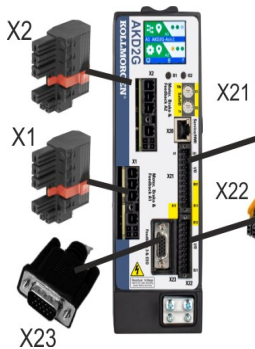

- X1 (Feedback 1) / X2 (Feedback 2)
 - Motor Power: 4 pin, pitch 7.62mm
 - Motor Brake: 2 pin, pitch 3.81mm
 - SFA connection: 2 pin, pitch 3.81mm
 - Feedback types: see SFA connectivity (→ # 143)
- X23 (Feedback 3)
 - SubD HD 15 poles
 - Feedback types: see X23 connectivity (→ # 128)
- X21 (Feedback 4)
 - 2 x 11 pins (left connector A, right connector B)
 - Feedback types: see X21 connectivity (→ # 126)
- X22 (Feedback 5)
 - 2 x 10 pins (left connector A, right connector B)
 - Feedback types: see X22 connectivity (→ # 127)
- Mating connector data (→ # 64).

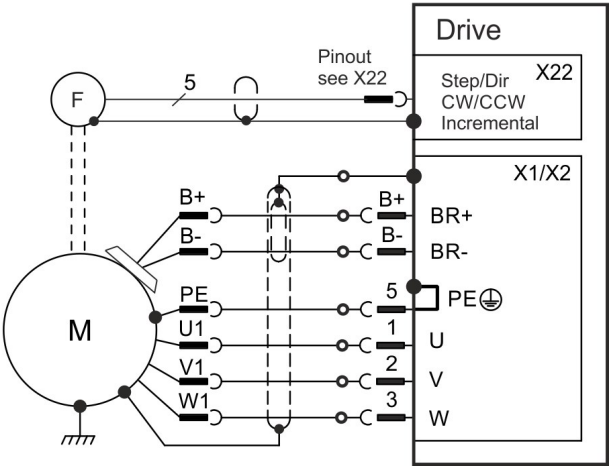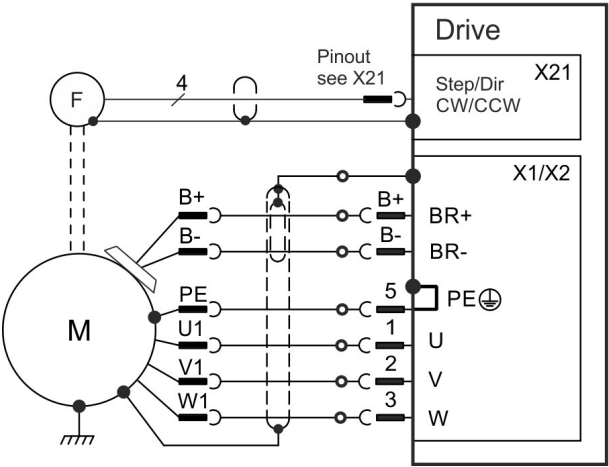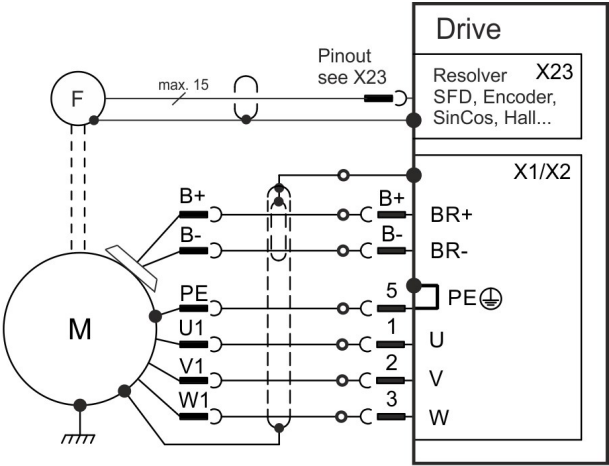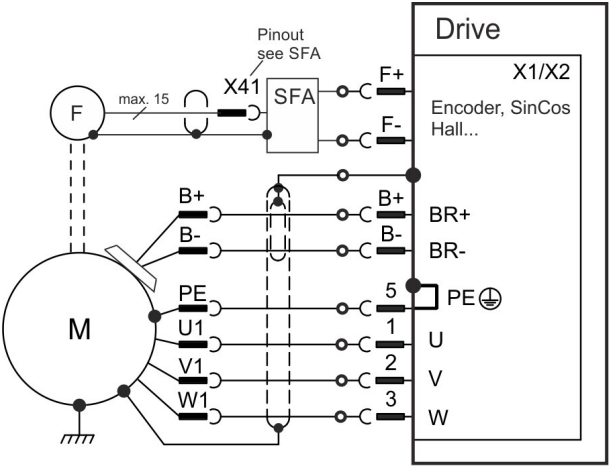

7.9.3.1 Motor power and motor brake connectors X1, X2

Usually these lines are part of the Kollmorgen motor cable connected to X1 or X2. For motor brake safety notes and functional details (→ # 118).

- Use Kollmorgen cables
- Mating connector data (→ # 64).
- Cable length: (→ # 65)

Pin	Signal	Description
1	U	Motor phase U
2	V	Motor phase V
3	W	Motor phase W
5	PE	Protective earth
B+	BR+	Brake positive, with Kollmorgen cables only
B-	BR-	Brake negative, with Kollmorgen cables only

7.9.3.2 Feedback connectors X1, X2, X5, X41, X21, X22, X23

- Use Kollmorgen cables
- Mating connector data (→ # 64).
- Cable length: (→ # 65)
- For feedback connection overview (→ # 122)

Connector	Functionality	Pinout, Wiring
X1/X2	SFD-M, SFD3, DSL, SFA	(→ # 124)
X5 (only on 24 A model)	For single axis servo drives only. SFD-M, SFD3, DSL, SFA	(→ # 124)
X41	SFA at X1 or X2 or X5, several conventional feedback types	(→ # 143)
X21	Step/Direction, CW/CCW	(→ # 126)
X22	Step/Direction, CW/CCW, Incr. Encoder, EnDat, BiSS	(→ # 127)
X23	Several conventional feedback types	(→ # 128)

Feedback connector X1, X2, X5, X41

Conventional feedback systems can be connected to X1, X2 or X5 by using the optional feedback adapter SFA. SFA offers the additional connector X41.

- X1 is a standard connector. Input for SFD-M, SFD3, DSL, or SFA.
- X2 is standard for dual-axis servo drives. Input for SFD-M, SFD3, DSL, or SFA.
- X5 is optional for single axis servo drives. Input for SFD-M, SFD3, DSL, or SFA.
- SFA: adapter for several conventional feedback types

Feedback connector X21

- Connector X21 is a standard connector.
- Input for Step/Direction and CW/CCW.

Feedback connector X22

- Connector X22 is standard connector .
- Input for Step/Direction, CW/CCW, Incremental encoder

Feedback connector X23

- Connector X23 is part of option F3.
- Input for several conventional feedback types.

7.9.3.3 Secondary Brake connector X4

Connector X4 is part of the single-axis servo drive. Use for applications, which require a second safe brake for functional safety.

- Mating connector data: (→ # 64).
- Cable length: (→ # 66)

Connector	Functionality	Pinout, Wiring
X4	For single-axis servo drives only	(→ # 120)

7.9.4 Motor Holding Brake Connection

A 24 V holding brake in the motor can be controlled directly by the drive. For proper function, check voltage drop, measure voltage at brake input and check brake function (on and off).

Brake voltage supply by using 24 V $\pm 10\%$ auxiliary voltage supply of the drive on X10. Minimum and maximum brake current see Electrical Data (→ # 44) respectively (→ # 48).

AKD2G offers motor brake outputs on connectors X1, X2 and X4. The outputs can be mapped to the required axis with WorkBench.

Connector	Usable for
X1	Primary motor brake axis 1 or secondary brake for axis 2
X2	Primary motor brake axis 2 or secondary brake for axis 1
X4	Secondary motor brake axis 1, for single axis drives only (→ # 120)



WARNING No functional safety!

Serious injury could result when the load is not properly blocked. The internal brake function does not ensure functional safety.


- Functional Safety can be ensured with configured SBC (→ # 238) only.
- For SIL 3 a second (external) motor brake for an axis is required. For single axis drives this brake can be connected to X4 (→ # 120). For dual axis drives the additional brake must be controlled from another source (e.g. from the other axis or externally from a safety controller). The brakes can be mapped to an axis with WorkBench.
- The Hardware Enable does not initiate a controlled stop but switches off the power stage immediately.
- Set parameter AXIS#.MOTOR.BRAKEIMM to 1 with vertical axes, to apply the brake immediately after faults or Hardware Disable.

Pinout X1 / X2

Pin	Signal	Description
B+	BR+	Brake positive line
B-	BR-	Brake negative line


Wiring

Usually the brake lines are part of the Kollmorgen cable connections to X1 and X2 (→ # 112).

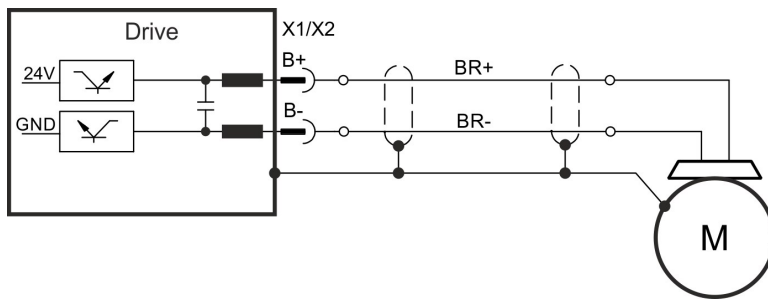

Functionality

The brake function must be enabled through a parameter. The diagram below shows the timing and functional relationships between the controlled stop signal, speed, and braking force. All values can be adjusted with parameters; values in the diagram are default values.

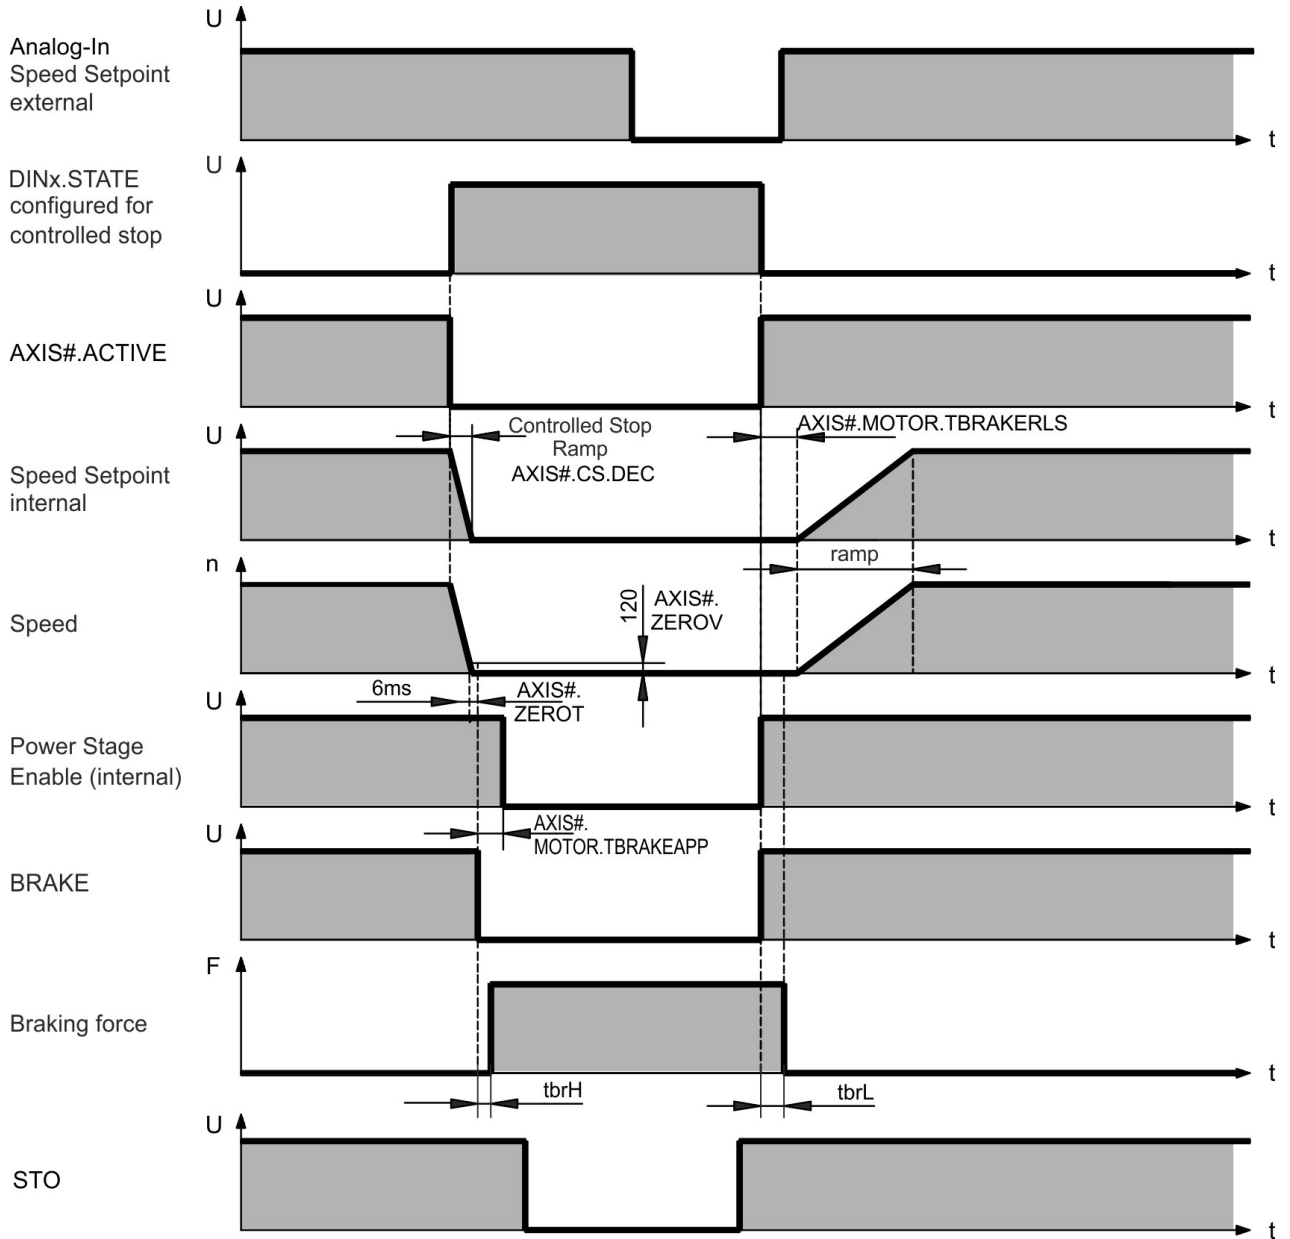


The drive speed setpoint is internally driven down an adjustable ramp (AXIS#.CS.DEC) to 0 V.



With default values the output for the brake is switched on when the speed has reached 5 rpm (AXIS#.ZEROV) for at least 6 ms (AXIS#.ZEROT). The rise (t_{brH}) and fall (t_{brL}) times of the holding brake that is built into the motor are different for the various types of motor.

7.9.4.1 Secondary Brake connector X4

Connector X4 is standard on single axis drives with functional safety and is used for applications that require a second safety brake.

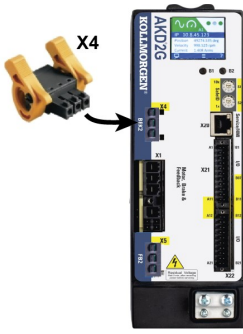

- 3 pin, pitch 3.81 mm
- Second (safe) motor brake
- Required for SIL3 brake control
- Mating connector data (→ # 64).

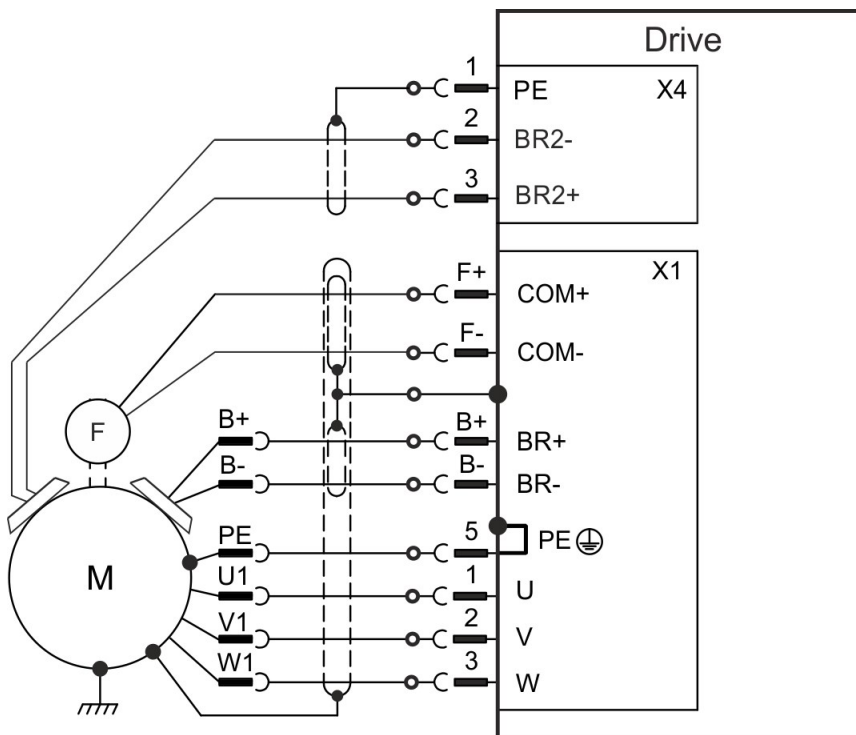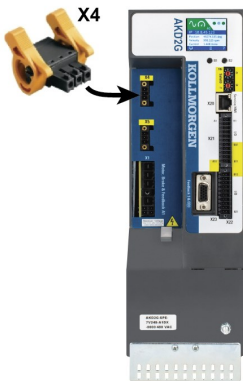

X4 Pin	Signal	Description
1	PE	Protective earth
2	BR2-	Second (external) brake -
3	BR2+	Second (external) brake +

7.10 Feedback Connection

7.10.1 Overview

AKD2G offers up to five feedback channels which can serve

- to commutate the motor (single cable (→ # 112) or dual cable (→ # 118)),
- to close the velocity and/or position loops,
- to act as a command source (electronic gearing, flying sheer, master-slave (→ # 157)),

The usage of the five channels may be freely configured in software, subject only to a few restrictions that are not physically sensible.

- Exactly one feedback channel per axis can commutate the motor.
- At most one feedback channel per axis can serve as the command source and the same feedback channel cannot also commutate the motor.
- A feedback channel can serve as the command source for more than one axis.
- FB1 cannot commutate axis 2. FB2 cannot commutate axis 1.

There are different variants of some encoders such as BiSS and SSI. Setups with third-party encoders should be tested in advance.

7.10.2 Feedback to Connector

Feedback channel	Connector	Usable for	Pinout
Feedback 1	X1	Axis 1: commutation feedback	(→ # 124)
	X41	Axis 1 by using SFA on X1: commutation feedback	(→ # 143)
Feedback 2	X2	Axis 2: commutation feedback	(→ # 124)
Feedback 2	X41	Axis 2 by using SFA on X2: commutation feedback	(→ # 143)
Feedback 2	X5	Single axis drive: velocity/position, command, safety	(→ # 124)
Feedback 2	X41	Single axis drive using SFA on X5: velocity/position, command, safety	(→ # 143)
Feedback 3	X23	commutation feedback, velocity/position, command	(→ # 128)
Feedback 4	X21	commutation feedback, velocity/position, command	(→ # 126)
Feedback 5	X22	commutation feedback, velocity/position, command	(→ # 127)

7.10.3 Feedback Type to Connector


Feedback Types	Connectors
SFD-M/SFD3	X1, X2, X5
Encoder HIPERFACE DSL	X1, X2, X5
Resolver	X23, X41
SFD	X23, X41
SinCos Encoder BiSS B (analog)	X23, X41
Encoder BiSS C (digital)	X22, X23, X41
SinCos Encoder EnDat 2.1	X23, X41
Encoder EnDat Digital 2.2	X22, X23, X41
Encoder HIPERFACE	X23, X41
Sine Encoder	X23, X41
Sine Encoder + Hall	X23, X41
Incremental Encoder	X21, X22, X23, X41
Incremental Encoder + Hall (Comcoder)	X23, X41
Hall Sensors	X23, X41
SSI	X22, X23, X41
Step/Direction	X21, X22, X23
CW/CCW	X21, X22, X23

7.10.4 Maximum Cable Lengths by Feedback Type

Feedback Type	Single motor cable?	Up to 265 VAC / 375 VDC	Up to 528 VAC / 750 VDC
Resolver	No	100	100
SFD Gen 2 (4 wire)	No	50	-
SFD Gen 2 (4 wire)	Yes	50	-
SFD Gen 3 (2 wire)	Yes	50	25
SFD-M (2 wire)	Yes	50	25
Hiperface DSL	Yes	25	25
BiSS (B) Analog	No	50	50
BiSS (C) Digital	No	35	25
EnDat (2.1) Analog	No	50	50
EnDat (2.2) Digital	No	50	50
Hiperface Analog	No	50	50
1 Vpp with/without Hall	No	35	25
Inc Dig with/without Hall	No	35	25
Hall Only	No	35	25
SSI	No	35	25


Max. cable lengths in m.

7.10.5 Feedback Connectors X1, X2

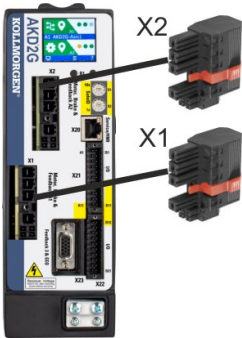


- 4 pin, pitch 7.62mm + 2x2 pin, pitch 3.81mm
- Input for commutation feedback: SFD-M, SFD3, DSL, SFA

Wiring example SFD-M, SFD3 or HIPERFACE DSL

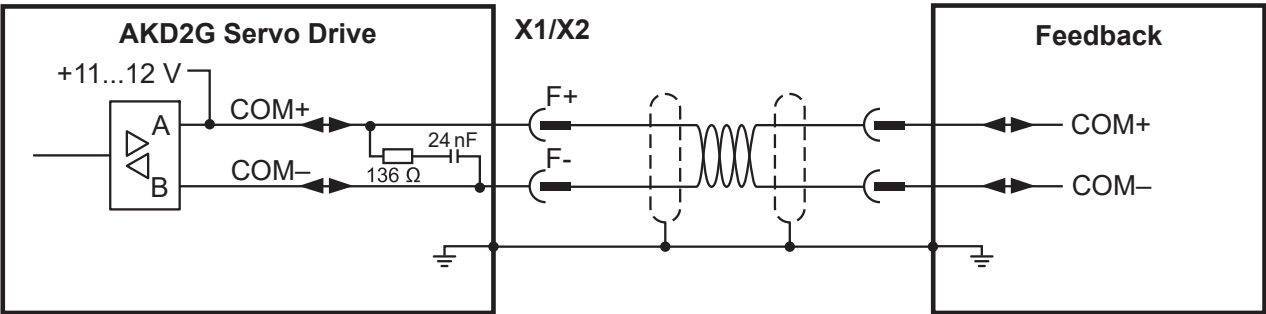

Wiring example conventional Feedback types with SFA

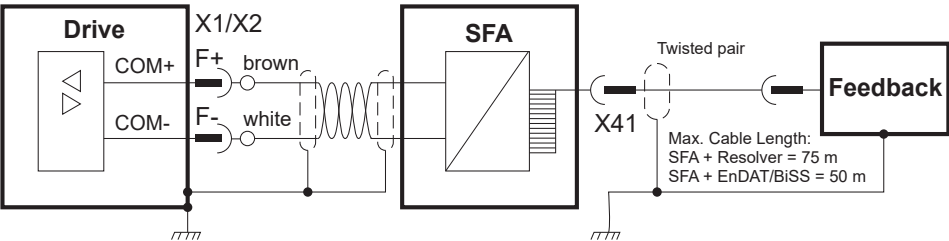


Electrical data

- Rated voltage 11V.
- Rated current is 350mA simultaneously for X1 and X2.


Pin	Signal	Description
F+	COM+	SFD-M+, SFD3 +, HIPERFACE DSL +, SFA +
F-	COM-	SFD-M-, SFD3 -, HIPERFACE DSL -, SFA -

7.10.6 Feedback Connector X5


Connector X5 is part of the single axis drives. Use this input for applications which require a safe feedback.

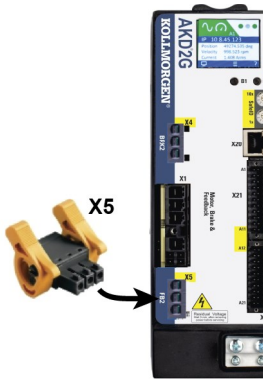


- 3 pin, pitch 3.81 mm
- Second 2 wire feedback, SFA
- Input for safe feedback.
- Feedback types: SFD-M, SFD3, HIPERFACE DSL
- Required for SIL3 feedback control
- Mating connector data (→ # 64).

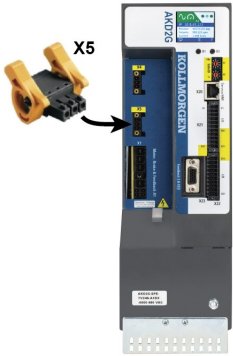

Wiring example SFD-M, SFD3 or HIPERFACE DSL

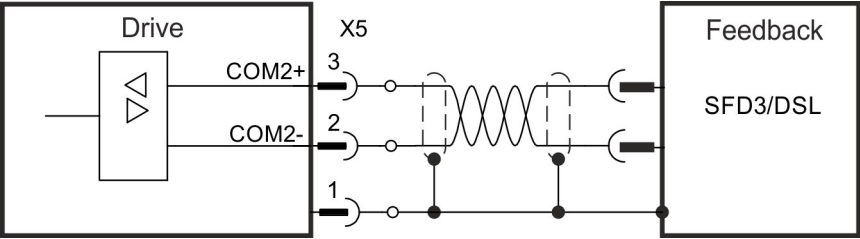


Wiring example conventional Feedback types with SFA

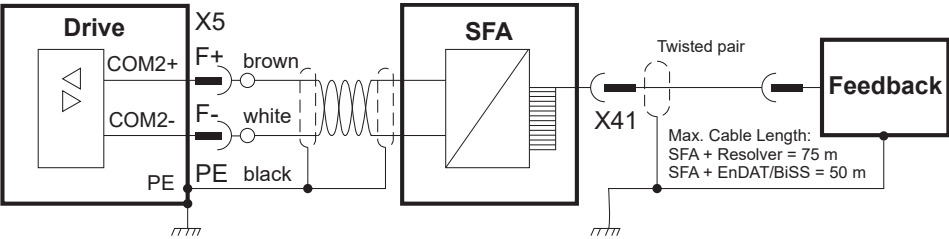

See the SFA X41 connector pinout summary and available feedback pinouts starting on (→ # 143).


X5 Pin	Signal	Description
1	PE	Cable shield (PE)
2	COM2-	Safe HIPERFACE DSL -, SFD-M, SFD3 - or SFA-
3	COM2+	Safe HIPERFACE DSL +, SFD-M, SFD3 + or SFA+

7.10.7 Feedback Connector X21

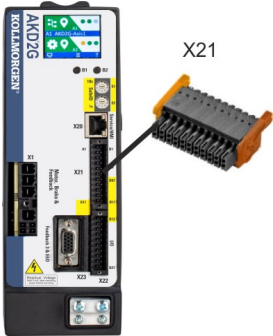

- 2 x 11 pins (left connector A, right connector B), pitch 3.5mm
- Fast input, isolated, sink, type EN 61131-2 type 1
- Input for commutation or position feedback.
- Input for Electronic Gearing, (→ # 157)
- Mating connector data (→ # 64).

Wiring example

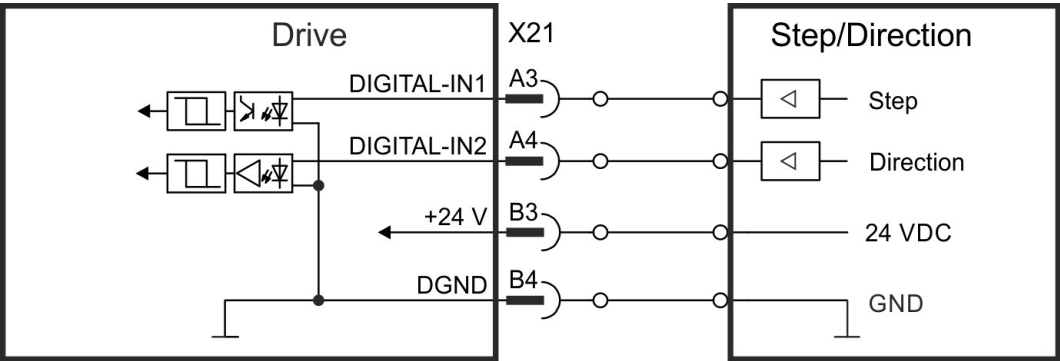


X21 Pin	Step/Direction	CW/CCW	Incr. Encoder
A3	Step	CW	A
A4	Direction	CCW	B
B3	24 VDC	24 VDC	24 VDC
B4	Common (DGND)	Common (DGND)	Common (DGND)

7.10.8 Feedback Connector X22



- 2 x 10 pins (left connector A, right connector B), pitch 3.5 mm
- RS485 inputs
- Input for commutation or position feedback.
- Input for Electronic Gearing, (→ # 157)
- Output for encoder emulation (EEO2), (→ # 157)
- Mating connector data (→ # 64).

Wiring example (Input)

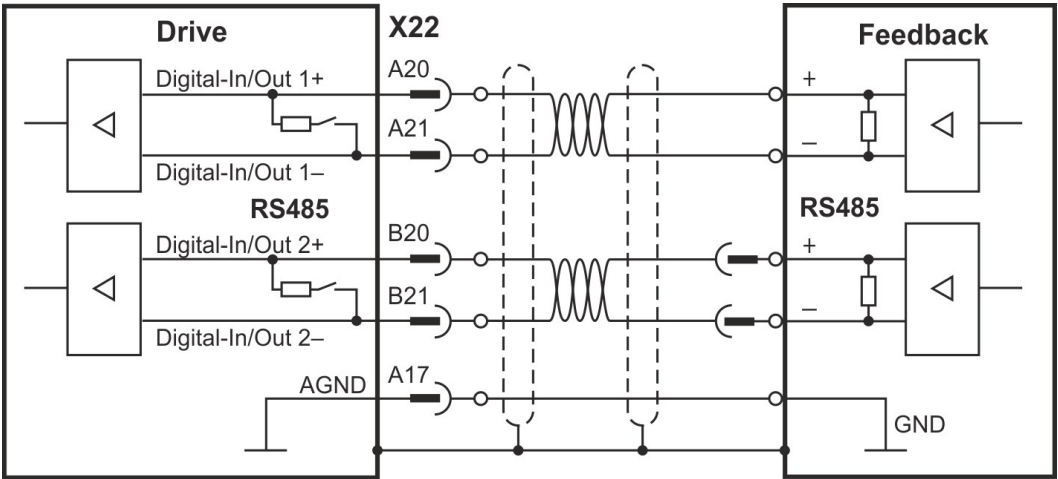

EEO output connection is similar.


X22 Pin	Step / Direction	CW / CCW	Increm. Encoder	BiSS C	EnDAT 2.2	SSI
A20	Step +	CW +	Track A +	CLK+	CLK+	CLK+
A21	Step -	CW -	Track A -	CLK-	CLK-	CLK-
B20	Direction +	CCW +	Track B +	DAT+	DAT+	DAT+
B21	Direction -	CCW -	Track B -	DAT-	DAT-	DAT-
A17	AGND	AGND	AGND	AGND	AGND	AGND

■ = DC Terminated, can be overridden with [DIO#.TERM](#)

NOTE


Feedback power supply must be supplied and controlled by the user.

7.10.9 Feedback Connector X23

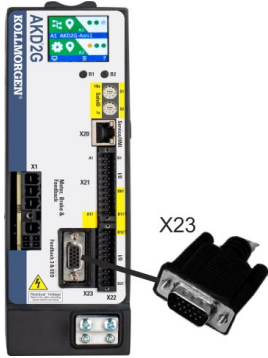


- Sub-D high density 15 pin, female
- Use Kollmorgen feedback cables
- Input for several feedback types
- Input for Electronic Gearing, (→ # 157)
- Output for encoder emulation (EEO1), (→ # 157)
- Digital input (→ # 175), Digital output (→ # 180)
- Mating connector data (→ # 64).

7.10.9.1 X23 Connector Pinout Summary

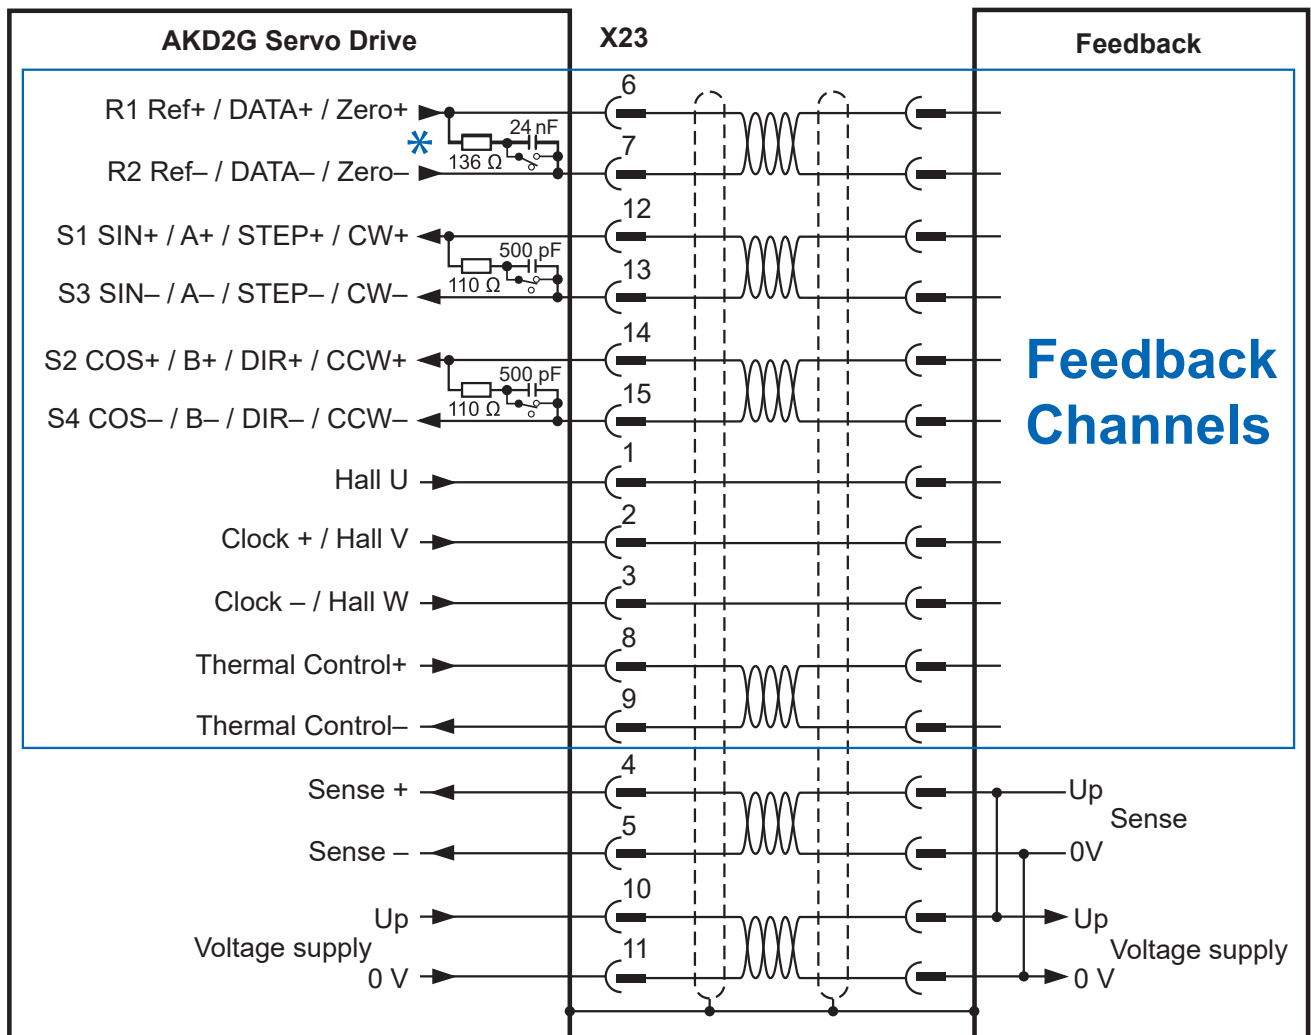

* AC / DC Selectable Termination: Older drives may not include a DC termination switch across pins 6 and 7. Please contact Kollmorgen Support for more information



Encoder power supply (X23 pins 10/11):

- Maximum voltage 9 V with shorted sense contacts (4/5), rated voltage 5 V +/-3.5%.
- Rated supply current is 350 mA.
- Voltage rise time ~4 ms with full load and 220 µF of capacitance.
- Encoder power lines capacitance 10 µF to 220 µF

Pin	SFD	Resolver	BiSS B	BiSS C	EnDat [®] 2.1	EnDat [®] 2.2*	HIPERFACE [®]	Sine/ Cos	Sine/ Cos +Hall	Incr. Enc.	Incr. Enc. +Hall	Hall	SSI	Step/ Dir	CW/ CCW
1	-	-	-	-	-	-	-	-	Hall U	-	Hall U	Hall U	-	-	-
2	-	-	CLK+	CLK+	CLK+	CLK+	-	-	Hall V	-	Hall V	Hall V	-	-	-
3	-	-	CLK-	CLK-	CLK-	CLK-	-	-	Hall W	-	Hall W	Hall W	-	-	-
4	SEN+	-	SEN+	SEN+	SEN+	SEN+	I	SEN+	SEN+	SEN+	SEN+	-	-	-	-
5	SEN-	-	SEN-	SEN-	SEN-	SEN-		SEN-	SEN-	SEN-	SEN-	-	-	-	-
6	COM+	R1 Ref+	DAT+	DAT+	DAT+	DAT+	DAT+	Zero+	Zero+	Zero+	Zero+	-	D+	-	-
7	COM-	R2 Ref-	DAT-	DAT-	DAT-	DAT-	DAT-	Zero-	Zero-	Zero-	Zero-	-	D-	-	-
8	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	-	Th+	Th+	Th+
9	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	-	Th-	Th-	Th-
10	+5 V	-	+5 V	+5 V	+5 V	+5 V	8-9 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V
11	0 V	-	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V
12	-	S1 SIN+	A+	-	A+	-	SIN+	A+	A+	A+	A+	-	-	Step+	CW+
13	-	S3 SIN-	A-	-	A-	-	SIN-	A-	A-	A-	A-	-	-	Step-	CW-
14	-	S2 COS+	B+	-	B+	-	COS+	B+	B+	B+	B+	-	-	CCW+	CCW+
15	-	S4 COS-	B-	-	B-	-	COS-	B-	B-	B-	B-	-	-	CCW-	CCW-

CL = CLOCK, D = DATA, S = SENSE, Th = Thermal control, Z = Zero

 = DC Terminated, can be overridden with DIO#.TERMDIO#.TERM

 = Optional

 = Information digitally communicated on COM+/- channel.

7.10.10 X23 Feedback Wiring Pinout Diagrams

7.10.10.1 X23 SFD Feedback


The diagram below shows the connection of the four-wire Kollmorgen SFD feedback system.

NOTE

When SFD cable total resistance for 5V out (Up) and 5V return (0V) is less than 3.3 Ohm, then remote sensing is not needed. For a typical cable this means remote sensing is not needed up to 25m.

Kollmorgen cables are rated up to 50m with no remote sensing.

Type	FBx.IDENTIFIED	Up	Description
Smart Feedback Device (SFD)	41	5.1 V ± 3.5%	Accuracy: 14 bit (0.022°), resolution: 24 bit (2x10E-5°)

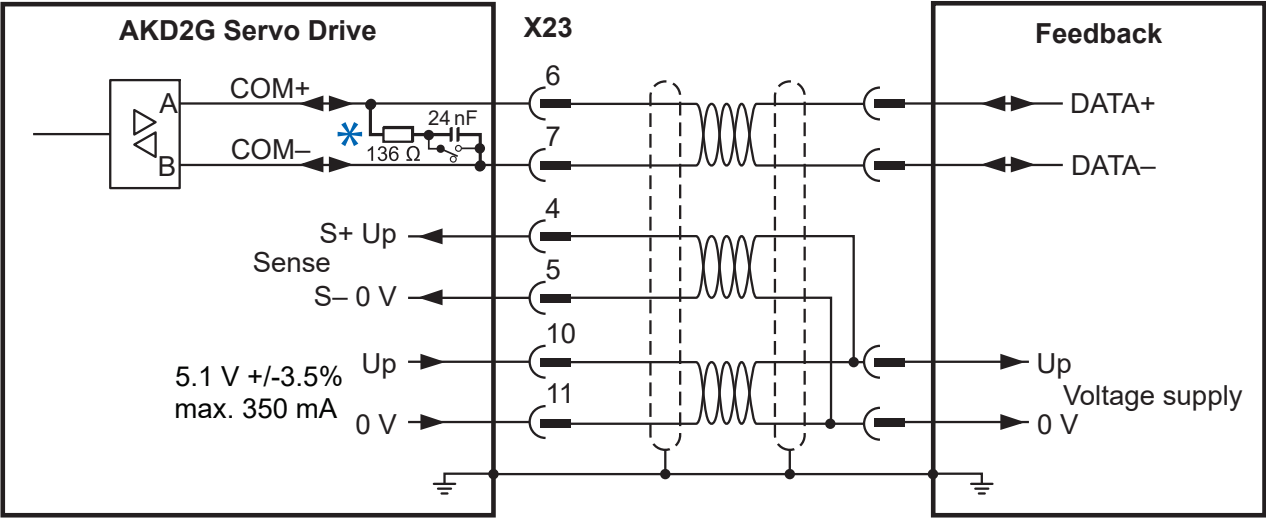


* SFD must always use AC coupled termination - DC termination switch open.

7.10.10.2 X23 Resolver Feedback

The diagram below shows the connection of a resolver (2 to 36-poles) as a feedback system. The thermal control in the motor is connected via the Resolver cable and evaluated in the drive. If no thermal control is in the motor, the cable must short pins 8 and 9.

If cable lengths of more than 100m are planned, please contact customer support.

Type	FBx.INDENTIFIED	Description
Resolver	40	Accuracy: 14 bit (0.022°), resolution: 16 bit (0.006°)
Specifications		
Excitation:		
Frequency	6975 Hz	
Max Current	75 mA rms	
Max Voltage	14 V _{RMS}	
Source R	17 Ohms	
Sin/Cos Vector Amplitude:		
Nominal	3.5 V _{RMS}	
Fault Trip	+10/-35 %	

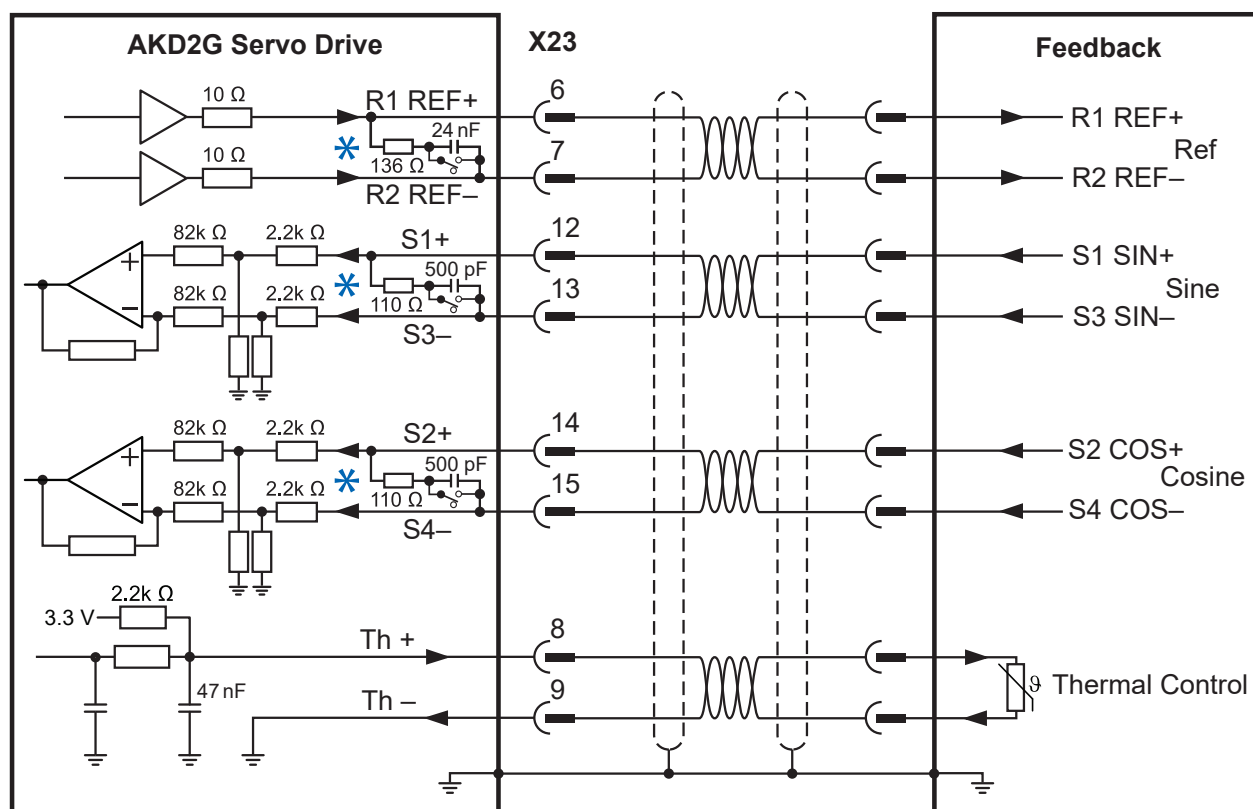


* Resolver Sine/Cosine channels must be high impedance – DC termination switch open.
DC termination is not compatible with the REF channel – DC termination switch open.

7.10.10.3 X23 BiSS (Mode B) Analog Feedback

The diagram below shows the wiring of a single-turn or multi-turn encoder with BiSS Mode B interface as a feedback system. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
BiSS (Mode B) Analog	32	5.1 V ± 3.5%	1 MHz, 250 kHz for encoders that require termination resistors

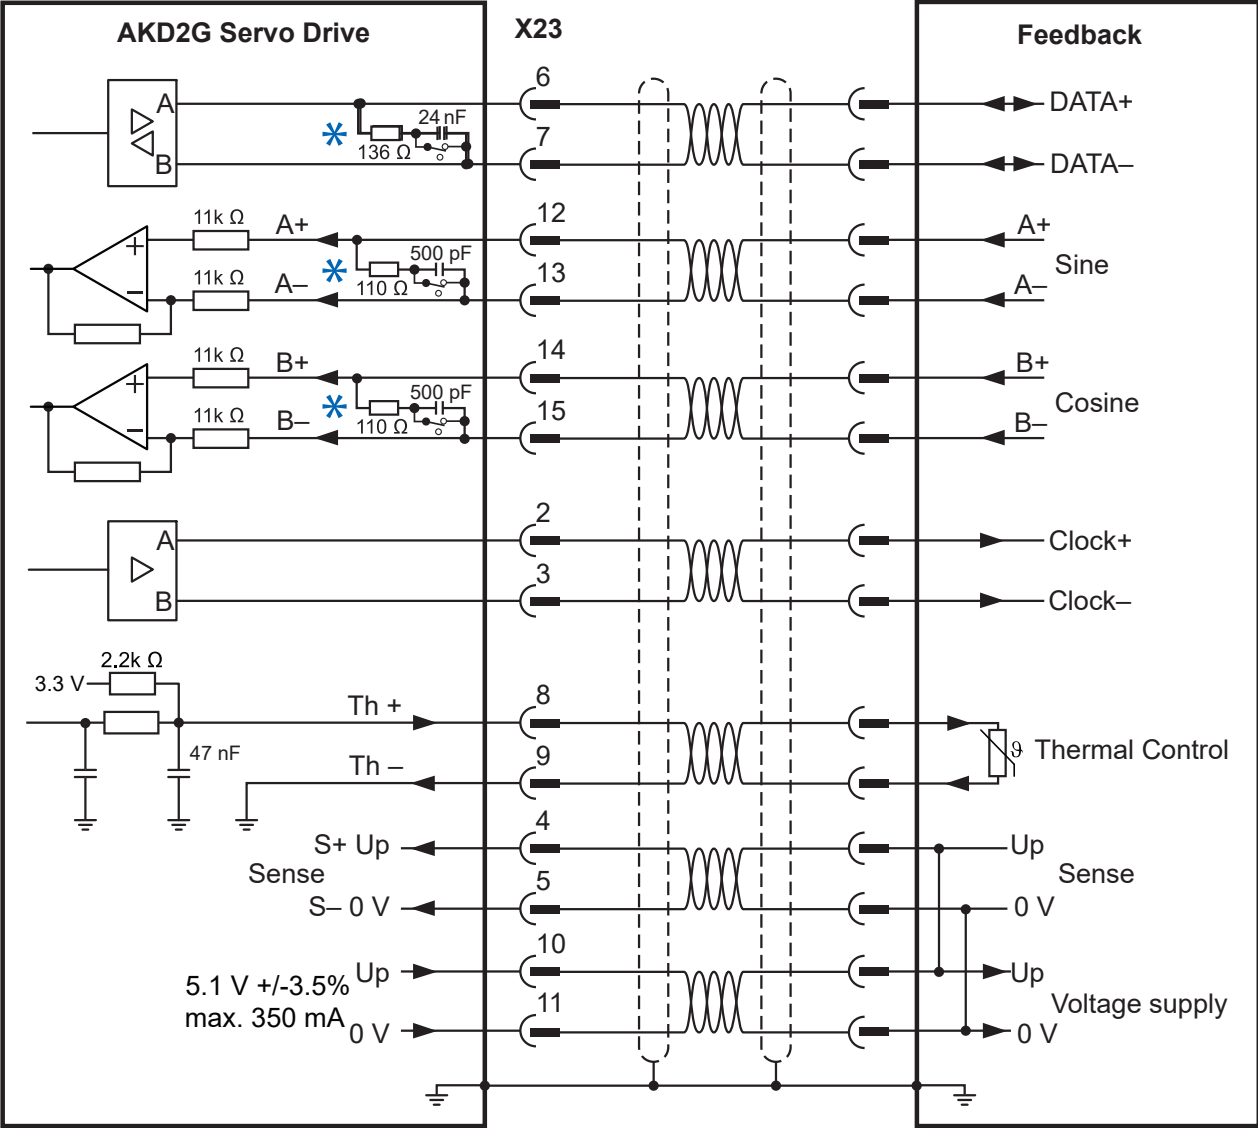


* DC terminated by default - DC switch closed

7.10.10.4 X23 BiSS (Mode C) Digital Feedback

The diagram below shows the wiring of a single-turn or multi-turn encoder with BiSS Mode C interface from Renishaw (specifically model Resolute RA26B) as a feedback system.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
BiSS (Mode C) Digital	34	5.1 V $\pm$ 3.5%	1 MHz

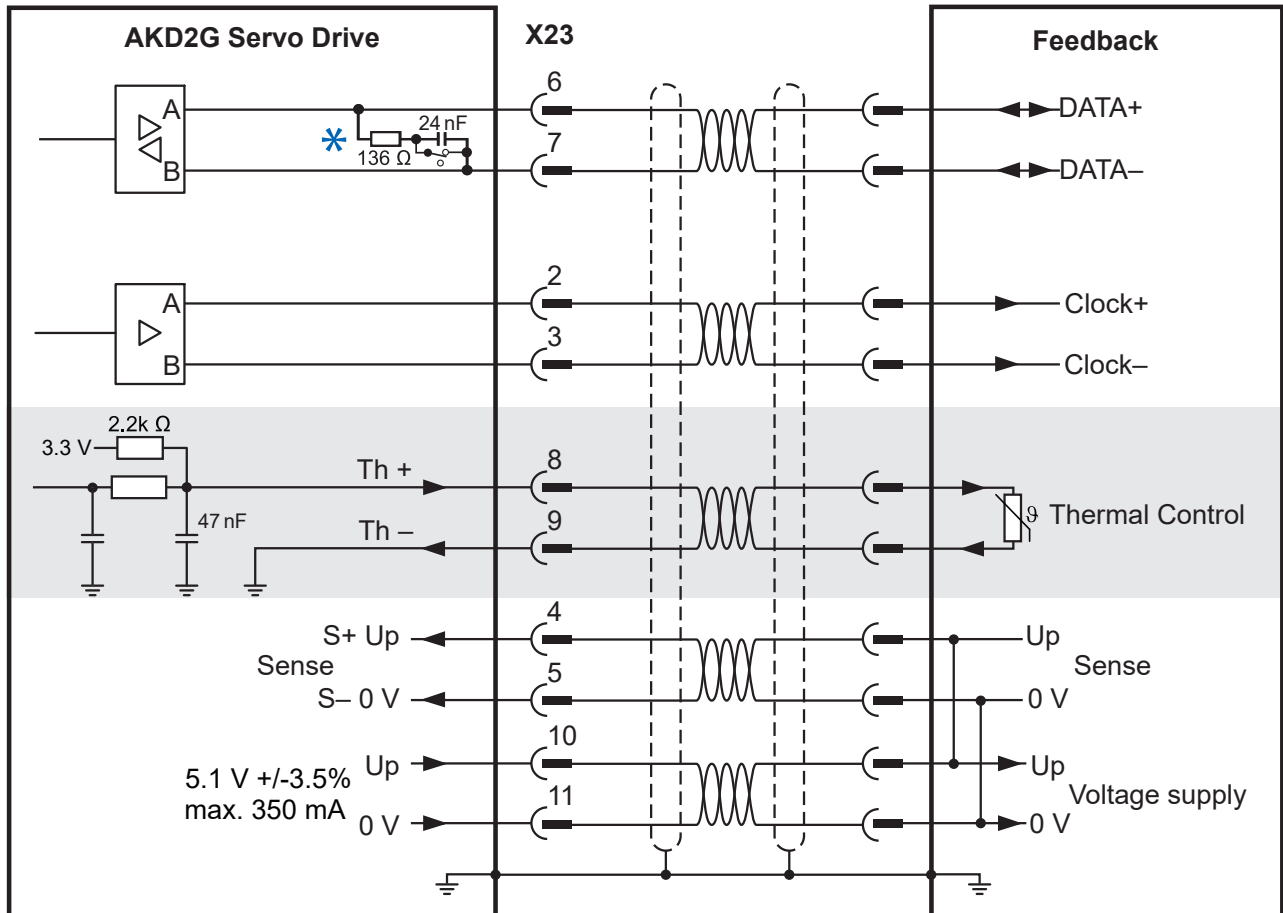

* DC terminated by default - DC switch closed


Optional

7.10.10.5 X23 EnDAT 2.1 Feedback (with 1V p-p analog signals)

The diagram below shows the wiring of a single-turn or multi-turn sine-cosine encoder with EnDat 2.1 interface as a feedback system. Preferred types are the ECN1313 and EQN1325 encoders. The thermal control in the motor is connected via the encoder cable and evaluated in the drive. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
EnDAT 2.1	30	1 MHz, 250 kHz for encoders that require termination resistors

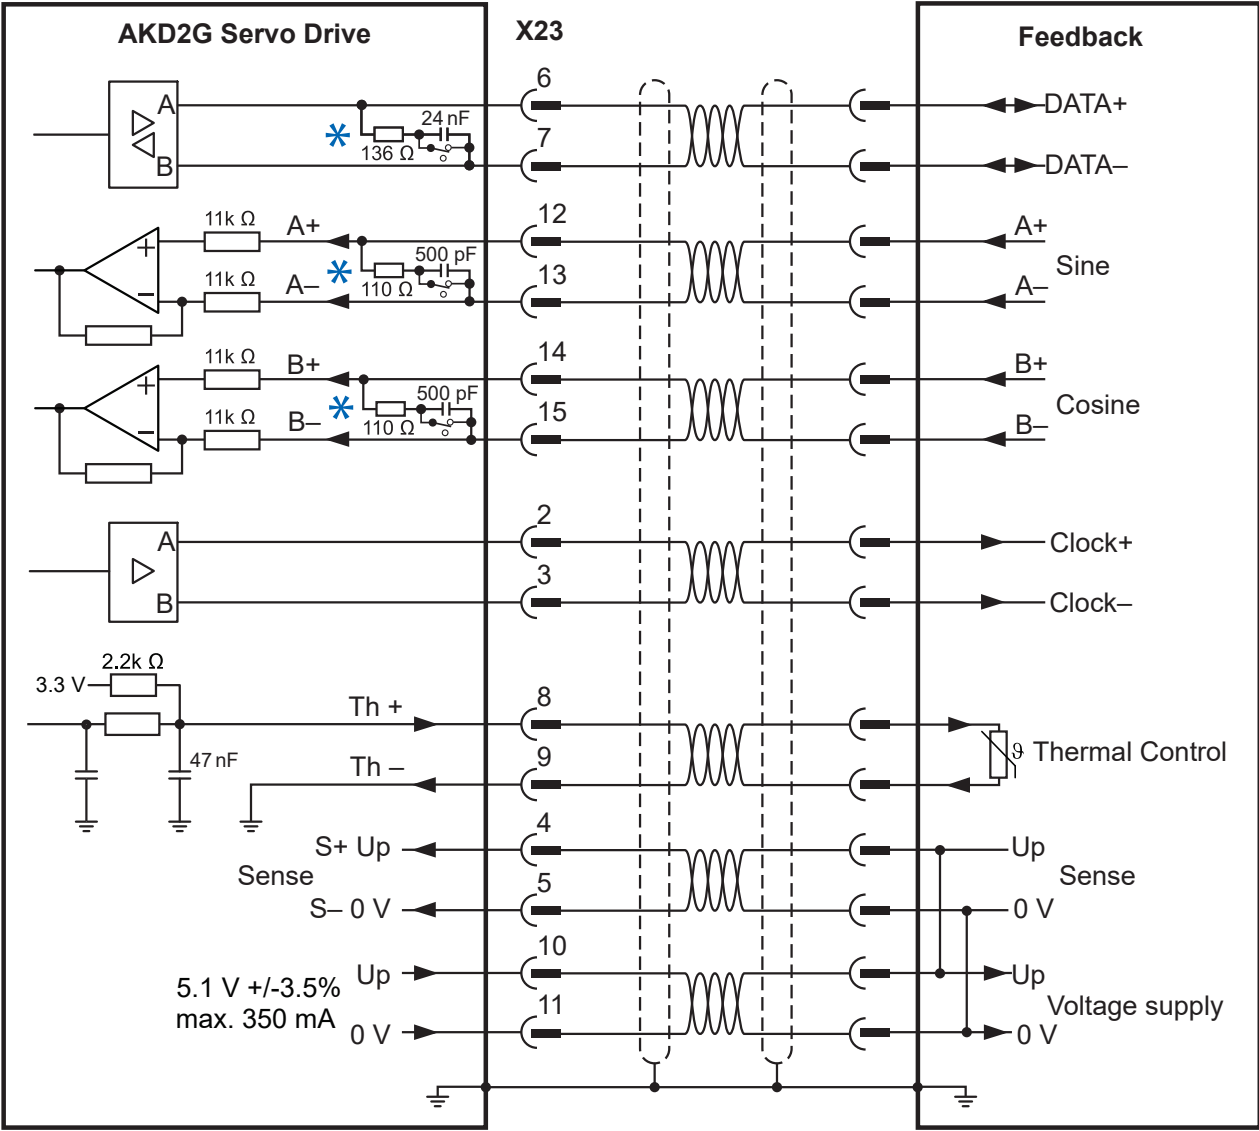

* DC terminated by default - DC switch closed


7.10.10.6 X23 EnDAT 2.2 Digital Feedback

Single-turn or multi-turn encoders with EnDat 2.2 interface can be connected either to X23 or X41 as a primary motor feedback system.

All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
EnDAT 2.2	31	2.5 MHz

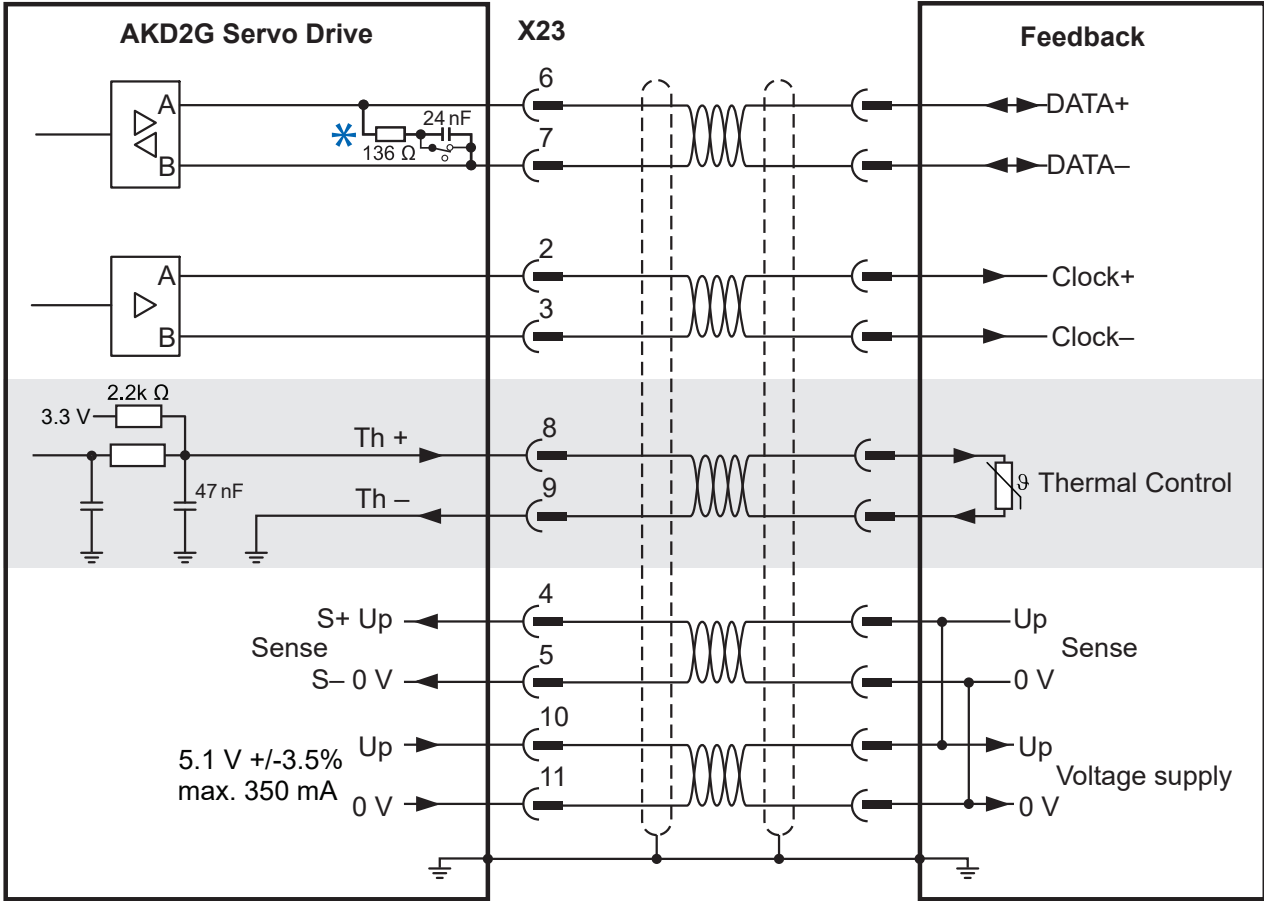

* DC terminated by default - DC switch closed

Optional

NOTE

From AKD: Analog I/O functionality must be selected in the related WorkBench screen.

If the set limit is exceeded, then warning n256 is created.

*For use as primary motor feedback, set parameters DRV.EMUEMODE, PL.FBSOURCE, IL.FBSOURCE, VL.FBSOURCE.


7.10.10.7 X23 HIPERFACE Feedback

The diagram below shows the wiring of a single-turn or multi-turn sine-cosine encoder with Hipertace interface as a feedback system.

The thermal control in the motor is connected via the encoder cable and evaluated in the drive. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50 m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
HIPERFACE	33	1 MHz, 250 kHz for encoders that require termination resistors

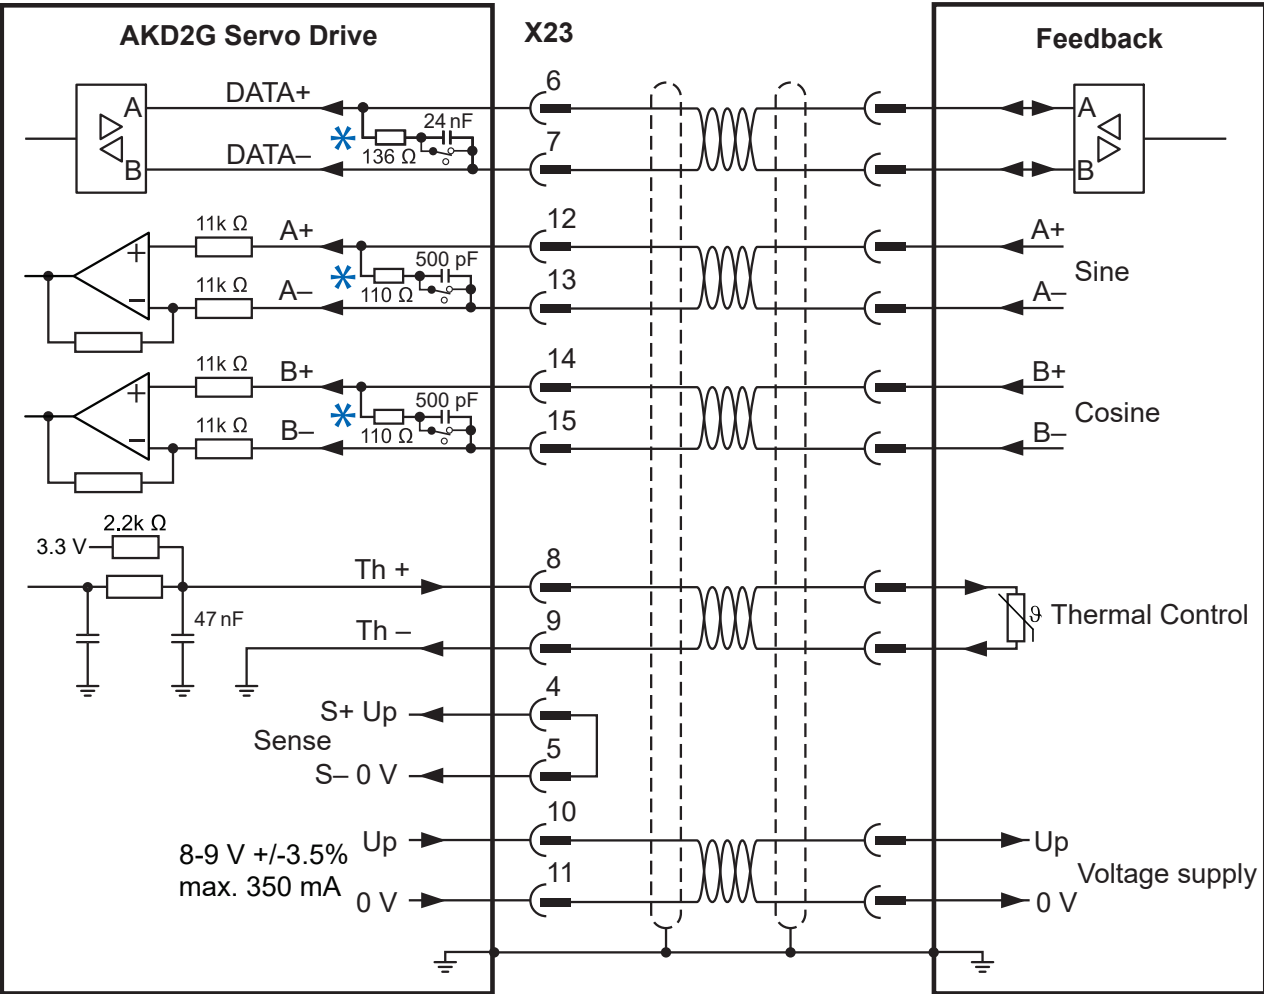

* DC terminated by default - DC switch closed


NOTE Connecting pin 4 and 5 together causes Up to be 8 to 9V.

7.10.10.8 X23 Sine Encoder Feedback

This feedback device does not deliver absolute information for commutation and works with wake&shake commutation (WorkBench Online Help). All signals are connected to X23 / X41 and evaluated there.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SinCos 1 V p-p (Wake & Shake)	21	5.1 V $\pm$ 3.5%	1 MHz, 250 kHz for encoders that require termination resistors

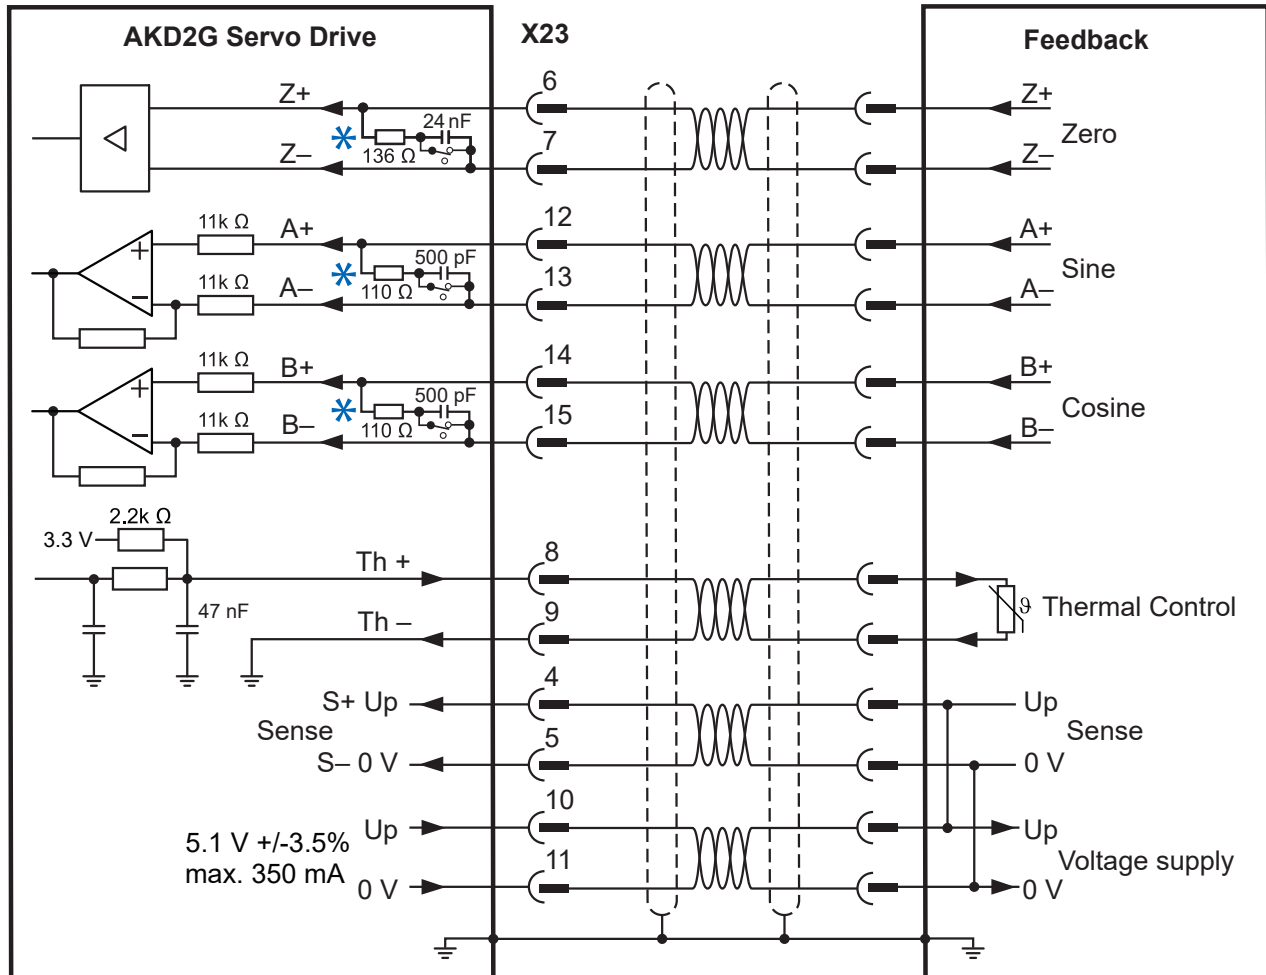


* DC terminated by default - DC switch closed

7.10.10.9 X23 Sine Encoder with Hall Feedback

This feedback device delivers absolute information for commutation and can be used as a complete feedback system. All signals are connected to X23 / X41 and evaluated there.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SinCos 1 V p-p with Hall	20	5.1V ± 3.5%	1 MHz, 250 kHz for encoders that require termination resistors

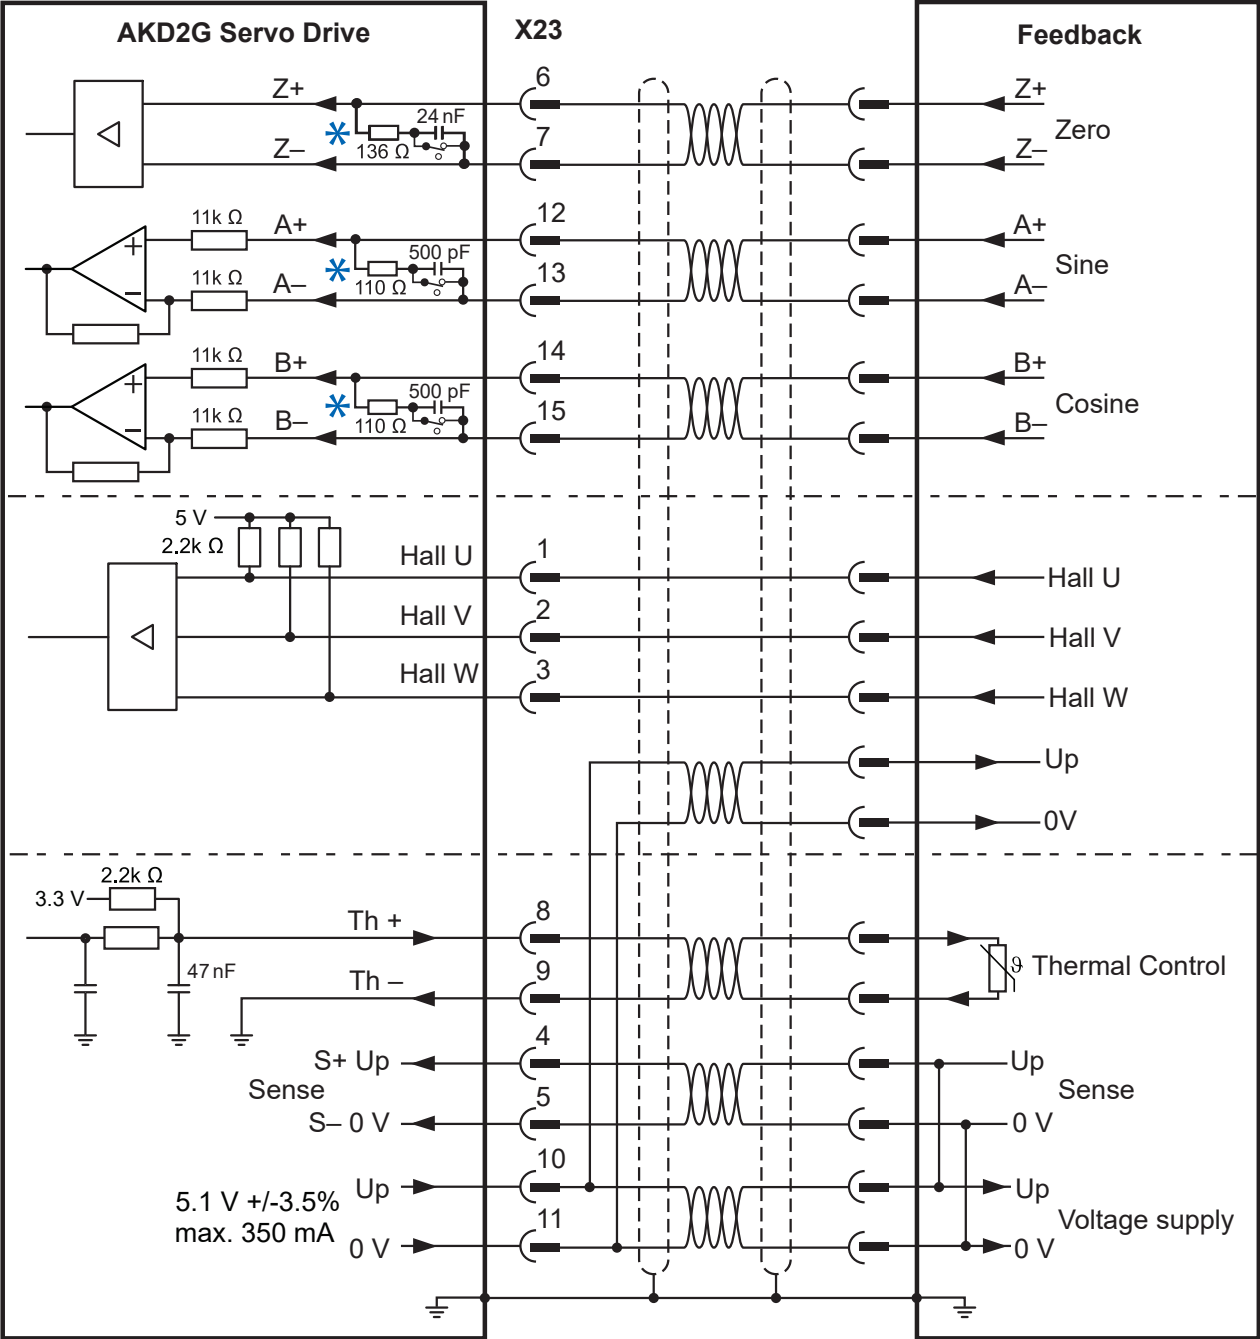


* DC terminated by default - DC switch closed

7.10.10.10 X23 Incremental Encoder Feedback

This feedback device does not deliver absolute information for commutation and works with Wake and Shake commutation (see WorkBench Online Help). All signals are connected using a pre-assembled comcoder connection cable. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Incremental Encoder (Wake and Shake)	11	$5.1\text{V} \pm 3.5\%$	2.5 MHz

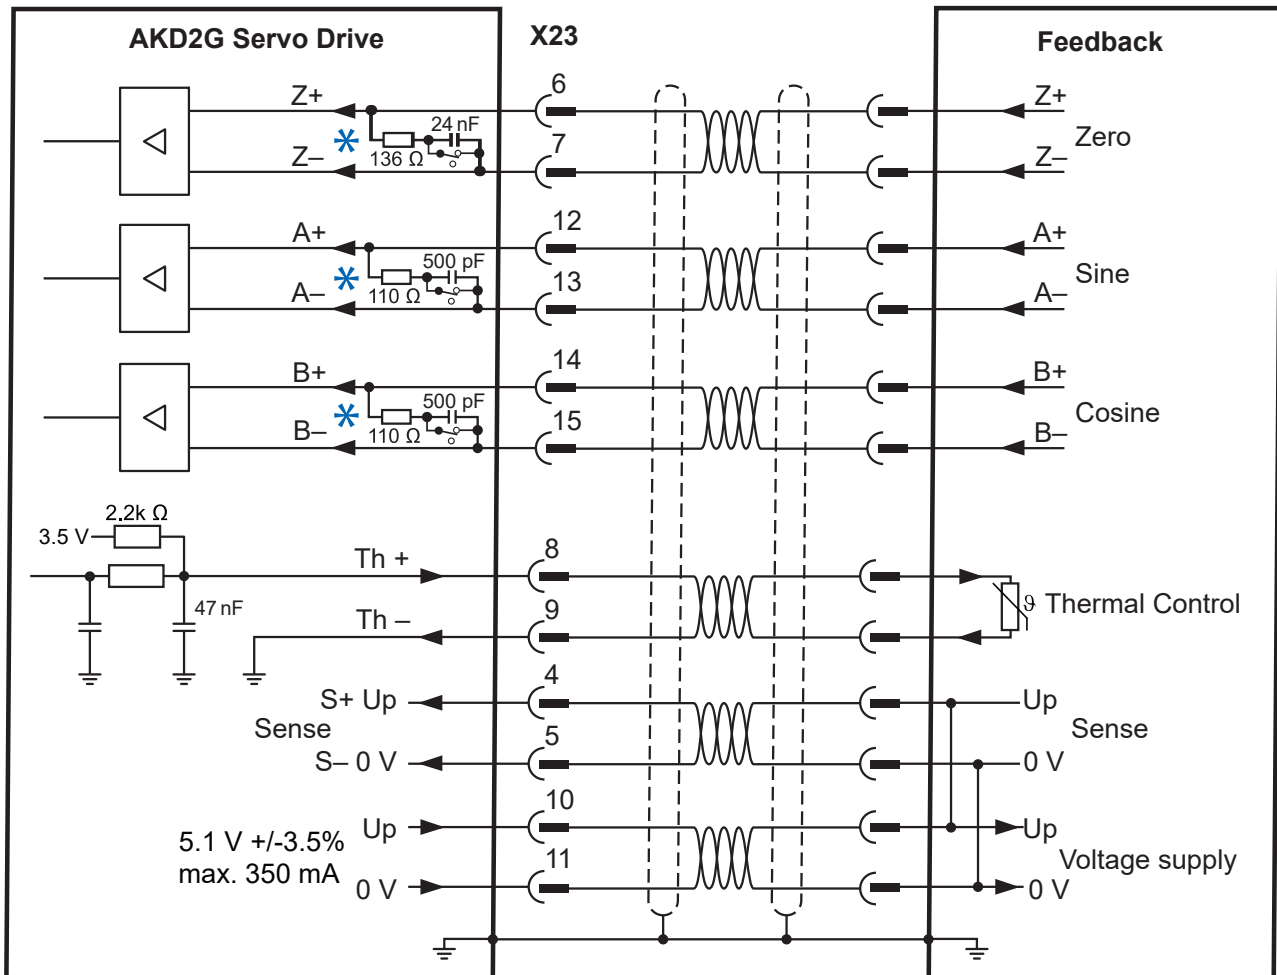


* DC terminated by default - DC switch closed

7.10.10.11 X23 Incremental Encoder with Hall Feedback

This feedback device delivers absolute information for commutation and can be used as a complete feedback system. All signals are connected using a pre-assembled comcoder connection cable. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Incremental Encoder with Hall Switches (Comcoder)	10	5.1V ± 3.5%	2.5 MHz

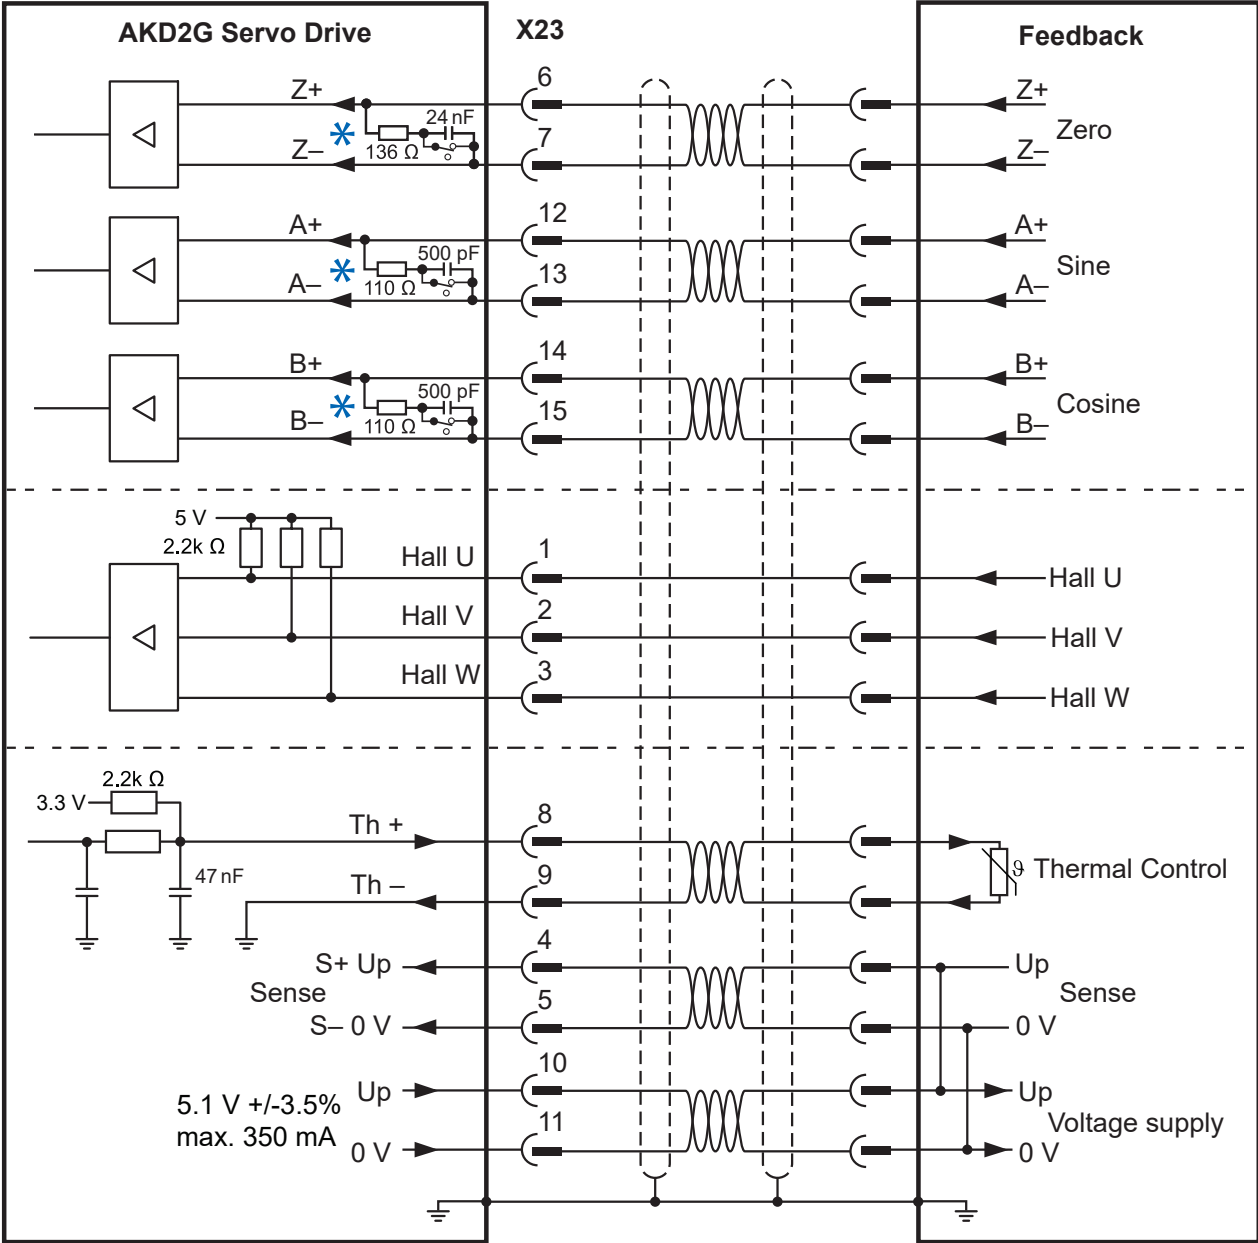


* DC terminated by default - DC switch closed

7.10.10.12 X23 Hall Feedback

This feedback type only supports operating in Torque mode and Velocity mode.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Hall Only	12	5.1V $\pm$ 3.5%	1 MHz

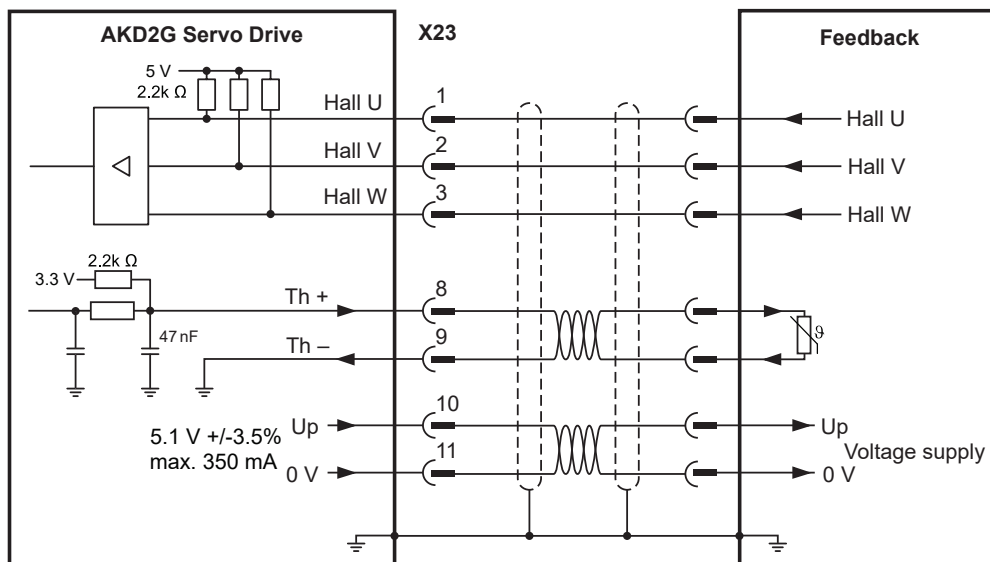


For more information concerning Hall feedback setting refer to WorkBench Online Help.

7.10.10.13 X23 SSI Feedback

Synchronous Serial Interface (SSI) is a standard industrial serial interface based on RS-422 standards.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SSI (Synchronous Serial Interface)	36	5.1V $\pm$ 3.5%	1 MHz

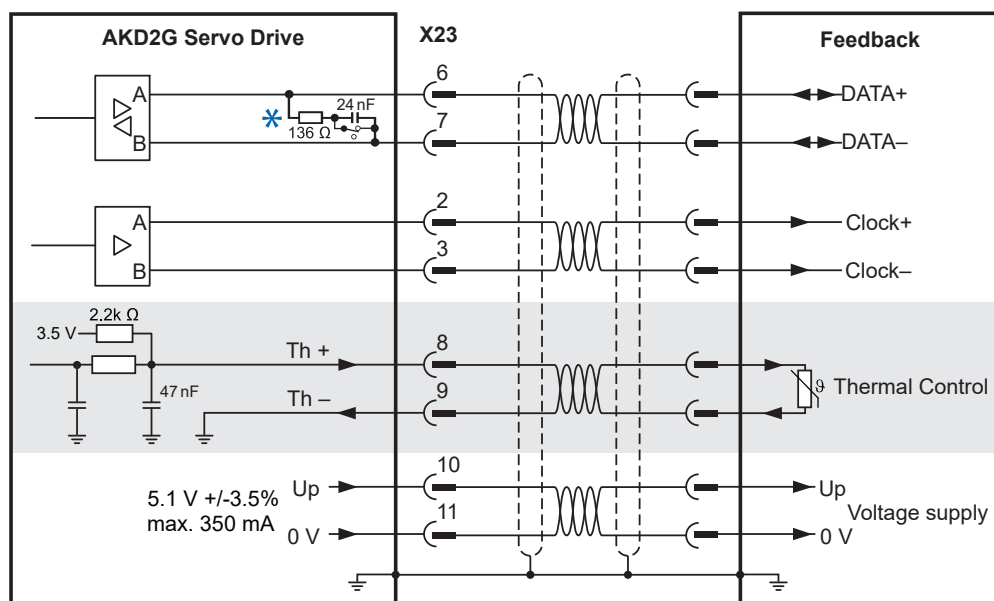


* DC terminated by default - DC switch closed

Optional ☐

7.10.10.14 X23 Step / Direction and CW / CCW Feedback

These feedback options are intended to be used by controllers to provide an Electronic Gearing source signal. If cable lengths of more than 25m are planned, please consult customer support.


Type	FBx.INDENTIFIED	Up	Frequency Limit
Step / Direccction	13	5.1V ± 3.5%	1 MHz
CW / CCW	14	5.1V ± 3.5%	

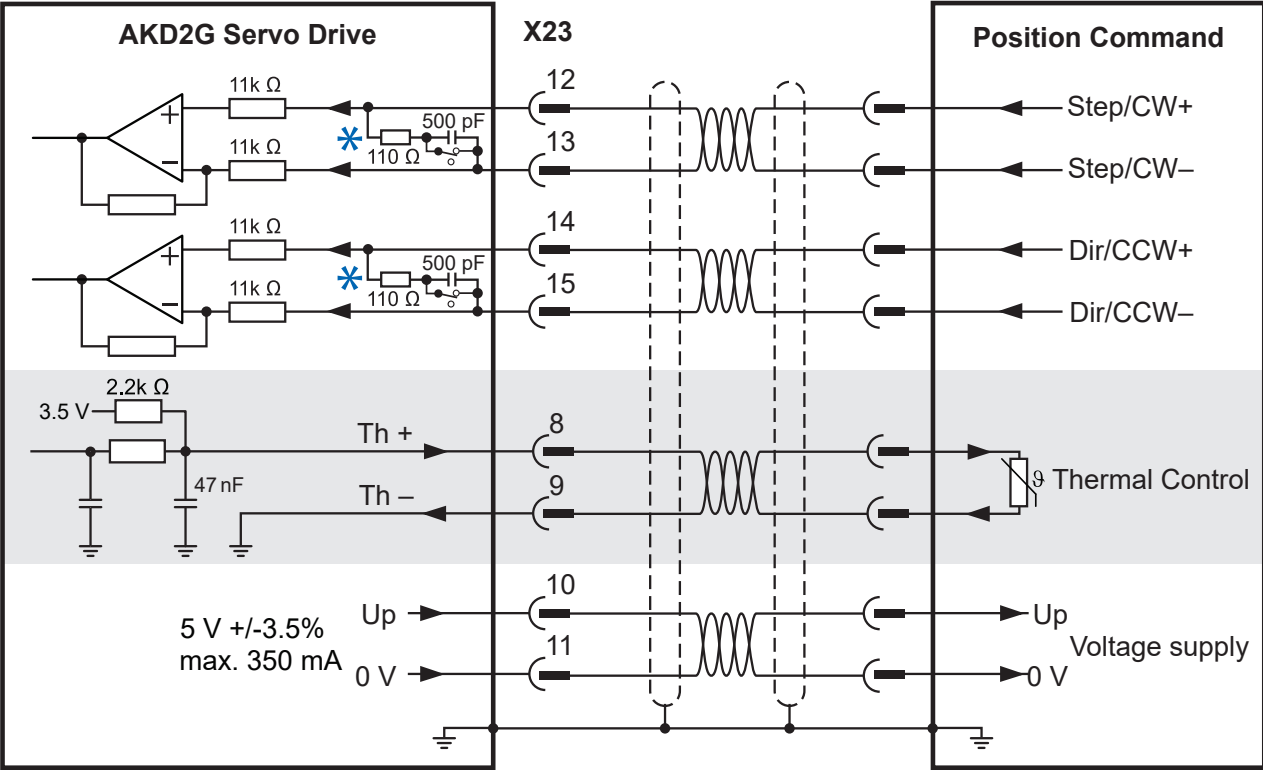

7.10.11 Feedback Connector X41 (SFA, accessory)


SFA (Smart Feedback Adapter) converts conventional feedback signals to a 2-wire serial signal. SFA can be laid into the cable duct or may be mounted to a DIN rail using a standard DIN rail clip.

SFA provides a 15 pole HD Sub-D female connector X41 to the system for connection of a Kollmorgen motor feedback cable (see *Kollmorgen 2G Cable Guide*). Dimensions (LxWxD): 88.6 x 55.6 x 21.2 (28.6 with rail clip). Order codes see regional Accessories Manual.

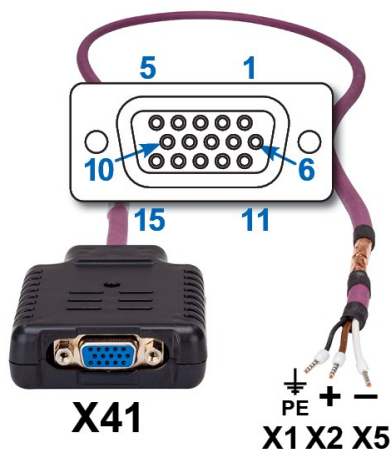


- Sub-D high density 15 pin, female
- 1 m shielded cable with 3 flying leads for connection to X1 or X2 or X5
- The cable shield is connected by using shield wire to X5/1 or with cable ties to the X1/X2 shield plates.
- Connected feedback must be set in WorkBench.
- Only use Kollmorgen feedback cables. The cable shield must be grounded on the end near the SFA.
- SFA models with a metal DIN clip must be mounted inside a cabinet.
- Input for Electronic Gearing, (→ # 157)
- Output for encoder emulation (EXX3/EXX4), (→ # 157) - Only available on "-EXX" (Encoder) models
- Master-Slave (→ # 160)


Connect the flying leads of the SFA cable to X1 (FB1, EXX3) or X2 (FB2, EXX4) or X5 (FB2, EXX4):

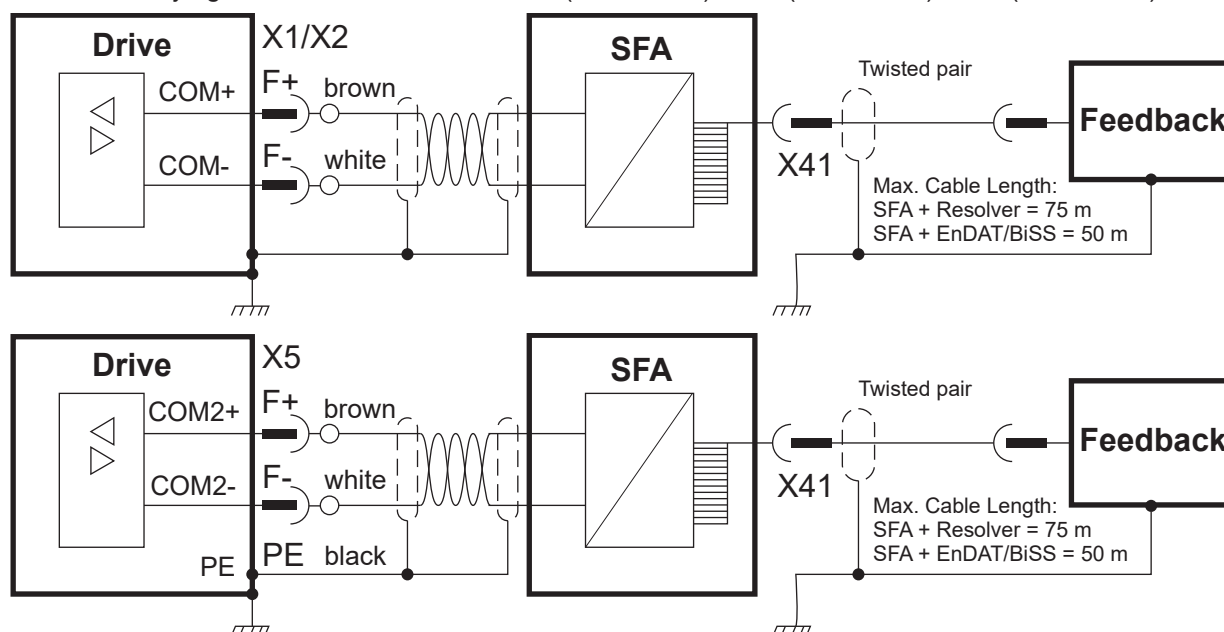

7.10.11.1 X41 Connector Pinout Summary

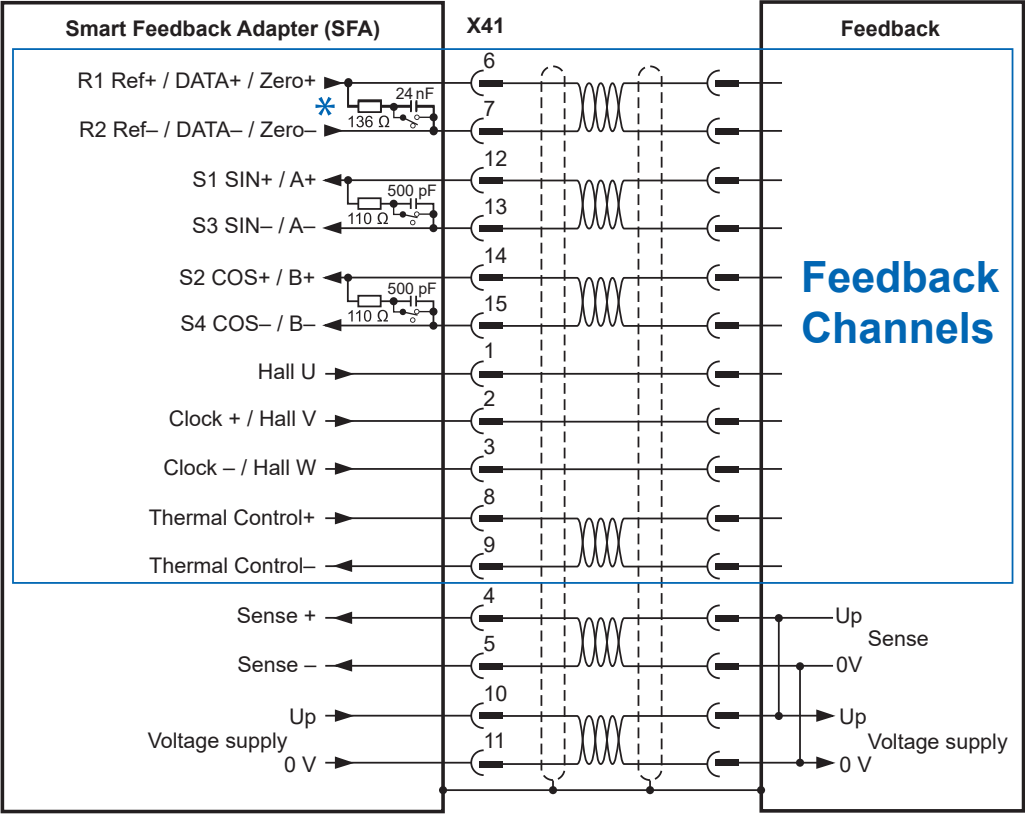

*The SFA does not include a DC termination switch across pins 6 and 7.



Operating Voltage: 7 V to 12 V, max. Load Current: 350 mA
Max. A/B signal input frequency: 3 MHz

Pin	SFD	Resolver	BiSS B	BiSS C	EnDat® 2.1	EnDat® 2.2*	HIPERFACE®	Sine/ Cos	Sine/ Cos +Hall	Incr. Enc.	Incr. Enc. +Hall	Hall	SSI
1	-	-	-	-	-	-	-	-	Hall U	-	Hall U	Hall U	-
2	-	-	CLK+	CLK+	CLK+	CLK+	-	-	Hall V	-	Hall V	Hall V	-
3	-	-	CLK-	CLK-	CLK-	CLK-	-	-	Hall W	-	Hall W	Hall W	-
4	SEN+	-	SEN+	SEN+	SEN+	SEN+	I	SEN+	SEN+	SEN+	SEN+	-	-
5	SEN-	-	SEN-	SEN-	SEN-	SEN-		SEN-	SEN-	SEN-	SEN-	-	-
6	COM+	R1 Ref+	DAT+	DAT+	DAT+	DAT+	DAT+	Zero+	Zero+	Zero+	Zero+	-	D+
7	COM-	R2 Ref-	DAT-	DAT-	DAT-	DAT-	DAT-	Zero-	Zero-	Zero-	Zero-	-	D-
8	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	Th+	-	Th+
9	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	Th-	-	Th-
10	+5 V	-	+5 V	+5 V	+5 V	+5 V	8-9 V	+5 V	+5 V	+5 V	+5 V	+5 V	+5 V
11	0 V	-	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V
12	-	S1 SIN+	A+	-	A+	-	SIN+	A+	A+	A+	A+	-	-
13	-	S3 SIN-	A-	-	A-	-	SIN-	A-	A-	A-	A-	-	-
14	-	S2 COS+	B+	-	B+	-	COS+	B+	B+	B+	B+	-	-
15	-	S4 COS-	B-	-	B-	-	COS-	B-	B-	B-	B-	-	-

CL = CLOCK, D = DATA, S = SENSE, Th = Thermal control, Z = Zero
(1) : Resolver with AKD2G-CON-SFA-R00 only, all other feedback devices with AKD2G-CON-SFA-E00 only
■ = DC Terminated, can be overridden with [DIO#.TERM](#)
■ = Optional
■ = Information digitally communicated on COM+/- channel.

7.10.12 X41 Feedback Wiring Pinout Diagrams

7.10.12.1 X41 SFD Feedback


The diagram below shows the connection of the four-wire Kollmorgen SFD feedback system.

NOTE

When SFD cable total resistance for 5V out (Up) and 5V return (0V) is less than 3.3 Ohm, then remote sensing is not needed. For a typical cable this means remote sensing is not needed up to 25m.

Kollmorgen cables are rated up to 50m with no remote sensing.

Type	FBx. IDENTIFIED	Up	Description
Smart Feedback Device (SFD)	141	5.1 V $\pm$ 3.5%	Accuracy: 14 bit (0.022°), resolution: 24 bit (2x10E-5°)

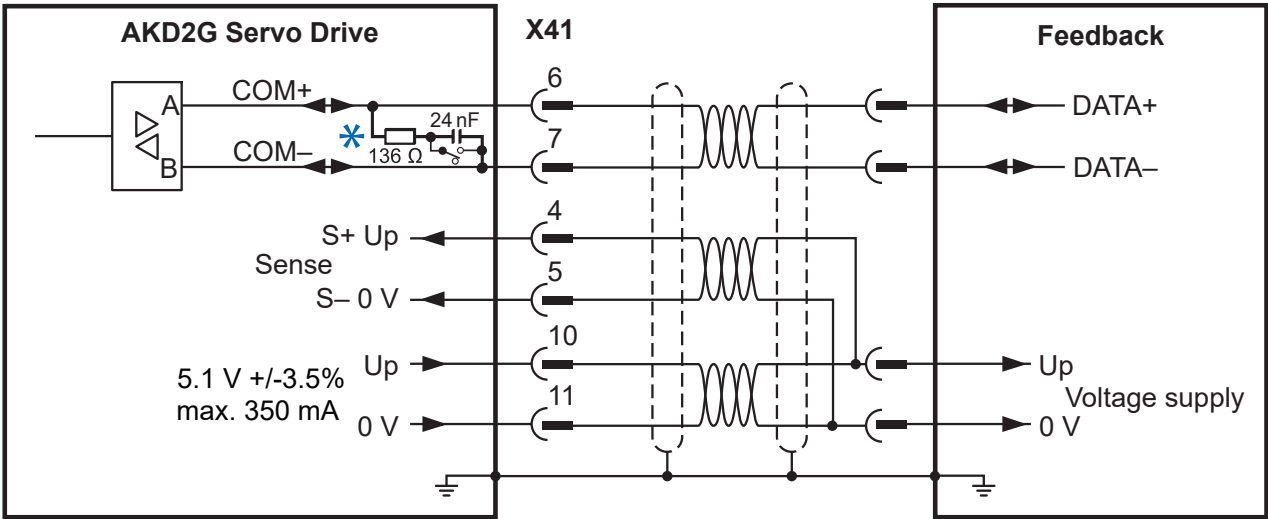


* SFD must always use AC coupled termination - DC termination switch open.

7.10.12.2 X41 Resolver Feedback

The diagram below shows the connection of a resolver (2 to 36-poles) as a feedback system. The thermal control in the motor is connected via the Resolver cable and evaluated in the drive. If no thermal control is in the motor, the cable must short pins 8 and 9.

If cable lengths of more than 100m are planned, please contact customer support.

Type	FBx.INDENTIFIED	Description
Resolver	140	Accuracy: 14 bit (0.022°), resolution: 16 bit (0.006°)
Specifications		
Excitation:		
Frequency		6975 Hz
Max Current		75 mA rms
Max Voltage		14 V _{RMS}
Source R		17 Ohms
Sin/Cos Vector Amplitude:		
Nominal		3.5 V _{RMS}
Fault Trip		+10/-35 %

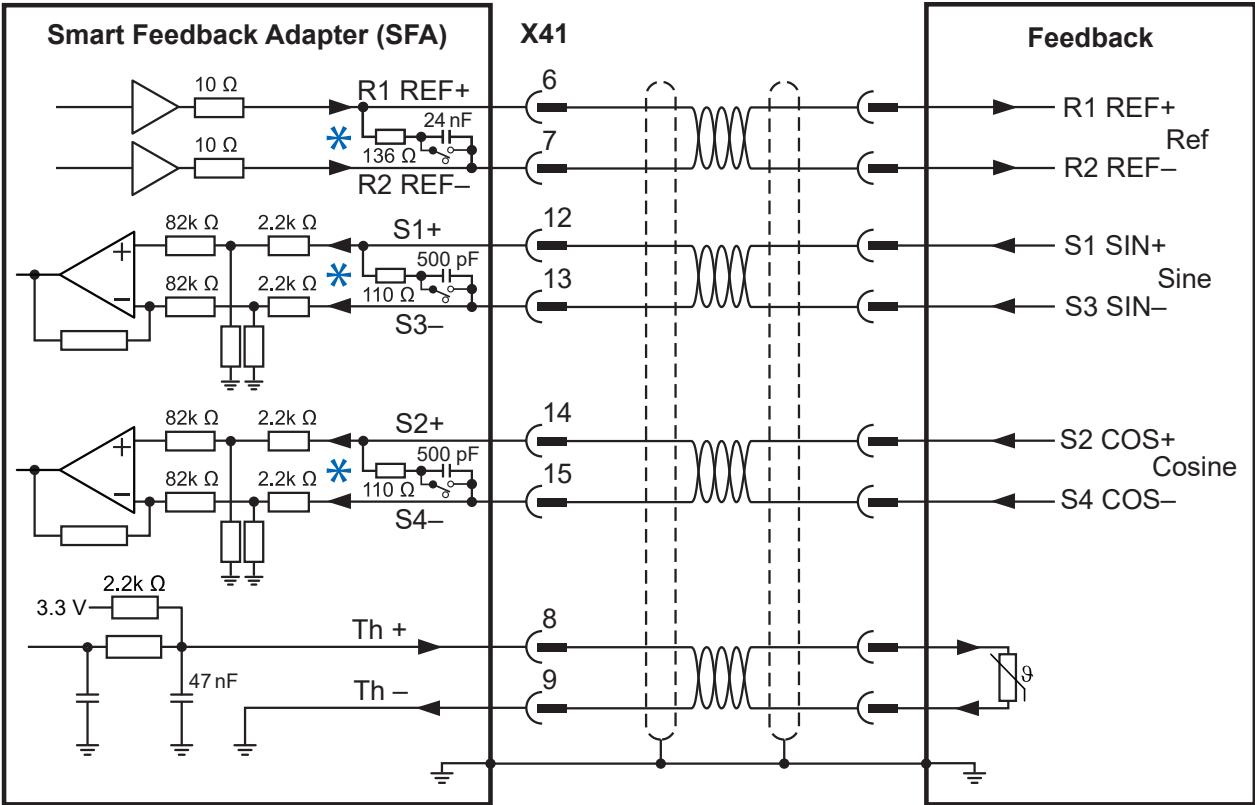


* Resolver Sine/Cosine channels must be high impedance – DC termination switch open.

7.10.12.3 X41 BiSS (Mode B) Analog Feedback

The diagram below shows the wiring of a single-turn or multi-turn encoder with BiSS Mode B interface as a feedback system. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
BiSS (Mode B) Analog	132	$5.1\text{V} \pm 3.5\%$	1 MHz, 250 kHz for encoders that require termination resistors

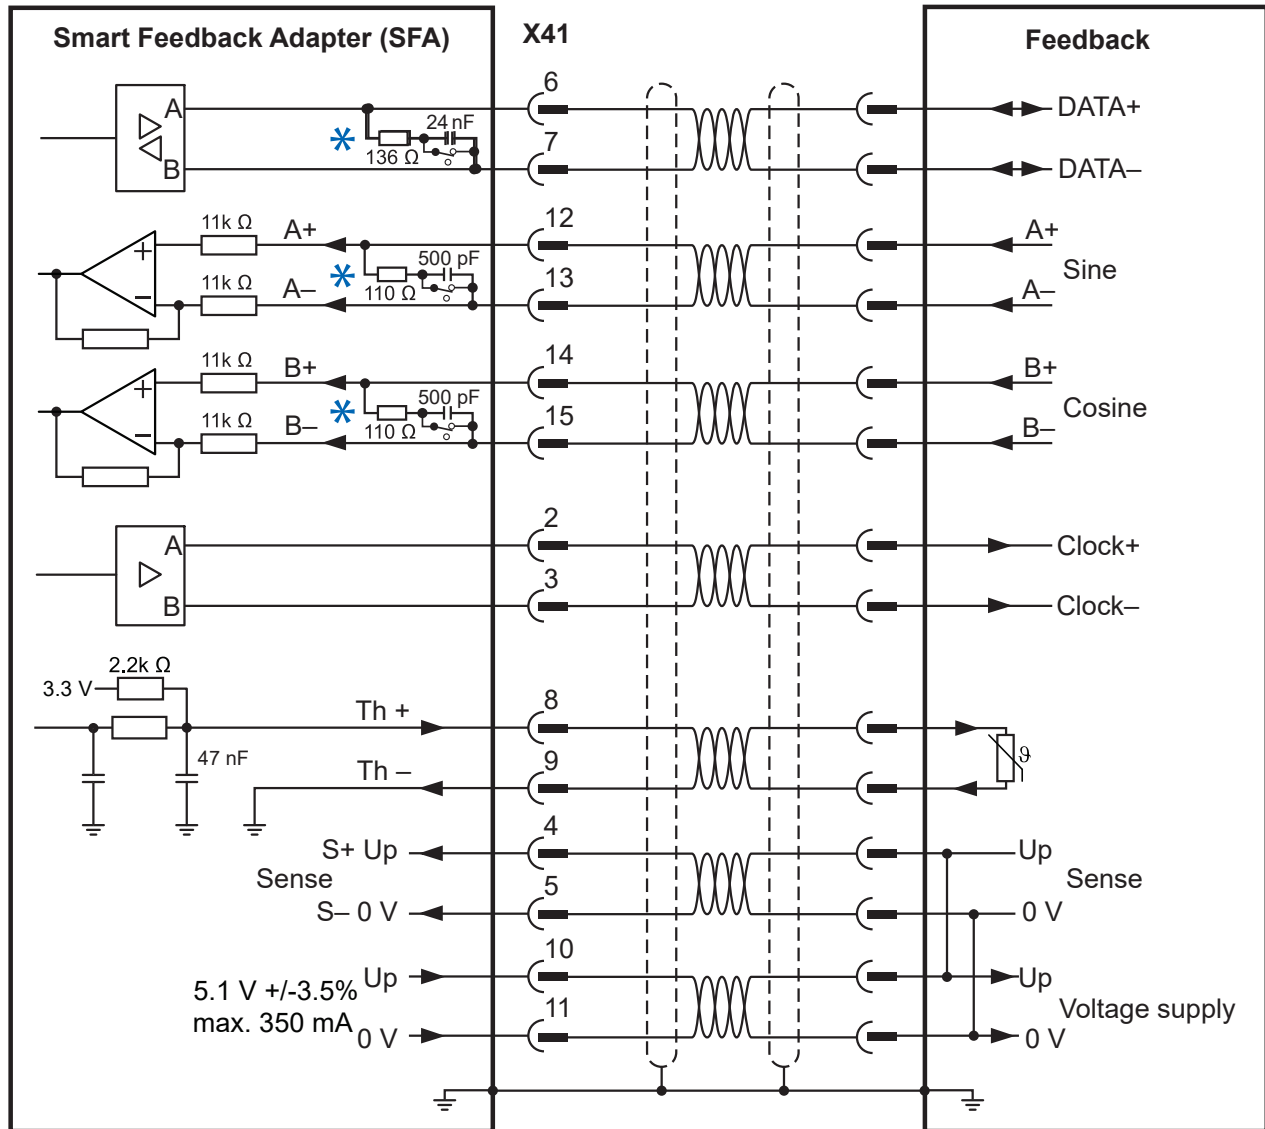


* DC terminated by default - DC switch closed

7.10.12.4 X41 BiSS (Mode C) Digital Feedback

The diagram below shows the wiring of a single-turn or multi-turn encoder with BiSS Mode C interface from Renishaw (specifically model Resolute RA26B) as a feedback system.

If cable lengths of more than 25m are planned, please consult customer support.

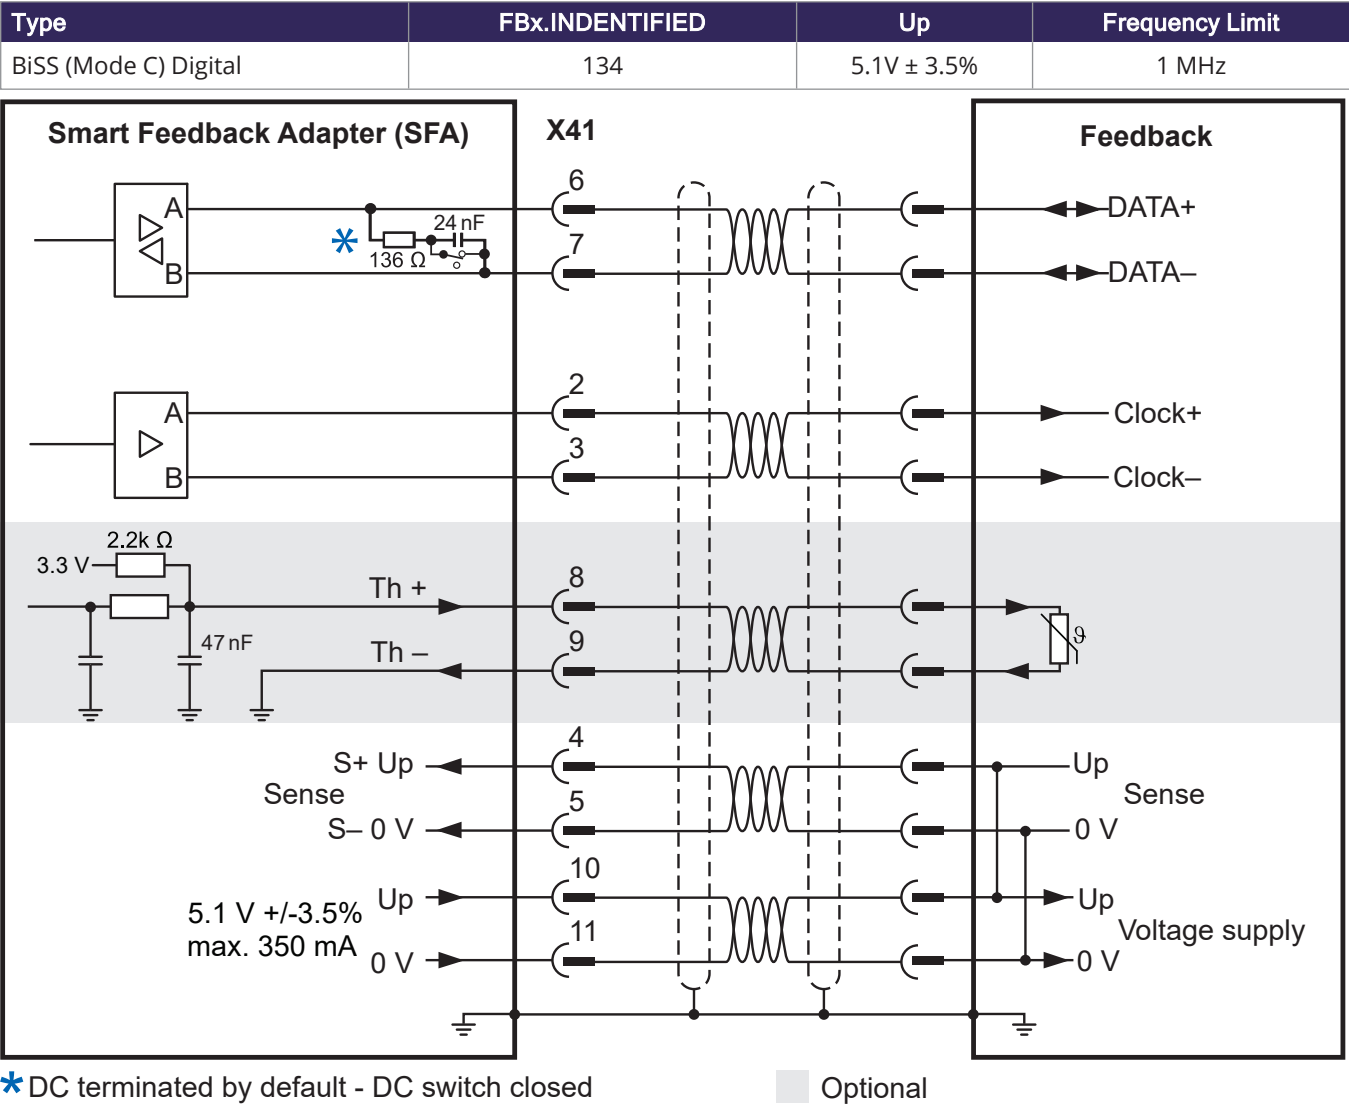


7.10.12.5 X41 EnDAT 2.1 Feedback (with 1 V p-p analog signals)

The diagram below shows the wiring of a single-turn or multi-turn sine-cosine encoder with EnDat 2.1 interface as a feedback system. Preferred types are the ECN1313 and EQN1325 encoders. The thermal control in the motor is connected via the encoder cable and evaluated in the drive. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
EnDAT 2.1	130	1 MHz, 250 kHz for encoders that require termination resistors

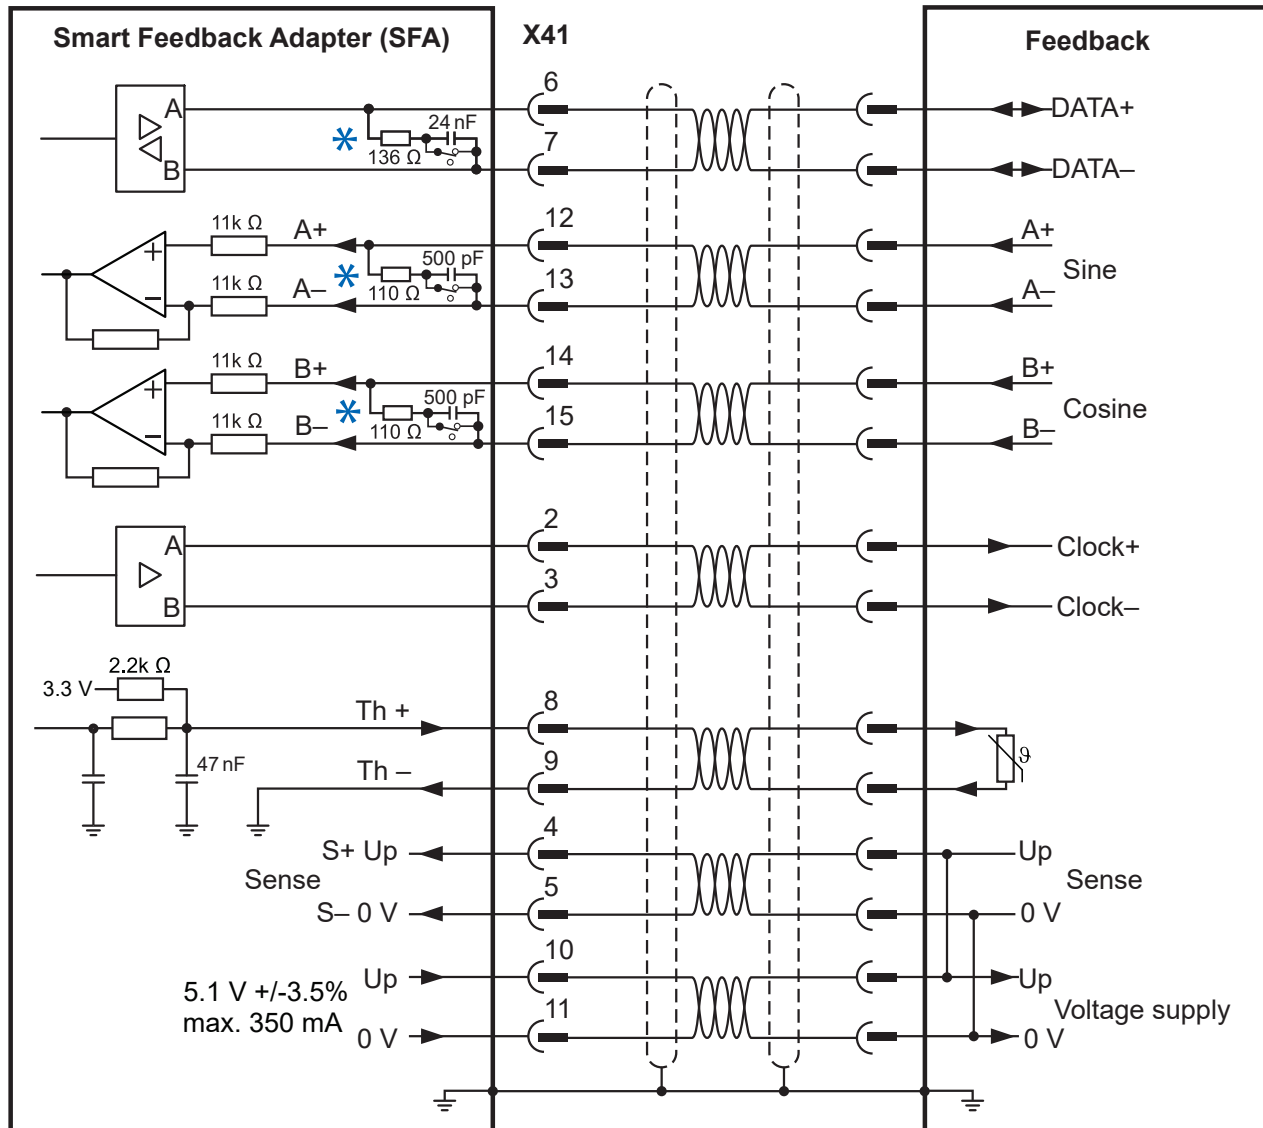

* DC terminated by default - DC switch closed


7.10.12.6 X41 EnDAT 2.2 Digital Feedback

Single-turn or multi-turn encoders with EnDat 2.2 interface can be connected either to X23 or X41 as a primary motor feedback system.

All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
EnDAT 2.2	131	2.5 MHz

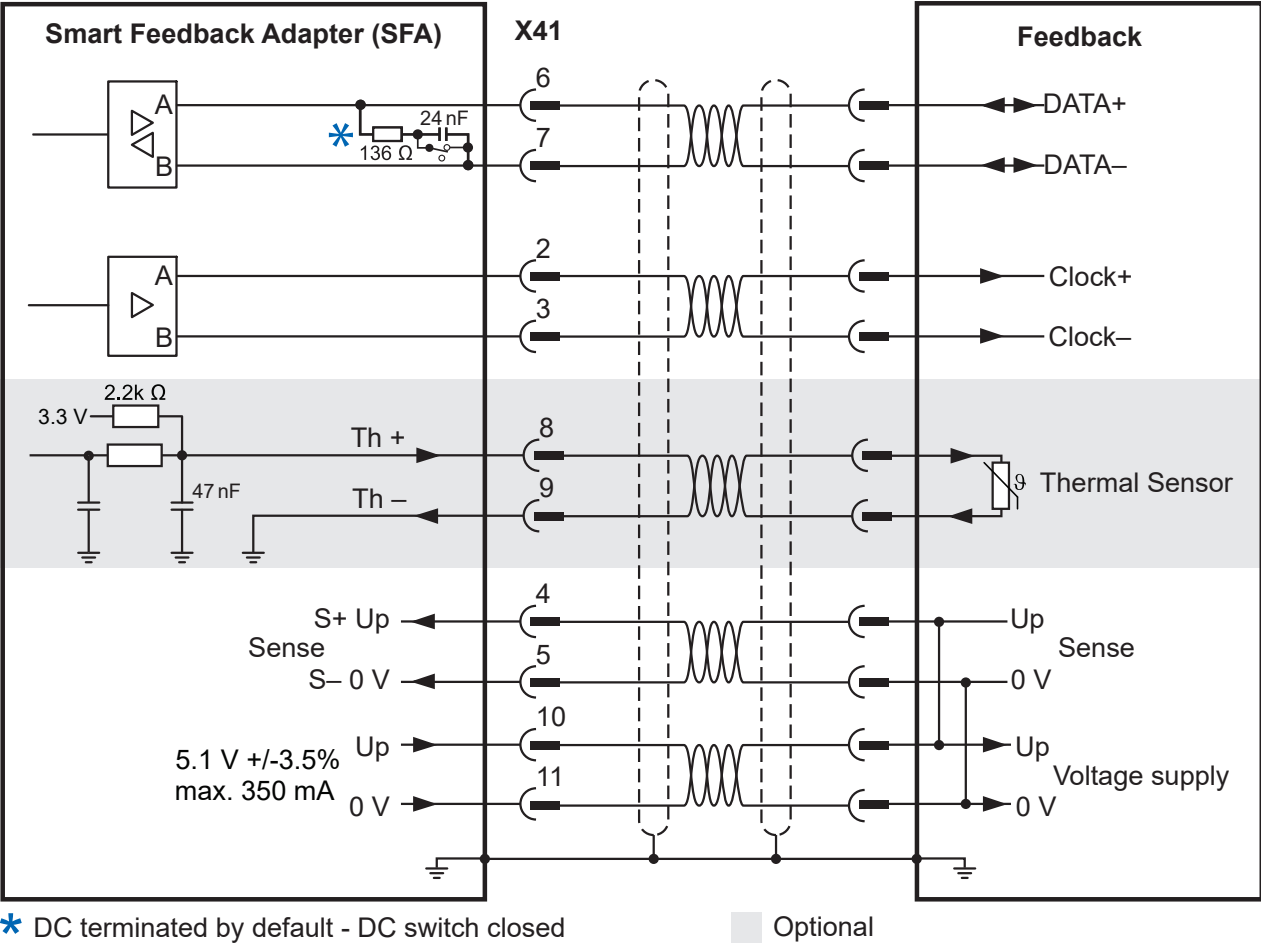

NOTE

Select the analog I/O functionality in the related WorkBench screen on the drive.
Warning n256 is issued if the set limit is exceeded.
For use as primary motor feedback, set parameters DRV.EMUEMODE, PL.FBSOURCE, IL.FBSOURCE, VL.FBSOURCE.


7.10.12.7 X41 HIPERFACE Feedback

The diagram below shows the wiring of a single-turn or multi-turn sine-cosine encoder with Hiperface interface as a feedback system.

The thermal control in the motor is connected via the encoder cable and evaluated in the drive. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Frequency Limit
HIPERFACE	133	1 MHz, 250 kHz for encoders that require termination resistors

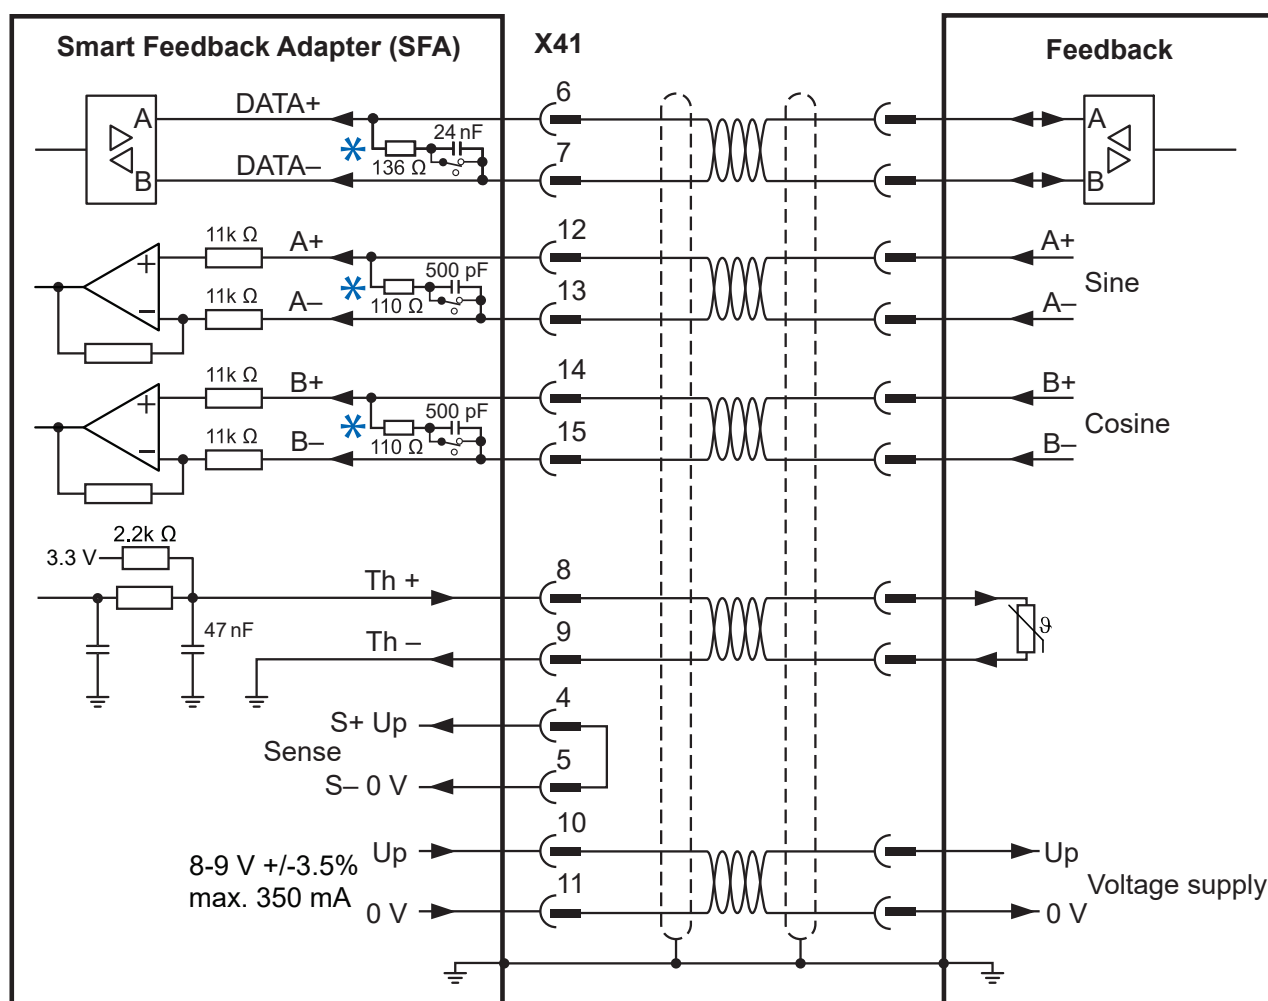

* DC terminated by default - DC switch closed

NOTE


Connecting pin 4 and 5 together causes Up to be 8 to 9 V.

7.10.12.8 X41 Sine Encoder Feedback

This feedback device does not deliver absolute information for commutation and works with Wake&Shake commutation (WorkBench Online Help). All signals are connected to X23 / X41 and evaluated there.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SinCos 1 V p-p (Wake & Shake)	121	5.1V ± 3.5%	1 MHz, 250 kHz for encoders that require termination resistors

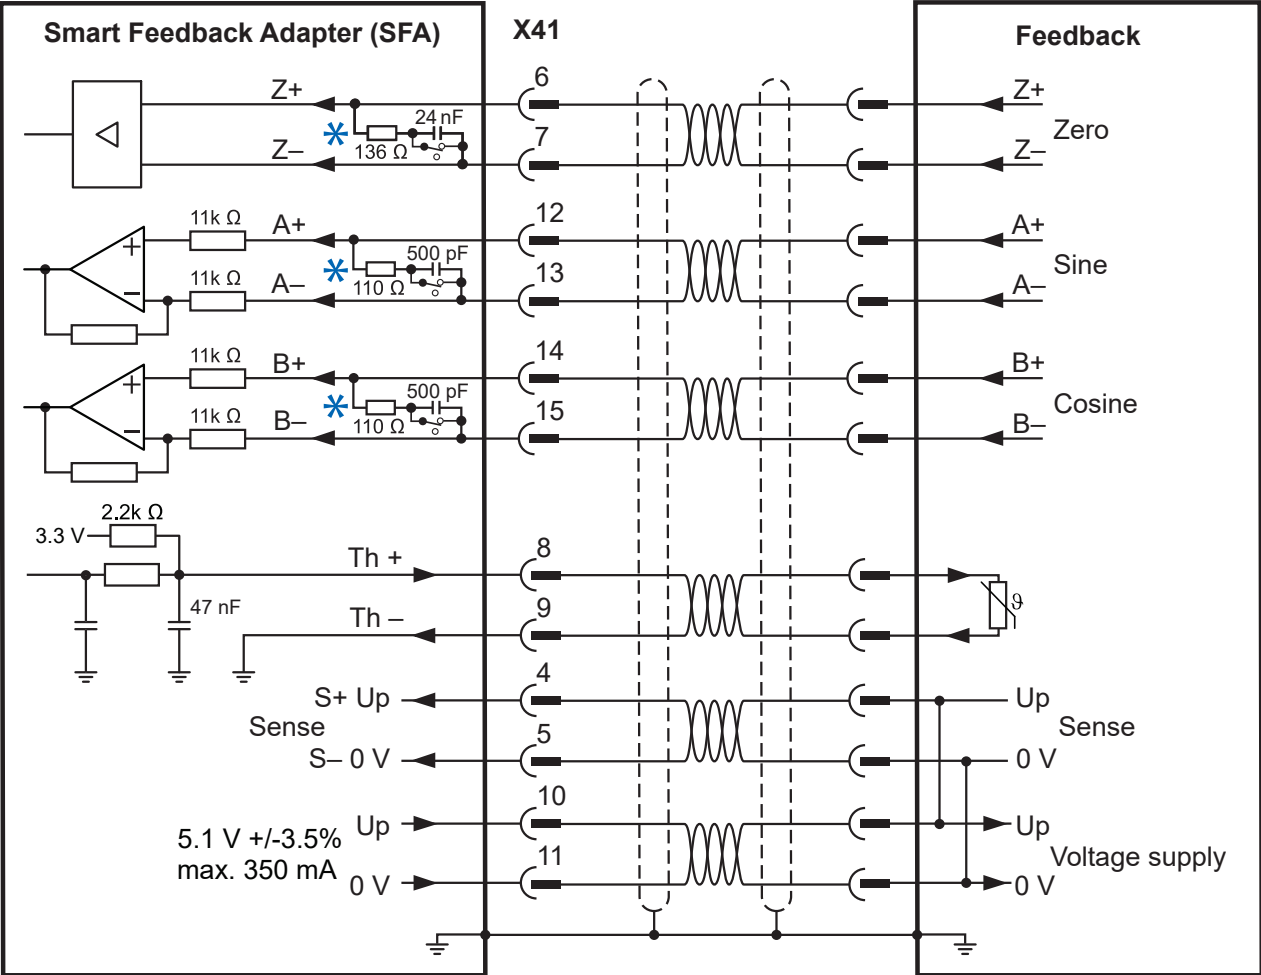


* DC terminated by default - DC switch closed

7.10.12.9 X41 Sine Encoder with Hall Feedback

This feedback device delivers absolute information for commutation and can be used as a complete feedback system. All signals are connected to X23 / X41 and evaluated there.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SinCos 1 V p-p with Hall	120	5.1V $\pm$ 3.5%	1 MHz, 250 kHz for encoders that require termination resistors

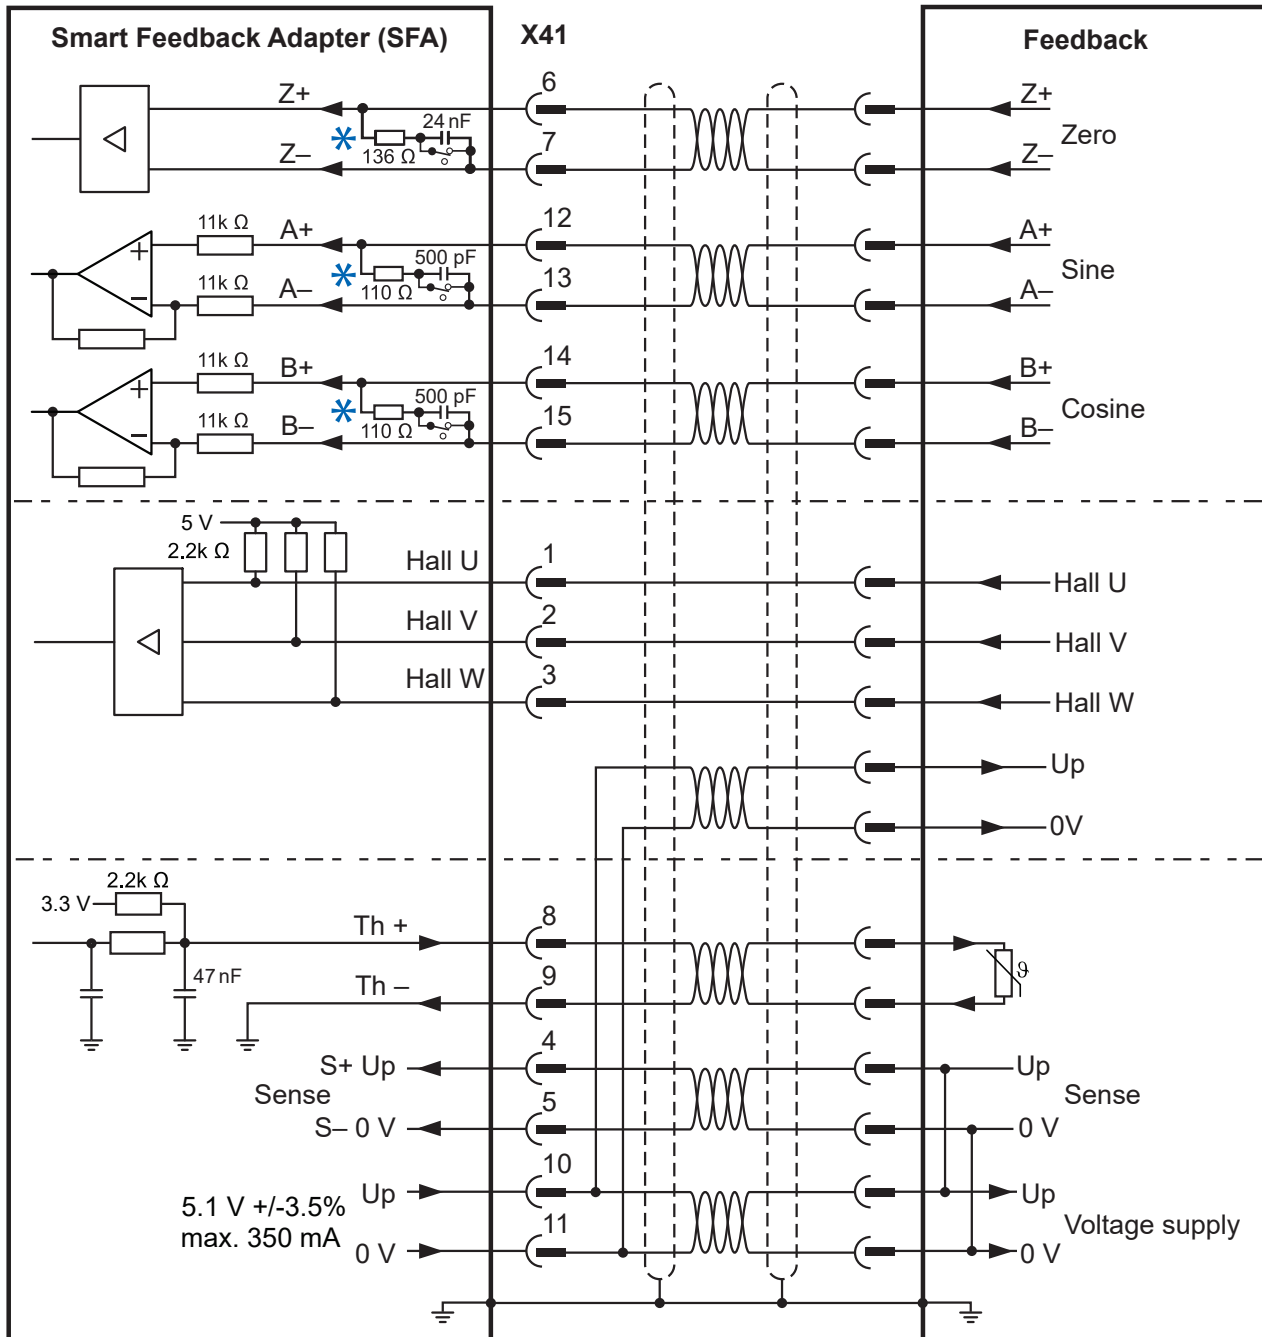


* DC terminated by default - DC switch closed

7.10.12.10 X41 Incremental Encoder Feedback

This feedback device does not deliver absolute information for commutation and works with Wake&Shake commutation (see WorkBench Online Help). All signals are connected using a pre-assembled comcoder connection cable. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Incremental Encoder (Wake and Shake)	111	5.1V ± 3.5%	2.5 MHz

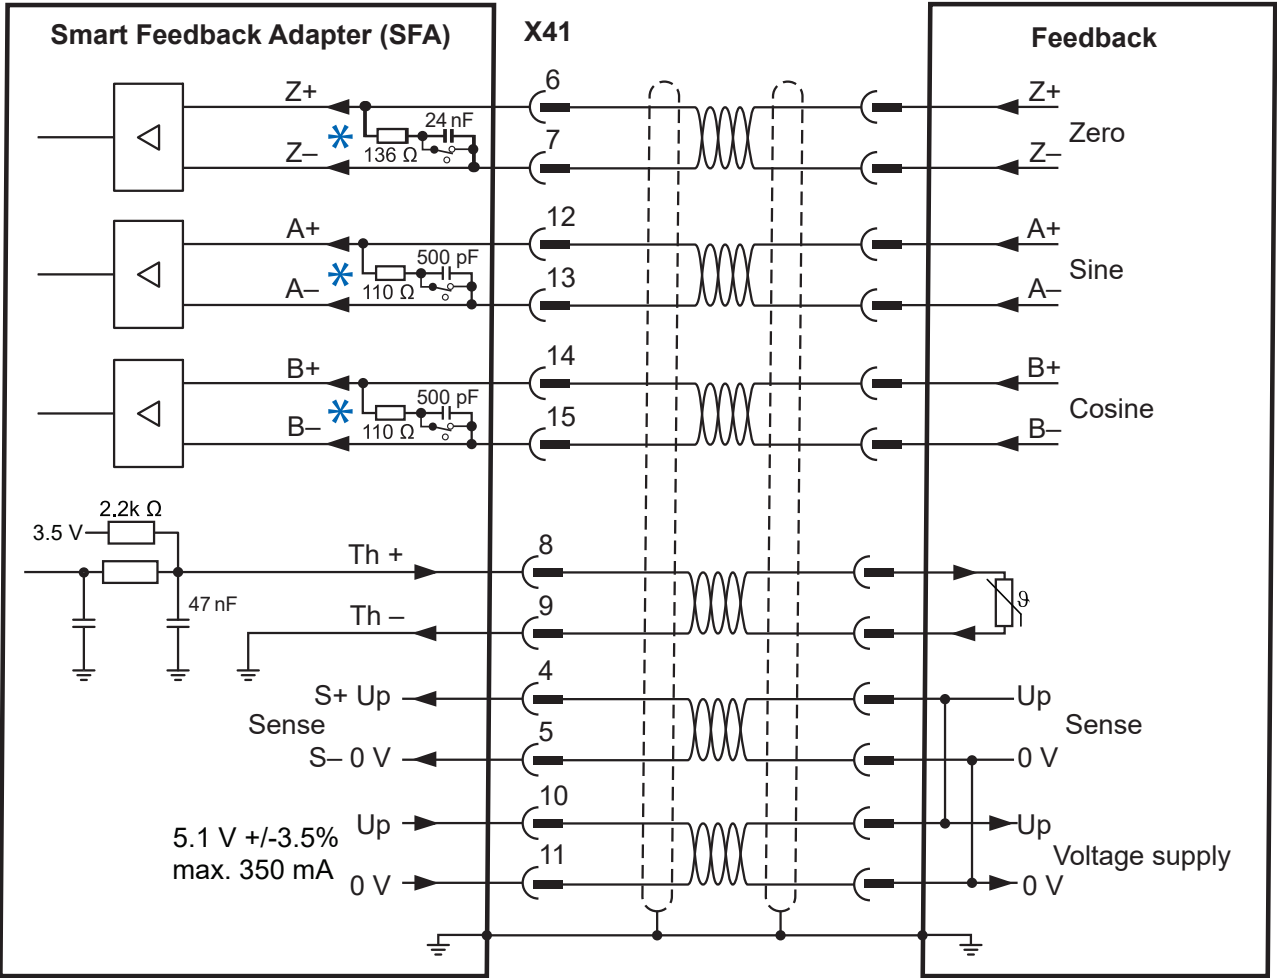


* DC terminated by default - DC switch closed

7.10.12.11 X41 Incremental Encoder with Hall Feedback

This feedback device delivers absolute information for commutation and can be used as a complete feedback system. All signals are connected using a pre-assembled comcoder connection cable. The thermal control in the motor is connected via the encoder cable and evaluated in the drive.

If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Incremental Encoder with Hall Switches (Comcoder)	110	5.1V $\pm$ 3.5%	2.5 MHz

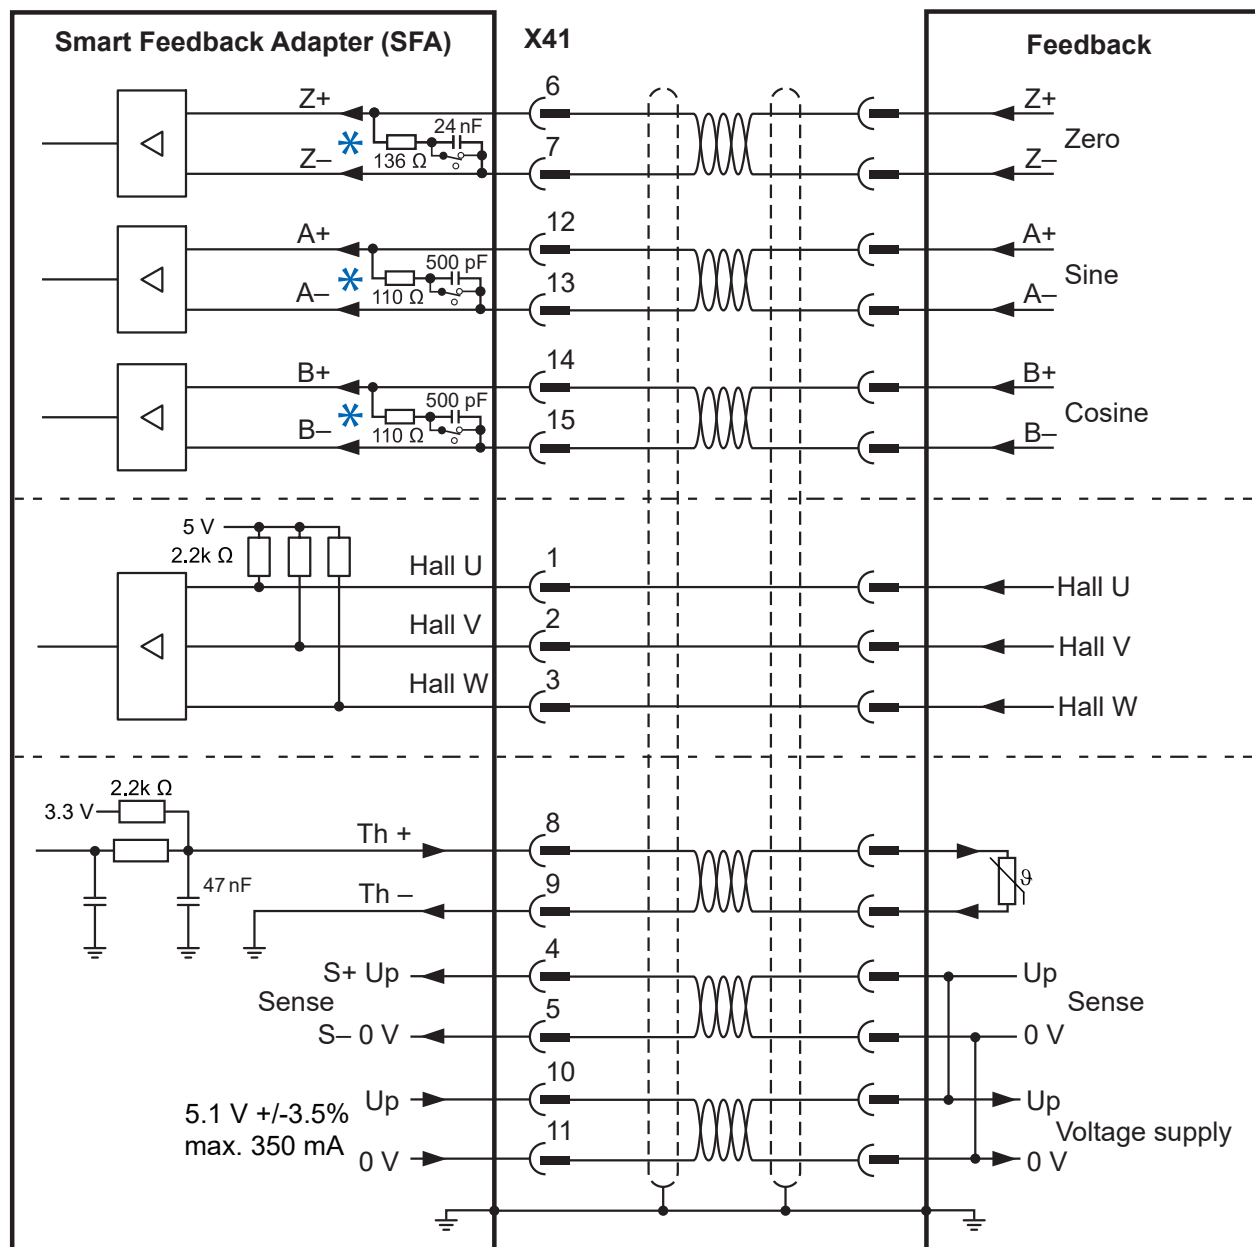


* DC terminated by default - DC switch closed

7.10.12.12 X41 Hall Feedback

This feedback type only supports operating in Torque mode and Velocity mode.
If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
Hall Only	112	5.1V ± 3.5%	1 MHz

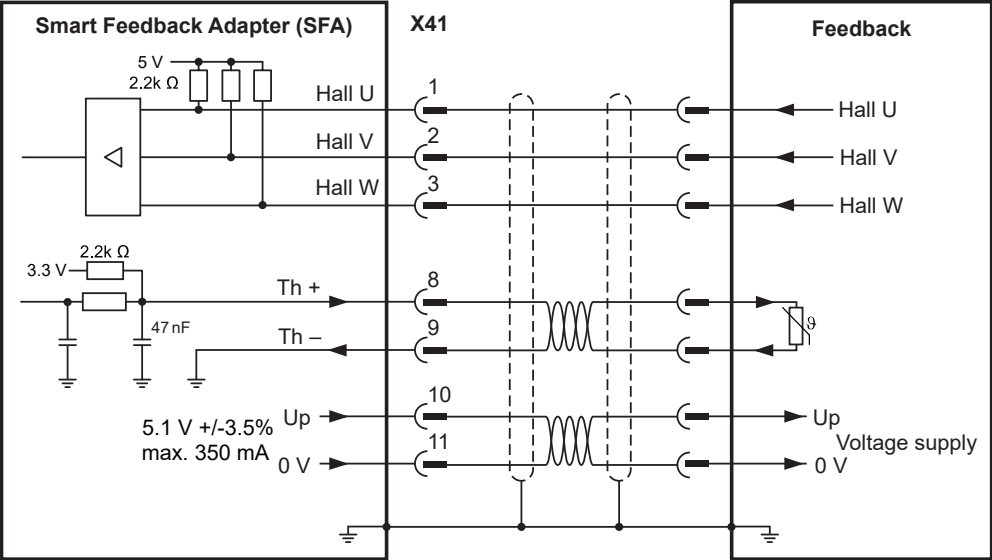


For more information concerning Hall feedback setting refer to WorkBench Online Help.

7.10.12.13 X41 SSI Feedback

Synchronous Serial Interface (SSI) is a standard industrial serial interface based on RS-422 standards.
If cable lengths of more than 25m are planned, please consult customer support.

Type	FBx.INDENTIFIED	Up	Frequency Limit
SSI (Synchronous Serial Interface)	136	5.1V ± 3.5%	1 MHz

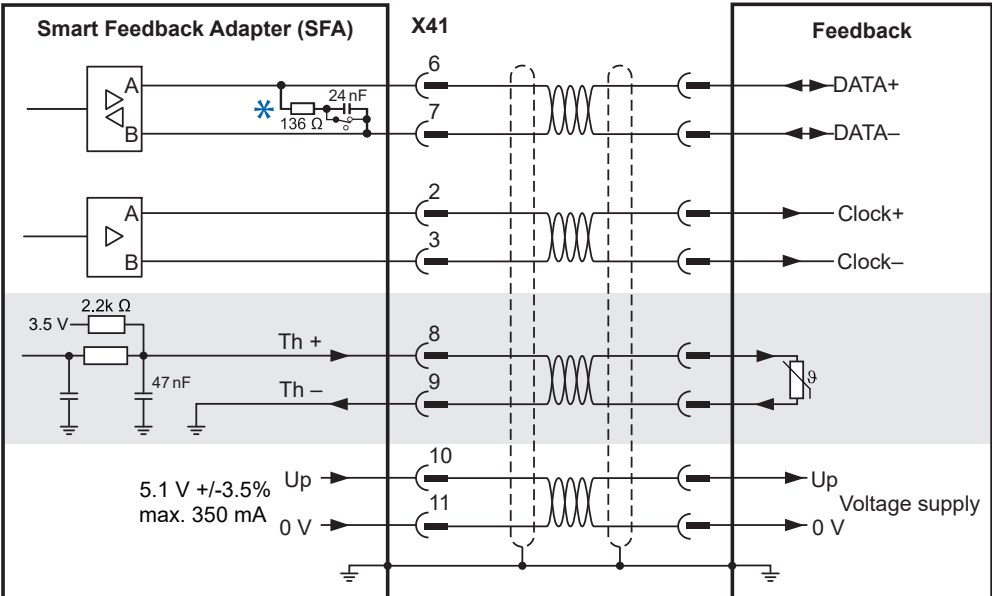


Optional

7.11 Gearing

7.11.1 Overview

Electronic Gearing, EEO, Master-Slave

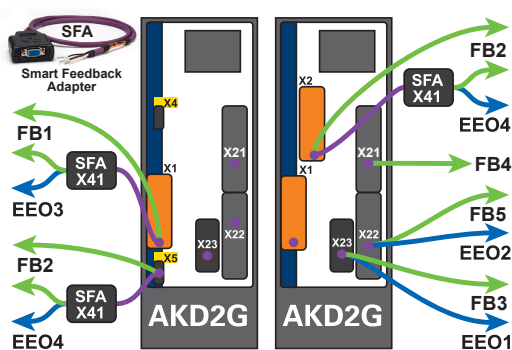

AKD2G offers up to 5 feedback channels, which may be used as the command source for electronic gearing or EEO (Emulated Encoder Output) or Master-Slave.

Feedback channel	EEO channel	Connector	Pinout and wiring example	Parameter to configure the sensor type
Feedback 1	N/A	X1	(→ # 124)	FB1.SELECT
	EEO3	X41 via X1	(→ # 143)	
Feedback 2		X2	(→ # 124)	FB2.SELECT
		X5	(→ # 124)	
	EEO4	X41 via X2 or X5	(→ # 143)	
Feedback 3	EEO1	X23	(→ # 128)	FB3.SELECT
Feedback 4	N/A	X21	(→ # 126)	FB4.SELECT
Feedback 5	EEO2	X22	(→ # 127)	FB5.SELECT

7.11.2 Input - Electronic Gearing

AKD2G offers up to 5 feedback channels. Any of these channels may be used as the gearing command source. The gearing source is selected for each axis using `AXIS#.GEAR.FBSOURCE`. Refer to the WorkBench Online Help [Electronic Gearing](#) for more information.

7.11.3 Output - Emulated Encoder Output (EEO)

The drive calculates the motor shaft position from the cyclic- absolute signals of the commutation feedback, generating incremental-encoder compatible pulses or CW/CCW signals or Pulse/Direction signals from this information.

The resolution and the index (zero) position can be set in WorkBench. The outputs are driven from an internal supply voltage. Refer to the WorkBench Online Help for more information.

NOTE

When using a multispeed resolver (more than 2 poles) as commutation feedback, the EEO will create only one zero pulse per each mechanical revolution of the motor. The zero pulse is dependent on the motor starting position!

NOTICE

EEO1-4 are NOT compatible with 24V signal level and will be damaged if connected to +24V!

Technical characteristics connector X22, EEO2

Pulse outputs on the connector X22 are 2 signals: track A and B with 90° phase difference (i. e. in quadrature, hence the alternative term “AquadB” output).

- RS-485, current 100 mA
- Max. number of connected slaves is determined by the loading characteristics of the slaves. 32 slaves can be driven if the input impedance of the bias network is 10kΩ and only one slave has a DC termination resistor.
- Max. signal (channel) output frequency: 3 MHz
- The pulses per revolution value is settable, pulse phase shift: $90^{\circ} \pm 20^{\circ}$

X22	Signals EEO2	Description
A17	AGND	Analog ground
A20	Track A+	EEO2 output, channel A positive
A21	Track A-	EEO2 output, channel A negative
B20	Track B+	EEO2 output, channel B positive
B21	Track B-	EEO2 output, channel B negative

Technical characteristics connector X23, EEO1

Pulse outputs on the SubD connector X23 are 3 signals: A, B and Index with 90° phase difference (i.e. AquadB) and a zero pulse.

- 5V TTL, current 60 mA
- Max. number of connected slaves is determined by the loading characteristics of the slaves, 32 slaves can be driven if the input impedance of the bias network is 10kΩ and only one slave has a DC termination resistor.
- Max. signal (channel) output frequency: 3 MHz
- The pulses per revolution value is settable, pulse phase shift: $90^{\circ} \pm 20^{\circ}$

X23	Signals EEO1	Description
6	Zero+	EEO1 output, index positive
7	Zero-	EEO1 output, index negative
11	0 V	EEO1 output, ground
12	Track A+	EEO1 output, channel A positive
13	Track A-	EEO1 output, channel A negative
14	Track B+	EEO1 output, channel B positive
15	Track B-	EEO1 output, channel B negative

Technical characteristics connector X41 (SFA), EEO3/EEO4

Pulse outputs on the SubD connector X41 are 3 signals: A, B and Index with 90° phase difference (i.e. "AquadB") and a zero pulse.

If SFA is connected to X1 the logical output is EEO3.

If SFA is connected to X2 or X5 the logical output is EEO4.

- 5V TTL, current 60 mA
- Max. number of connected slaves is determined by the loading characteristics of the slaves, 32 slaves can be driven if the input impedance of the bias network is 10kΩ and only one slave has a DC termination resistor.
- Max. signal (channel) output frequency: 3 MHz
- The pulses per revolution value is settable, pulse phase shift: $90^{\circ} \pm 20^{\circ}$

X41	Signals EEO3/EEO4	Description
6	Zero+	EEO3/EEO4 output, index positive
7	Zero-	EEO3/EEO4 output, index negative
11	0 V	EEO3/EEO4 output, ground
12	Track A+	EEO3/EEO4 output, channel A positive
13	Track A-	EEO3/EEO4 output, channel A negative
14	Track B+	EEO3/EEO4 output, channel B positive
15	Track B-	EEO3/EEO4 output, channel B negative


7.11.4 Master-Slave control

Several AKD2G can be connected as slave drives to another AKD2G which acts as a master. The slave drives use the master's encoder output signal (EEO, (→ # 157)) as command input and follow these commands (velocity and direction).


7.11.4.1 Examples

Master-Slave using feedback connector X22

The master is configured for EEO2 (→ # 157) on X22 for command output.

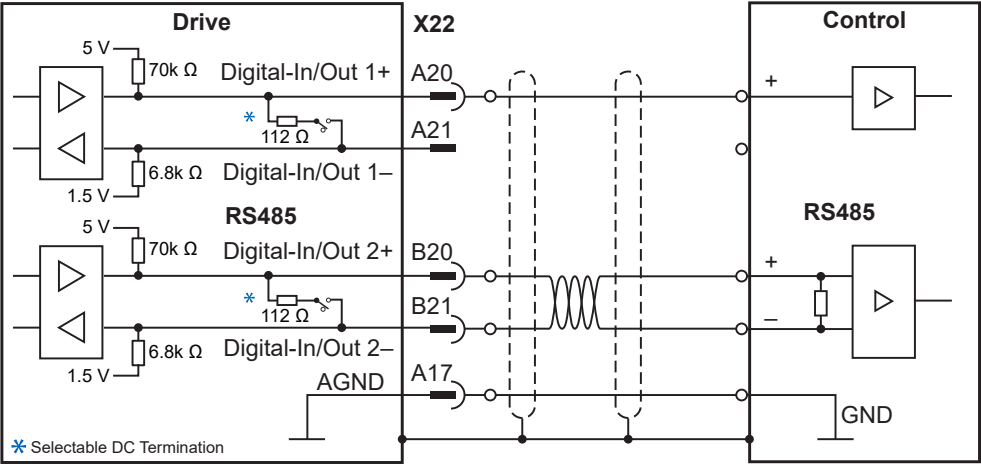


The slave is configured using Feedback 5 (FB5) on X22 for command input.

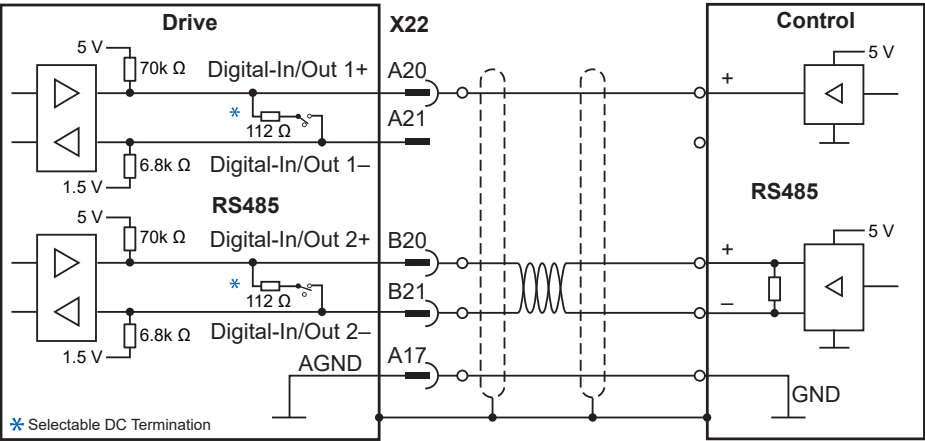


Master-Slave using optional feedback connector X23 or X41

The master is configured for EEO1 (→ # 158) on X23 or EEO3/EEO4 (→ # 157) with SFA) on X41, the slave uses Feedback 3 (FB3) on X23 (or X41 with SFA) for command input.

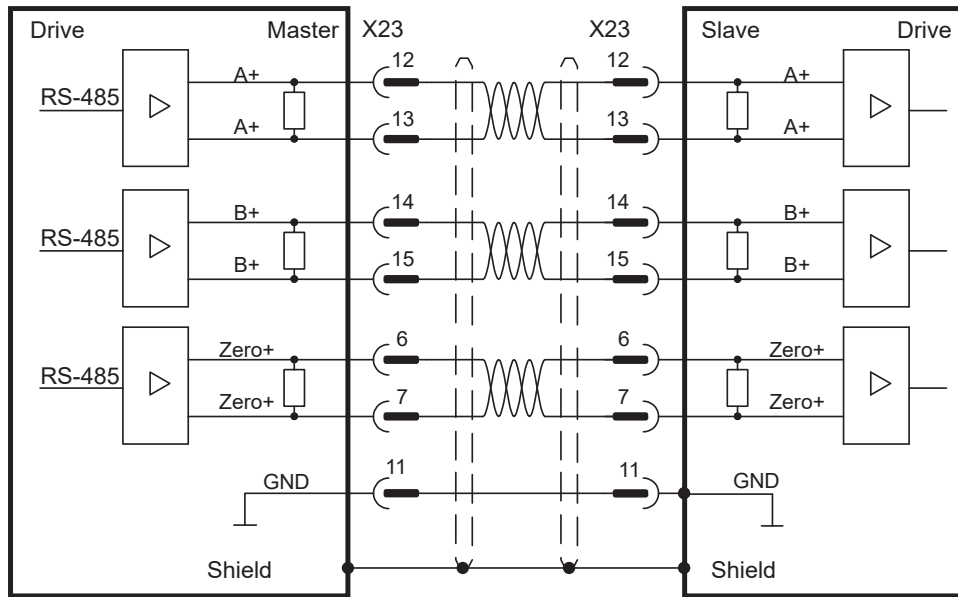

7.12 Ethernet Fieldbus Interface Connector X11/X12

The Ethernet fieldbus interface has two RJ45 connectors.

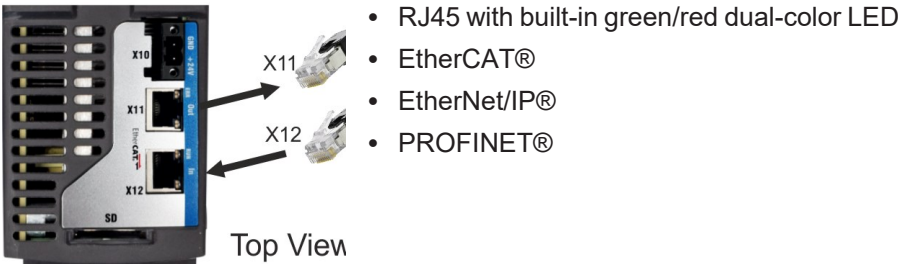

NOTICE

Do not connect the Service line for the PC with the set up software to the Ethernet fieldbus interface X11/X12 when using EtherCAT. The service Ethernet cable must be connected to X20.
Ethernet fieldbus interface X11/X12 pinout depends on the protocol used. Refer to the matching fieldbus communication manual.


7.12.1 EtherCAT® and Safety over EtherCAT®

AKD2G drives (connectivity option **E**) can be connected as slaves to the EtherCAT® network (CoE) by using RJ45 connectors X11 (out port) and X12 (in port). The communication status is indicated by the built-in connector LEDs.

	Connector	Name	Function
	X11 "Out"	"ERR"	Returns potentials communication failures: Off = No Error Blinking = Invalid configuration Single Flash = Local error Double Flash = Process data watchdog
	X11 "Out"	Link/Activity	On/Blinking: Physical link/Data Traffic on. Static off: No link.
	X12 "In"	"RUN"	Returns the device state: Off = INIT Blinking = PRE-OPERATIONAL Single Flash = SAFE-OPERATIONAL On = OPERATIONAL Flickering = Initialization or BOOTSTRAP
	X12 "In"	Link/Activity	On/Blinking: Physical link/Data Traffic on. Static off: No link.

Bus topology example (EtherCAT®)

We suggest to use Kollmorgen ENCP cables. For more possible system solutions refer to the WorkBench Online Help.

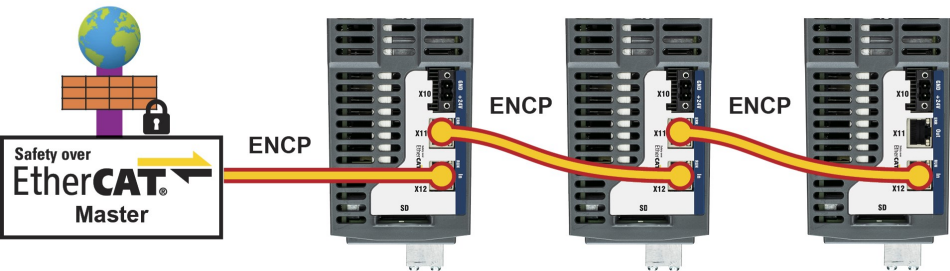

Communication profile

For EtherCAT® communication profile description refer to the manual "AKD2G EtherCAT® Communication". Notes to FSoE also see (→ # 226).

7.12.2 PROFINET

AKD2G with connectivity option **P** can be connected as slaves to a PROFINET network by using RJ45 connectors X11 (Port 2) and X12 (Port 1). PROFINET RT or IRT protocols can be used.



AKD2G with connectivity option **P** (PROFINET) has successfully passed the certification tests of "PROFIBUS Nutzerorganisation e.V."

Scope of the tests:

- PNIO Version: V2.35
- Conformance Class: C
- Optional Features: Legacy, MRP
- Application Class: Isochronous
- Netload Class: III

The certificate ([Z12974](#)) can be downloaded from the Kollmorgen website.

Address

The field bus address must either be set automatically or by using the memory card.


LEDs

The communication status is indicated by the built-in connector LEDs.

	Connector	Name	Function
	X11 Port 2	BF	ON = No Configuration, low speed, no link OFF = No Error Flashing 2Hz = No data exchange
	X11 Port 2	Link/ Activity	ON = Connection to the EtherNet OFF = No connection to the EtherNet Flashing = Sends/receives EtherNet frames
	X12 Port 1	SF	ON = Watchdog timeout; channel / generic / extended diagnosis present; system error OFF = No Error Flashing 2Hz = DCP signal service is initiated via the bus
	X12 Port 1	Link/ Activity	ON = Connection to the EtherNet OFF = No connection to the EtherNet Flashing = Sends/receives EtherNet frames

Bus topology example (PROFINET)

Kollmorgen suggest to use ENCP cables. For more possible system solutions refer to the WorkBench Online Help.


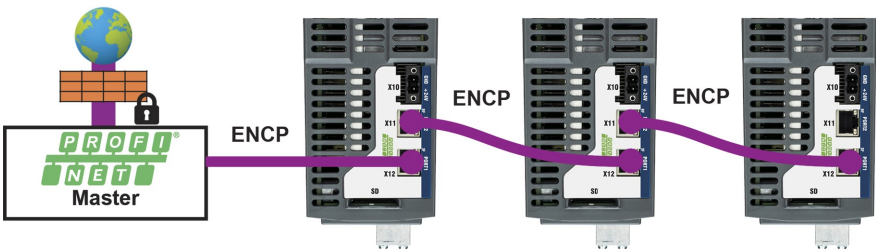


Communication profile

For PROFINET communication profile description refer to the manual "AKD2G PROFINET Communication".


7.12.3 EtherNet/IP

AKD2G with connectivity option I can be connected as slaves to a EtherNet/IP network by using RJ45 connectors X11 (Port 2) and X12 (Port 1). The communication status is indicated by the built-in connector LEDs.

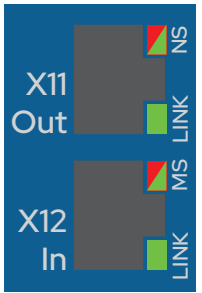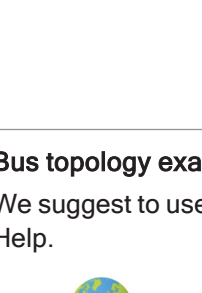	LED Indicator	Status	Function
	 Network Status (NS)		On Connection
			Flashing No Connection
			Off No power, No IP Address
			On Duplicate IP Address
			Flashing Connection Time-Out
			Flashing Self-Test
	 Link/Activity		On Ethernet Connection
			Off No Ethernet Connection
	 Module Status (MS)		On Device Operational
			Flashing Standby
			Off No Power
			On Unclearable Fault
			Flashing Clearable Fault
			Flashing Self-Test
	 Link/Activity		On Ethernet Connection
			Off No Ethernet Connection


Bus topology example (EtherNet/IP)

We suggest to use Kollmorgen ENCP cables. For more possible system solutions refer to the WorkBench Online Help.

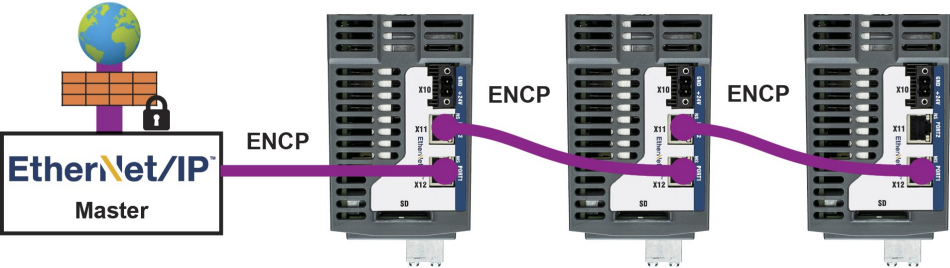

7.13 CAN-Bus Interface connector X13/X14


AKD2G drives with connectivity option C can be connected to a CAN-Bus by using two 6-pin RJ25 connectors X13/X14.

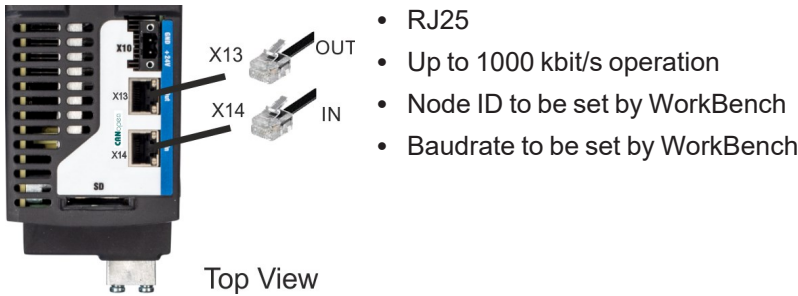

Pin	Signal	Description
1	Termination	Internal Termination Resistor
2	Shield	Chassis
3	CAN_high	CAN bus high signal
4	CAN_low	CAN bus low signal
5	CAN_GND	CAN bus ground
6	Termination	Internal Termination Resistor

7.13.1 CAN-Bus Topology

We recommend the use of Kollmorgen CBP000 cables.

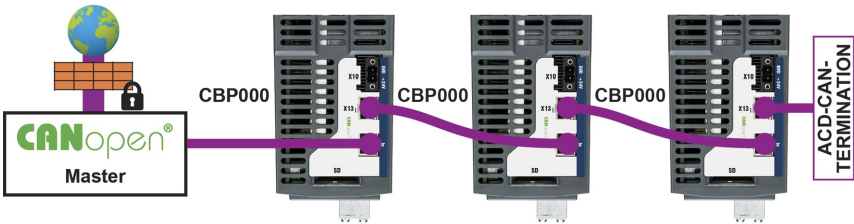

Cable requirements

To meet ISO 11898, a bus cable with a characteristic impedance of 120 Ω should be used. The maximum usable cable length for reliable communication decreases with increasing transmission speed.

As a guide, you can use the following values measured by Kollmorgen; however, these values are not assured limits:

- Characteristic impedance: 100-120 Ω
- Cable capacitance max.: 60 nF / 1000 m
- Lead loop resistance: 159.8 Ω / 1000 m


Transmission Rate (kBaud)	1000	500	250	125
Maximum Cable Length (m)	25	100	250	500

Lower cable capacitance (max. 30 nF / 1000 m) and lower lead resistance (loop resistance, 115 Ω / 1000 m) allow larger distances. The characteristic impedance 150 $\pm$ 5 Ω requires terminating resistor 150 $\pm$ 5 Ω .

Communication profile

For CANopen communication profile description refer to the manual "AKD2G CAN-Bus Communication".

7.13.2 CAN-Bus Wiring

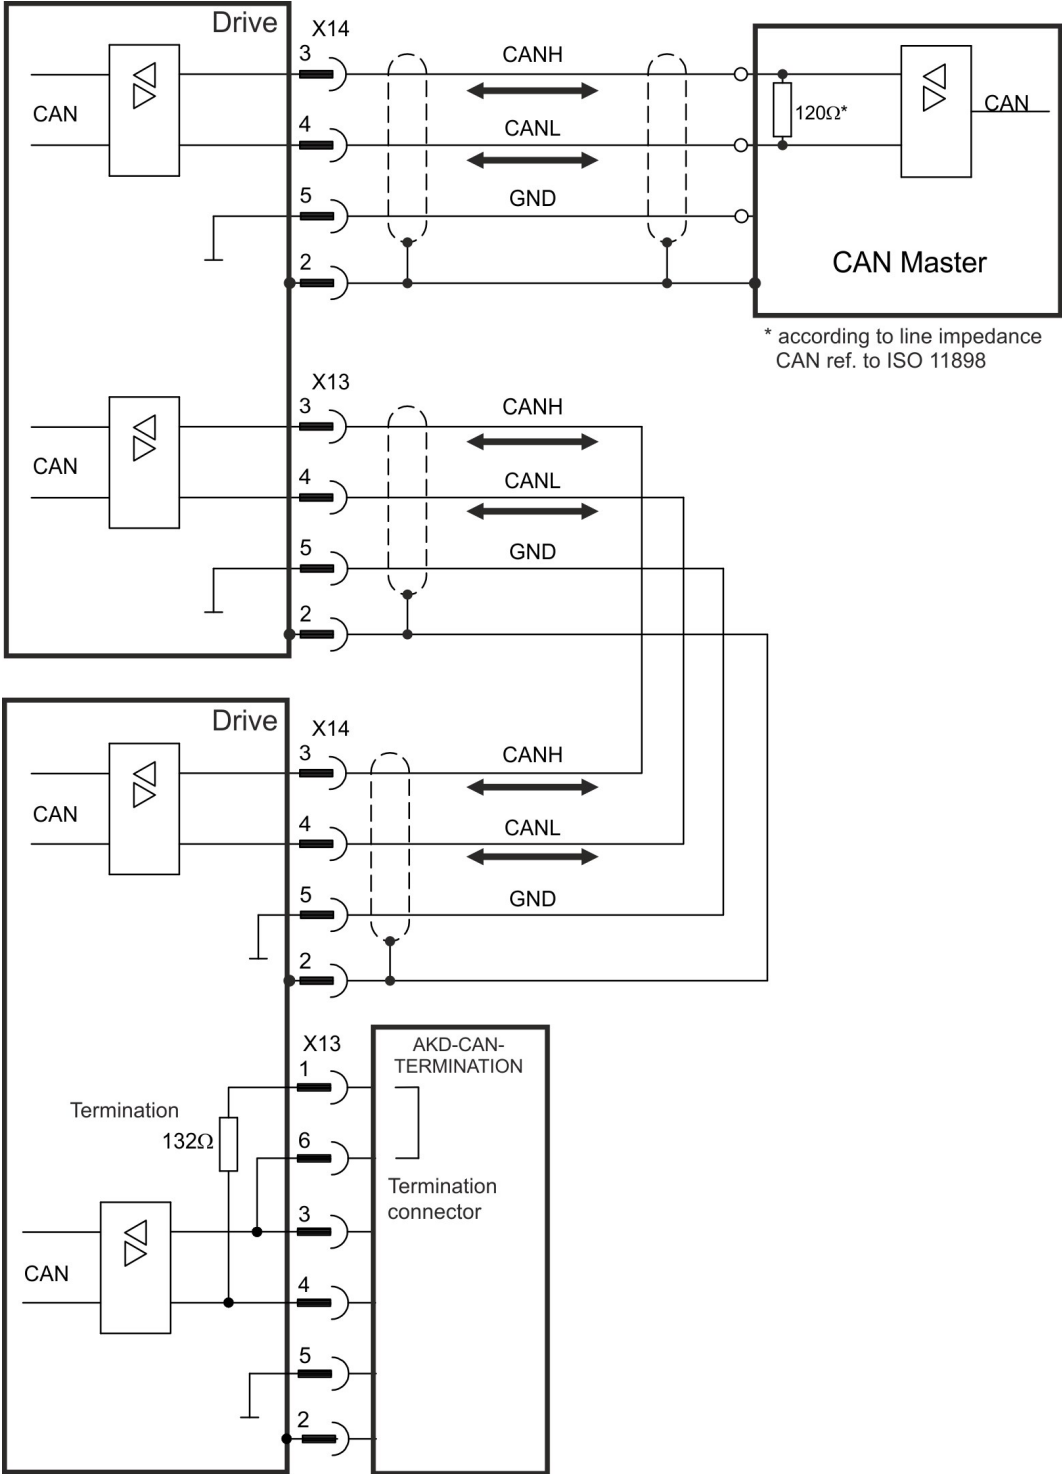

7.13.3 Baud rate for CAN-Bus

The transmission rate can be set by using the parameter **CANBUS.BAUD** in WorkBench.

Baud rate [kBit/s]	CANBUS.BAUD
125	125 (default)
250	250
500	500
1000	1000

With a fix baud rate, the drive sends the boot up message with the baud rate saved in the drive's non volatile memory after a power cycle.

7.13.4 Node Address for CAN-Bus


The node address can be set by using parameter **CANBUS.NODEID** in WorkBench.

NOTE

After changing the node address, you must turn off the 24 V auxiliary supply for the drive and then turn it on again.

7.13.5 CAN-Bus Termination


The last bus device on both ends of the CAN-Bus system must have termination resistors. The AKD2G has built-in 132 Ω resistors that can be activated by connecting pins 1 and 6. An optional termination plug is available for AKD2G (*AKD-CAN-TERMINATION*). The optional termination plug is an RJ25 connector with an enclosed wire jumper between pins 1&6. The termination plug should be inserted into the X13 connector of the last drive in the CAN network.

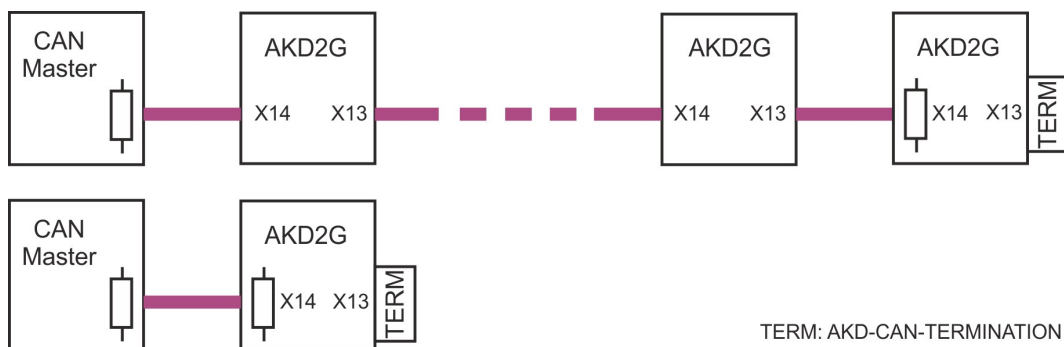

NOTE

Remove the termination connector if the AKD2G is not the last CAN-Bus device and use X13 for connecting the next CAN node.

7.14 Service Interface connector X20

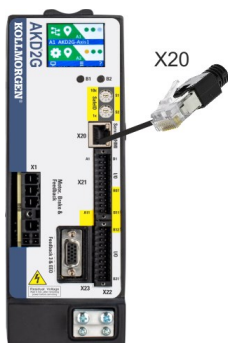

- RJ45 with built-in green/red dual-color LED
- 100/10 Mbit EtherNet TCP/IP
- Supports Auto-IP, DHCP and fixed IP addressing
- Supports point-to-point (i.e. Auto-IP) and connection by using network switches
- Supports automatic discovery in WorkBench if in the same sub-net.


Pin	Signal	Description
1	Tx+	Transmit +
2	Tx-	Transmit -
3	Rx+	Receive +
4	Termination	Bob Smith termination
5	Termination	Bob Smith termination
6	Rx-	Receive -
7	Termination	Bob Smith termination
8	Termination	Bob Smith termination

Operating, position control and motion-block parameters can be set up by using WorkBench on an ordinary commercial PC (→ # 191).

Connect the service interface X20 of the drive to an EtherNet interface on the PC directly or by using a network switch, **while the supply to the equipment is switched off**. Use standard Cat. 5 EtherNet cables for connection. In some cases crossover cables will also work.

Make sure that the link LED on the AKD2G (RJ45 connector) and on your PC (or network switch) are both illuminated. The electrical connection is well established if both LED's light up green.

7.14.1 Possible Network Configurations

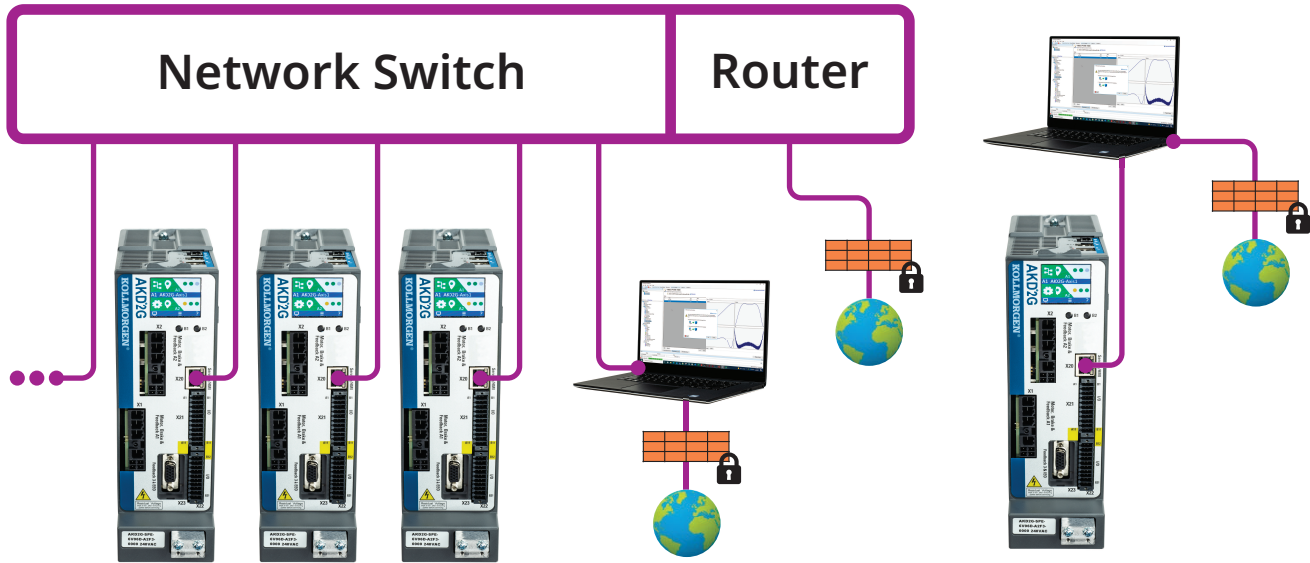

7.15 Modbus TCP connector X20

The drive can be connected to Modbus HMI by using RJ45 connector X20. The protocol allows reading and writing of drive and axis parameters.

The communication status is indicated by the built-in LED.

Connector	LED	Name	Function
X20	LED	IN port Link	green = active, red = not active

Connect the service interface (X20) of the drive to an EtherNet interface on the Modbus HMI directly or by using a network switch, **while the supply to the equipment is switched off**. Use standard Cat. 5 EtherNet cables for connection.

Confirm that the link LED on the AKD2G (the green LED on the RJ45 connector) and on your HMI or switch are both illuminated. If both LEDs are illuminated, then you have a good electrical connection.

The following are required to connect an HMI to the drive:

- The HMI must support Modbus TCP.
- It must have EtherNet hardware and a driver for Modbus TCP, though the driver does not have to be made specifically for the AKD2G family.

The subnet mask of the AKD2G is 255.255.255.0. The first three octets of the drive's IP address must be the same as the first three octets of the HMI's IP address. The last octet must be different.

Modbus TCP and WorkBench/KAS-IDE can operate simultaneously if a switch is used.

Communication profile

For Modbus communication profile description refer to the WorkBench Online Help.

7.16 I/O Connectors X21/X22/X23

X21


- standard
- 2 x 11 pins, pitch 3.5 mm
- A: left connector
- B: right connector



X22

- standard
- 2 x 10 pins, pitch 3.5 mm
- A: left connector
- B: right connector

X23

- standard
- SubD 15 pins HD
- Mating connector: male

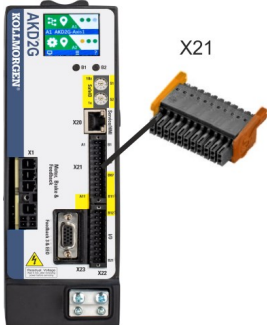X21	Pin	Signal	Pin	Signal
	A1	Analog-In (AIN) 1 +	B1	Analog-Out (AOUT) 1
	A2	Analog-In (AIN) 1 -	B2	AGND
	A3*	Digital-In (DIN) 1	B3	+24 V
	A4*	Digital-In (DIN) 2	B4	DGND
	A5	Digital-In (DIN) 3 (HW-Enable Axis 1)	B5	Digital-Out (DOUT) 9 + (Relay)
	A6	Digital-In (DIN) 4 (HW-Enable Axis 2)	B6	Digital-Out (DOUT) 9 - (Relay)
	A7	Digital-In (DIN) 5	B7	SOUT1
	A8	Digital-In (DIN) 6	B8	SOUT2
	A9	Digital-In (DIN) 7	B9	SOUT3
	A10	Digital-In (DIN) 8	B10	SOUT4
	A11	SIN1	B11	SIN2

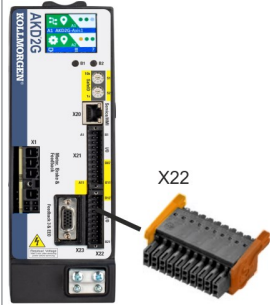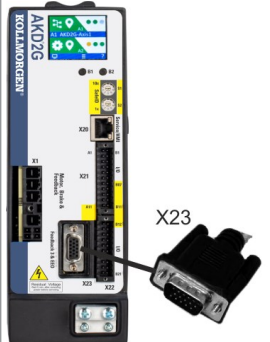X22	Pin	Signal	Pin	Signal
	A12	SIN3	B12	SIN4
	A13	Digital-In (DIN) 9	B13	Digital-Out (DOUT) 5
	A14	Digital-In (DIN) 10	B14	Digital-Out (DOUT) 6
	A15	Digital-In (DIN) 11	B15	Digital-Out (DOUT) 7 +
	A16	Digital-In (DIN) 12	B16	Digital-Out (DOUT) 7 -
	A17	AGND	B17	Digital-Out (DOUT) 8 +
	A18	Analog-In (AIN) 2+	B18	Digital-Out (DOUT) 8 -
	A19	Analog-In (AIN) 2-	B19	Analog-Out (AOUT) 2
	A20*	Digital-In/Out (DIO) 1 +	B20*	Digital-In/Out (DIO) 2 +
	A21*	Digital-In/Out (DIO) 1 -	B21*	Digital-In/Out (DIO) 2 -
X23 (optional)	Pin	Signal		
	2	Digital-In/Out (DIO) 6 +		
	3	Digital-In/Out (DIO) 6 -		
	6	Digital-In/Out (DIO) 5 +		
	7	Digital-In/Out (DIO) 5 -		
	10	+5 V		
	11	0 V		
	12	Digital-In/Out (DIO) 3 +		
	13	Digital-In/Out (DIO) 3 -		
	14	Digital-In/Out (DIO) 4 +		
	15	Digital-In/Out (DIO) 4 -		

7.16.1 Technical data

Interface	Electrical Data
Analog inputs Analog-In (AIN) 1 to 2	• ± 10 VDC • common mode rejection ratio: > 30 dB at 60 Hz • resolution 16 bit and full monotonic • update rate: 16 kHz • non-linearity < 0.1% of full scale • offset drift max. 250 $\mu\text{V}/^\circ\text{C}$ • input impedance > 13 kΩ
Analog outputs Analog-Out (AOUT) 1 to 2	• 0 to +10 VDC, max 20 mA • resolution 16 bit and full monotonic • update rate: 4 kHz • non-linearity < 0.1% of full scale • offset drift max. 250 $\mu\text{V}/^\circ\text{C}$ • short circuit protected to AGND • output impedance 110 Ω
Digital inputs Digital-In (DIN) 1 to 2 IEC 61131-2 Type 1	• ON: 15 VDC to 30 VDC, 2 mA to 15 mA • OFF: -5 VDC to 5 VDC, max.15 mA • galvanic isolation for 60 VDC • activation / deactivation delay: < 1 μs / < 1 μs
Digital inputs Digital-In (DIN) 3 to 12 IEC 61131-2 Type 1	• ON: 15 VDC to 30 VDC, 2 mA to 15 mA • OFF: -5 VDC to 5 VDC, max.15 mA • galvanic isolation for 60 VDC • delay activation / deactivation: about 5 μs / 500 μs
Digital outputs Digital-Out (DOUT) 5 to 6	• max. 30 VDC, 100 mA • short circuit proof • galvanic isolation for 60 VDC • delay activation / deactivation: about 5 μs / 300 μs
Digital outputs Digital-Out (DOUT) 7 to 8	• volt-free contacts, max 30 VDC, 100 mA • sink or source • galvanic isolation for 24 VDC from PE • delay activation / deactivation: about 5 μs / 50 μs
Digital inputs/outputs Digital-In/Out (DIO) 1 to 6	• RS485, 5V, max 100mA • reference potential X22: AGND, X23: 0V • input OFF: -0.3 V to +0.3 V • selectable termination, difference/single ended • delay activation / deactivation: about 50 ns
Digital output Digital-Out (DOUT) 9	• max. 30 VDC, 1A • max. 42 VAC, 1 A • galvanic isolation for 24 VDC from PE • delay open/close: 10 ms / 10 ms

Interface	Electrical Data
Safe digital inputs SIN1 to SIN4	- ON: > 15 VDC, > 2 mA, OFF: < 5 VDC, < 1 mA - galvanic isolation for 60 VDC - delay activation / deactivation about: 1.5 ms / 3.5 ms - test pulse are required
Safe digital outputs SOUT1 to SOUT4	- volt-free contacts, max 30 VDC, 172 mA - short circuit proof - galvanic isolation for 24 VDC from PE - activation delay (0->1) depends on the safety function - hardware deactivation delay (1>0) about 300 μs - emits test pulses

7.16.2 Analog Input

The drive is fitted with differential inputs for analog torque, velocity, or position control. The standard drive offers one analog input on X21, dual axis drives and drives with built-in option IO or DX offer a second analog input on X22.


NOTICE

Maximum distance for unshielded I/O lines is 3 m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

Technical characteristics

- Differential input voltage range: ± 10 V
- Maximum input voltage referring to I/O Return: -12.5, +16.0 V
- Resolution: 16 Bit and fully monotonic
- Firmware update rate: 16 kHz
- Unadjusted offset: < 50 mV
- Offset drift typ: 250 μ V / ° C
- Gain or slope tolerance: +/- 3%
- Nonlinearity: < 0.1% of full scale or 12.5 mV
- Common Mode Rejection Ratio: > 30 dB at 60 Hz
- Input impedance: > 13k Ω s
- Signal to noise ratio referred to full scale:
 - AIN.CUTOFF = 3000 Hz: 14 bit
 - AIN.CUTOFF = 800 Hz: 16 bit

Analog Input Wiring Diagram

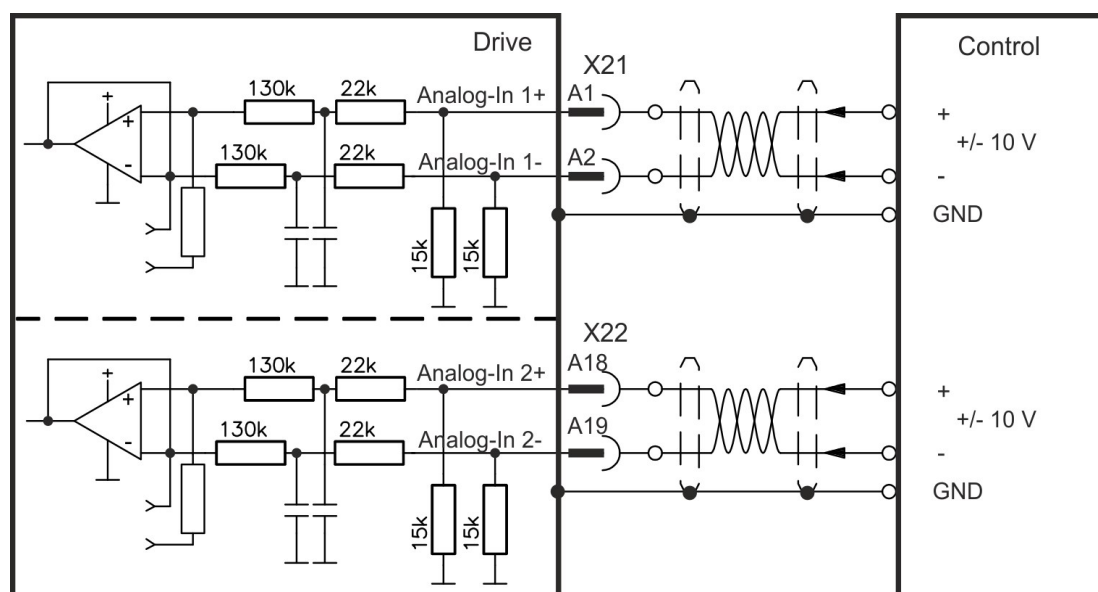

Application examples for set point input Analog-In:

- reduced-sensitivity input for setting-up/jog operation
- pre-control/override

Defining the direction of rotation

Standard setting: clockwise rotation of the motor shaft (looking at the shaft end) affected by positive voltage between terminal (+) and terminal (-)

To reverse the direction of rotation, swap the connections to terminals +/- or change parameter `AXIS#.DIR` in WorkBench.

7.16.3 Analog Output

Analog Outputs can be used to output converted analog values of digital measurements recorded in the drive. The standard drive offers one analog output on X21, dual axis drives and drives with built-in option IO or DX offer a second analog output on X22.


NOTICE

Maximum distance for unshielded I/O lines is 3 m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

Technical characteristics

- Output voltage range referring to AGND: 0 to 10 V
- Resolution: 16 Bit and fully monotonic
- Update rate: 4 kHz
- Unadjusted offset: < 50 mV
- Offset drift typ: 250 $\mu\text{V}/^\circ\text{C}$
- Gain or slope tolerance: +/- 3%
- Nonlinearity: < 0.1% of full scale or 20 mV
- Output impedance: 110 Ω
- Specification complies with IEC 61131-2 Table 11
- -3 dB Bandwidth: >8 kHz
- Maximum output current: 20 mA
- Capacitive load: any value but response speed limited by max Iout and by Rout
- Protected for short circuit to AGND

Analog Output Wiring Diagram

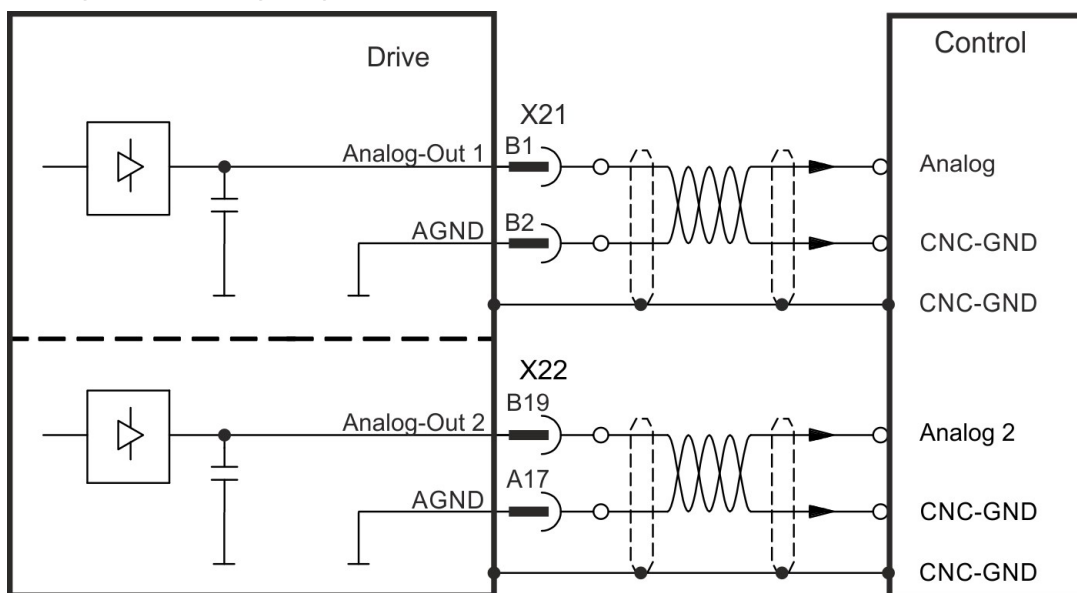

7.16.4 Digital Inputs

The drive provides 8 digital inputs on X21. Dual axis drives and drives with built-in option IO or DX offer additional 4 inputs on X22 and 2 programmable Input/Outputs on X22. If X23 is built-in and not used for feedback or EEO function, then it offers 4 additional programmable Input/Outputs.

All inputs can be used to initiate pre-programmed actions. A list of actions is included in WorkBench. If an input is programmed, it must be saved to the drive.

The drive provides 4 safe digital inputs on X21 and X22. These inputs can be used as safe inputs, based on the installed functional option (→ # 221).

NOTICE

Maximum distance for unshielded I/O lines is 3 m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

NOTE


Depending on the selected function, the inputs are high or low active. Digital input filter can be set in WorkBench to change sensitivity of the inputs (see Online Help).

7.16.4.1 Digital-In 1 and 2

These inputs (IEC 61131-2 Type 1) are particularly fast and are therefore suitable for position latch functions. They can also be used as 24 V inputs for electronic gearing (→ # 157).

Technical characteristics

- Floating, reference common line is DGND
- High: 15 to 30 V/2 to 15 mA , Low: -5 to +5 V/<15 mA
- Update rate: firmware reads hardware input state every 250 µs
- High accuracy latch: motor feedback position or interpolated time is latched or captured within 2 µs of input signal transition (with digital input filter set to 40 ns)
- The AKD2G capture engine is polled every 62.5 µs (16 kHz) by the firmware

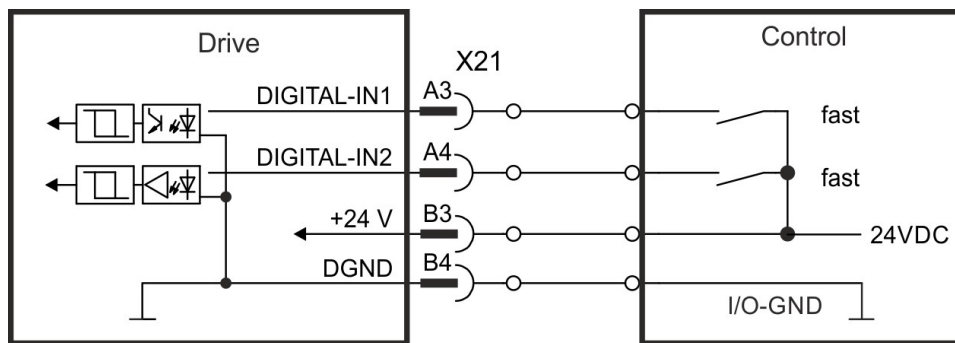Wiring example

7.16.4.2 Digital-In 3 to 12

These inputs (IEC 61131-2 Type 1) are programmable with WorkBench.

Manufacturer setting:


- Digital-In 3: HW-Enable Axis 1
- Digital-In 4: HW-Enable Axis 2
- Digital-In 5 ...12: off

Choose the function you require in WorkBench and refer to the software for more information.

Technical characteristics

- Floating, reference common line is DGND
- High: 15 to 30 V/2 to 15 mA , Low: -5 to +5 V/<15 mA
- Update rate: firmware reads hardware input state every 250 μ s

Wiring example

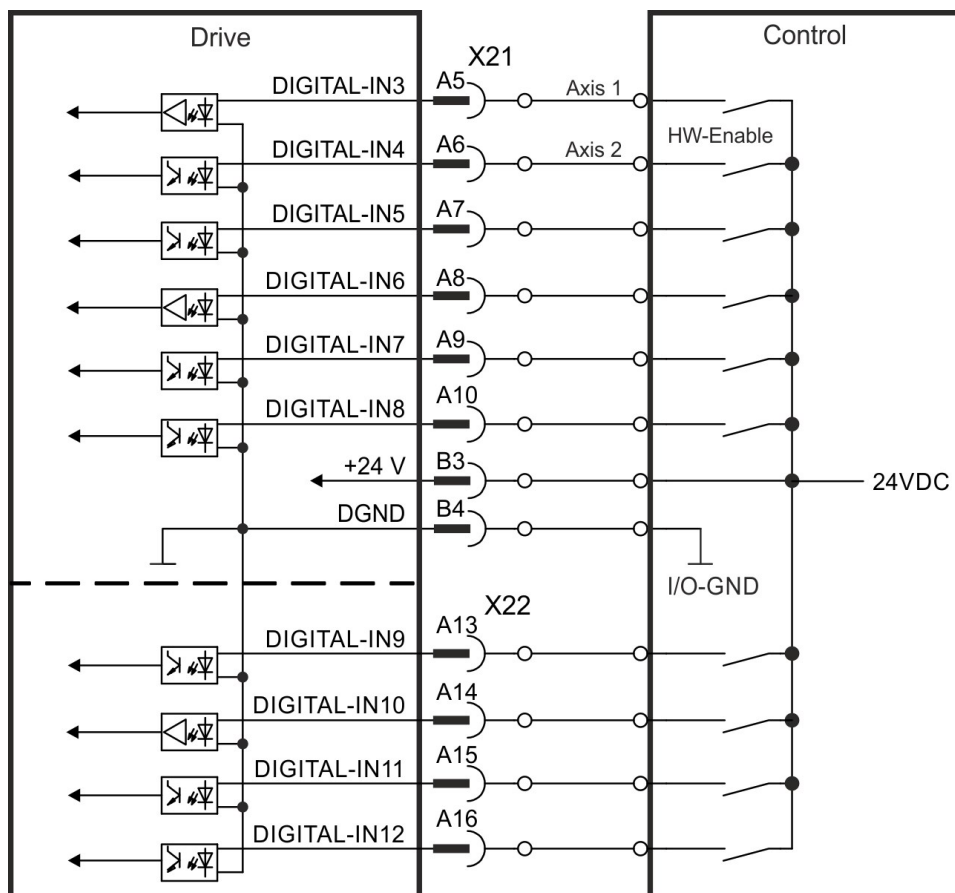

7.16.4.3 Digital-In/Out 1 and 2

Pins X22/A20-A21 (Digital-In/Out 1) and X22/B20-B21 (Digital-In/Out 2) can be defined as either inputs or outputs. For programming refer to WorkBench.


NOTICE

NOT compatible with 24V signal level! Will be damaged if connected to +24V!

Technical characteristics when configured for input:

- RS485 common is AGND; not optically isolated
- No wire break detection
- Termination Selection: Unterminated or DC Terminated
- Differential or Single-ended
 - For single-ended:
 - Negative terminal is open circuit; Positive input high signal = 3 - 5 V.
 - Force input high with 5 V driver applied to DIO1/2+; pull input low by sinking DIO1/2+ to AGND. Open circuit (floating) input will typically be high.
- Update rate: firmware reads hardware input state every 250 μ s
 - When used for capture, timing resolution is <1 μ s

Wiring example

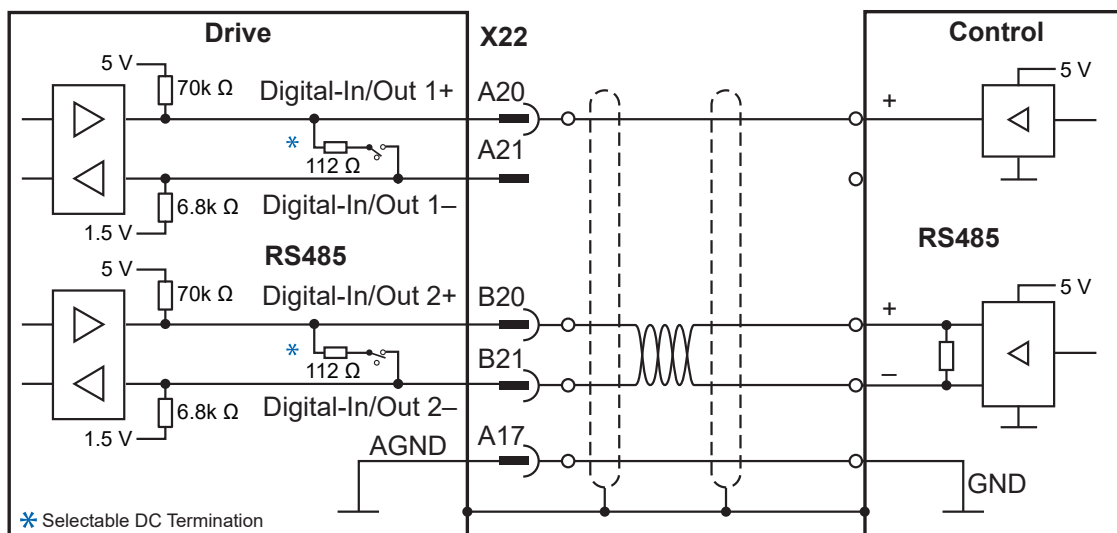

7.16.4.4 Digital-In/Out 3 to 6

X23 can be used for digital I/O. The channels can be defined as inputs or outputs. For programming refer to WorkBench.


NOTICE

NOT compatible with 24 V signal level! Will be damaged if connected to +24 V!

Technical characteristics when configured for input:


- RS485 reference common line is 0 V
- No wire break detection
- DIO 3/4 Termination Selection: Unterminated (AC Termination) or DC Terminated
- DIO 5 Termination Selection: Unterminated (AC Termination) or DC Terminated on newer models*
- DIO 6 Termination Selection: Unterminated (AC Termination) Only
- Differential only
- Update rate: firmware reads hardware input state every 250 μ s
 - When used for capture, timing resolution is <1 μ s

Wiring example

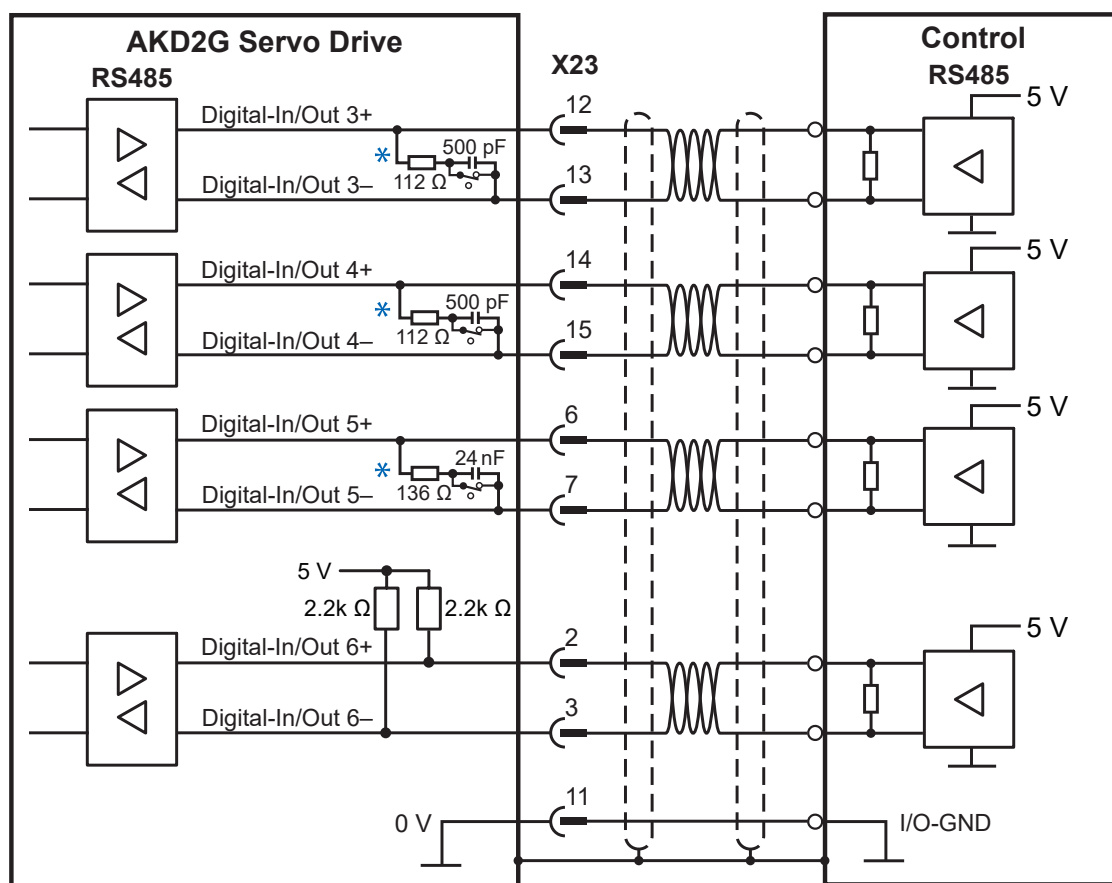

* AC / DC Selectable Termination

Older drives may not include a DC termination switch across DIO5 (Pins 6 and 7). Please contact Kollmorgen Support for more information.



7.16.5 Digital Outputs

The drive provides 4 safe digital outputs on X21. These outputs can be used as safe outputs see (→ # 222). For more information refer to WorkBench.

Dual axis drives and drives with built-in option IO or DX offer additional 4 digital outputs and 2 programmable Input/Outputs. If X23 is built-in and not used for feedback or EEO function, then it offers 4 additional programmable Input/Outputs.

The relay output can be used as fault or ready to operate signal.

NOTICE

Maximum distance for unshielded I/O lines is 3 m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.


Choose the required action in WorkBench. A list of actions is included in the software. If an output is programmed, it must be saved to the drive.

7.16.5.1 Digital-Out 5 to 6

These outputs are programmable with WorkBench. By default, all outputs are not programmed (off).

Technical characteristics

- The outputs can switch +5 V to +30 V
- All digital outputs are floating
- High side, output current max. 100 mA
- Update rate: 250 μ s

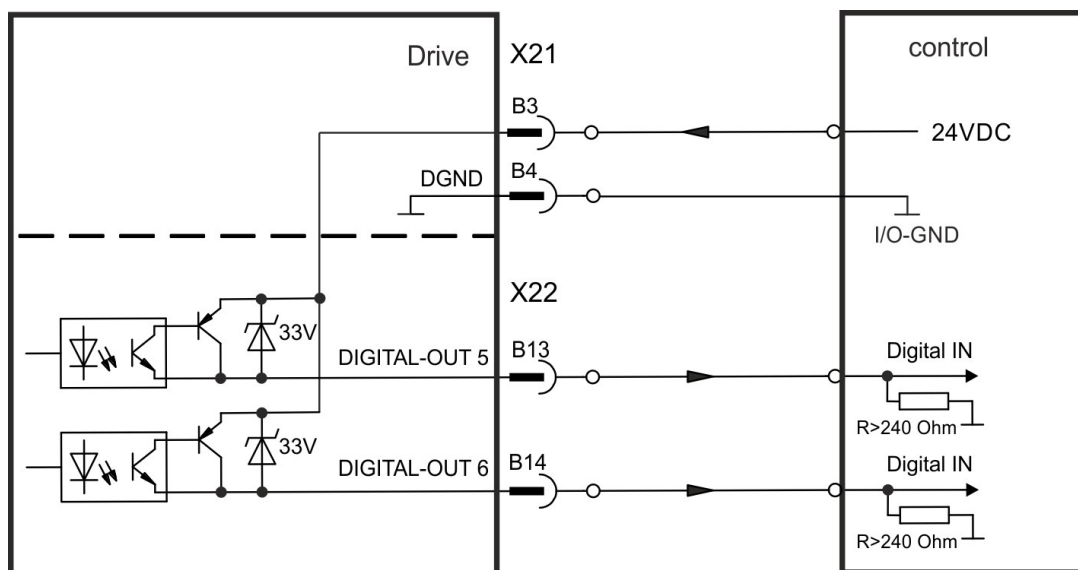


7.16.5.2 Digital-Out 7 and 8

These outputs are programmable with WorkBench. By default, all outputs are not programmed (off).

Technical characteristics

- The outputs can switch +5 V to +30 V
- Galvanic isolation for 24 VDC from PE
- The two channels are isolated from one another and not referred to a common potential
- Output current max. 100 mA
- Can be wired as sinking or sourcing (see examples below)
- Update rate: 250 μ s

Wiring examples

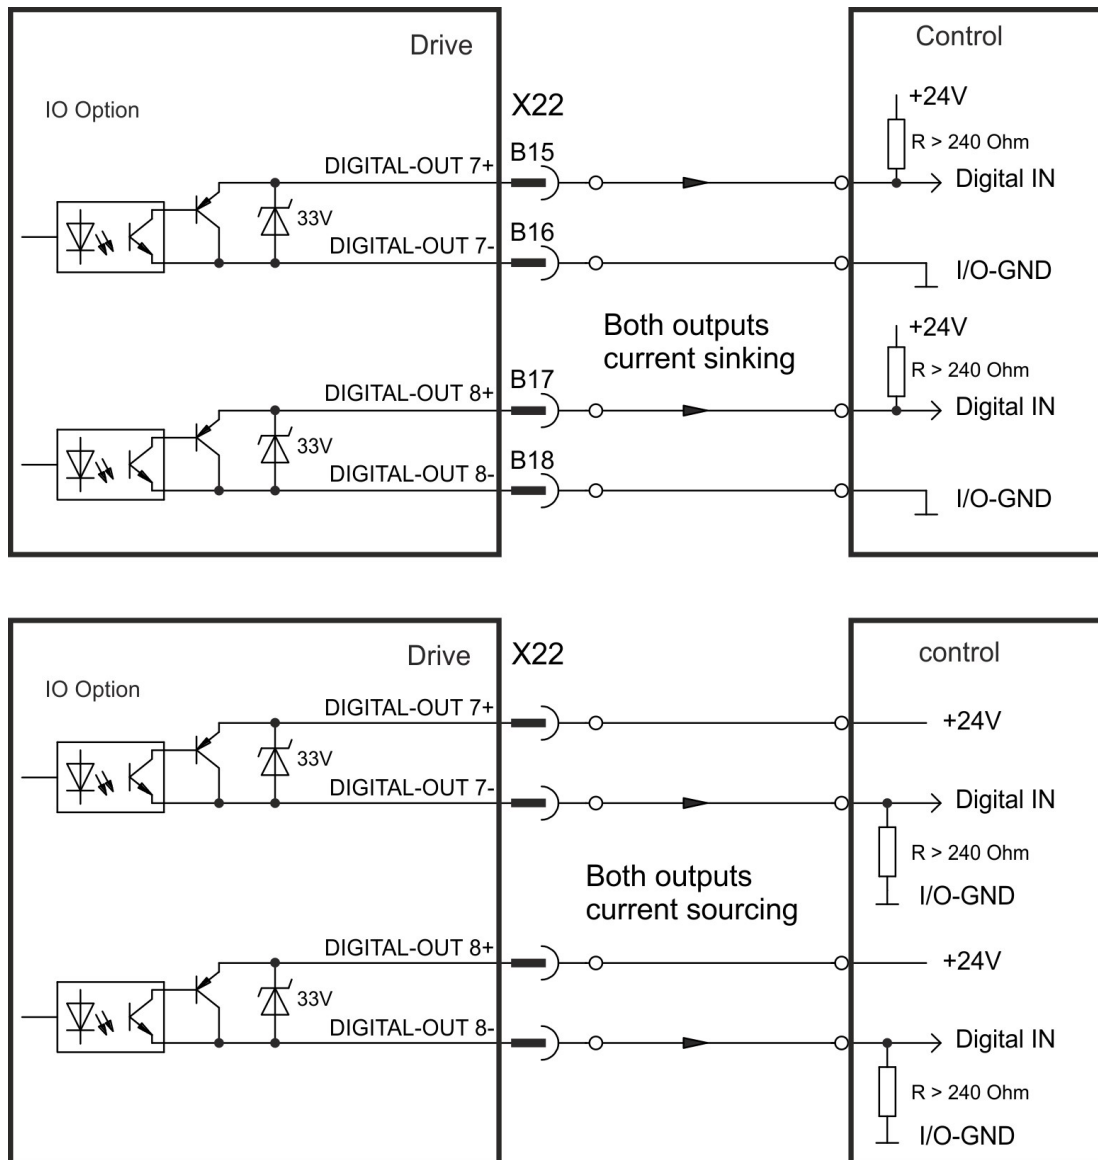


7.16.5.3 Digital-In/Out 1 and 2

Pins X22/A20-A21 (Digital-In/Out 1) and X22/B20-B21 (Digital-In/Out 2) can be used as either inputs or outputs. For programming refer to WorkBench.

Technical characteristics if configured as output

- RS485, reference common line is AGND
- No wire break detection
- Termination Selection: Unterminated (recommended) or DC Terminated
- Differential or single-ended
 - For single-ended: Negative terminal is open circuit
- Update rate: 250 μ s

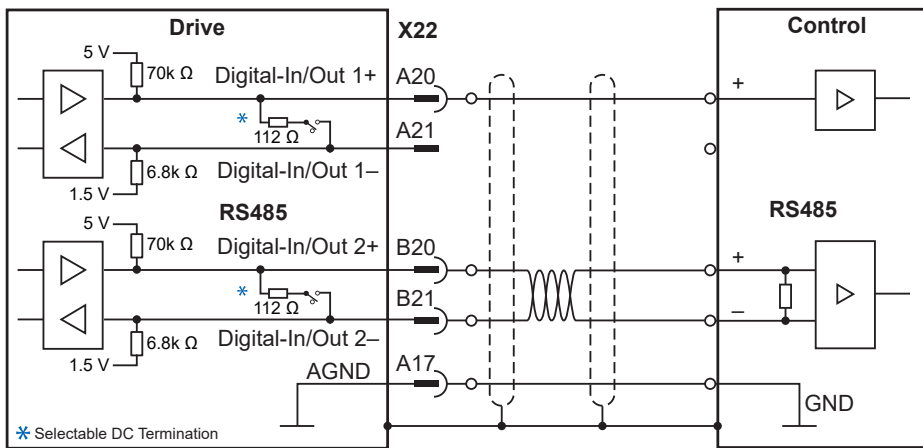


7.16.5.4 Digital-In/Out 3 to 6

X23 can be used for digital I/O. The channels can be defined as inputs or outputs. For programming refer to WorkBench.

Technical characteristics if configured as output

- RS485, reference common line is 0V
- No wire break detection
- DIO 3/4 Termination Selection: Unterminated (AC Termination) (recommended) or DC Terminated
- DIO 5 Termination Selection: Unterminated (AC Termination) (recommended) or DC Terminated on newer models*
- DIO 6 Termination Selection: AC termination only
- Differential or single-ended
 - For single-ended: Negative terminal is open circuit
- Update rate: 250 μ s

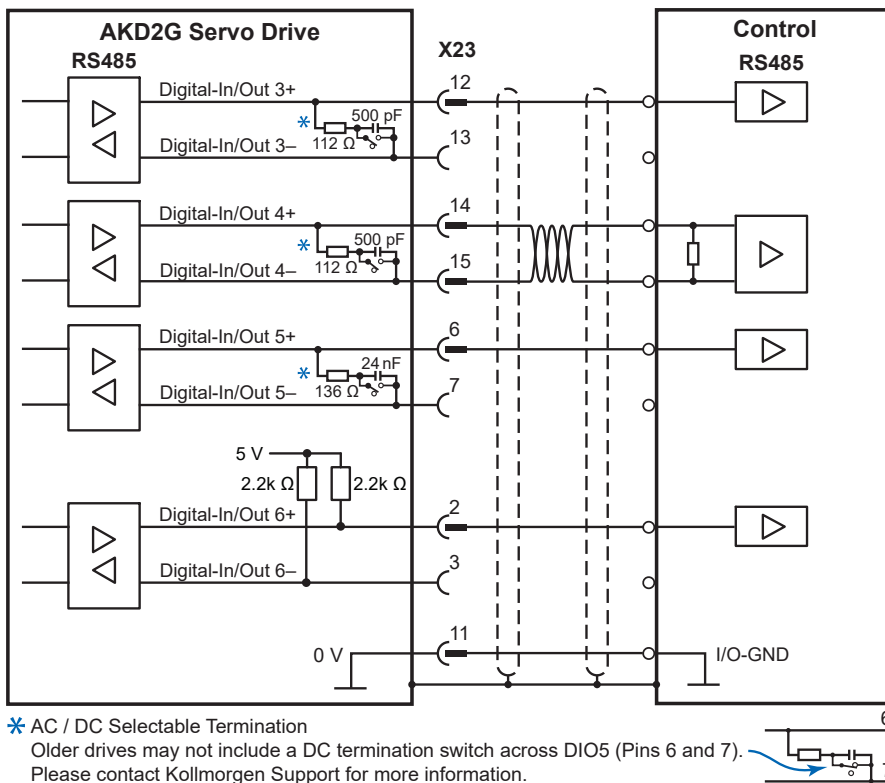

7.16.5.5 Digital-Out 9, Relay contacts

Digital-Out 9 is programmable with WorkBench.


By default, the output function is defined as ready to operate output by action parameter.

NOTICE

If an inductive load (relay or similar) is used, a freewheeling diode must be added to the load.

Technical characteristics

- Relay output, max. 30 VDC or 42 VAC, 1 A
- Galvanic isolation for 24 VDC from PE
- Time to close: max. 10 ms
- Time to open: max. 10 ms

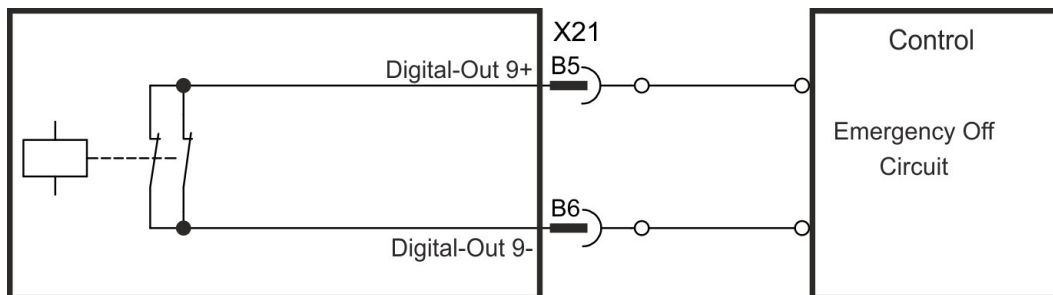

8 Setup

8.1 Important Notes	186
8.2 Guide to Servo Drive Setup	187
8.3 Switch-On and Switch-Off Behavior	192
8.4 Fault and Warning Messages	199
8.5 Troubleshooting	200

8.1 Important Notes

NOTICE

Only professional personnel with extensive knowledge in the fields of electrical engineering and drive technology are allowed to test and set up the drive.



DANGER Lethal Voltage!

There is a danger of serious personal injury or death by electrical shock. Lethal danger exists at live parts of the device.

- Built-in protection measures such as insulation or shielding may not be removed.
- Work on the electrical installation may only be performed by trained and qualified personnel, in compliance with the regulations for safety at work, and only with switched off mains supply, and secured against restart.
- In normal operation, the cabinet door must be closed and the device must not be touched.



WARNING Automatic Restart!

Risk of death or serious injury for humans working in the machine. The drive might restart automatically after power on, voltage dip or interruption of the supply voltage, depending on the parameter setting. If parameter AXIS#DEFAULT is set to 1,

- then place a warning sign ("WARNING: Possible Automatic Restart" or similar) to the machine.
- ensure, that power on is enabled, while humans are in a dangerous zone of the machine.



WARNING Ejection of molten particles!

If particles fall into the drive or the drive has been damaged, molten drive component particles may be ejected causing injuries. Shut down the drive and wear appropriate protective gear during maintenance work, troubleshooting and fault rectification.(→ # 31)



CAUTION High Temperature!

Risk of minor burns. The heat sink of the drive can reach temperatures up to 80°C in operation.

- Check the heat sink temperature before handling the drive.
- Wait until the heat sink has cooled down to 40°C before touching it.

NOTICE

If the servo drive has been stored for more than 1 year, re-form the capacitors in the DC bus link circuit. Re-forming procedures are described in the Kollmorgen Support Network ([Forming](#)).

NOTE

Additional information on setting up the equipment:

- Programming parameters and control loop behavior are described in the AKD2G User Manual (Online Help), see [Configuring the Command Source and Operating Mode](#).
- The setup of any fieldbus is described in the corresponding manual.

8.2 Guide to Servo Drive Setup

Setup your servo drive in two major steps:

1. Servo drive setup (this section). This section presents an example to test the drive initially. If the servo drive (servo motor, feedback, control circuits, I/Os) is well parameterized, then proceed with step 2.
2. Functional Safety setup (→ # 211).

8.2.1 Initial Procedure for Servo Drive Test


8.2.1.1 Unpacking, mounting, and wiring the AKD2G

1. Unpack the servo drive and accessories.
2. Mount the servo drive.
3. Wire the servo drive or apply the minimum wiring for servo drive testing as described below.
4. Make sure you have on hand the following information about the servo drive components:
 - rated mains supply voltage
 - motor type (motor data, if the motor type is not listed in the motor database)
 - feedback unit built into the motor (type, poles/lines/protocol)
 - moment of inertia of the load

8.2.1.2 Minimum wiring for servo drive test without load, example


NOTICE

This wiring diagram based on default settings is for general illustration only and does not fulfill any requirements for EMC, functional safety, or functionality of your application.

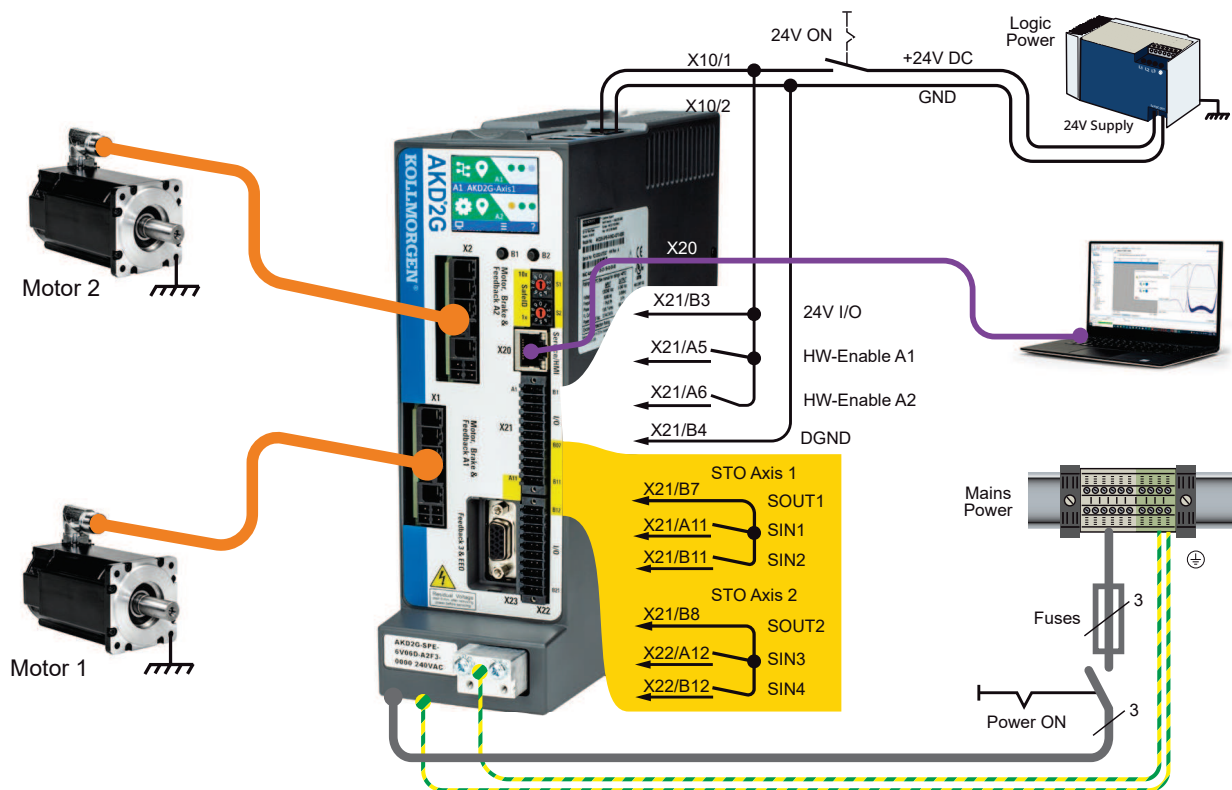

8.2.1.3 Confirm connections (example: directly to PC)

You can turn on logic power to the servo drive through the X10 connector (mains power voltage is not needed for communications).

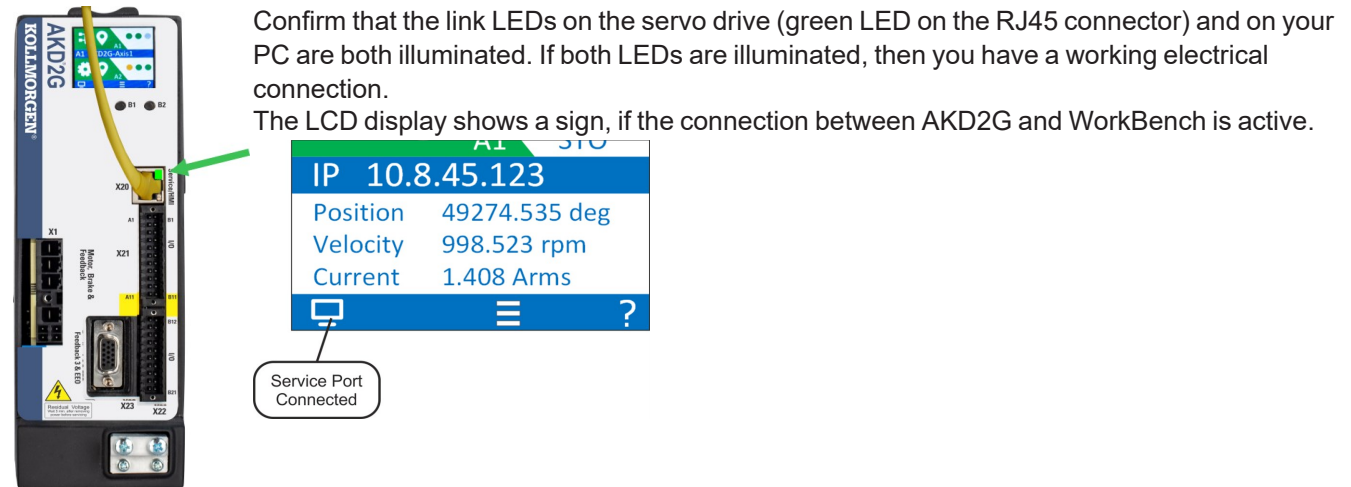

Use WorkBench to configure the servo drive by using the service interface.

The EtherCAT node is assigned automatically by the EtherCAT master. In order for WorkBench to connect to the drive over EtherCAT, TwinCAT/EoE must be utilized.

8.2.1.4 System integration - AKD2G only

MAC Address

The unique MAC address is pre-defined by the manufacturer (see nameplate).

Service IP Address

The AKD2G service port X20 supports auto-IP, DHCP and static IP addressing.

The servo drive is delivered with IP address 0.0.0.0. Depending on the connection (switch or PC) either DHCP or auto-IP mechanism assigns a unique IP address.

WorkBench uses the IP address to detect AKD2G devices in the LAN and start communication. With WorkBench you can set a static IP address for the servo drive (parameter *IP.ADDRESS*).

EtherCAT Node Address

The EtherCAT node address is assigned automatically by the EtherCAT master.

CAN Node ID


Set a CAN node ID for the servo drive in WorkBench (parameter *CANBUS.NODEID*).

PROFINET

Set the station name and IP address manually through the PROFINET master.

SafeID

Every module must have a unique SafeID in the safety system. Set the SafeID for every module with the two decimal rotary switches in the front.

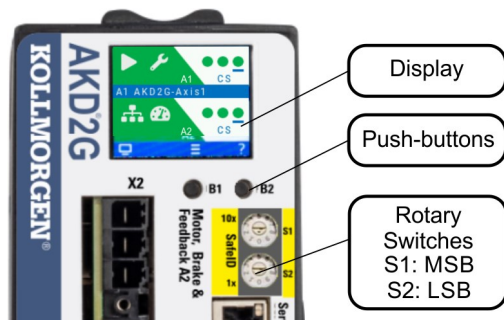

Process to set the SafeID

1. Switch off 24V supply voltage.
2. Set S1 and S2 to a unique SafeID.
3. Switch on the 24V supply voltage.

The SafeID is calculated based on the rotary switches setting:

$$\text{SafeID} = 10 \cdot S1 + S2$$

Example

Rotary switches: S1 = 2, S2 = 3 → SafeID = $10 \cdot 2 + 3 = 23$

Factory default setting

Rotary Switch setting S1 = 0, S2 = 1. Resulting SafeID is 1.

FSoE Address

The unique FSoE address for every axis is derived from the set SafeID.

FSoE address for axis 1 = SafeID • 100 + 1

FSoE address for axis 2 = SafeID • 100 + 2

Example

Rotary switches setting: S1 = 2, S2 = 3 → SafeID = $10 \cdot 2 + 3 = 23$

Resulting FSoE address for axis 1 = $23 \cdot 100 + 1 = 2301$

Resulting FSoE address for axis 2 = $23 \cdot 100 + 2 = 2302$

Factory default setting

Rotary Switch setting S1 = 0, S2 = 1. Resulting SafeID is 1.

Resulting FSoE address for axis 1 = $1 \cdot 100 + 1 = 101$

Resulting FSoE address for axis 2 = $1 \cdot 100 + 2 = 102$

8.2.1.5 Install and start WorkBench

WorkBench is available on the Kollmorgen website. Select the install file and follow the instructions given by the installer.

Once the installation is complete, click the WorkBench icon to start the program.

8.2.1.6 Setup the axis in WorkBench

Use the setup wizard and

1. Connect the axis
2. Setup the axis
3. Save the parameter set to the servo drive

Refer to the WorkBench Online Help for details.

8.2.1.7 Enable the axis (Hardware)

1. Switch 24 V to the STO inputs (X21/A11-B11 for axis 1 or X21/A12-B12 for axis 2).
2. Switch 24 V to the digital inputs for Hardware Enable Axis 1 (X21/A5) or 2 (X21/A6).

8.2.1.8 Move the motor axis


1. Select the Axis in WorkBench
2. Under Motion, select **Service Motion**
3. Select **Reversing**, check the default velocity and time settings for plausibility
4. Select **Start**.

8.2.1.9 Tune the axis

Details see *WorkBench Online Help*

8.2.2 WorkBench Installation

This chapter describes the installation of the WorkBench software for AKD2G drives. Kollmorgen offers training and familiarization courses on request.

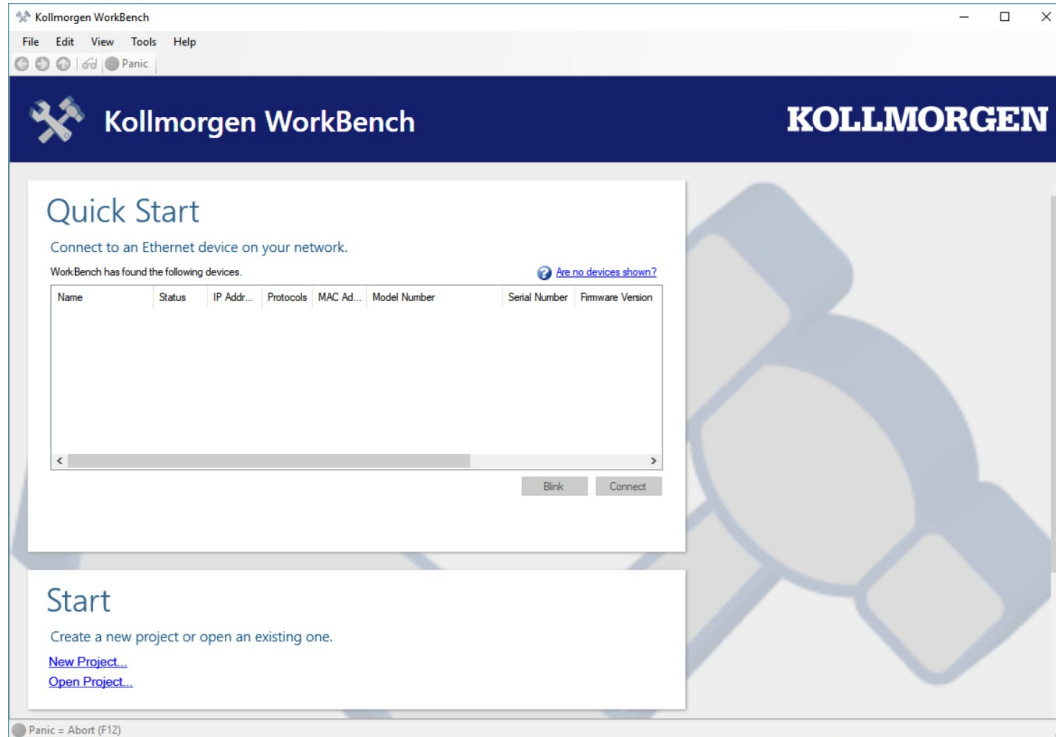

8.2.2.1 Use as directed

With the software to set up your drive you can alter and save the operating parameters for the AKD2G series of drives. The attached drive can be set up with the help of this software. During this procedure the drive can be controlled directly by the service functions.

Only professional personnel who have the relevant expertise (→ # 20) are permitted to carry out online parameter setting for a drive that is running.

Sets of data that have been stored on data media are not safe against unintended alteration by other persons. The use of unchecked data can result in unexpected movement. After loading a set of data always validate parameters which are relevant for the application before enabling the drive.

8.2.2.2 Software description

Each servo drive must be configured according to the requirements of your machine. For most applications you can use a PC and WorkBench (the software to setup your servo drive) to set up the operating conditions and parameters for your device.

An Ethernet cable connects the PC with the servo drive (→ # 167), WorkBench establishes the communication between PC and servo drive.

Please find the software to set up your servo drive in the download area of the Kollmorgen website.

With WorkBench you can

- easily change parameters and directly see what happens with your drive due to a continuous online connection to the drive,
- read important and actual values from the drive which are displayed on the PC (oscilloscope functions),
- save data sets on data media (archiving) and load them onto other drives or use them for backup and
- print data sets.

Most standard feedback systems are plug and play compatible. Motor nameplate data is stored in the feedback device and read by the servo drive automatically at startup. Non-plug and play Kollmorgen motors are stored in WorkBench and can be loaded with one-click using the Motor screen in the software.

An extensive online help with integrated description of all variables and functions supports you in each situation.

8.2.2.3 Hardware requirements

The Service interface (X20, RJ45) of the servo drive is connected to the Ethernet interface of the PC by an Ethernet cable (→ # 167).

Minimum requirements for the PC:

Processor: at least 1 GHz

RAM: 2 GB

Graphics adapter: Windows compatible, color, minimum 1024 x 768 dpi

Drives: hard disk with at least 500 MB free space

Interface: one free Ethernet Interface or Switch port

8.2.2.4 Operating systems

Windows 7/8/10/11

- WorkBench works with Windows 7, 8, 10 and 11
- .Net framework 4.8.1 or higher is required
- Visual C++ Redistributable (2010, 2013, 2015)
- Internet Explorer 10 or higher

Unix, Linux

The software does not run on Unix/Linux.

8.2.2.5 Installation under Windows 7/8/10/11


Use WorkBench to setup your servo drive. You can download the latest version from the Kollmorgen website.

Install the WorkBench as follows:


1. Download one of the following installation packages from www.kollmorgen.com:
 - Standard installation: Contains the application with complete help files. Dependencies like for example the .NET Framework will be downloaded from the internet if not already installed.
 - Full installation: Contains the application with complete help files and embedded dependencies like for example the .NET Framework.
2. After complete download, double-click on the downloaded file and follow the instructions.

Ethernet interface connection

- Connect the interface cable to an Ethernet interface on your PC or to a switch and to the AKD2G service interface X20 (→ # 167).

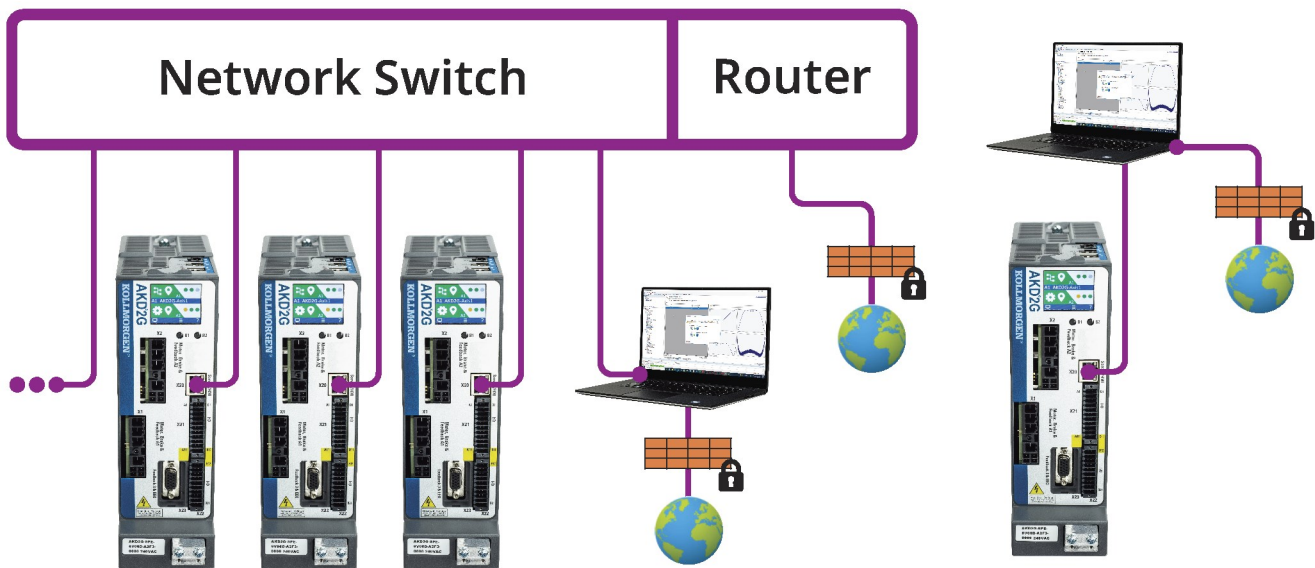

The LCD display shows a sign when AKD2G and WorkBench are connected.

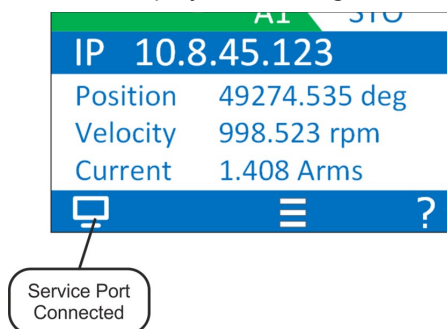

8.3 Switch-On and Switch-Off Behavior

This chapter describes the switch-on and switch-off behavior of the AKD2G with STO.

Behavior of "holding brake" function

Servo drives with an enabled holding brake function have a special timing for switching on and off the output stage (→ # 118). Events that remove the `AXIS#.ACTIVE` signal trigger the holding brake to apply. As with all electronic circuits, the general rule applies that there is a possibility of the internal holding brake module failing.

If the servo drive detects the motor to be at zero velocity (as configured by `AXIS#.ZEROT` and `AXIS#.ZEROV`) or timeout occurs during a stop procedure, the brake is applied. Set parameter `AXIS#.MOTOR.BRAKEIMM` to 1 with vertical axes, to apply the motor holding brake (→ # 118) immediately after faults or Hardware Disable.

Behavior when undervoltage condition is present

The behavior in an undervoltage condition depends on the `VBUS.UVMODE` setting.

VBUS.UVMODE	DC Bus Undervoltage Mode. Consult the WorkBench Online Help for configuring the parameter.
0	The servo drive will report a F2007 undervoltage fault any time an undervoltage condition occurs.
1 (default)	The servo drive will report a warning W2007 if not enabled. The servo drive will report a fault if it is enabled when the condition occurs, or an attempt is made to enable while an under voltage condition occurs.


Functional Safety

The servo drive can be braked down using SS1 and SDB and secured to standstill with SBC and STO. Even when power is being supplied, the servo drive shaft is protected against unintentional restart. The chapter “Functional Safety” describes how to use the safety functions (→ # 204).

- Functional Safety can be ensured with configured SBC (→ # 238) only.
- For SIL 3 a second (external) motor brake for an axis is required. For single axis drives this brake can be connected to X4 (→ # 120). For dual axis drives the additional brake must be controlled from another source (e.g. from the other axis or externally from a safety controller). The brakes can be mapped to an axis with WorkBench.
- The Hardware Enable does not initiate a controlled stop but switches off the power stage immediately.
- Set parameter `AXIS#.MOTOR.BRAKEIMM` to 1 with vertical axes, to apply the brake immediately after faults or Hardware Disable.

8.3.1 Switch-on Behavior in Standard Operation

The diagram below illustrates the correct functional sequence for switching the drive on.

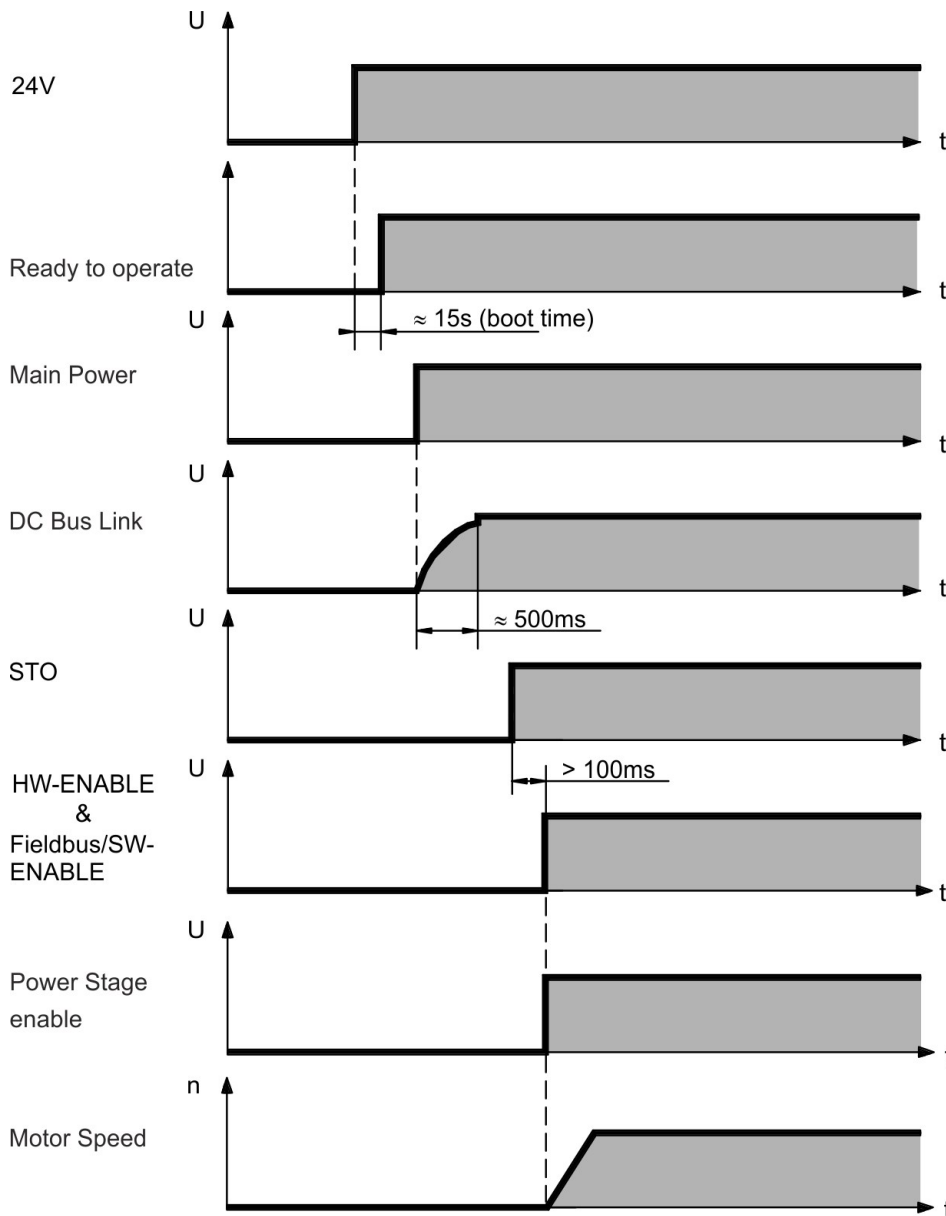

8.3.2 Switch-off Behavior


NOTE

The 24V supply of the servo drive must remain constant. STO disables the power stage immediately. Configured digital inputs and fieldbus commands can be used to perform controlled stops.

8.3.2.1 Switch-off behavior using the `AXIS#.DIS` command

The enable/disable button in WorkBench issues a `AXIS#.DIS` command internally to the drive. See *WorkBench Online Help* for configuring inputs and software commands. Sometimes this enable signal is called "Software Enable" (SW-Enable).


AXIS#. DISMODE	<i>AXIS#.DISMODE</i> controls the behavior of the <i>AXIS#.DIS</i> command issued through WorkBench, or terminal, or fieldbus.
0	Disable axis immediately, if the servo drive detects the motor to be at zero velocity <i>AXIS#.ZEROV</i> or timeout occurs brake is applied. Category 0 stop according to IEC 60204 (→ # 25).
2	Use controlled stop to disable servo drive, if the servo drive detects the motor to be at zero velocity <i>AXIS#.ZEROV</i> or timeout occurs brake is applied. Category 1 stop according to IEC 60204 (→ # 25).

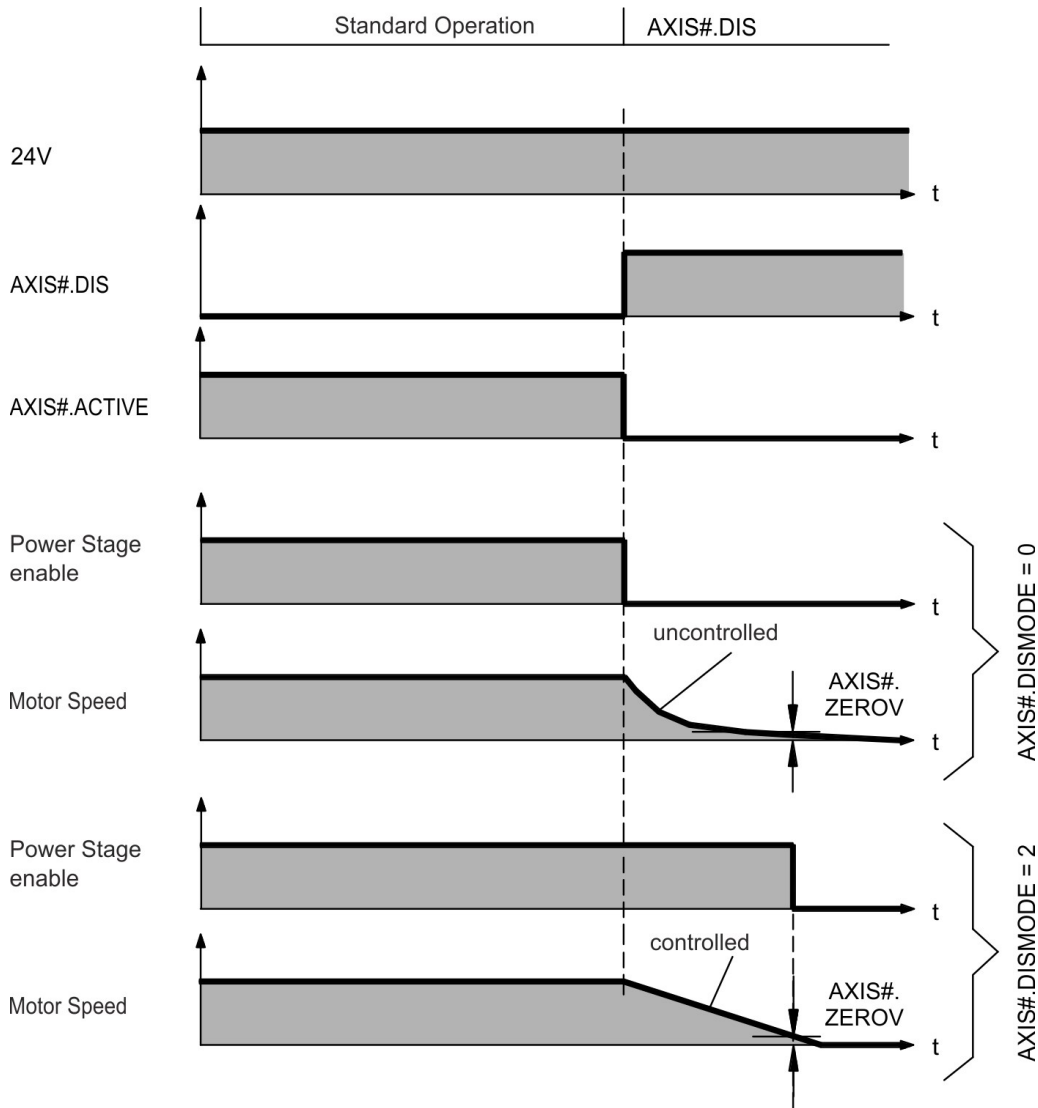

If the servo drive detects the motor to be at zero velocity (*AXIS#.ZEROV*) or timeout occurs (*AXIS#.ZEROT*), the motor brake is applied(→ # 118).

8.3.2.2 Switch-off behavior using a digital input (controlled stop)


This is a category 1 stop according to IEC 60204 (→ # 25).
A digital input can be configured to bring the servo motor to a controlled stop and then disable the servo drive and apply the holding brake (if present). See the *WorkBench Online Help* for information on configuring Digital Inputs.

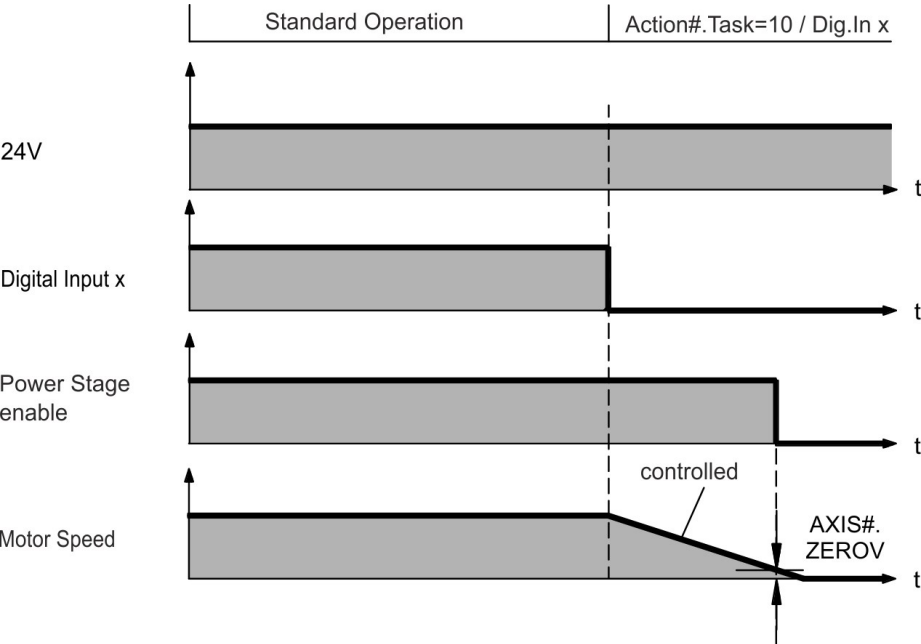

If the servo drive detects the motor to be at zero velocity (AXIS#.ZEROV) or timeout occurs (AXIS#.ZEROT), the motor brake is applied(→ # 118).

8.3.2.3 Switch-off behavior using STO input (uncontrolled stop)

This is a category 0 stop according to IEC 60204 (→ # 25).
The STO input disables the power stage immediately.

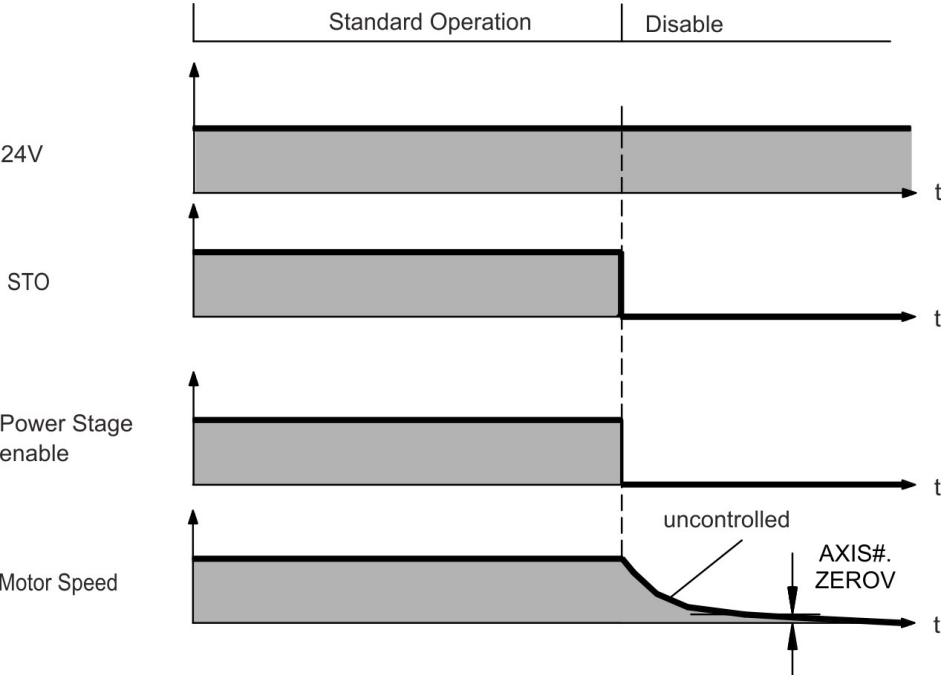


If the servo drive detects the servo motor to be at zero velocity (AXIS#.ZEROV) or timeout occurs (AXIS#.ZEROT), the servo motor brake is applied (→ # 118). Set parameter AXIS#.MOTOR. BRAKEIMM to 1 with vertical axes, to apply the motor holding brake immediately after STO.

8.3.2.4 Switch-off behavior in the event of a fault

The behavior of the servo drive always depends on the fault type and the setting of a number of different parameters (AXIS#.DISMODE, VBUS.UVFTHRESH, AXIS#.ZEROV, and others; see the *WorkBench Online Help* for more details). See the *Drive Fault and Warning Messages and Remedies* section of the *WorkBench User Manual* for a table describing the specific behavior of each fault. The next pages show examples for the possible fault behaviors. The fault relay output (DOUT9) switches the main contactor (Emergency Off circuit).

Switch-off behavior for faults that cause an immediate power stage disable


This is a category 0 stop according to IEC 60204 (→ # 25).

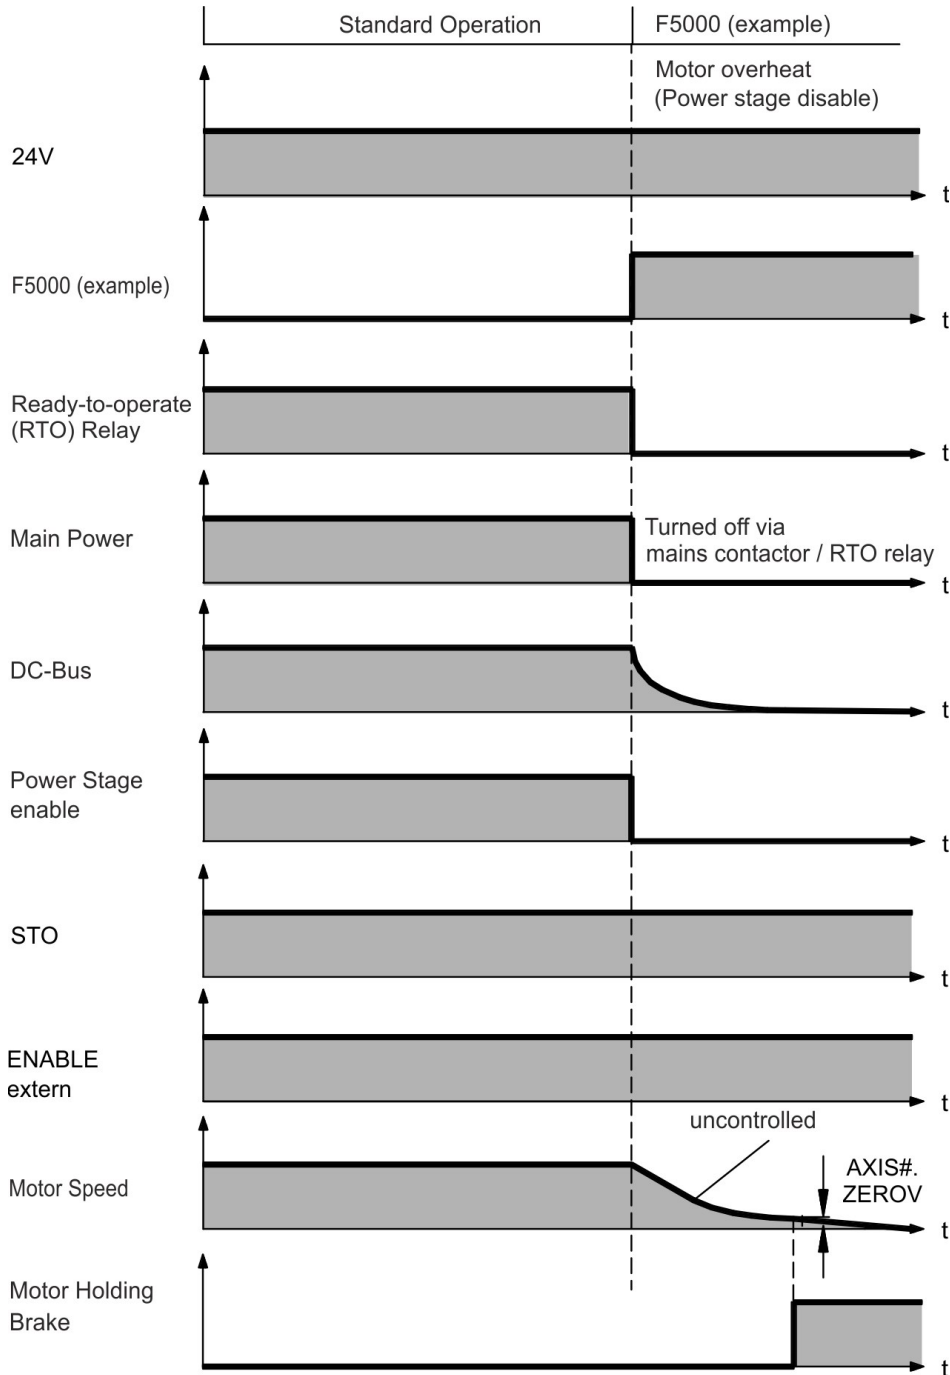

If the servo drive detects the servo motor to be at zero velocity (AXIS#.ZEROV) or timeout occurs (AXIS#.ZEROT), the motor brake is applied (→ # 118). Set parameter AXIS#.MOTOR. BRAKEIMM to 1 with vertical axes, to apply the motor holding brake immediately after faults.

Switch-off behavior for faults that cause dynamic braking


This is a category 2 stop according to IEC 60204 (→ # 25).

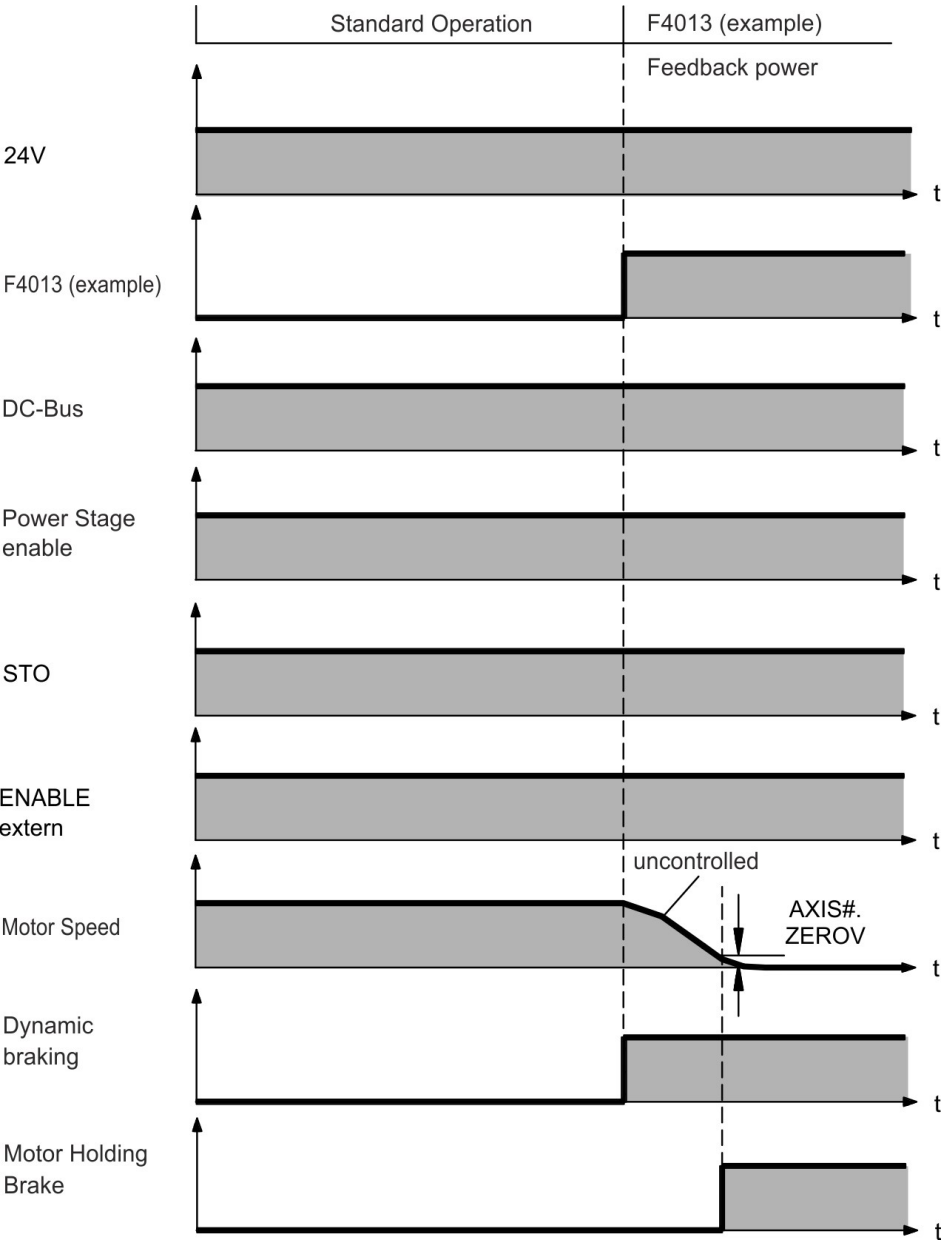

If the servo drive detects the motor to be at zero velocity (AXIS#.ZEROV) or timeout occurs (AXIS#.ZEROT), the motor brake is applied (→ # 118).

Switch-off behavior for faults that cause a controlled stop

This is a category 2 stop according to IEC 60204 (→ # 25).

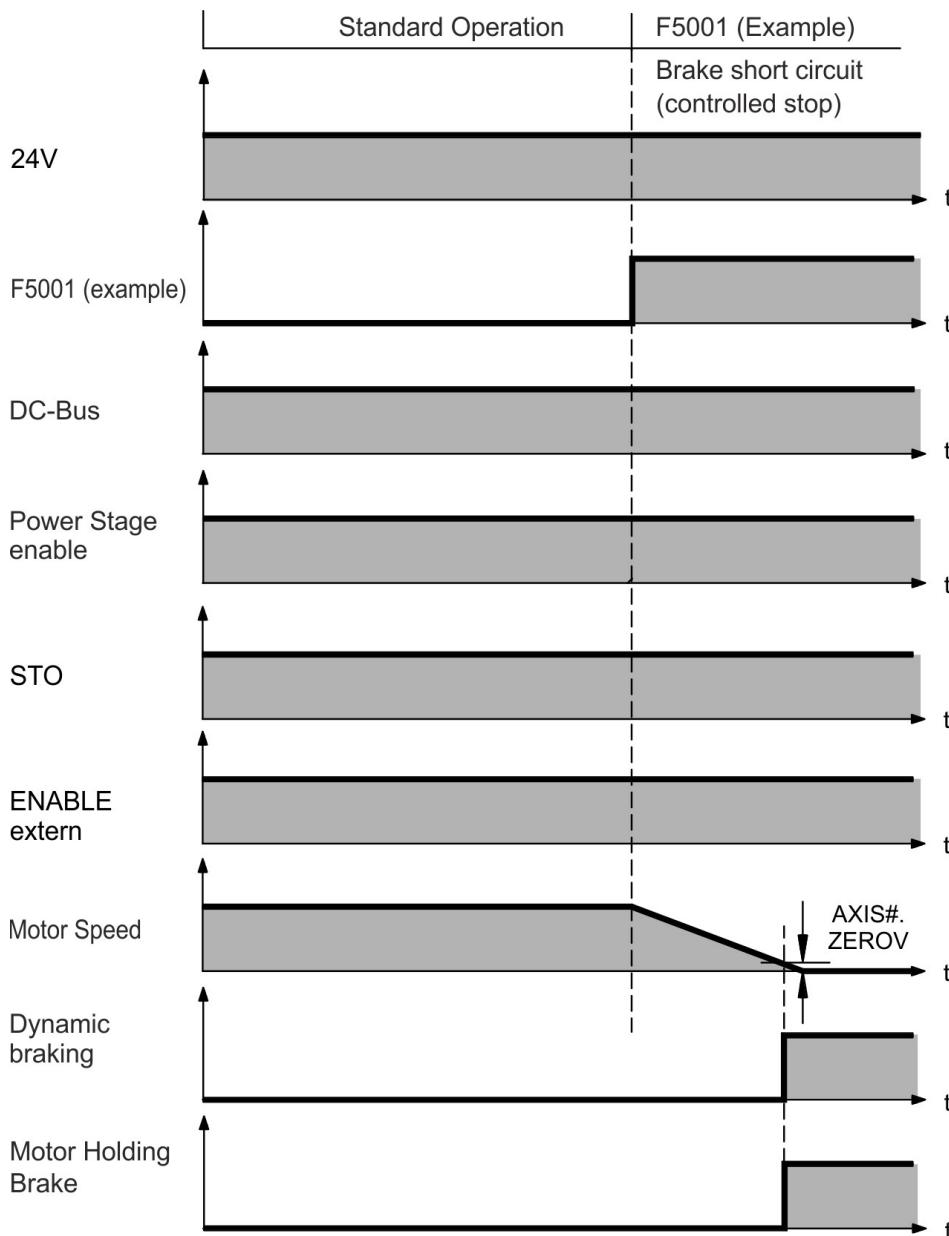

If the servo drive detects the motor to be at zero velocity (AXIS#.ZEROV) or timeout occurs (AXIS#.ZEROT), the motor brake is applied (→ # 118).

8.4 Fault and Warning Messages

8.4.1 Fault and warning messages AKD2G

Definition

A fault is generally a notification of a critical system failure which will stop machine operation. Depending on the severity of the fault will depend on which system-stop mechanism is used.

A warning is generally a notification to the user which is not critical and does not require the machine to immediately shut off.


Faults and Warnings follow the same pattern and are identified by a four digit code:

G G X X, where GG is a two digit group code, and XX is a two digit ID.



GG	Group	GG	Group
10	System	4#	Feedback (# indicates feedback number)
11	File	50	Motor
15	Hardware	55	Wake and Shake
20	Power	60	Motion
25	Temperature	70	Fieldbus
30	Software	90	Safety

The display on the front panel of the servo drive shows the code of the fault or warning that occurred. Navigate with B1 / B2 to the Fault screen to see a short description of the fault or warning.

Example: dual axes, Fault Axis 2

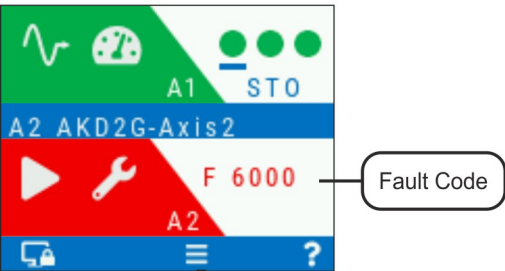

Example: single axis, Warning Axis 1

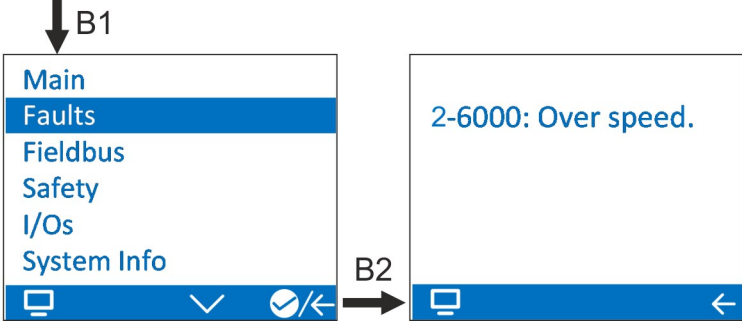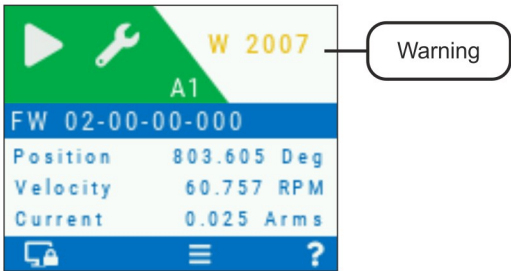

You can retrieve faults on a per-axis basis with the parameter: `AXIS#.FAULTS`, where # is the Axis number. For retrieving warnings use `AXIS#.WARNINGS`, or `DRV.WARNINGS`.

Multiple faults may be present when a fault condition is occurring. Check the WorkBench Fault Screen or read the status of `DRV.FAULTS` and `AXIS#.FAULTS` for the entire list of faults.

`DRV.FAULTS` will return all faults across all axes, with the format `#-GGXX` where # is the axis number and GGXX is the four digit fault/warning code.

NOTICE

Eliminate errors and faults in compliance with work safety rules. Troubleshooting only by qualified and trained staff.

NOTE

More information about fault messages, remedy and clearing faults can be found in the WorkBench User Manual.

8.5 Troubleshooting

Servo drive problems occur for a variety of reasons, depending on the conditions in your installation. The causes of faults in multi-axis systems can be especially complex. If you cannot resolve a fault or other issue using the troubleshooting guidance presented below, customer support can give you further assistance.

NOTICE

Eliminate errors and faults in compliance with work safety rules. Troubleshooting only by qualified and trained staff.

NOTE

More details on the removal of faults can be found in the WorkBench User Manual.

Problem	Possible Causes	Remedy
HMI message: Communication fault	- wrong cable used, cable plugged into wrong position on servo drive or PC - wrong PC interface selected	- plug cable into the correct sockets on the servo drive and PC - select correct interface
Drive does not enable	- HW Enable configured but not wired - HW or SW Enable not set	- connect HW Enable to the selected input - Apply 24V to HW Enable and select SW Enable in WorkBench / Fieldbus
Motor does not rotate	- servo drive not enabled - software enable not set - break in setpoint cable - servo motor phases swapped - brake not released - servo drive is mechanically blocked - servo motor pole no. set incorrectly - feedback set up incorrectly	- apply ENABLE signal - set software enable - check setpoint cable - correct servo motor phase sequence - check brake control - check mechanics - set servo motor pole no. - set up feedback correctly
Motor oscillates	- gain is too high (speed controller) - feedback cable shielding broken - AGND not wired up	- reduce AXIS#.VL.KP (speed controller) - replace feedback cable - join AGND to CNC-GND
Drive reports following error	- I_{rms} or I_{peak} set too low - current or velocity limits apply - accel/decel ramp is too long	- verify servo motor/drive sizing - verify that AXIS#.IL.LIMITN/P, AXIS#.VL.LIMITN/P are not limiting the servo drive - reduce AXIS#.ACC/AXIS#.DEC
Motor overheating	- servo motor operating above its rating - servo motor current settings incorrect	- verify servo motor/drive sizing - verify servo motor continuous and peak current values are set correctly
Drive too soft	- AXIS#.VL.Kp (velocity) too low - AXIS#.VL.Ki (velocity) too low - filters set too high	- increase AXIS#.VL.KP (velocity) - increase AXIS#.VL.KI (velocity) - refer to documentation regarding reducing filtering (AXIS#.VL.AR*)
Drive runs roughly	- AXIS#.VL.Kp (velocity) too high - AXIS#.VL.Ki (velocity) too high - filters set too low	- reduce AXIS#.VL.KP (velocity) - reduce AXIS#.VL.KI (velocity) - refer to documentation regarding increasing filtering (AXIS#.VL.AR*)

9 Safety Manual for FS2

Revision History for Safety Manual

Revision	Remarks
S201, 05/2021	Functional Safety Option 2
S202, 07/2022 (withdrawal)	some limitations solved with new SMM FW 1.12, new SDB timing and state machine diagram, new chapter "Update the SMM firmware", chapter commissioning: layout modified, chapter safety properties overview: ISO->IEC, dual channel graphic changed, chapter save digital inputs revised, chapter "factory default settings" -> "factory defaults without FSoE", changes in chapter motor brake requirements and motor feedback requirements, all safety function chapters revised, settings chapter revised, validation and operation chapters revised, chapter safety faults/safety warnings revised
S203, 03/2023	Hardware Revision table edited, note added under SS1-t and SS1-r timing diagram, limitation table edited, SDB timing diagram changed, add FW 02-10-00-103
S204, 03/2024	Updated Safety Manual version compatibility table.
S205, 10/2024 (INTERNAL)	Chapter "versions" removed from SAFEPARAM.ENCODERHDSLTYPE1 parameter, SMM2 content added: default values for parameters changed, parameter range changed, paragraph removed ("AXIS#.SAFEPARAM.SBT.MAXMOTIONBRAKE#"), encoder source removed, t_SDB removed and frozen to 6ms, AXIS#.SAFEPARAM.SDB.DELAYBEFOREDIAGNOSE removed, SAFEPARAM.ENCODERENDATTYPE removed, SAFEPARAM.ENCODERHDSLTYPE1 updated, SAFEPARAM.HDSLCHAN1SINGLETURNRES1 new, SAFEPARAM.ENCODERHDSLTYPE2 updated, SAFEPARAM.HDSLCHAN1SINGLETURNRES2 new, SAFE.ERROR updated, table "Safety Function Response Time Calculation" updated, description for SS2 added, descriptions in Operation States table changed, SDB timing diagram changed
S206, 02/2025	Chapter "versions" removed from SAFEPARAM.ENCODERHDSLTYPE1 parameter, SMM2 content added: default values for parameters changed, parameter range changed, paragraph removed ("AXIS#.SAFEPARAM.SBT.MAXMOTIONBRAKE#"), encoder source removed, t_SDB removed and frozen to 6ms, AXIS#.SAFEPARAM.SDB.DELAYBEFOREDIAGNOSE removed, SAFEPARAM.ENCODERENDATTYPE removed, SAFEPARAM.ENCODERHDSLTYPE1 updated, SAFEPARAM.HDSLCHAN1SINGLETURNRES1 new, SAFEPARAM.ENCODERHDSLTYPE2 updated, SAFEPARAM.HDSLCHAN1SINGLETURNRES2 new, SAFE.ERROR updated, table "Safety Function Response Time Calculation" updated, description for SS2 added, descriptions in Operation States table changed, SDB timing diagram changed

The Safety Manual is valid for:

AKD2G with Functional Safety Option 2 (FS2):

AKD2G - xxx - xxxxx - x²xx - xxxx

Integrated **SafeMotion Monitor (SMM)**, activation by digital I/O or FSoE

Safety Functions: STO, SS1-t, SBC, SBT, SDB; SIL3 PLe

Hardware Revision	Drive Firmware	WorkBench	SMM Firmware	Comment
A	02-14-02-104	2.18.0.11860	SMM R_03-00-004	

Note:Previously listed combinations remain valid.

Refer to the list of limited safety features (Limitations, → # 388)

Contents:

9.1	General Notes	204
9.2	Updating the SMM Firmware	209
9.3	Commissioning	211
9.4	Safety Functions Option 2 (I/O, FSoE, SIL3 PLe)	214
9.5	Settings	260
9.6	Validation	276
9.7	Operation	278
9.8	Safety Faults, Safety Warnings	280
9.9	Functional Safety Parameter Reference	284

9.1 General Notes

Resulting Functional Safety classification (SIL and/or PL level) is calculated across the drive system. The drive system usually consists of the following:

- motion controller (e.g. AKC/KAS),
- safety controller (e.g. SCU or similar),
- servo drives (e.g. AKD2G) and servo motors (e.g. AKM2G),
- motor brakes, feedback systems,
- cables to connect servo drive and motor,
- sensors/actors

The safety properties listed in this chapter can be reached with Kollmorgen components.

NOTICE

Ensure the compliance of the application with all relevant directives and local electrical code. You are responsible for implementation and validation of the drive system and safety system.

Only properly qualified personnel are permitted to perform installation, setup and verification/validation tasks.

- Mechanical installation: only by qualified personnel with mechanical expertise according to IEC 60417-6183.
- Electrical installation: only by qualified personnel with electrotechnical expertise according to IEC 60417-6182.
- Parameterizing Functional Safety: only by trained personnel with expertise appropriate to the complexity and safety integrity level of the drive system.
- Verification/Validation: only by trained personnel after any changes to the installation. The expertise of the personnel must be appropriate to the complexity and safety integrity level of the drive system.

NOTE

- Safe State:** In a safe state the drive removes the motor torque from all axes, applies the brake(s), deactivates all of the safe digital outputs, and sets the safe fieldbus connection to the safe state (if applicable).
- Trigger conditions:** I/O failure and internal failure (such as problems detected on the drive or on the safety system itself) lead to safe state.



CAUTION

High electrical voltage!

Risk of electrical shock! The safety functions do not provide an electrical separation from the power output. If manual access to the motor or drive power terminals is necessary,

- disconnect the drive from mains supply,
- consider the discharging time of the DC-Bus link,
- ensure the cabinet is safely disconnected and protected against unintended switch-on (for instance, with a lock-out and warning signs).



WARNING

Ejection of molten particles!

If particles fall into the drive or the drive has been damaged, molten drive component particles may be ejected causing injuries. Shut down the drive and wear appropriate protective gear during maintenance work, troubleshooting and fault rectification.(→ # 31)

9.1.1 Use as directed

Safety functions are intended to reduce the risk of the machine operation to the required tolerable risk. To achieve functional safety, the wiring of the safety circuits must meet the safety requirements of IEC 60204, ISO 12100 and ISO 13849.

NOTICE

- The network the drive is connected to must be secured according to state-of-the-art information technology security requirements.
- The IT specialists shall analyze whether further security requirements are applicable to ensure functional safety.
- The drive firmware can be updated. The parameter sets must be reloaded, verified and proof tested before normal operation is started.
- The SafeMotion Monitor (SMM) firmware can be updated by the user, see (→ # 209). For training and certification please contact Kollmorgen. The safety parameter set must be reloaded, verified and proof tested before normal operation is started.
- In certain types of machinery, two motors drive a single mechanical axis. It is the responsibility of the user to ensure that a fault reaction on the first motor-drive set is also carried out on the second motor-drive set and vice versa. Safe I/O and/or a safe fieldbus such as FSoE can be used to achieve this.

9.1.2 Prohibited use

The safety functions must not be used if the drive is to be made inactive for Emergency-Off situations. In an Emergency-Off situation, the main relay is switched off by the Emergency-Off button.

Never modify the drive!



Never open the cover of the drive, as the electronic components installed there generate dangerous high voltages. Even after disconnection from the mains, the components often still carry high voltage. Therefore, the drive may only be opened by authorized specialist personnel.

Kollmorgen shall not be held accountable for any defects, malfunctions or degradations resulting from users opening up the device. In case of damage or malfunction, send the drive for repair or replacement.

NOTICE

The drive may not be connected directly to the Internet. It could be a functional safety risk if the network the drive is connected to is not secured according to state-of-the-art information technology. The SafeMotion Monitor (SMM) does not fulfill requirements regarding the IEC 62443.

9.1.3 Abbreviations used for functional safety

More abbreviations see (→ # 16).

Abbreviation	Meaning
A#, AXIS#	A# or AXIS# are placeholders for the axis number. Used with parameters (AXIS#.SAFE.STO.ACTIVE) or signal names (STO-A-A#)
(→ # 53)	"see page 53" in this document
→ xyz	"see chapter xyz" in this document
CCF	Common Cause Failure
CRC	Cyclic Redundancy Check
DGUV	Deutsche Gesetzliche Unfallversicherung
FS2	Functional Safety Option 2 (Safe Stop functions)
FSoE	Fail Safe over EtherCAT
HFT	Hardware Fault Tolerance
MTTFd	Mean time to dangerous failure
OSSD	Output Switching Signal Device
PELV	Protective Extra Low Voltage
PFH	Probability of dangerous failure per hour
PL	Performance Level
SBC	Safe Brake Control
SBT	Safe Brake Test
SC	Systematic Capability
SDB	Safety Dynamic Break
SFF	Safe Failure Fraction
SIL	Safety Integrity Level
SMM	SafeMotion Monitor
SRA CRC	Safety-Related Application CRC
SS1	Safe Stop 1
SS1-t	Safe Stop 1 time based
STO	Safe Torque Off
TM	Mission Time

9.1.4 Enclosure, wiring

Enclosure

Since the servo drive meets IP20, you must select an enclosure that permits safe operation of the servo drive. The enclosure must at least meet IP54 .

Transport in accordance with IEC 61800-2	
NOTE	Transport only in the manufacturer's original recyclable packaging.
Temperature	-25 to +70 °C, maximum rate of change 20 K/hour, class 2K3.
Relative Humidity	max. 95% at +40 °C, no condensation, class 2K3.
Shock	NOTICE: Avoid shocks while transporting. Drive modules are tested for environmental class 2M1 of IEC 60721-3-2.
Storage in accordance with IEC 61800-2	
Temperature	-25 to +55 °C, maximum rate of change 20 K/hour, class 1K4.
Relative Humidity	5 to 95% , no condensation, class 1K3.
Operation in accordance with IEC 61800-2	
Environmental Class	Environmental class 3K3
Temperature	Internal regen resistor used: • 0 to +40 °C under rated conditions • +40 to +60 °C with current derating 3 % per Kelvin Internal regen resistor not used: • 0 to +50 °C under rated conditions • +50 to +60 °C with current derating 2% per Kelvin
Relative Humidity	5 to 85%, no condensation, IEC 61800-2 class 3K3
Site Altitude	• Up to 1000 m above mean sea level (AMSL): no restriction • 1,000 to 2,000 m AMSL: power derating 1.5%/100 m • Maximum altitude: 2000 m AMSL
Drive EMC Immunity	Increased immunity according to EN 61800-5-2
Drive Pollution Level	Pollution level 2 as per IEC 60664-1
Drive Vibration Class	Class 3M1 according to IEC 61800-2
Drive Shock Class	Class L according to IEC 61800-2
Drive Protection Class	IP20 according to IEC 60529
Enclosure	Minimum cabinet size (WxHxD): 406 x 406 x 254 mm
Enclosure Protection	At least IP 54 according to IEC 60529

Wiring

Wiring inside the specified enclosure (IP54) must meet the requirements of the standard IEC 60204-1 and ISO 13849-2 (Table D.4). Use copper wires, 0.5mm² (20 awg), wire ferrules. Maximum distance for unshielded I/O lines is 3m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

Wiring outside the specified enclosure must be laid durably protected from outside damage (for example, by laying the cable in a duct, placed in different sheathed cables, or protected individually by grounding connection).

NOTICE

When wiring the digital inputs and outputs, avoid short circuits between the inputs, outputs, or to supply lines.

9.2 Updating the SMM Firmware

Before updating the SMM firmware, please read the following information carefully:

NOTICE

- Replace certified SMM firmware only with another certified SMM firmware, see (→ # 202).
- Changing the SMM firmware means changing the drive firmware, its ESI file and the WorkBench version. Only use a consistent firmware package. For information on compatibility see (→ # 202).
- Only trained and qualified personnel shall update the SMM firmware.
- Safety parameters will be removed and need to be re-validated.

To perform the update, you need the following:

- Kollmorgen WorkBench with a safety project
- update password
- SMM firmware binary file
- checksum of the new firmware (sometimes called the CRC in firmware release notes)

Follow these steps to update the SMM firmware on one or more drives:

1. Navigate to the **Safety** tab and select the drive(s) you want to update in the WorkBench view.
Note: Make sure the axes are disabled before you update the firmware.
2. Select the **Update** button.



3. The **Safety Firmware Update** view will appear. Select the drive(s) and fill in the required information: the update password, firmware checksum, and firmware file.

4. Make sure the current Firmware Version (FW Ver.) is correct.

Select	Name	Model	Connected	SafeID	Update Allowed	HW Rev.	FW Ver.	Status	Ident	Action
☒	Day-1	AKD2G-SPE-6V03D-A3F3-0000	✓	01	✓	R3.0	0.59			<button>Blink</button>

Connect All

Disable All

Update SafeMotion Monitor Firmware File

User Name:

User1

Password:

.....

Firmware Checksum:

0xcd1e191f

Hexadecimal values should be prefixed by 0x

Firmware File:

C:\Users\...\Desktop\33001_RELEASE_R004_update_V1.04.i00s

...

1 Device(s) Selected

Update

Close

5. Select the **Update** button.
- Note:** If the current SMM version and the targeted version are not compatible, a warning message will say that the safety parameters will be lost.
6. Ensure that the new firmware version is correct.

9.3 Commissioning

NOTICE

The safety features of the AKD2G only fulfill their purpose and can only function properly when the machine was developed according to ISO 12100, ISO 13849 and EN 62061. Depending on the use case, further standards may apply.

The machine manufacturer is responsible for proper and safe commissioning. Violating the applicable standards can result in potential unsafe conditions or dangerous machine behavior. Only properly qualified and trained personnel are permitted to perform the following tasks.

9.3.1 First time commissioning

Situation	Action
Before commissioning	• A risk assessment must be carried out, covering all risks originating from the machine. • Safety functions for risk reduction require sufficient definition such as functionality, PLr / SIL, reaction times, etc. Analyze your machine accordingly. • The safety functions must be specified: components, SIL/PL, PFH, category, TM, CCF measures for tests like SBT, MTTFd, DC, combinations of functions, etc.. • Take precautionary measures against foreseeable misuse or manipulation which result in bypassing the safety functions. • Calculate and analyze whether the specified safety chain is sufficient to reach the required PLr / SIL. • Set up a commissioning plan that specifies all actions of the verification and validation. • Take quality assurance measures for all steps such as: reviews, FMEAs, independent and qualified personnel, and four-eyes principle.
During commissioning	• Verify that the hardware configuration is set up as specified (components, architecture, wiring, CCF measures, etc.). • Verify that the software configuration is done according to the specification. Suitable measures can be: reviews, black-box tests, simulations, and function tests. Make sure that only the required functions are configured. • Make sure that the safety functions are executed as expected and that the configuration is suitable for the application. Suitable measures are function tests and fault injection tests (error condition tests). • Validate the machine (→ # 276) Test the final product with all safety functions and in all operation modes and states. • Validate that the safety functions do not interfere with each other or other functions in an undesired way. If used, check if all instances are assigned to the right use cases. Pay special attention to the correct use of safety function muting. • Make sure that all safety functions and all possible situations are covered by the validation process. • Document all actions and decisions according to the requirements of the standards (→ # 277). • The switching state of the pulse inhibitor (AXIS#.SAFE.STO.ACTIVE, → # 316) can be mapped to a safe digital output of the AKD2G
After commissioning	• Document and validate all information relevant to the end user in a suitable way. This includes the capabilities and limitations of the safety functions as well as maintenance instructions. • Change default passwords and store them somewhere inaccessible to unqualified or unauthorized personnel. Protect the hardware from unwanted or unauthorized modifications.

For detailed information refer to the applicable standards.

9.3.2 Recommissioning

Situation	Action
After disassembling, reassembling or drive replacement (Field Replacement, → # 279)	• Verify the correct reassembling according to the original specification. • Verify that the correct safe parameter package was uploaded to the correct drive. • Check all components and wiring for correct installation and for signs of damage. • Carry out function tests and fault injection tests again. • Validate all functions and combinations of functions again.
After long standstill	• Check all components for their TM and signs of damage or unacceptable wear. Components that have exceeded their TM or show signs of damage need to be replaced.
After modification	• Reevaluate and revalidate the safety functions according to (First time commissioning, → # 212) • Alternatively: Set up a modification process by carrying out an analysis to identify all possible influences on safety. Reverify the affected aspects and revalidate the machine. • Update your documentation and end user information accordingly.

NOTICE

Modifying safety functions could void certifications and approvals from notified bodies. Contact your notified body for further information.

Only properly qualified and trained personnel is permitted to perform these tasks.

9.3.3 Diagnostic Testing of safe inputs, safe outputs and STO

Safe inputs require test pulses (OSSD, → # 224) and there is no further requirement for diagnostic testing of the input wiring. There may however be additional diagnostic requirements for the device connected to the safe input. STO is continuously diagnosed internally. There is no further requirement for diagnostic testing.

9.3.4 Diagnostic Testing of safe brake control

The BRAKE+ and BRAKE- emit test pulses (→ # 239). There is no further requirement for diagnostic testing of the brake wiring. Depending on the target SIL/PL, there is a periodic requirement to test the brake itself, see documentation on SBC (Safe Brake Control) (→ # 238) and SBT (Safe Brake Test) (→ # 248).

9.4 Safety Functions Option 2 (I/O, FSoE, SIL3 PLe)

The safety functions on the AKD2G with functional safety option 2 are certified.

NOTICE

The drive is ready to operate with pre-configured STO function.
Each safety function can either be activated through FSoE or digital input or both. Configure the source of activation inside the safety parameters so it matches the system requirements.
The user must review the default setting and check if it matches his requirements. In case it doesn't match, the safety parameters need to be adapted and validated.
For digital I/O commanding use WorkBench to map safety functions to safe I/Os.
With [FSoE](#) the safety functions can be activated by using the safePLC of the FSoE Master.
With dual axis drives every safety function can be activated for one axis or for both axes (axis 1 or axis 2 or axes 1&2).

NOTE

The systematic safety integrity indicated by the systematic capability can be achieved only when the instructions and constraints are observed. Where violations occur, the claim for systematic capability is partially or wholly invalid.

Standards

Standard	Content
ISO 13849:2015	Safety of machinery: Safety-related parts of control systems

Available Safety Functions

Activation and reachable Performance level / Category (→ # 215).

Abbr.	Function	Category	Refer to
STO	Safe Torque Off	Safe Stop	(→ # 229)
SS1-t	Safe Stop 1, time based	Safe Stop	(→ # 234)
SBC	Safe Brake Control	Safe Stop	(→ # 238)
SBT	Safe Brake Test	Safe Stop	(→ # 248)
SDB	Safe Dynamic Brake	Safe Stop	(→ # 254)

Rotary switches S1/S2 and push-buttons B1/B2

Switches and buttons in the device front (→ # 261) are used to set the SafeID (→ # 261).

9.4.1 Safety Properties Overview

General properties	Values
Hardware fault tolerance (IEC 61508)	HFT = 1
Classification element (IEC 61508)	Type B subsystem
Systematic capability	SC = 3
Mission time	TM = 20 Years
Proof test interval	> 20 Years
Safe failure fraction	SFF = 99%
PFH fraction of SIL 3	1.7%
Probability of dangerous failure per hour	PFH _d = 1.7E-09 1/h
Mean time to dangerous failure	MTTF _D = 55.6 Years
Diagnostic coverage	DC _{AVG} = 99.6%
Common cause failure (see annex F of ISO 13849-1)	CCF: score = 75

Calculation example for safety chain PFH_d:

- Safety PLC that is the FSoE master.
- EtherCAT cabling etc.
- Two drives configured for STO activation over FSoE.

Contribution to the safety chain of the safety PLC: PFH_{PLC} refer to manufacturer data.

Contribution to the safety chain of using FSoE via EtherCAT cabling etc. is $1.0E-9$ 1/h.

Contribution to the safety chain of the two drives PFH_d is $2 \times 1.7E-9$ 1/h.

Total value: $PFH_d = PFH_{PLC} + 2 \times 1.7E-9$ 1/h + $1.0E-9$ 1/h = $PFH_{PLC} + 4.4E-9$ 1/h

9.4.1.1 Activation by FSoE

Safety Function	ISO 13849-1	IEC 62061 (IEC 61508)	Maximum Response Time	Comment
STO	PLe, Cat.4	SIL3	< 10 ms	
SS1-t	PLe, Cat.4	SIL3	< 10 ms	followed by STO*

* = configured delay (time to STO) see "AXIS#.SAFEPARAM.SS1_#.TIMETOSTO" (→ # 334).

9.4.1.2 Activation by Safety Functions

Safety Function	ISO 13849-1	IEC 62061 (IEC 61508)	Maximum Response Time	Comment
SBC with one brake	PLd, Cat.3	SIL2	< 10 ms	Needs to be configured for activation during STO process
SBC with two brakes	PLe, Cat.4	SIL3	< 10 ms	
SDB single channel	PLd, Cat.3	SIL2	< 10 ms	
SDB dual channel	PLe, Cat.4	SIL3	< 10 ms	

9.4.1.3 Activation By Safe Digital Inputs

NOTICE

When activated by using safe digital inputs, a safety device with test pulses is required (OSSD, (→ # 224)).

Safe inputs must be driven from a source containing test pulses, this can be a safe digital output or a safety device with suitable outputs. If the SMM is configured to detect distinct test pulses, then no fault exclusion is required against wiring shorts and cross-talk.

Electromechanical devices such as relays and emergency stop switches can be wired in series with a source of test pulses; the B10d value of the mechanical contacts may limit the achievable safety level.


Safety Level	Single Safe Input	Dual Safe Inputs
SIL2, PLd Cat. 3	✓	✓
SIL3, PLe Cat. 4	—	✓




Dual Channel Activation

Safety Function	ISO 13849-1	IEC 62061 (IEC 61508)	Maximum Response Time	Comment
STO	PLe, Cat.4	SIL 3	< 10 ms	
SS1-t	PLe, Cat.4	SIL 3	< 10 ms	followed by STO*

* = configured delay (time to STO) see [AXIS#.SAFEPARAM.SS1_#.TIMETOSTO](#)

Dual channel for axis1 and axis2, Safety Control with electronic outputs, automatic restart:

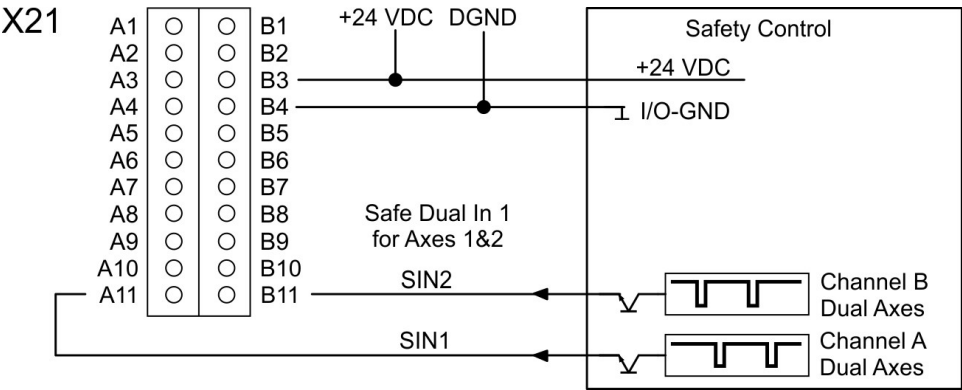

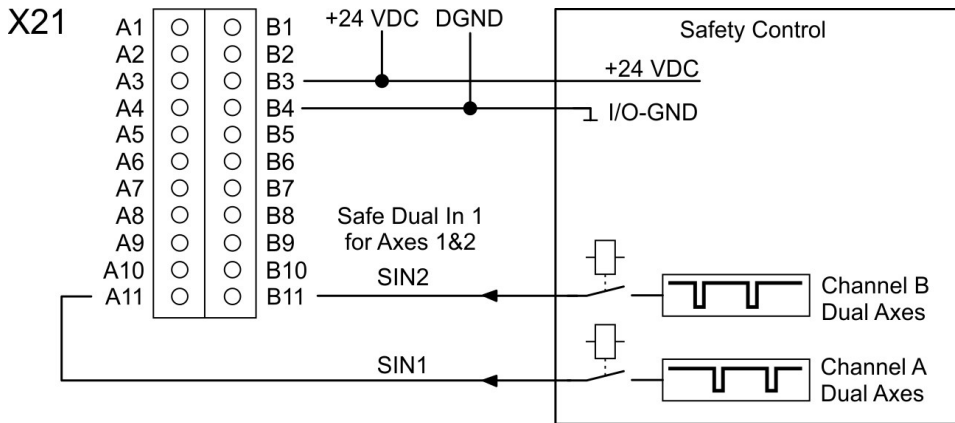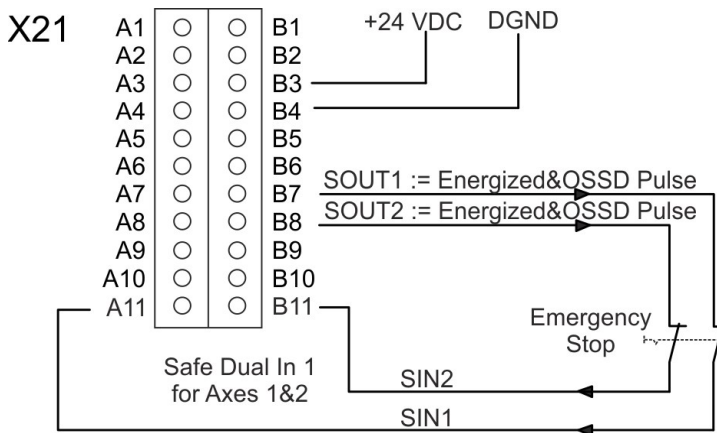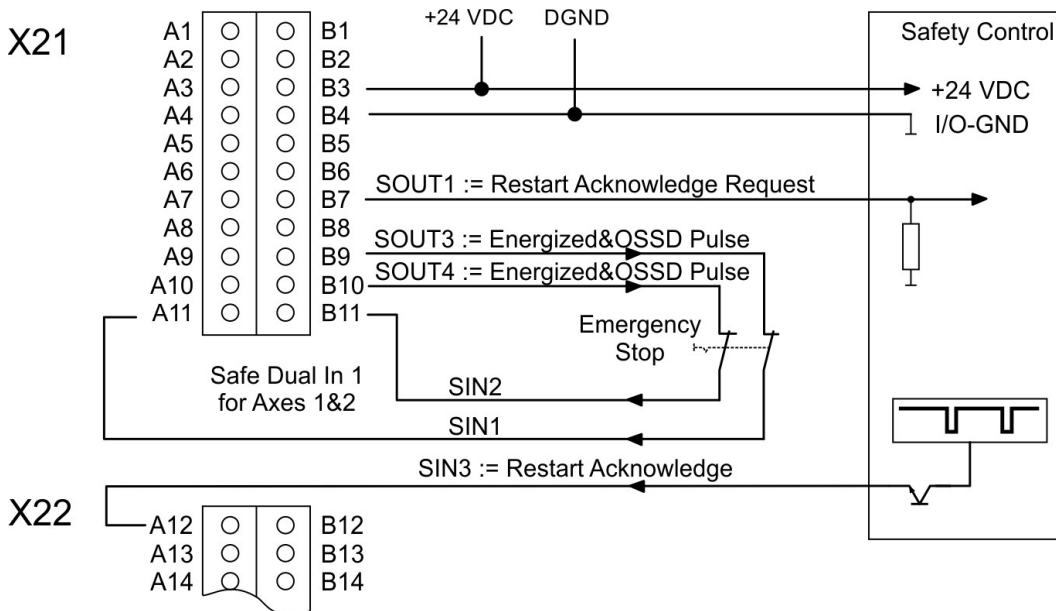
Dual channel for axis1 and axis2, Safety Control with relay contacts, automatic restart:Dual channel for axis1 and axis2, Emergency Stop, automatic restart (example for default configuration):Dual channel for axis1 and axis2, Emergency Stop, manual restart:

Single Channel Activation


Safety Function	ISO 13849-1	IEC 62061 (IEC 61508)	Maximum Response Time	Comment
STO	PLd, Cat.3	SIL 2	< 10 ms	
SS1-t	PLd, Cat.3	SIL 2	< 10 ms	followed by STO*

* = configured delay (time to STO) see [AXIS#.SAFEPARAM.SS1_#.TIMETOSTO](#)


Single channel for axis1 and axis2, Safety Control with electronic outputs, automatic restart:

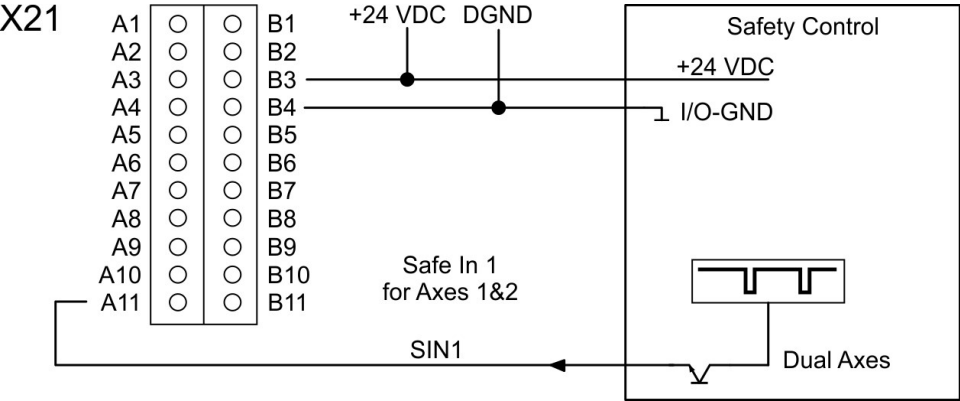


Single channel, 2 axes, Safety Control with relay contacts, automatic restart (distinct pulse monitoring must be disabled):

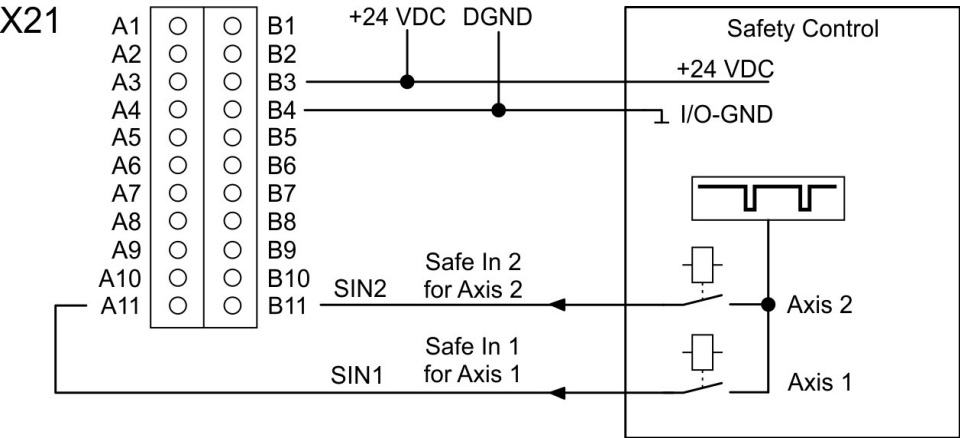

Single channel for axis1 and axis2, Emergency Stop, automatic restart:

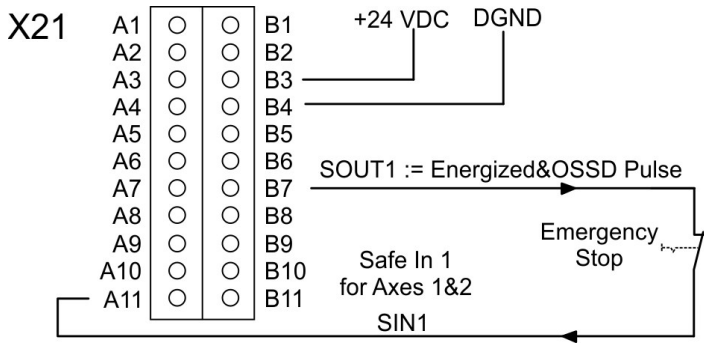

Single channel for axis 1, Emergency Stop, manual restart:

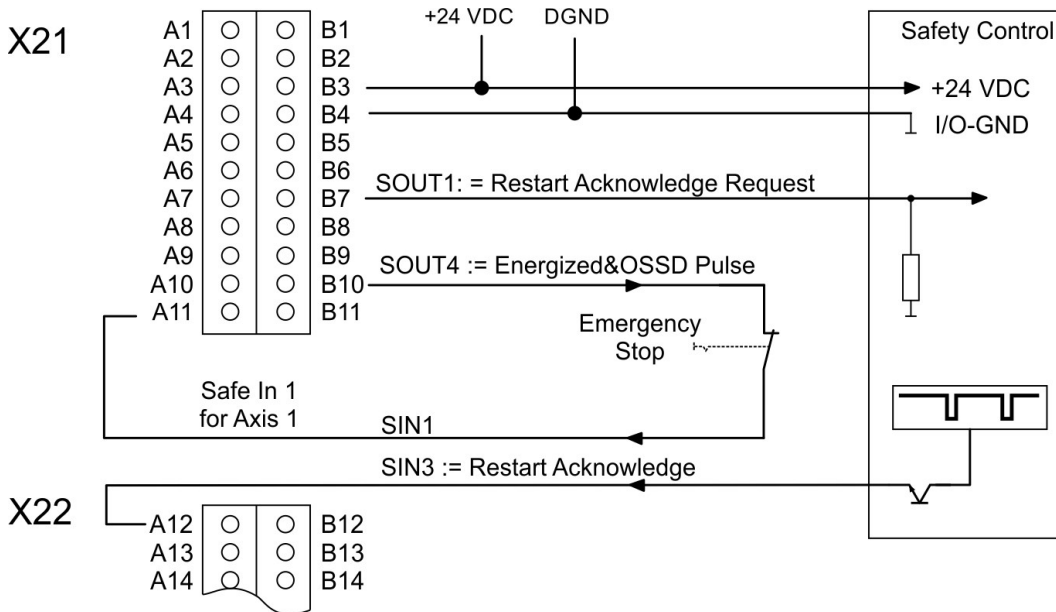

9.4.1.4 Safety Function Response Time Calculation

Basic values, process safety time (PST)

Abbreviation	Process	PST
SIN_PST	Single Input / Dual Input	2.8 ms
Func_PST	Safety function computation	1 ms
STO_Out_PST	STO output change	2.2 ms
FSOE_PST	Minimum FSoE cycle time	5 ms
Brake_Out_PST	Brake output change	4 ms
SOUT_PST	Safe Output change	4 ms
SIN_Fault_Reaction_Time	Safe Input Fault Reaction	5.1 ms

Calculation examples

Time to be set with safety parameters:

- t1 (brake time delay) see [AXIS#.SAFEPARAM.SBC.BRAKETIMEDELAY](#)
- t2 (time to STO) see [AXIS#.SAFEPARAM.SS1_#.TIMETOSTO](#)

Activated by safe inputs (dual or single channel)

Functions	Calculation	Response Time
STO without SBC	$SIN_PST + Func_PST + STO_Out_PST$	6 ms
STO with SBC (1 or 2 brakes) without SDB	$SIN_PST + Func_PST + STO_Out_PST + Brake_Out_PST + t1$	9 ms + t1
STO with SBC with SDB	$SIN_PST + Func_PST + STO_Out_PST$	6 ms
SS1-t with STO (time to activate STO)	$SIN_PST + Func_PST + t2$	3.8 ms + t2
SS1-t with STO with SBC without SDB (time to change brake output)	$SIN_PST + Func_PST(SS1-t) + t2 + Func_PST(STO) + Brake_Out_PST$	8.8 ms + t2

Activated by FSoE

Functions	Calculation	Response Time
STO without SBC	$FSOE_PST + Func_PST + STO_Out_PST$	8.2 ms
STO with SBC (1 or 2 brakes) without SDB	$FSOE_PST + Func_PST + Brake_Out_PST$	10 ms
STO with SBC without SDB	$FSOE_PST + Func_PST + STO_Out_PST + t1$	8.2 ms + t1
STO with SBC with SDB	$FSOE_PST + Func_PST + STO_Out_PST$	8.2 ms

9.4.2 Technical Data

9.4.2.1 Safe Digital Inputs

The drive supports 4 safe digital inputs. The safe inputs are configurable for single channel or dual channel, for axis1 or for axis2 or for both axes.

- Reference ground is DGND
- Galvanic isolation for 60 VDC
- Activation delay about 5 μ s
- Deactivation delay about 500 μ s
- Use 24 VDC $\pm$ 15% PELV power supply
- High level > 15 VDC, > 2 mA
- Low level < 5 VDC, < 1 mA
- OSSD test pulses required ($\rightarrow$ # 224)

Safety Level	Single Safe Input	Dual Safe Inputs
SIL2, PLd Cat. 3	✓	✓
SIL3, PLe Cat. 4	—	✓

Pinout

Conn./Pin	Signal	Description
X21 B3	+24 V	+24 VDC for digital I/O
X21 B4	DGND	Ground for digital I/O
X21 A11	SIN1	Configurable, for example SS1 channel A axes 1&2
X21 B11	SIN2	Configurable, for example SS1 channel B axes 1&2
X22 A12	SIN3	Configurable, for example STO channel A axis 2
X22 B12	SIN4	Configurable, for example STO channel B axis 2

Input parameters (setting see "Parameters Editor" ($\rightarrow$ # 265))

Parameter	Name	Description	Default
SAFEPARAM.SINDUAL1.EN	Dual safe input 1	Associates safe inputs SIN1 and SIN2 to dual channel input 1 for an axis.	disabled
SAFEPARAM.SINDUAL2.EN	Dual safe input 2	Associates safe inputs SIN3 and SIN4 to dual channel input 2 for an axis.	disabled
SAFE.IOFAILUREACKSOURCE	Failure acknowledgement via I/O	Specifies the safe digital input, which can be associated for the acknowledgment of the IO failures.	disabled
SAFEPARAM.SIN.DISTINCTPULSE	Digital input distinct test pulse monitoring	Specifies if the safe digital input monitoring for distinct test pulses is enabled	disabled

NOTE

For wiring strategy to be able to reach the necessary SIL/PL, refer to "Activation By Safe Digital Inputs" ($\rightarrow$ # 216).

For descriptions of safety parameters, refer to the *Functional Safety Parameter Reference* "Functional Safety Parameter Reference" ($\rightarrow$ # 284).

If dual channel mode is selected, the drive supervises whether the two inputs are in a different state for longer than 100 ms. If they are different for more than 100 ms, a fault reaction is triggered (see the specific safety function for details).

NOTE

If you configure the safe inputs to accept non-distinct test pulses then you should make a fault exclusion on the input wiring or provide other justification that input wiring faults cannot be dangerous such as cable segregation or individual shielding.

NOTE

The Safety Controller used must be compatible with OSSD (Output Switching Signal Device) according to IEC 61496-1. OSSD requirements (→ # 224).

9.4.2.2 Safe Digital Outputs

The drive has 2 paired or 4 single safe digital outputs in order to signal the safety condition of the drive to an external safety PLC or to activate external devices (for example a (SDB) relay). The safe digital outputs are current sourcing when activated. They are deactivated to indicate a fault condition or activate a safety device.

- Reference ground is DGND (X21/B4)
- Galvanic isolation for 24 VDC from PE
- Use PELV power supply, 24 V ±15%
- Activation delay depends on safety function
- High Level 23.5 V ±15%, 172 mA
- Low level < 1 VDC, < 1 mA
- Emits OSSD test pulses according to IEC 61496-1 (→ # 224)

If an inductive load (relay or similar) is used, a freewheeling diode must be added to the load.

Safety Level	Single safe output	Dual safe outputs
SIL2, PLd Cat. 3	✓	✓
SIL3, PLe Cat. 4	—	✓

Pinout

X21	Signal	Description
B7	SOUT1	Configurable, for example STO status of axis 1
B8	SOUT2	Configurable, for example STO status of axis 2
B9	SOUT3	Configurable
B10	SOUT4	Configurable

Output parameters (setting see "Parameters Editor" (→ # 265))

Parameter	Name	Description	Default
SAFEPARAM.SOUTDUAL#.EN	Dual safe output	Associates two safe outputs to a dual channel output for axis #.	Disabled
SAFEPARAM.SOUTDUAL#.SOURCE	Source selection of safe dual output	Selects the state of a safety function, which is provided for a safe dual output 1/2.	Off
SAFEPARAM.SOUT#.SOURCE	Source selection of safe digital output	Selects the state of a safety function, which is provided for SOUT1 to 4.	Off

NOTE

For descriptions of safety parameters refer to *Functional Safety Parameter Reference* (→ # 284).

9.4.2.3 Factory Defaults without FSoE

NOTICE: After delivery, the drive is ready for operation with a pre-configured STO function.

Item	Parameter	Factory Default
SafeID	SAFE.ID	Rotary switches: "01" (S1 = 0, S2 = 1).
FSoE Address	AXIS#.SAFE.FSOE.CONNECTIONID	Axis 1: 101 (SafeID*100+1) Axis 2: 102 (SafeID*100+2)
SIN1, 2	AXIS#.SAFEPARAM.STO.SAFEINPUT	Axis 1: STO
SIN3, 4		Axis 2: STO (dual axis drives only)
SOUT1, 2, 4	SAFEPARAM.SOUT#.SOURCE	0xFF (On)
SOUT3	SAFEPARAM.SOUT#.SOURCE	0x00 (Off)
Password	"SafeMotionMonitor xyz " where "xyz" = last three digits of drive serial number	


Different default settings apply when using SRA parameters.

9.4.2.4 OSSD

Test pulses on safe digital inputs (SIN1 to SIN4)

NOTE The Safety Controller used must be compatible with OSSD (Output Switching Signal Device) according to IEC 61496-1.

Safety controllers check their outputs periodically during normal operation. Their self-test processes create pulses to the safe inputs of the drive.

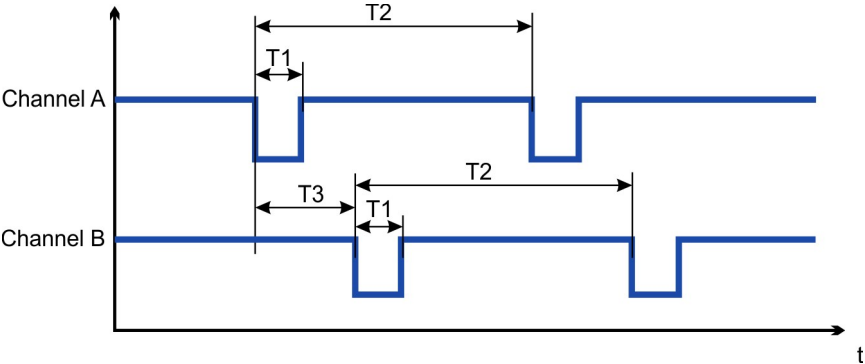

Timing	Min	Max
T1	150 μ s	1 ms
T2	100 ms	1 s
T3	> T1 (non-overlapping)	


NOTE Test pulses with $150 \mu\text{s} \leq T1 \leq 1 \text{ ms}$ and $T2 \geq 100 \text{ ms}$ will not have any influence on the safety function. Test pulses, which are outside of this specification, will switch the safety function but will not create a dangerous situation.

The SMM software enters the I/O Failure State (fault reaction time $\leq 2\text{ms}$)

- if no test pulse is detected for a period of 5 seconds,
- if three test pulses on different channels overlap three times in succession.

Test pulses on safe digital outputs (SOUT1 to SOUT4)

The safe digital outputs can be used as 24 V source voltage to be switched by an external safety relay to STO inputs.

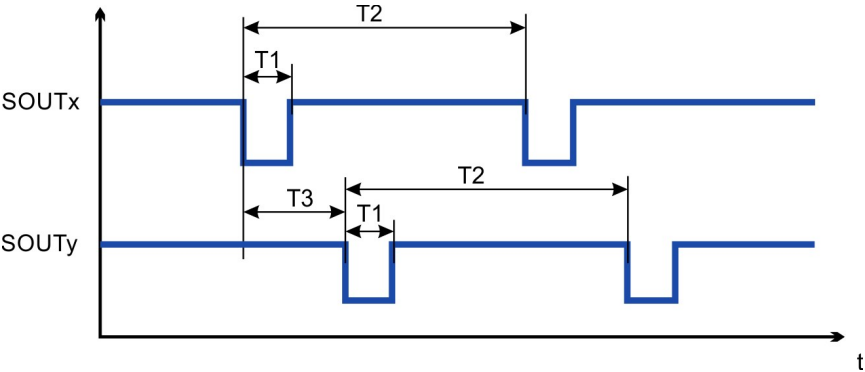

Timing	Min	Max
T1	450 μ s	550 μ s
T2	810 ms	990 ms
T3	> T1 (non-overlapping)	

NOTE The output test pulses are compatible with the safe digital input requirements. There is only one test pulse on all four outputs at a time. They do not overlap each other. Be sure to use a force-guide relay, converter, or controller that does not respond to these test pulses.

9.4.2.5 FSoE

Safety over EtherCAT®

AKD2G drives (connectivity option **E**) are connected as slaves to the EtherCAT® network by using RJ45 connectors X11 (out port) and X12 (in port).

- Interface details, see (→ # 162)
- FSoE address setting, see (→ # 262)
- FSoE drive profile, see *AKD2G EtherCAT Manual*
- Activation of FSoE for safety functions, see (→ # 364)
- Parameter download through FSoE, see (→ # 270)

NOTE

The FSoE safety architecture of the AKD2G is supported from TwinCAT 3 (Beckhoff).
For use of an FSoE master from another manufacturer, contact customer service.

The SMM implements an FSoE slave with a single endpoint per axis. The SMM implements the FSoE drive profile and supports fixed data structures for the safe fieldbus only. If configured, the software inverts the error bit of the FSoE status word at the associated safe digital output. The output is off if the error bit is set.

The software of the SMM responds to FSoE Messages within 2 ms after receiving the messages by using the Safe Fieldbus Interface. For examples of response time calculation depending on the safety function combination see (→ # 220).

The SMM software receives the following data in the parameter state of the FSoE Protocol:

- The checksum of the parameters and the drive type identification.
With this the software uses this checksum to validate the parameters received by using CoE.
- No parameter block or a zero checksum (without other parameter).
With this the software uses the parameters transmitted by using other means.

The required data to create the EtherCAT Slave Information file (.ESI file) are provided, including the safety parameters for the transmission by using the safe fieldbus.

FSoE telegram frame RxPDO	FSoE telegram frame TxPDO
Size per frame per axis is 88 bits resulting in a total of 176 bits (22 bytes) for both axes. If an axis is not used, the data are transmitted anyway.	Size per frame per axis is 248 bits resulting in a total of 496 bits (62 bytes) for both axes. If an axis is not used, the data are transmitted anyway.

Related Parameters

Name	Default	Parameter
Activation for safety functions	0	(→ # 364)
Application parameter length	-	(→ # 292)
Communication parameter length	-	(→ # 293)
Connection ID	-	(→ # 294)
Connection type (Slave)	-	(→ # 295)
Protocol Version	-	(→ # 297)
FSoE address	-	(→ # 298)
Safety-related application CRC	-	(→ # 299)
Command word send by master	-	(→ # 300)
Actual watchdog time	100 ms	(→ # 301)

Activate FSoE in WorkBench

Select the Parameters Editor view (→ # 263). Choose Common (1) and General (2).



Parameters Editor

Configuration of the safety parameters.

[? Learn more about this topic](#)

Axes		Categories	
Common	1	General	2
Axis 1		Inputs	
Axis 2		Outputs	
		Encoders	

[Goto Safety Parameter Download](#)

[SafeID: 1] Common > General



Type: **Kollmorgen AKD2G SMM**
Description: **Kollmorgen AKD2G SafeMotion Monitor**
Import file: -

Parameter	Value	Unit
Common - General		
SafeID	1	
Safe Fieldbus Activation	Activated	
I/O Failure Acknowledgement	Not used	

9.4.2.6 Motor Brake Requirements

Zero, one, or two brakes can be configured under safe brake control SBC (→ # 238). The brake must be a fail-safe brake with multiple springs. A fail-safe brake is applied when the 24V brake voltage is removed.

Important notes

NOTICE

External brakes must allow operation at 100% duty cycle at 24V. In case of a failure the brake must be rated for the full current at full time.

Brakes are subject to wear. Wear increases by frequency and intensity of use. Avoid overloading the brakes by reducing motor speed with electrical braking before engaging the brakes when possible.

When a brake is used to reduce a risk (usage with SBC), it is part of a safety chain. As part of a safety chain, the brake must fulfill the requirements for functional safety depending on the target SIL or PLr. The brake PFH_d value shall not occupy more than 50% of the PFH_d value of the whole safety chain. Keep in mind that the PFH_d value of a brake depends on frequency of usage. Kollmorgen brakes offer a B10_d of >15,000,000 use cycles. For more information, refer to the respective *Motor Documentation*.

Example:

A use rate n_{op} of 2/h will result in a PFH_d of 13.3 FIT.

$$PFH_d = 1 / [B10_d / (0.1 * n_{op})] = 1 / [15 * 10^6 / (0.1 * 2/h)] = 13.3 \text{ FIT}$$

Connection

- The first motor brake (built into the motor) can be connected to X1 respectively X2 connectors (→ # 118).
- See (SBC (Safe Brake Control), → # 238).

Brake	Signal	Connector / Pin	
		Single Axis Drive	Dual Axes Drive
1	BRAKE1+	X1/B+	
	BRAKE1-	X1/B-	
2	BRAKE2+	X4/3	X2/B+
	BRAKE2-	X4/2	X2/B-

Configuration

Safety functions can be configured to use SBC (→ # 238) as part of their fault reaction. You have the option of configuring the fault reaction of a safety function to use:

- No brake.
- One brake per axis. For axis 1 use BRAKE1, for axis 2 use BRAKE2. These brake lines are normally pre-wired on the motor cable.
- Two brakes on a single axis drive. BRAKE1 is normally pre-wired on the motor cable, BRAKE2 is brought out to a separate connector X4.
- Two brakes on axis 1 of a dual axis drive. BRAKE1 is normally pre-wired on the motor cable, BRAKE2 must be wired across from X2.

9.4.3 STO (Safe Torque Off)

This topic describes the **Safe Torque Off** drive option for Functional Safety 2 or 3.

9.4.3.1 Description

STO turns off the drive output stage that powers the motor. STO function corresponds to an uncontrolled stop according to IEC 60204-1, stop category 0.

Important Notes



WARNING No Brake Power!


Serious injury could result when a suspended load is not properly blocked. The drive cannot hold a vertical load when STO is active.

- Add a safe mechanical blocking (for instance, a motor holding brake).
- Configure Safe Brake Control SBC (SBC (Safe Brake Control), → # 238).

NOTICE

It is not possible to perform a controlled stop according to IEC 60204-1 category 1, if STO function is active as standalone function. If controlled stop category 1 is necessary, you should use the SS1-t function (SS1-t (Safe Stop 1), → # 234).

Function Input/Output Variables

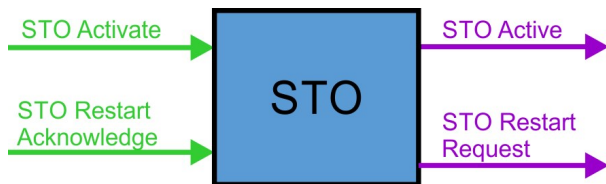

Inputs

- **STO Activate** can be activated by:
 - FSoE
 - SS1
 - a fault reaction
 - safe digital inputs (must be mapped)
- **STO Restart Acknowledge** is used for manual restart. The signal can be activated by:
 - FSoE
 - safe digital inputs (must be mapped)

Outputs

- **STO Active** is the logical status of the STO function.
- **STO Restart Request** is used for manual restart. The signal can be evaluated by using FSoE or safe digital outputs (must be mapped).

Number of instances

One instance per axis.


9.4.3.2 Activation

Activation by FSoE	- For a drive profile overview, see FSoE (FSoE, → # 226). - For setup and handling, see the <i>AKD2G EtherCAT Manual</i>.
Activation by safe digital inputs	- To review the enclosure and wiring instructions, see Enclosure, wiring (Enclosure, wiring, → # 207). - To see technical data for the safe inputs, see Technical Data (Technical Data, → # 221). - For notes on activation by safe inputs, see Activation by Safety Digital Inputs (Activation By Safe Digital Inputs, → # 216).
Activation with configurable time after SS1	Refer to SS1-t function (SS1-t (Safe Stop 1), → # 234)

9.4.3.3 Restart

Restart can be set to either Automatic or Manual (STO Restart Mode, AXIS#.SAFEPARAM.STO.RESTARTACKMODE (AXIS#.SAFEPARAM.STO.RESTARTACKMODE, → # 337)).


Automatic Restart	A restart request signal will be sent to the safety control, when STO is required. With STO restart acknowledge, STO will be deactivated and the axis can be enabled for restart.
Manual Restart	The axis restarts when STO is deactivated and the axis is enabled.

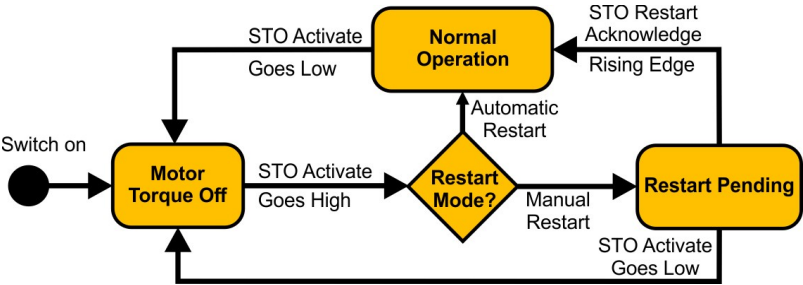

9.4.3.4 Timing

Timing for activation by SS1-t: Refer to SS1-t function (SS1-t (Safe Stop 1), → # 234).

Timing for activation by FSoE: Refer to the *AKD2G EtherCAT Manual*.

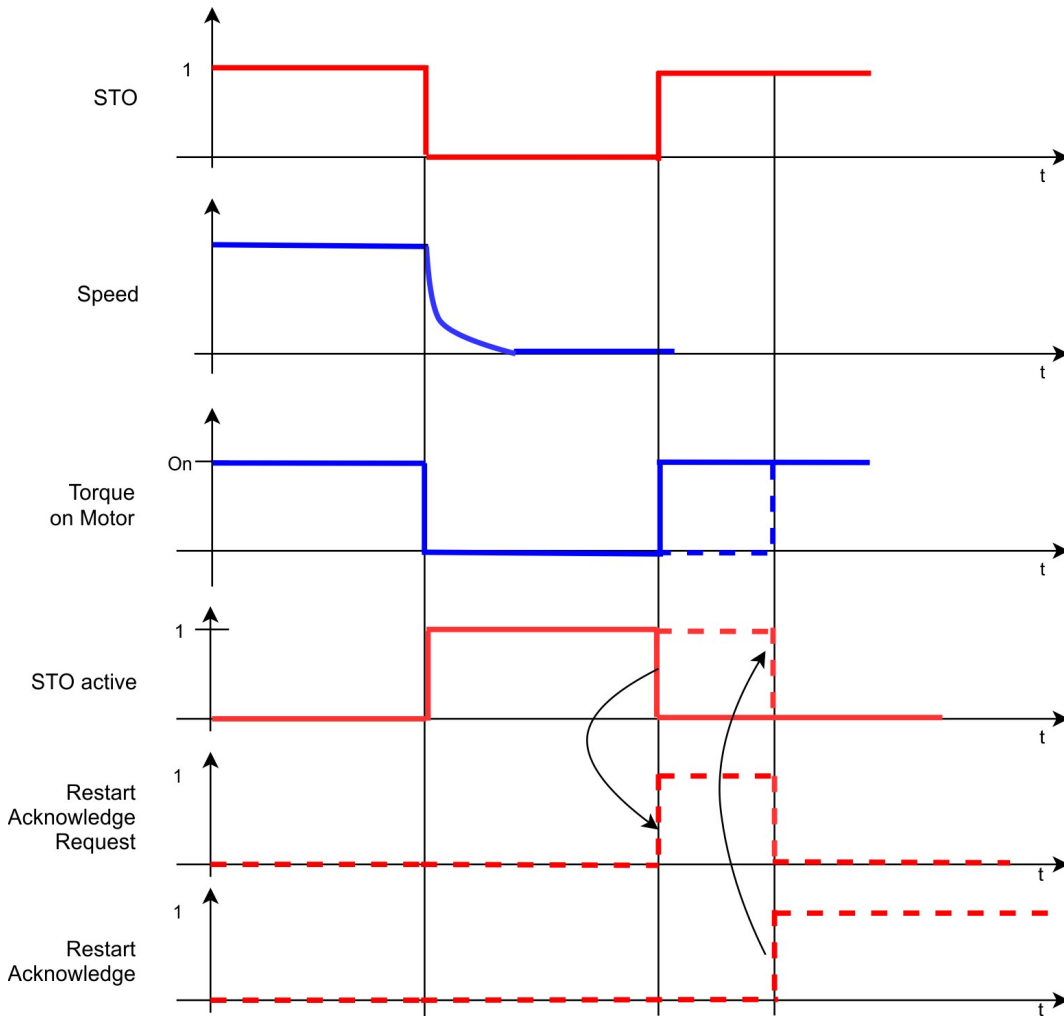

9.4.3.5 Related Parameters

Safety Parameters

Name	Variables	Default	Parameter
Function Activation	-	1 (Ready for activation)	(<code>AXIS#.SAFEPARAM.STO.FUNCTIONACTIVATION</code> , → # 336)
Safe Input	-	Axis 1 – 5 (Safe Dual 1) Axis 2 – 6 (Safe Dual 2)	(<code>AXIS#.SAFEPARAM.STO.SAFEINPUT</code> , → # 339)
FSoE	-	0 (Not used)	(<code>AXIS#.SAFEPARAM.STO.FSOE</code> , → # 335)

Diagnostic Parameters

Name	Variables	Default	Parameter
Function Actual Active Status	-	-	(AXIS#.SAFE.STO.ACTIVE, → # 316)
Report fault	-	-	(AXIS#.SAFE.STO.REPORTFAULT, → # 317)

When using manual restart, map the Restart Request Source to a safe output, see (Parameters Editor, → # 265).

9.4.3.6 Setup in WorkBench

Select the drive and open the Safety Parameterization view (Parameters Editor, → # 265).



Parameters Editor

Configuration of the safety parameters.

[Learn more about this topic](#)

Axes	Categories	Safe Stop	Instances
Common	General	STO (Safe Torque Off)	Instance 1 (Fault Reaction)
Axis 1	Safe Stop	SS1 (Safe Stop 1)	
Axis 2		SBC (Safe Brake Control)	
		SBT (Safe Test)	
		SDB (Safe Dynamic Brake)	

[Goto Safety Parameter Download](#)

1. Choose the axis.
2. Select the Category.
3. Select the STO function.
4. The instance number is not applicable for STO.

[SafeID: 1] Axis 1 > Safe Stop > STO (Safe Torque Off) > Instance 1 (Fault Reaction)



Type:	Kollmorgen AKD2G SMM		
Description:	Kollmorgen AKD2G SafeMotion Monitor		
Import file:	-		
Parameter	Value	Unit	
Axis 1 - Safe Stop - STO - Instance 1 (Fault Reaction)			
Function Activation	Ready for Activation		
Safe Input	Safe input 2 (SIN2)		
FSoE	Not Used		
Restart Acknowledge Behavior	Manual Restart		
Restart Acknowledge Source	Safe input 3 (SIN3)		

Note: If you want to have one dual input (e.g. SIN1/SIN2) activate STO for both axis 1 and axis 2, then you must set the activation parameter for both axes to the same input.

9.4.3.7 Fault Reaction/ Failure Messages

If dual channel mode is selected, the AKD2G observes to see if the two inputs are in a different state for longer than 100 ms. If the two inputs are in different states for more than 100 ms, an I/O failure activates SS1_1 and then the axis torque is switched off by STO.

An I/O failure warning is issued when the AKD2G is disabled or a fault when the AKD2G is enabled and AXIS#.SAFE.STO.REPORTFAULT (AXIS#.SAFE.STO.REPORTFAULT, → # 317) is set to 1.


9.4.3.8 Safety Diagnostic for the Safe I/O view in WorkBench

The WorkBench Safe I/O view shows the current status on the safe inputs and the logical status of the STO function for every axis.



Safe I/O

Safety functions monitoring

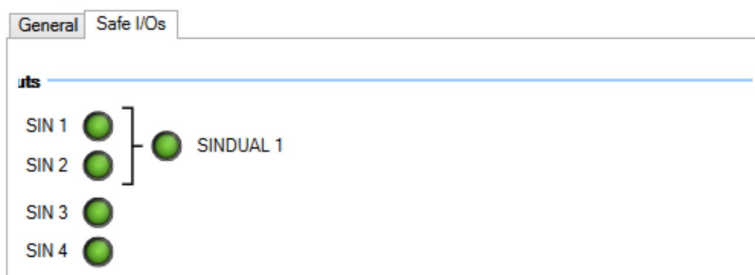

9.4.3.9 Safety Properties

Refer to (Safety Properties Overview, → # 214).

9.4.4 SS1-t (Safe Stop 1)

SS1-t (time controlled) description for drive option Functional Safety 2 or 3.

9.4.4.1 Description

With the time based function "Safe Stop 1" (SS1-t) the drive is stopped by a controlled stop with the configured deceleration ramp. When the time t_SS1 (AXIS#.SAFEPARAM.SS1_#.TIMETOSTO, → # 334) is elapsed, STO is activated.

SS1 function corresponds to a controlled stop according to IEC 60204-1, stop category 1. The controlled stop is executed in the unsafe part of the drive. The deceleration ramp (AXIS#.SAFE.SS1_#.DEC, → # 313) is part of the standard drive parameter. The STO function is a safe function.

Function Input / Output Variables



Inputs

- **SS1 Activate** can be activated by
 - FSoE,
 - I/O failure (instance 1 only),
 - safe digital inputs (must be mapped) or
 - other safety functions as fault reaction.

Outputs

- **SS1 Active**: logical status of the SS1 function
- **STO Active**: logical status of the STO function
- **STO Activate** is activated by SS1

Number of Instances

Three instances per axis.

9.4.4.2 Activation

NOTE

To use SS1-t, Velocity & Deceleration Monitoring must be disabled in the safety parameters on a FS3 drive. On a FS2 drive, only SS1-t is available. If SS1_2 or SS1_3 is set to “Not Used”, the corresponding FSoE activation bit is ignored even if (SAFEPARAM.SAFEFIELDDBUS.ACTIVATION, → # 364) is 1.

Activation by FSoE	• For a drive profile overview, see FSoE (FSoE, → # 226). • For setup and handling, see the <i>AKD2G EtherCAT Manual</i>.
Activation by safe digital inputs	• To review the enclosure and wiring instructions, see Enclosure, wiring (Enclosure, wiring, → # 207). • To see technical data for the safe inputs, see Technical Data (Technical Data, → # 221). • For notes on activation by safe inputs, see Activation by Safety Digital Inputs (Activation By Safe Digital Inputs, → # 216).


9.4.4.3 Safety Properties

Refer to (Safety Properties Overview, → # 214).

9.4.4.4 Restart

(STO (Safe Torque Off), → # 229)

9.4.4.5 Timing

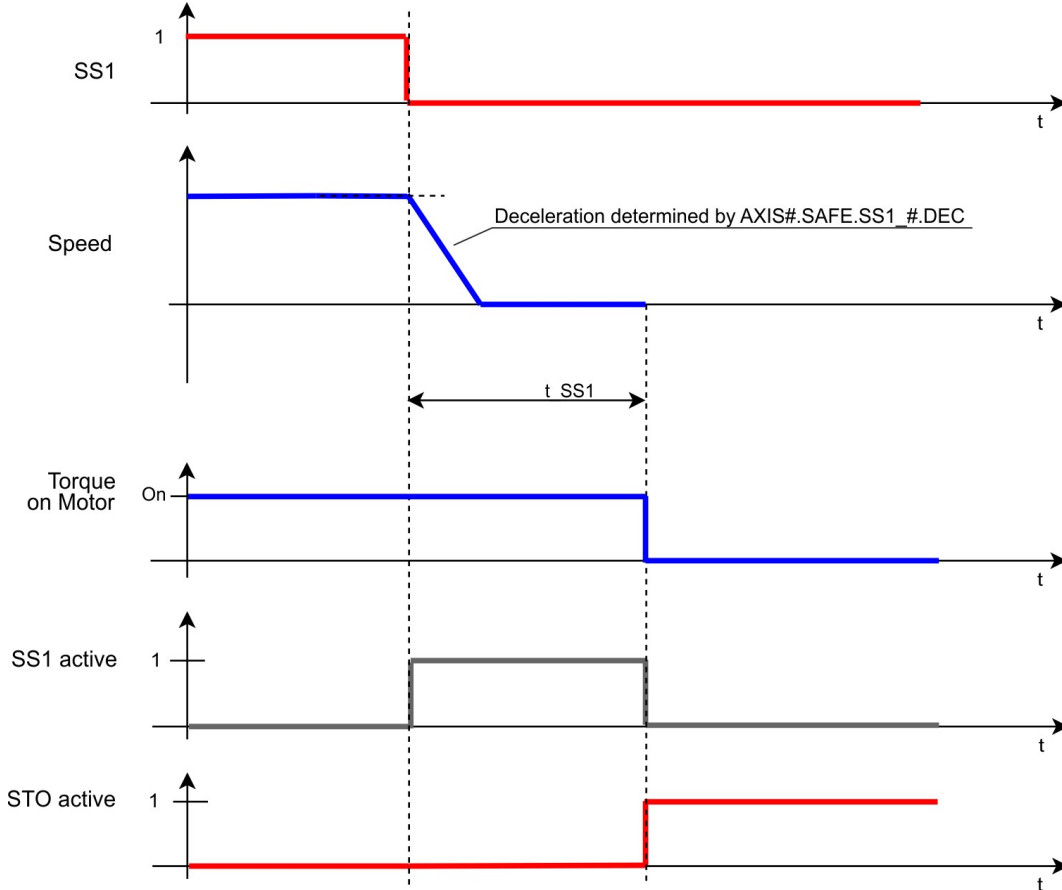

Notes:

- SS1 is fully completed after activation until STO is activated, even if the request (SS1_Activate) is reset in between.
- The additional time for the optional closing of the brakes is not included in this diagram. For more information refer to (SBC (Safe Brake Control), → # 238)
- See limitations for FSoE
 - (Limitations, → # 388)

9.4.4.6 Related Parameters

Safety parameters

Name	Variables	Default	Parameter
Function Activation	-	Inst. 1: 1 (Ready for activation) Inst. 2,3: 0 (Never active)	(AXIS#.SAFEPARAM.SS1_#.FUNCTIONACTIVATION, → # 332)
Safe Input	-	0 (Not used)	(AXIS#.SAFEPARAM.SS1_#.SAFEINPUT, → # 333)
FSoE	-	0 (Not used)	(AXIS#.SAFEPARAM.SS1_#.FSOE, → # 331)
Time To STO	t_SS1	2 ms	(AXIS#.SAFEPARAM.SS1_#.TIMETOSTO, → # 334)
Velocity & Deceleration Monitoring	-	0 (Disabled)	

Diagnostic parameters

Name	Variables	Default	Parameter
Function Active Status	-	-	(AXIS#.SAFE.SS1_#.ACTIVE, → # 312)
Function Internal Status	-	-	(AXIS#.SAFE.SS1_#.INTERNALSTATE, → # 314)

Device parameters

Name	Variables	Default	Parameter
Deceleration Mode	-	0 (Drive driven)	(AXIS#.SAFE.SS1_#.MODE, → # 315)
Deceleration Ramp	-	9999.946 rpm/s	(AXIS#.SAFE.SS1_#.DEC, → # 313)

9.4.4.7 Setup in WorkBench

Select the drive and open the Safety Parameterization view (Parameters Editor, → # 265).



Parameters Editor

Configuration of the safety parameters.

[Learn more about this topic](#)

1. Choose the axis
2. Select the category
3. Select the SS1 function
4. Select the instance number

Axes	Categories	Safe Stop	Instances
Common	General	STO (Safe Torque Off)	Instance 1 (Fault Reaction)
Axis 1	Safe Stop	SS1 (Safe Stop 1)	Instance 2
Axis 2		SBC (Safe Brake Control)	Instance 3
		SBT (Safe Brake Test)	
		SDB (Safe Dynamic Brake)	

[Goto Safety Parameter Download](#)

[SafeID: 1] Axis 1 > Safe Stop > SS1 (Safe Stop 1) > Instance 1 (Fault Reaction)



User Units (for information only)

Position: N/A

Velocity: N/A

Acceleration: N/A

Type:	Kollmorgen AKD2G SMM		
Description:	Kollmorgen AKD2G SafeMotion Monitor		
Import file:	-		
Parameter	Value	Unit	
Axis 1 - Safe Stop - SS1 - Instance 1 (Fault Reaction)			
Function Activation	Ready for Activation		
Safe Input	Not Used		
FSoE	Not Used		
Time to STO (t_SS1)	2	ms	
Velocity & Deceleration Monitoring	Disabled		
Velocity Zero Window (n_Zero_SS1)	1	Velocity User Units	
Time for Velocity Zero (t_L_SS1)	1	ms	
Deceleration Limit (a_SS1)	0	Acceleration User Units	
Time Delay Deceleration Monitoring (t_D_SS1)	1	ms	

Validation Results (0)

Device Related Parameters (2)

Mode:

0 - Drive Driven

Deceleration Ramp:

9.999.946 rpm/s

If one dual input (e.g. SIN1/SIN2) activates SS1-t for both Axis 1 and Axis 2, set the Activation parameter for both axes to the identical input (e.g. Safe Dual Input 1).

9.4.4.8 Fault Reaction / Failure Messages

If dual channel mode is selected, the AKD2G sees if the two inputs are in a different state for more than 100 ms. If the two inputs are in different state for more than 100 ms, an I/O failure activates SS1_1 and then STO is activated. An I/O failure warning is displayed.

SS1 Instance 1 can be configured as the fault reaction for other safety functions. Functions which support this feature are SS2, SSR, SDI, SLA, SAR, SLI, SLP and SLS.

9.4.4.9 Safety State / Status Signals

The signal [AXIS#.SAFE.SS1_#.ACTIVE](#) can be monitored by safe digital outputs with OSSD pulses (OSSD, → # 224). The status signal must be mapped to the safe digital output. Two outputs can be combined to a dual channel output. For parameter description see (Functional Safety Parameter Reference, → # 284).

9.4.5 SBC (Safe Brake Control)

Safe Brake Control description for drive option Functional Safety 2 or 3.

9.4.5.1 Description

The safety function SBC (Safe Brake Control) is used for controlling the brakes wired to X1, X2 or X4 of the AKD2G. The connected brake is engaged and released by switching both lines (BR+ and BR-).

- The safety function SBC makes a motor with a motor brake suitable for the usage scenarios A1, A2, E1, E2, E3 according to DGUV.
- The safety function SBC makes a motor with a motor brake and a second brake on the same axis suitable for the usage scenarios A1, A2, A3, E1, E2, E3 according to DGUV.
- The brake can be configured with or without (SDB (Safe Dynamic Brake), → # 254).
- For requirements to the motor brakes refer to (Motor Brake Requirements , → # 228).

Association of brake outputs to drive axes

Drive Type	Brake 1	Brake 2	max. SBC Safety Level
Single Axis	Axis 1 (X1)	Axis 1 (X4)	Axis 1 : SIL3 / PLe
Single Axis	Axis 1 (X1)	Not used	Axis 1 : SIL2 / PLd
Single Axis	Not used	Axis 1 (X1)	Axis 1 : SIL2 / PLd
Dual Axes	Axis 1 (X1)	Axis 2 (X2)	Axis 1 : SIL2 / PLd Axis 2: SIL2 / PLd
Dual Axes	Axis 1 (X1)	Axis 1 (X2)	Axis 1 : SIL3 / PLe Axis 2 : no brake

NOTE

To achieve SIL 3 / PLe for SBC,

- two brakes per axis must be used. With one brake the axis can reach SIL 2 / PLd only.
- the brake function must be tested periodically with SBT (→ # 248)

Important Notes

NOTICE


Hoist and crane support: The drive will safely ensure a holding position, as long as SBC (braking ramp, delay time) is configured correctly.

- Any brake must be connected to one of the SBC interfaces (X1, X2, X4).
- The user is responsible for the execution of the safe brake test SBT (→ # 248).

NOTE

For requirements to the motor brakes refer to (→ # 228).

Function Input / Output Variables

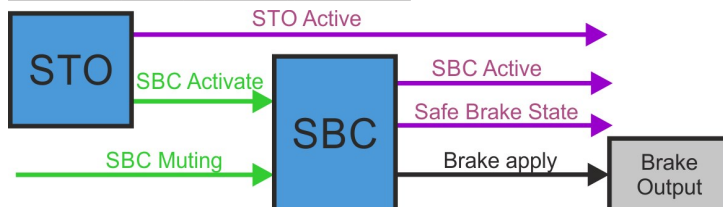

Inputs

- **SBC Delay:** brake delay tSBC
- **SBC Muting:**
 - can be used for enabling manual override of the brakes while STO is active.
 - muting can be activated by FSoE or safe digital inputs (must be mapped).
- **SBC Activate:**

- can be triggered by STO only without delay.
- the trigger with delay depends on the configuration, with/without SDB.

Outputs


- **SBC Active:** logical status of the SBC function
- **Safe Brake State:** state of the brake outputs (24V or 0V)

Number of Instances

One instance per axis.

9.4.5.2 Test Pulses

Test pulses are applied to the Brake+ and Brake- outputs (X1, X2, X4) alternately to ensure valid feedback. The test pulses are 1ms at the bottom but are 3ms long due to their slow edges.

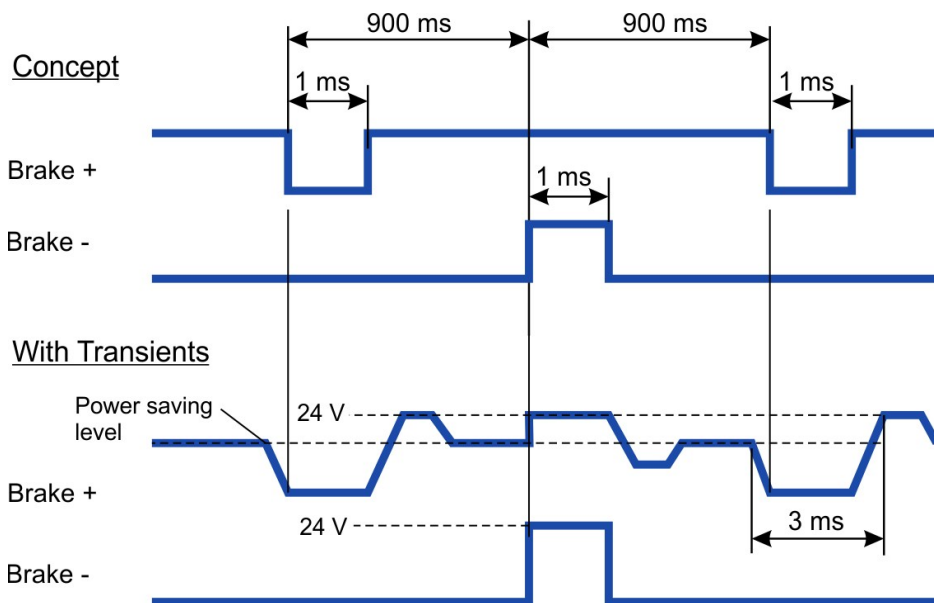

9.4.5.3 Activation

SBC for one or two brakes can be configured to be activated during STO process.


The controlled brake(s) can be configured to be engaged while motor torque is available (STO not active yet) or with STO became active (no motor torque).

NOTE

The safety function can be configured with WorkBench or via FSoE.

Example:

STO activated by safe digital inputs, one axis, SIL3 PLe, SBC with two brakes, SBT, without SDB

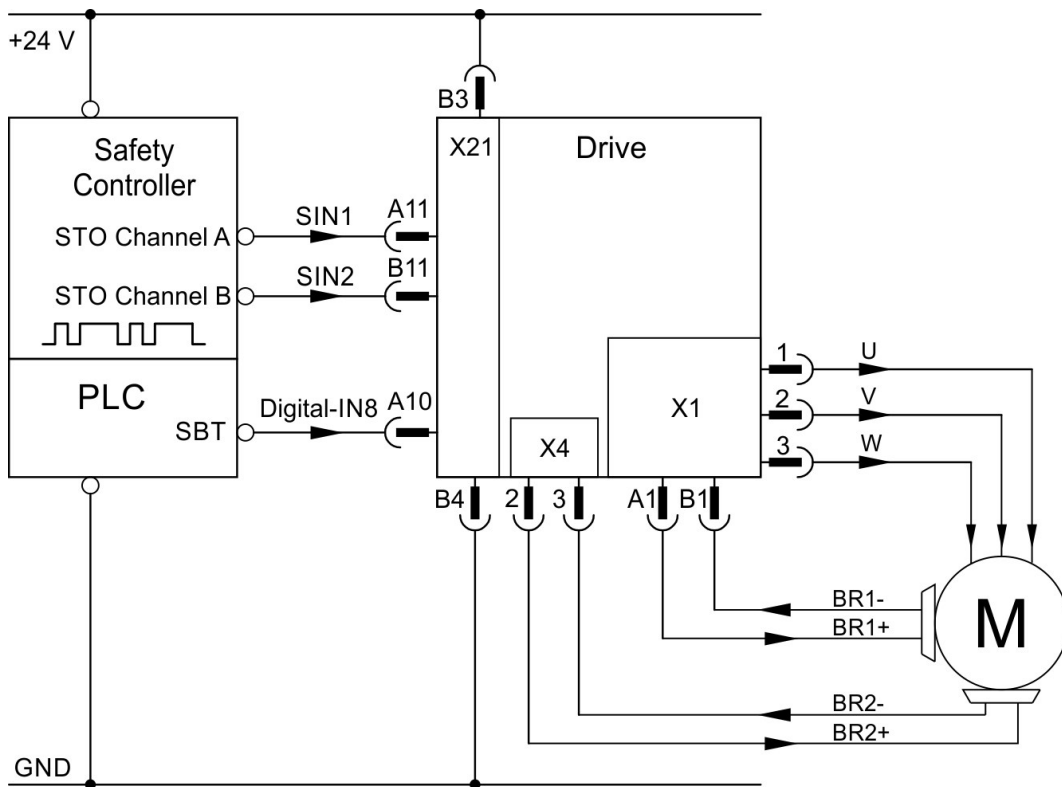

9.4.5.4 Restart

The brakes controlled by SBC will disengage simultaneously with the deactivation of STO if [AXIS#.SAFE.STO.REPORTFAULT](#) is set to 0.

If [AXIS#.SAFE.STO.REPORTFAULT](#) is set to 1, the brake will release when the axis is enabled again. See STO (→ # 231).

9.4.5.5 SBC Muting Function


NOTICE

SBC muting is critical with regards to safety and has important influence on the safety level of an application. It has to be ensured that the use of SBC muting has no negative impact on the required safety level within the complete operational range of the application. The reliability has to be independent from the application.


Consult your notified body for further information and approval.

For servicing purposes, manual control of the brakes may be necessary.

When SBC muting is active, the brakes can be overwritten even if STO/SBC is active. The SBC active signal will be suppressed and manual control via WorkBench, digital input or EtherCAT is possible.

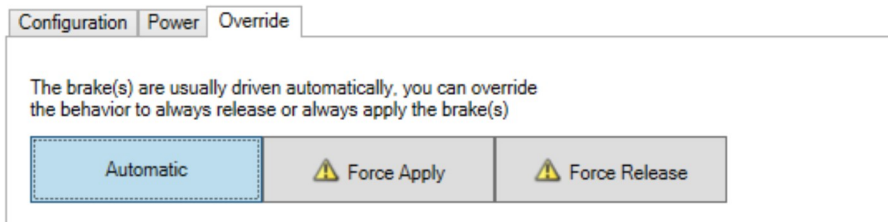

Manual control of the brakes is prohibited when SBC muting is not active and STO/SBC is active at the same time.

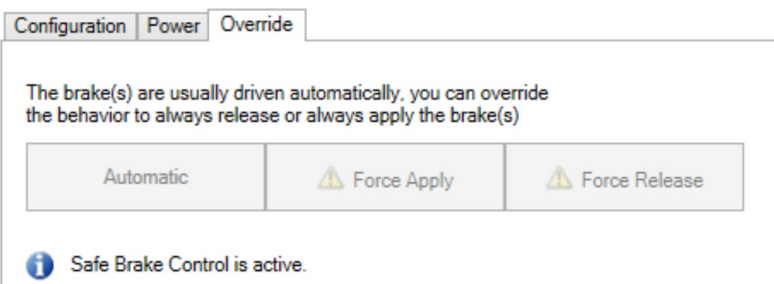

NOTICE

Overwriting the brake(s) behavior may create unsafe situations and/or damage.

If the axis is used for a vertical load, forcing the brake(s) to release may damage the load.

- Only use this function when safety is ensured by other measures.
- Deactivate SBC Muting before reentering normal operation.

If SBC Muting is active during STO activation and brake control is set to "automatic", brake behavior is determined by standard brake parameters.

Safety parameters

Name	Variables	Default	Parameter
SBC Brake 1	-	0	(→ # 321)
SBC Brake 2	-	0	(→ # 321)
Brake Delay	tSBC	100 ms	(→ # 320)
SBC Muting	-	0	(→ # 322)

Diagnostic parameters

Name	Variables	Default	Parameter
Function Active Status	-	-	(→ # 307)
Safe Brake State	-	-	(→ # 290)


Device parameters

Name			
BRAKEx.AXIS	For device parameters refer to WorkBench online help.		
AXISx.MOTOR.BRAKE			

9.4.5.6 Timing: SS1 followed by SBC without SDB

Process:

1. STO is requested.
2. The brake output is deactivated.
3. The system activates STO after the configured brake delay elapsed.

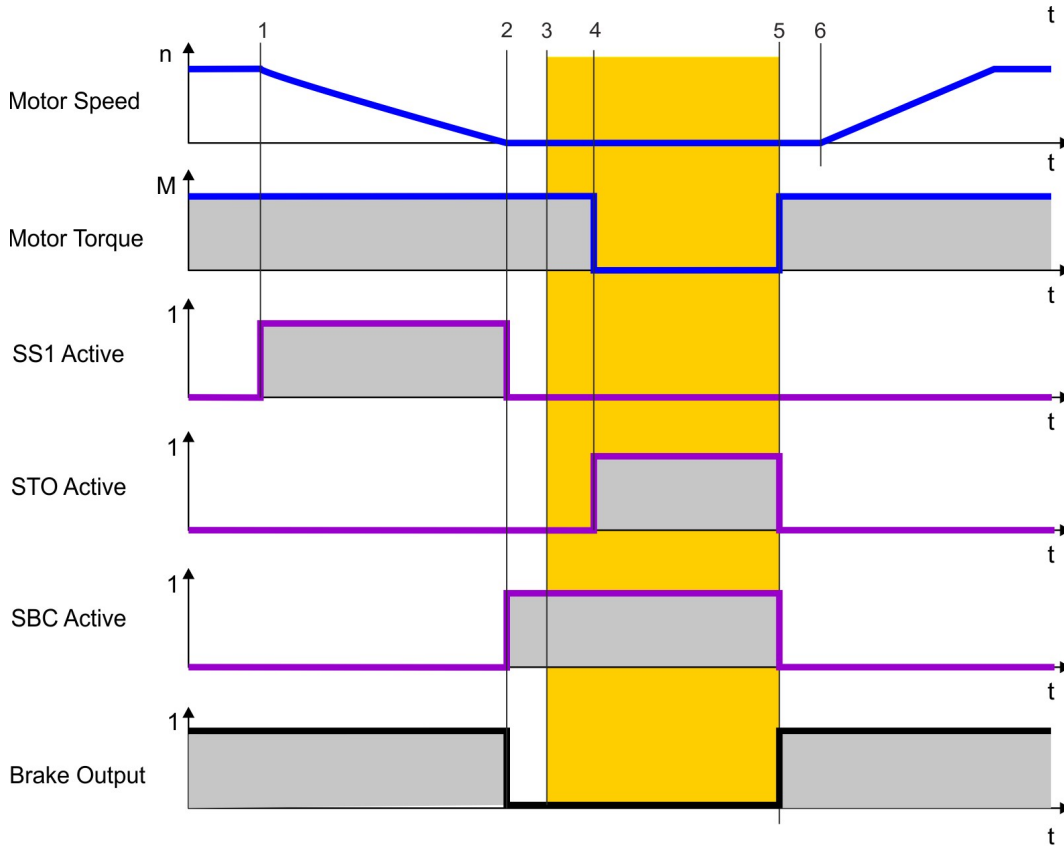


Timing	Max.	Remarks
t1		SS1 activate
t1 to t2	configurable	t_SS1: Time window for deceleration
t2		SBC activate brake output 0V
t2 to t3	see brake datasheet	Brake engaging
t3		Brake is applied
t2 to t4	configurable	tSBC: Brake time delay
t4		STO activate
t5		STO, SBC deactivate, Brake output 24V
t5 to t6	see brake datasheet	Brake disengaging
t6		Brake is released

9.4.5.7 Timing: SS1 followed by SBC with SDB

Process:

- 1. STO is requested.
- 2. The brake output and the output power stage are deactivated simultaneously.

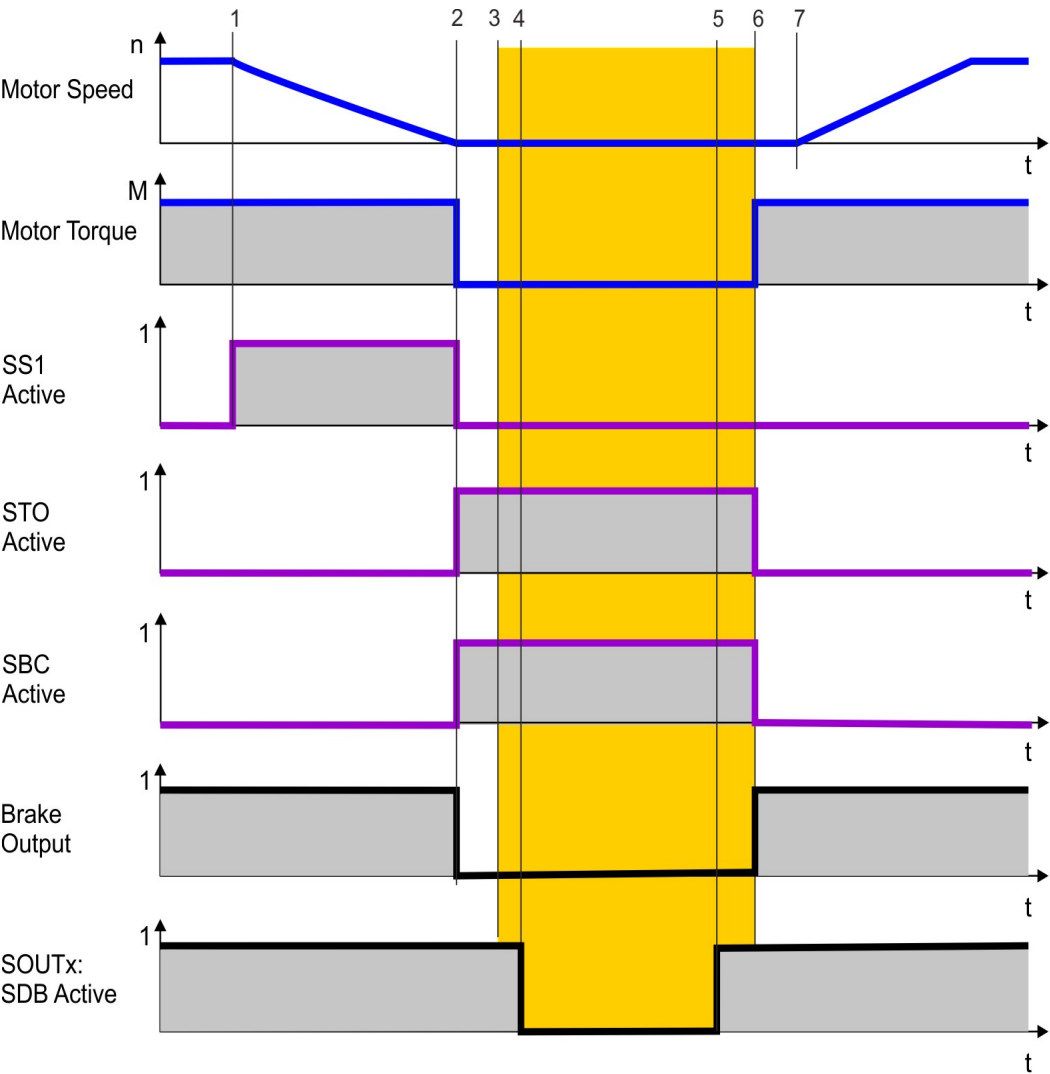

Timing	Max.	Remarks
t1		SS1 activate
t1 to t2	configurable	t_SS1: Time window for deceleration
t2		SBC activate. Brake output 0V
t2 to t3	see brake datasheet	Brake engaging
t3		Brake is applied
t2 to t4	fixed	Delay of 6ms
t5		SDB active. SOUTx active
t5 to t6	fixed	Delay of 6ms
t6		STO and SBC deactivates
t6 to t7	see brake datasheet	Brake disengaging
t7		Brake is released

Note: tSBC is not used in case SDB is configured.

9.4.5.8 Setup in WorkBench

Select Safety Parameterization view (→ # 263). Choose the axis (1), category (2) and SBC function (3). The instance number (4) is not applicable for SBC.



Parameters Editor

Configuration of the safety parameters.

[Learn more about this topic](#)

Axes	Categories	Safe Stop	Instances
Common	General	STO (Safe Torque Off)	Instance 1
Axis 1	Safe Stop	SS1 (Safe Stop 1)	
Axis 2		SBC (Safe Brake Control)	
		SBT (Safe Brake Test)	
		SDB (Safe Dynamic Brake)	

[Goto Safety Parameter Download](#)

[SafeID: 1] Axis 1 > Safe Stop > SBC (Safe Brake Control) > Instance 1



Type:	Kollmorgen AKD2G SMM		
Description:	Kollmorgen AKD2G SafeMotion Monitor		
Import file:	-		
Parameter	Value	Unit	
Axis 1 - Safe Stop - SBC - Instance 1			
SBC Brake 1	Configured without SDB		
SBC Brake 2	Configured with SDB		
Brake Time Delay (tSBC)	100	ms	
SBC Muting	Not Used		

Validation Results (0)

Device Related Parameters (3)

Brake 1 used by:	1 - Axis 1
Brake 2 used by:	2 - Axis 2
Axis 1 Brake(s):	0 - Not Used

Each brake needs to be assigned to its controlling axis with the device related parameters:

Assign the axis for Brake1 (5), assign the axis for Brake2 (6).

(7) indicates whether the drive has detected a brake for the corresponding axis.

NOTICE

The device related parameter settings are not safe. Changing the configuration in this view will affect the device related parameters.
If the configuration collides with the safe settings, warning 9007 will be issued when the axis is disabled. Enabling the affected axis will be prohibited in this case.

On single axis drives, axis 1 can be configured to control brake 1 and 2 with SBC. For dual axis drives, the brake configuration must be considered:

Assignment	Axis#	Brake1	Brake2	Comment
Example 1	Axis1	SBC	SBC	If both brakes are assigned to axis1, axis2 cannot control any of those two brakes.
	Axis2	-	-	
Example 2	Axis1	SBC	-	If axis1 controls brake1 with SBC, axis2 can control brake2 with SBC.
	Axis2	-	SBC	
Example 3	Axis1	-	-	If both brakes are assigned to axis2, only brake2 can be controlled with SBC. Brake1 will be controlled, but not safe (no SBC).
	Axis2	no SBC	SBC	

9.4.5.9 Fault Reaction / Failure Messages

It is not possible to detect a malfunctioning brake through SBC. Therefore diagnosis with SBT is necessary in regular time intervals (see (SBT (Safe Brake Test), → # 248)).

A disconnected brake or an open circuit on the brake connectors (X1, X2 or X4) will result in an I/O failure causing SS1_1 (fault reaction) to be triggered followed by STO.

An I/O failure warning is issued when the AKD2G is disabled.

A fault will be issued when the AKD2G is enabled and [AXIS#.SAFE.STO.REPORTFAULT](#) is set to 1.

9.4.5.10 Safety State / Status Signals

See Fault reaction/Failure messages in chapter (SBT (Safe Brake Test), → # 248)

9.4.5.11 Safety Properties

Refer to (Safety Properties Overview, → # 214).

9.4.6 SBT (Safe Brake Test)

Safe Brake Test description for drive option Functional Safety 2 or 3.

9.4.6.1 Description

The function SBT (Safe Brake Test) can be used for testing the brakes connected to X1, X2 or X4 of the AKD2G. SBT is carried out by applying a configured torque against the closed brake and supervising the motion on the connected axis. The test is successful if the axis motion does not exceed a parameterized tolerance. If the axis motion exceeds the tolerance, the test is failed and therefore the safety functions using the brake are lost. After a failed brake test, safe brake operation cannot be assumed anymore. Brake replacement or service will be necessary.

- SBT is a diagnostic function for holding brakes. In order to operate brakes (SBC) that are part of a safety function (PLd / SIL2 or higher), frequent tests with SBT are required.
- SBT must be triggered regularly by the end customer.
- SBT considers the derating factor for brakes used in safety functions.
- During SBT, 130% of the max. possible application torque will be applied to the brake. Additional forces caused by vertical loads will be taken into account automatically.
- Brake slippage will be detected with a resolution of at least 1°.
- Two brakes can be assigned to one axis. Each brake can be configured with an independent slippage tolerance.
- SBT is only functional with SBC.
- SBT does not lead to wear of the brakes.

Important Notes

NOTICE

- The user is responsible for the trigger of the SBT function.
- For correct operation of SBT the axis must be free to move when the drive releases the brake or releases both brakes as appropriate; if the machine has further motors and/or brakes mechanically coupled to the same axis, these devices must be set to states where they do not impede motion before SBT is carried out. In this case only one brake shall be tested at a time. Each brake must be tested independently.
- The machine manufacturer has to determine the SIL / PL reached by SBC + SBT according to the configuration and parameterization.

NOTICE

When using external position command/PLC

At the end of SBT there is a mismatch between the set command value and the current position value of the axis. It is important that the master PLC executes an alignment of the set command position and the current axis position before SBT finishes to avoid a jump of the axis.

Execute a brake test

- at least every 8 hours,
- at the start of a machine or at the transition to operation mode using the brake,
- after long standstill of the machine,
- after drive reboot,
- after brake service or replacement.

Depending on the target SIL / PL of the safety function that is performed by the brakes, it can be necessary to carry out SBT more often. In high safety demand applications (SIL3 / PLe, DC = high), it can be necessary to execute SBT every time prior to demand. For example if access to a dangerous area is prohibited by a safety interlock, SBT must be executed successfully before access can be granted.

Restrictions

The maximum motion for the brake during safe brake test (see “Maximum Motion” parameters (Related Parameters, → # 250)) cannot be set to a greater or equal value than 10800 arcminute. Otherwise, the SMM will return an error code once SBT function is started. The error code can be read by the keyword [AXIS#.SAFE.SBT.ERROR](#), which will report “0x6 - SMM System Error”.

In general, it is expected to set the maximum motion for the “tested” brake as small as possible to prevent any mechanical hazards when the brake loses its holding function. However, an application might need a larger tolerance window because of a mechanical gearing between encoder and motor shaft.

The maximum slippage velocity in [RPM] is calculated by:

$$(10800 [\text{arcmin}] - \text{“Max. Motion”} [\text{arcmin}]) * 600 / 216$$

Example:

- For “Max. Motion” = 300 arcmin (5°), the max. slippage velocity is $(10800-300) * 600/216 = 29167 \text{ rpm}$.
- For “Max. Motion” = 7200 arcmin (120°), the max. slippage velocity is $(10800-7200) * 600/216 = 10000 \text{ rpm}$.

NOTE

The user has to consider for his application the worst case max. acceleration of motor shafts load including the additional “applied” test torque of the drive during SBT.

Preconditions for a brake test:

- The motor is at standstill.
- The tested brake is released.
- The drive is enabled.
- STO is not active.

Encoder requirements

The SBT function can be executed with any encoder type. However, the encoder shall have at least a resolution and accuracy of 1 degree.

Encoder verification:

The user shall verify that the encoder works properly by his application. As example the following types of machine motion can be used to verify the function of the encoder:

- Perform a home move which includes a physical motion.
- A position move of at least 1 mechanical revolution of the encoder.
- A relative move to reach the start position of SBT.

After a long downtime of the machine, the encoder verification shall be repeated.

Current measurement verification

The verification check of drive current measurement should be done during machine commissioning and during re-commissioning due to changes such as replacement of the drive or firmware update.

The current measurement should verify expected current reported by the drive when holding a reference load. A small movement may be needed to overcome static friction.

Function Input / Output Variables**Inputs**

- **SBT Activate** can be activated by
 - EtherCAT, CANopen
 - Digital input (must be mapped)
 - WorkBench

Outputs

- **SBA State**: logical status providing information on SBT. Can be mapped to a safe output and retrieved through FSoE status word.
0 = SBT execution necessary or failed in last attempt
1 = SBT was executed successfully within the parameterized period
- **SBT State**: for status information on the actual brake condition see (AXIS#.SAFE.SBT.STATE, → # 311).

Number of Instances

One instance per axis.

9.4.6.2 Activation

- By a non safe fieldbus: EtherCAT or CANopen SDO
- By a non safe digital input (DIGITAL-IN1 to DIGITAL-IN12, (→ # 175)).
- By WorkBench


9.4.6.3 Related Parameters**Safety parameters**

Name	Variables	Default	Parameter
Function Activation	-	0 (Never active)	(→ # 323)
Maximum Time Interval	-	480 min	(→ # 326)
Max Application Load	-	1000 mA	(→ # 324)
Maximum Motion 1st Attached Brake	-	300 arcmin	(→ # 325)
Maximum Motion 2nd Attached Brake	-	300 arcmin	(→ # 325)
Torque Duration	-	500 ms	(→ # 327)

Diagnostic parameters

Name	Variables	Default	Parameter
SBT Actual Status	-	-	(→ # 311)
SBT Move	-	-	(→ # 309)
SBT SBA Active	-	-	(→ # 310)
SBT Error	-	-	(→ # 308)
Brake SBT Elapsed	-	-	(→ # 340)
Brake SBT State	-	-	(→ # 341)

9.4.6.4 Timing

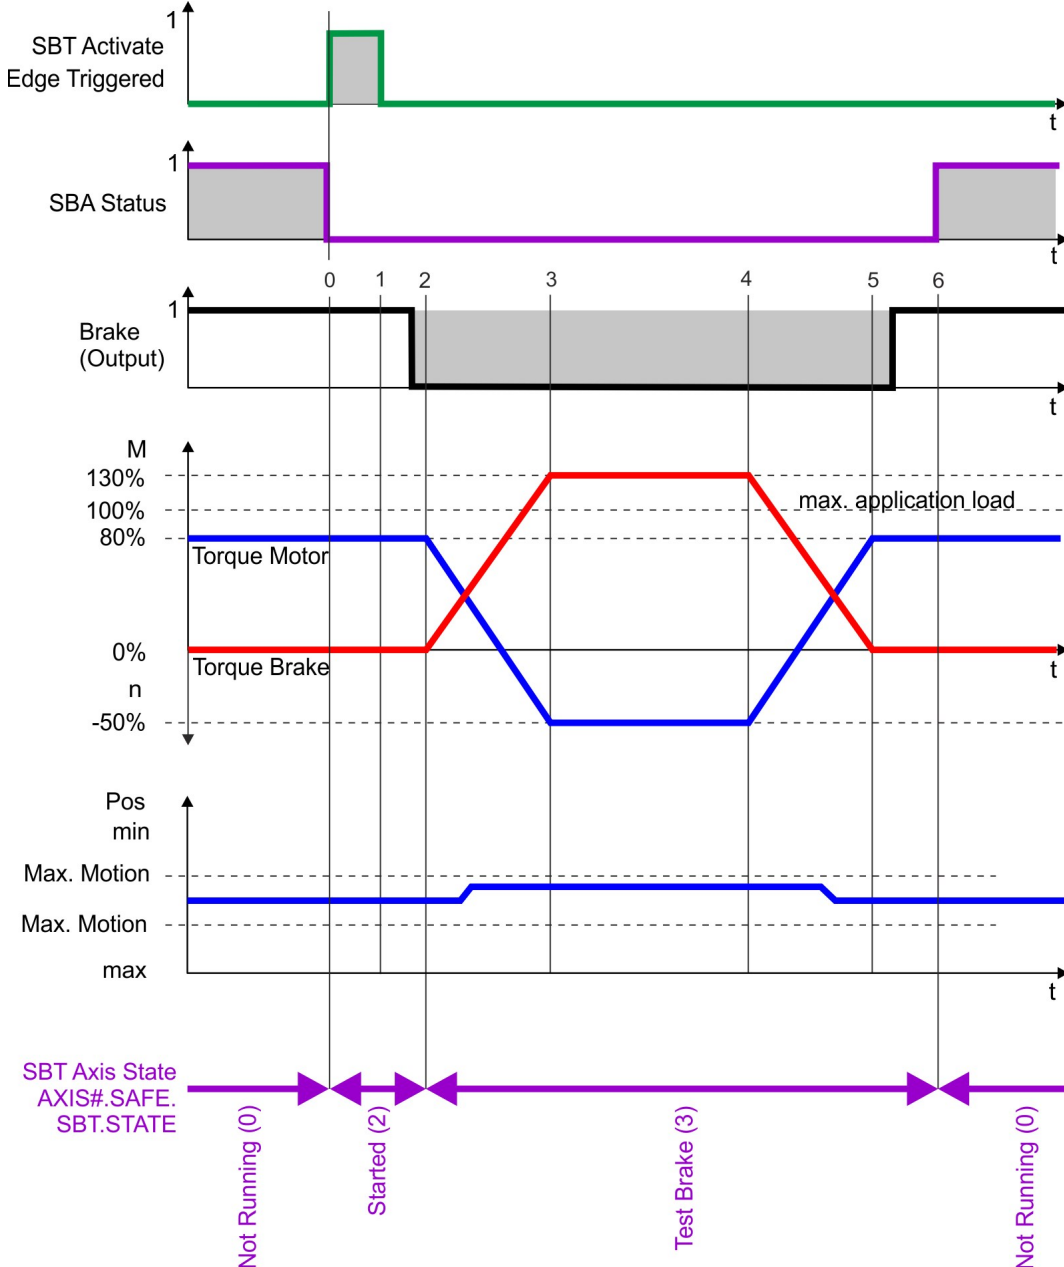

Timing	max	Remarks
t0		Start SBT
t0 to t1	200 ms	Measuring actual application load on motor
t1 to t2	300 ms	Brake applies
t2		Brake is applied. Position monitoring is started. Drive is switched to torque mode internally.
t2 to t3	$\frac{1}{3} * (t3 \text{ to } t4)$	Ramp-up to apply 130% torque on the brake
t3 to t4	Configurable	Torque duration
t4 to t5	$\frac{1}{3} * (t3 \text{ to } t4)$	Ramp-down torque on the brake
t5 to t6	300 ms	Release brake
t6 to t0	Configurable	Maximum time interval between tests

9.4.6.5 Setup in WorkBench

Select Safety Parameterization view (→ # 263).
Choose the axis (1), category (2) and SBT function (3). The instance number (4) is not applicable for SBT.

Parameters Editor

Configuration of the safety parameters.

[Learn more about this topic](#)

Axes	Categories	Safe Stop	Instances
Common	General	STO (Safe Torque Off)	Instance 1
Axis 1	Safe Stop	SS1 (Safe Stop 1)	4
Axis 2		SBC (Safe Brake Control)	
		SBT (Safe Brake Test)	
		SDB (Safe Dynamic Brake)	

[Goto Safety Parameter Download](#)

[SafeID: 1] Axis 1 > Safe Stop > SBT (Safe Brake Test) > Instance 1

Type: Kollmorgen AKD2G SMM
Description: Kollmorgen AKD2G SafeMotion Monitor
Import file: -

Parameter	Value	Unit
Axis 1 - Safe Stop - SBT - Instance 1		
Function Activation	Ready for Activation	
Maximum Time Interval	480	minute
Max Application Load	1000	mA
Maximum Motion Brake 1	300	arcmin
Maximum Motion Brake 2	300	arcmin
Torque Duration	500	ms

9.4.6.6 Fault Reaction / Failure Messages

If not all the preconditions are fulfilled and SBT is requested, the SBT button will be grayed out:

Safe Brake Test

Safe brake test activation and monitoring.

Axis 1

Brake Test Enabled:

1 - Ready for Activation

Start Brake Test

Max Time Between Test:

00:01:00

hh:mm:ss

Brake Test State:

0 - Not running

Brake Test Error:

0 - No error

When a brake test fails, further operation shall be prohibited by means of an external safe PLC. SBA will remain 0 and the Safety Diagnostics will show a "Brake Slippage Occurred":

Axis 2

Brake Test Enabled:

1 - Ready for Activation

Start Brake Test

Max Time Between Test:

00:01:00

hh:mm:ss

Brake Test State:

0 - Not running

Brake Test Error:

6 - Brake slippage occurred

A controlled stop will be executed immediately when a brake slippage is detected during the brake test. The drive remains enabled.

9.4.6.7 Safety State / Status Signals

Status of each axis and the assigned brakes can be observed in the SBT diagnostics view.

B

Safe Brake Test
Safe brake test activation and monitoring.

Axis 1

Brake Test Enabled:

1 - Ready for Activation

Start Brake Test

Max Time Between Test:

00:10:00

hh:mm:ss

Brake Test State:

0 - Not running

Brake Test Error:

0 - No error

Brake 1

State:

0 - Not tested

Time Remaining Until Next Check:

00:09:39

hh:mm:ss

The view gives information about:

- Status, if the test is running or not
- Test result (Not tested, Failed, Passed)
- Time until next and in-between test
- Status information on the test, if and which error occurred

If a brake test is not executed within the parameterized time interval, the Safe Brake Test Diagnostics will inform that the test validity is expired.

Time Remaining Until Next Check:

00:00:00

hh:mm:ss

 Test validity expired!

The warning 9008 “Brake Test Time Overflow” will be issued.

Axis (1):

 1 Fault(s)

 1 Warning(s)

Disable & Clear Faults



Axis	Type	Group	Id	Description	Details
1		Safety	9000	Safe torque off.	Help
1		Safety	9008	Warning: Brake Test Time Overflow.	Help

☐ Disable Fault auto popup.

☐ Disable Warning auto popup.

Copy

9.4.7 SDB (Safe Dynamic Brake)

Safe Dynamic Brake description for drive option Functional Safety 2 or 3.

9.4.7.1 Description

If the motor brake allows standstill braking only, dynamic braking is a method to slow down a servo system by dissipating the mechanical energy driven by the motor back EMF. When activated, the optional external Safe Dynamic Brake Contactor shortens the motor terminals. This forces all of the dynamic braking current to be stopping current. While the lines to the motor are shorted, the SDB status signal will be applied. When configured, SDB gets executed simultaneously along with STO.

Use this function when operating with high inertia loads.

Important Notes



WARNING No Brake Power at and near standstill!

Serious injury could result when the load is not properly blocked. This function does not ensure functional safety.

- Add a safe mechanical blocking (for instance, a motor holding brake).
- Configure (SBC (Safe Brake Control), → # 238) to be used with SDB.

NOTICE

- If SDB function is active, it is not possible to perform a controlled stop according to IEC 60204-1 category 1. If controlled stop category 1 is necessary, use the SS1 function.
- A failure in the SDB-Contactor can only be detected when changing states. In order to detect a loss of the safety function, SDB (STO) needs to be activated regularly according to the SIL/PL of the safety function.
- The SDB-Contactor is a safety related electromechanical component. The frequency of use contributes to its PFH value and therefore to the whole safety chain.
- Activating the SDB-Contactor (0V, closing contacts) will result in a short circuit on the output stage which could impair the drive when enabled. Therefore pay close attention to the parameterized timings especially during restart. Keep in mind the mechanical reaction time of the SDB-Contactor for activation and deactivation.
- Brake power depends on the inertia and speed of the decelerated mass. Activating SDB when the motion contains high amounts of energy can result in a very fast stop or very high currents. The braking energy and therefore the braking speed can be limited by external resistors.
- For assistance with determining stopping time and braking current when using the SDB function of the AKD2G refer to the online [AKD2G Safe Dynamic Braking Tool](#) or contact Kollmorgen technical support.

Function Input / Output Variables



Inputs

- **STO Active:** refer to (STO (Safe Torque Off), → # 229)
- **SDB Readback:** input for diagnosis signal returning from the SDB-Contactor

Outputs

- **SDB Activate:** signal for activating the SDB-Contactor auxiliary contacts


Number of Instances

One instance per axis.

9.4.7.3 Restart

Refer to STO for restart conditions (Restart, → # 230). When all conditions for a STO restart are fulfilled and SDB is configured, the SDB-Contactor will be deactivated and the readback diagnosis will be disabled. After the configured delay (same as during SDB activation) the STO will disable, allowing torque. The readback diagnosis will reengage after the configured time.

9.4.7.4 Timing

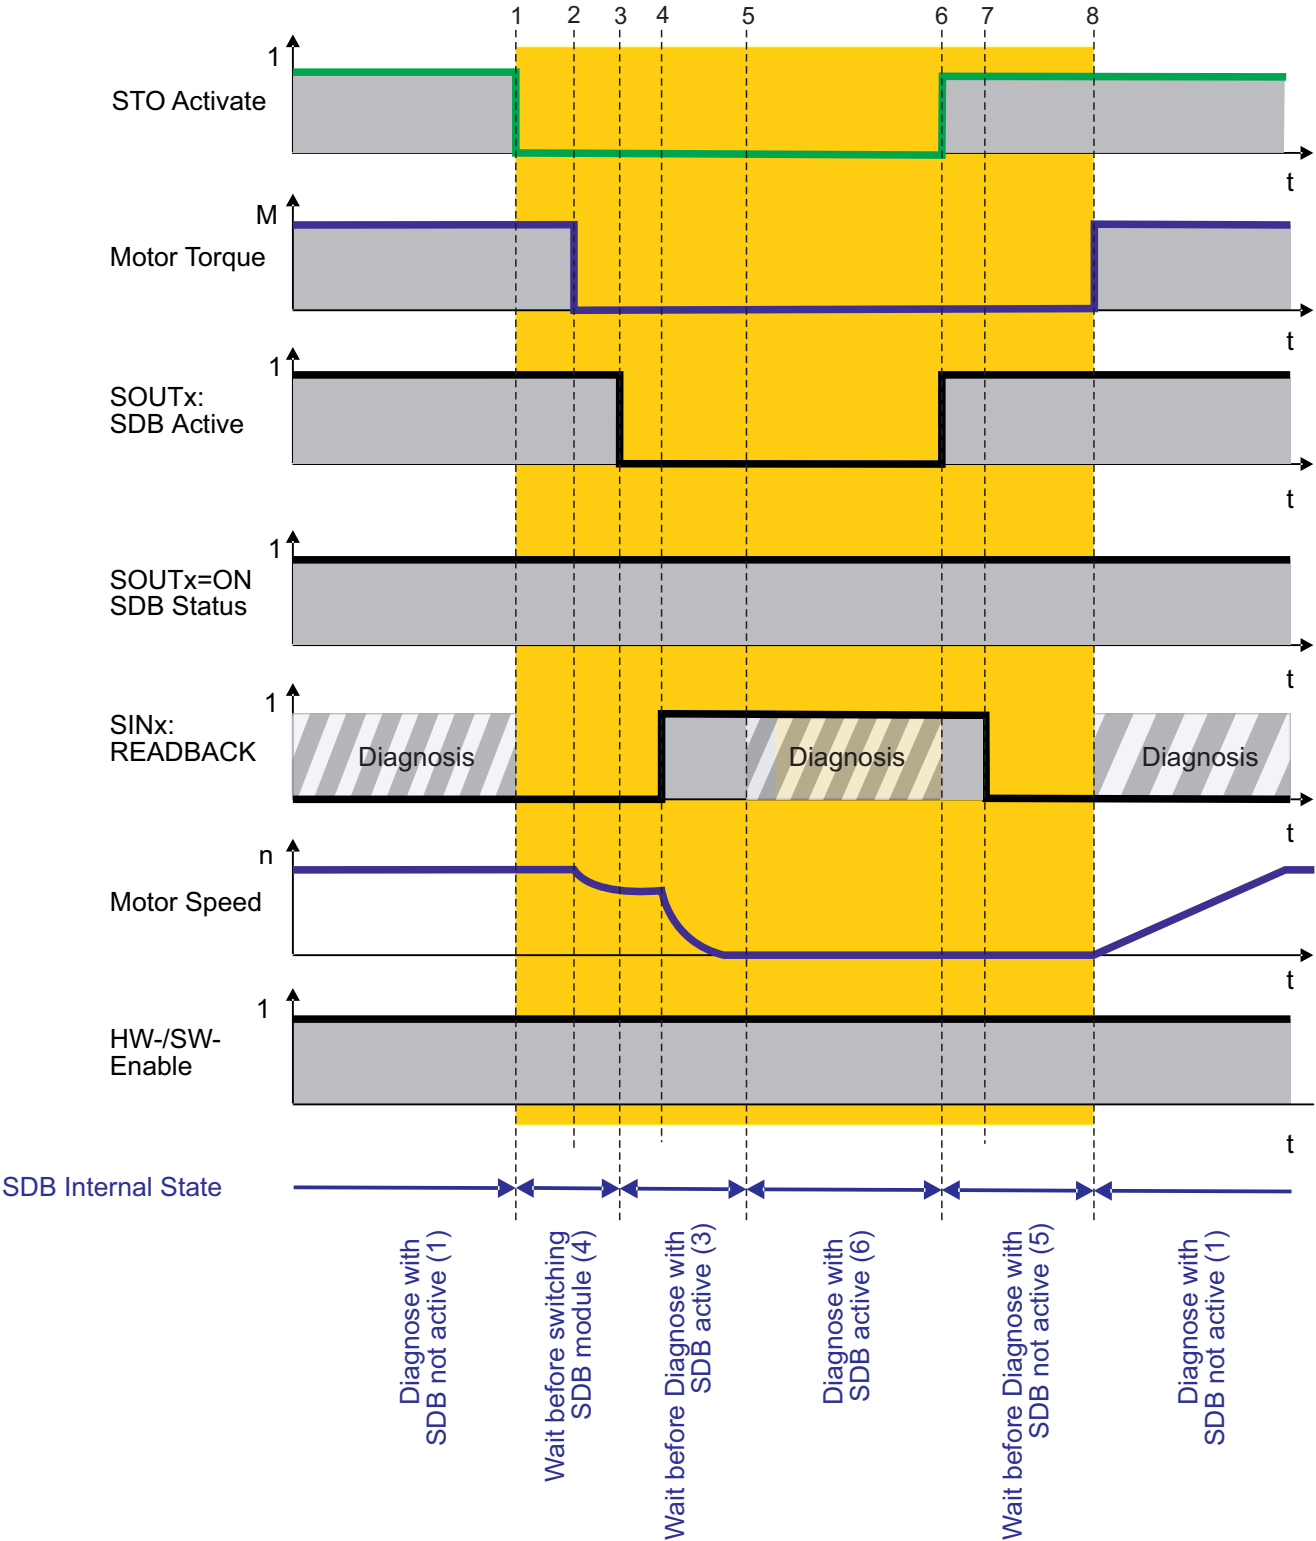

Timing	Max.	Remarks
t1 to t2	< 6 ms	STO response time
t1 to t3	fixed	Delay of 6ms
t3 to t4	see datasheet	Mechanical delay SDB-Contactor
t3 to t5	configurable	t_D_SDB: Delay until readback diagnosis
t6 to t7	see datasheet	Mechanical delay SDB-Contactor
t6 to t8	configurable	t_D_SDB: Delay until readback diagnosis

9.4.7.5 Related Parameters

Name	Variables	Default	Parameter
Function Activation	-	0 (Never active)	(→ # 329)
Readback	-	Not Used	(→ # 330)
Delay Before Diagnose	t_D_SDB	1 ms	(→ # 1)

9.4.7.6 Setup in WorkBench

Select Safety Parameterization view (→ # 263).

Choose the axis (1), category (2) and SDB function (3).


Parameters Editor
[Learn more about this topic](#)

Configuration of the safety parameters.

Axes	Categories	Safe Stop	Instances
Common	General	STO (Safe Torque Off)	Instance 1
Axis 1	Safe Stop	SS1 (Safe Stop 1)	4
Axis 2		SBC (Brake Control)	
		SBT (Brake Test)	
		SDB (Safe Dynamic Brake)	

[Goto Safety Parameter Download](#)

[SafeID: 1] Axis 1 > Safe Stop > SDB (Safe Dynamic Brake) > Instance 1

Type:	Kollmorgen AKD2G SMM		
Description:	Kollmorgen AKD2G SafeMotion Monitor		
Import file:	-		
Parameter		Value	Unit
Axis 1 - Safe Stop - SDB - Instance 1			
Function Activation	Ready for Activation		
Readback	Safe input 3 (SIN3)		
Delay Before Switching (tSDB)	1		ms
Delay Before Diagnose (t_D_SDB)	1		ms

9.4.7.7 Fault Reaction / Failure Messages

The drive supervises the safe input(s) assigned as readback. An OSSD pulsed signal, either from a safe output or a safe PLC, is required. When the readback signal becomes static, an I/O error will be detected.

During the activation and deactivation of the SDB function, the readback diagnosis will be interrupted for the parameterized amount of time. When STO/SDB are active, a high signal (24V) is expected. When STO/SDB are not active, a low signal (0V) is expected. Deviating this expected behavior will additionally result in a SDB failure recognizable from the diagnostics view.



Diagnostics

Current status and configuration of the safe module monitor.

Identification / Validation

Safe ID:

01

System CRC

0x32DEB5C7

Current State

System State:

8 - I/O failure


Current Error:

2 - SDB failure

For detailed information on the signal states refer to (→ # 256).

9.4.7.8 Safety State / Status Signals

The WorkBench view “Safety Diagnostics - Safe I/O” shows the current status of the safe inputs and outputs. The target status can be read of the assigned output(s). The status of the SDB readback can be read from the assigned input(s). Which state is appropriate depends on the system state.

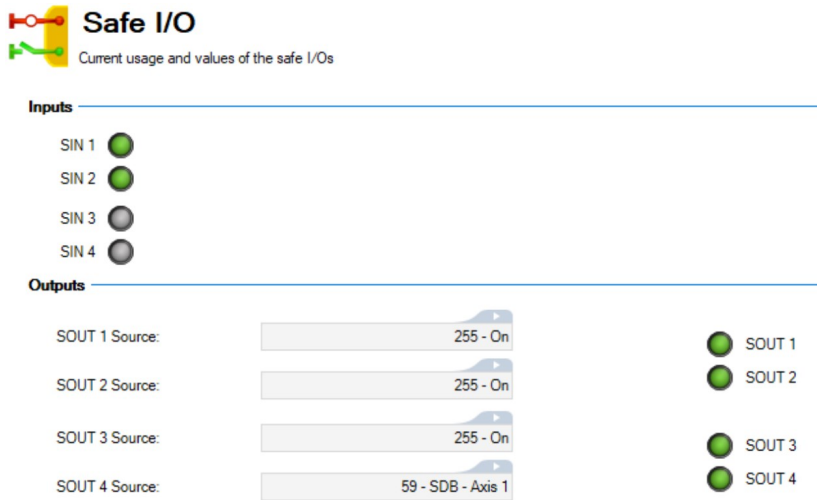


For detailed information on the signal states refer to (→ # 256).

9.4.7.9 Safety Properties


Refer to (Safety Properties Overview, → # 214).

9.5 Settings

9.5.1 Display, Push-Buttons and Rotary Switches

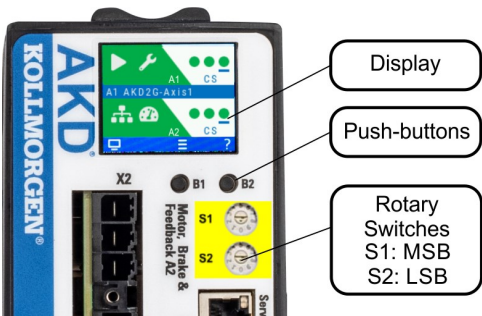

Display (example for a dual-axis module)

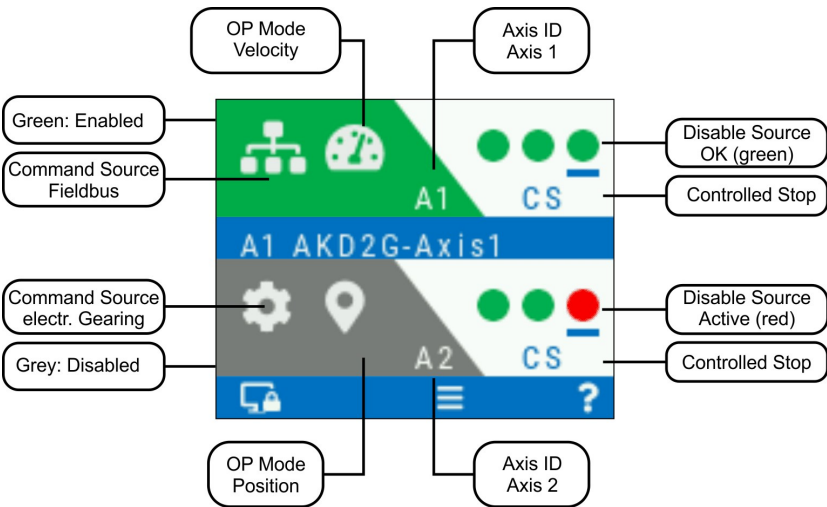

Push buttons (B1, B2)

A short button press invokes the action corresponding to the symbol directly above the button. On the dashboard for example,

- a short press on B1 causes the menu system to appear, and
- a short press on B2 causes a help screen to appear.
- A long press (greater than 2 seconds) on B2 returns the display to the previous screen.

B1 / B2 Functions	Description
Boot from SD card	Push both buttons during power up to boot with data from the SD card. Press the buttons first, then hold it down while turning on the 24V power supply.
Boot from flash fallback image	Remove the SD card, then press both buttons and hold them down while turning on the 24V power supply to boot from an on-board recovery image.
SafeID Validation	Push B2 to acknowledge SafeID validation request on the display.

Rotary switches (S1, S2)

Two decimal coded rotary switches are used to set a unique SafeID for the drive. S1 sets the tens place, S2 sets the ones place.

Process:

1. Switch off 24V supply voltage.
2. Set S1 and S2 to a unique SafeID.
3. Switch on the 24V supply voltage.

9.5.2 Default Safety Parameters

Default device parameters

The AKD2Gships with pre-configured default safety parameters. The SafeID will be set to 1 and a set of parameters will be downloaded in the non-volatile memory of the SMM. The drive is ready to operate with pre-configured STO function. When these parameters are cleared or when the SafeID is changed, this parameter set is lost and cannot be retrieved.

WorkBench: default safety parameters

These are the parameters pre-configured on the safety device when added as a new safety device to a safety project. The SafeID is set to 1 by default. You can change these parameters. The default values correspond to the pre-programmed default device parameters.

FSoE parametrization: default parameters

Safety parameters can be downloaded through EtherCAT SDO (→ # 270) and then validated through FSoE using the SRA CRC ([AXISx.SAFE.FSOE.SRACRC](#)). By default, parameters will be downloaded with their default values found in the ESI file.

To use FSoE parametrization, clear the parameters from the non-volatile memory. The FSoE parameters are stored in the volatile memory only and they will be invalidated after a reboot or a restart of the FSoE stack.

9.5.3 SafeID

NOTICE

If you configure a functional safety system, you have the responsibility to ensure that:

- every AKD2G has a distinct SafeID,
- every device on the safe fieldbus has a unique FSoE address,
- the SafeID is adjusted to the application during commissioning (→ # 211),
- the SafeID is validated to the application (→ # 276).

Restarting the drive after changing the SafeID will result in the loss of this default configuration and will cause a non-operational state as long as no other parameter package is downloaded and validated.

Restarting the drive after changing the SafeID in general will invalidate the current safety configuration. Returning the SafeID to the previously configured value afterwards will not revalidate the previously used configuration. In order to use this or another configuration again, a new download and validation of a parameter package is necessary.

NOTE

The SafeID value 00 will also invalidate/clear the safety configuration after a restart but cannot be used as regular value for operation.

The SafeID is calculated based on the rotary switches setting:

$$\text{SafeID} = 10 \cdot S1 + S2$$

Example:

Rotary switches: S1 = 2, S2 = 3 → SafeID = 10 • 2 + 3 = 23

Default: When shipped, the SafeID is preset to 01 by default (SafeID = 1). The default safety configuration is bound to this SafeID.

9.5.4 FSoE Node Address

The unique FSoE address for every axis is derived from the set SafeID.

Axis	FSoE address	Minimum FSoE Address	Maximum FSoE Address
1	SafeID • 100 +1	101	9901
2	SafeID • 100 +2	102	9902

Example for FSoE address setting:

Rotary switches setting: S1 = 2, S2 = 3 → SafeID = 10 • 2 + 3 = 23

Resulting FSoE address for axis 1 : 23 • 100 + 1 = 2301

Resulting FSoE address for axis 2 : 23 • 100 + 2 = 2302

Default: With default SafeID setting (01) the resulting FSoE addresses are 101/102.

9.5.5 Instances

Many safety functions offer several instances. An instance is an independent, separately selectable and configurable variant of the respective function. The activation source for each instance can be selected individually (safe digital input or FSoE).

Some instances are additionally marked with "Fault Reaction". A "Fault Reaction" can be triggered by safety functions, I/O failures and critical internal failures.

NOTE

SS1 instance 1 and STO are the default fault reactions and cannot be deactivated.
Configure these instances accordingly.

9.5.6 WorkBench Safety Function Setup

You can easily configure the safety parameters using KollmorgenWorkBench. The safety parameter configuration, download, and validation are completely integrated.

WorkBench performs a plausibility check which helps to identify improper configurations. If the configuration passes the plausibility check, WorkBench creates a safety parameter file. This file can be downloaded to the drive through WorkBench or it can be exported. Once the safety parameters are configured, downloaded, and validated through WorkBench, the safety configuration will be persistent and no new configuration will be necessary after power cycle.


Preconditions

- AKD2G Service port X20 (→ # 167) is connected through either an Ethernet cable that is directly connected to the computer or to a network switch.
- Auxiliary voltage is connected to the AKD2G's X10 and switched on.
- WorkBench is installed.

Activating a Safety Configuration within the SMM:

1. Configure the safety parameters.
2. Download the safety parameters (→ # 269) to the drive through:
 - WorkBench (Telnet): persistent safety configuration, or
 - EtherCAT (FoE): persistent safety configuration, or
 - EtherCAT (FSOE): non-persistent safety configuration.
3. Validate the safety parametrization.

Possible scenario:

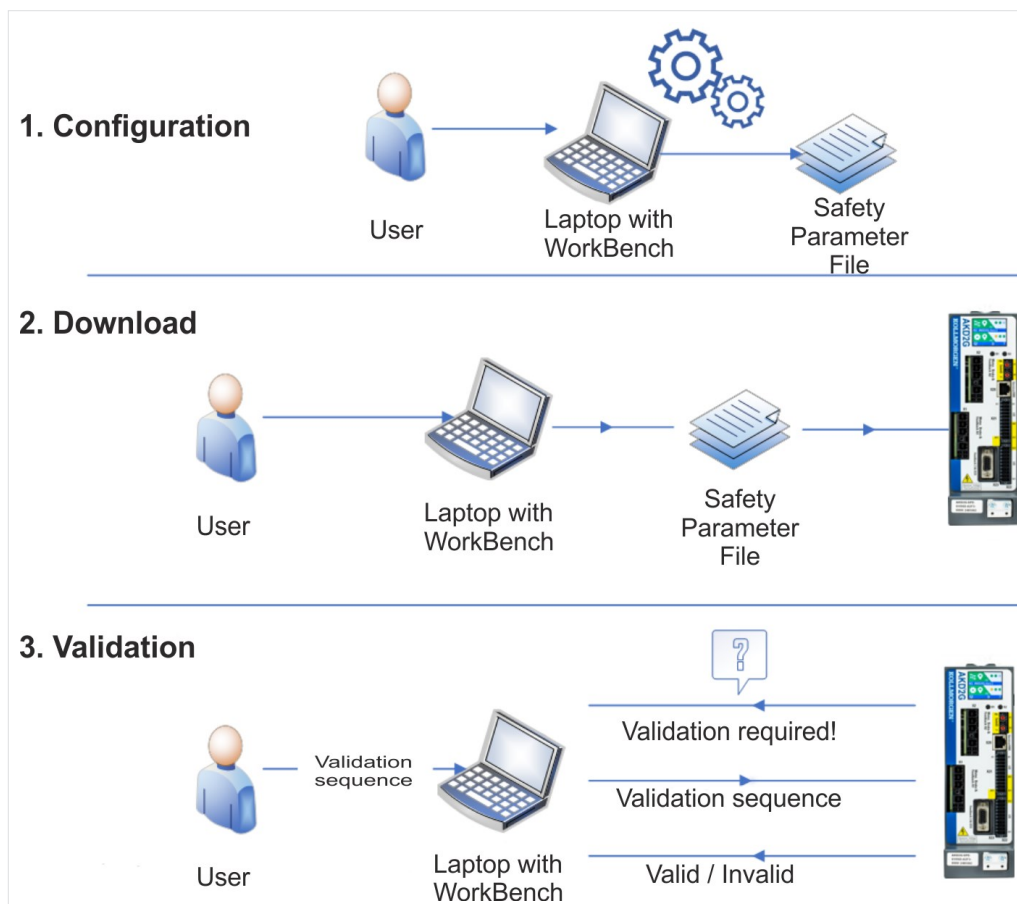


9.5.6.1 Project Building (Online)


The steps below will guide you through project building online.

NOTE: Offline project building is also available and Step 3 shows you where to choose to work either online or offline.


1. Start WorkBench.
2. Under Start, select the **New Project...** link to create a new project.

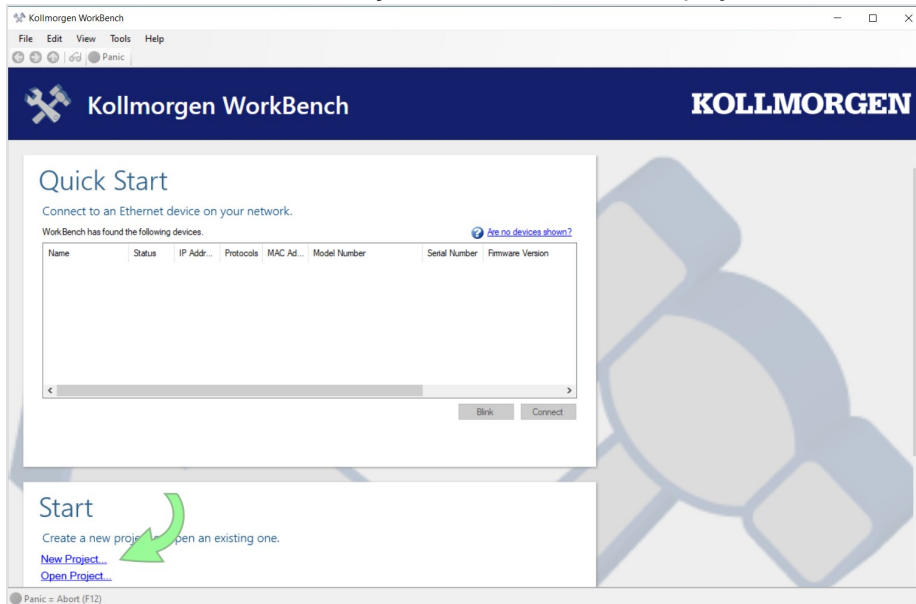


3. Select the **Add New Device** button to add a device to the project. The Add New Kollmorgen Device dialog appears.

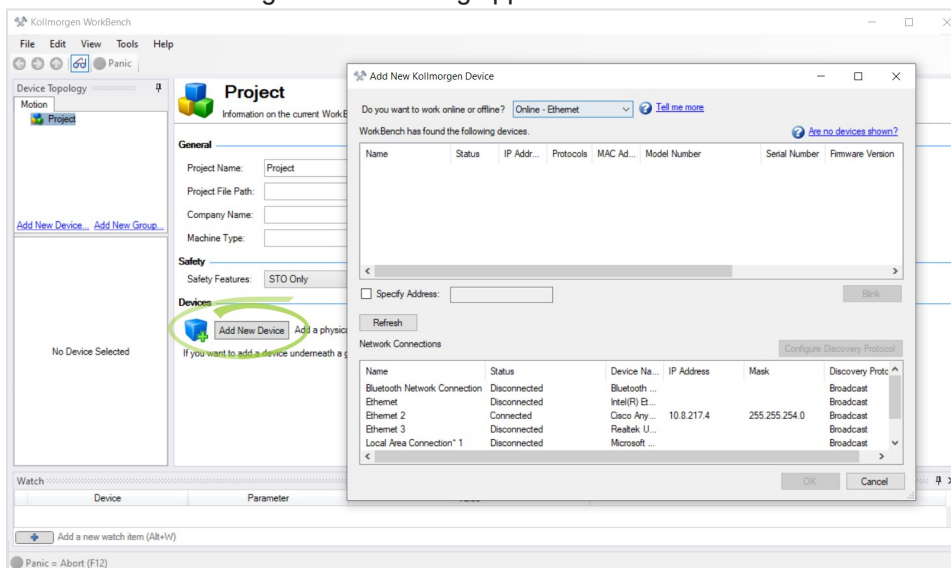

4. Select the device to be added to the project and select **OK**.
5. In the Safety tab, under Device Topology, select **Project**.

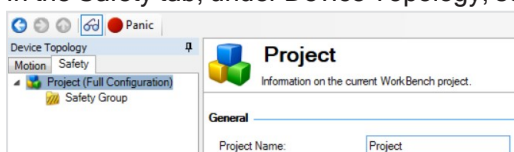

6. Under Safety, set the Safety Features drop-down to **Safe Functions**.

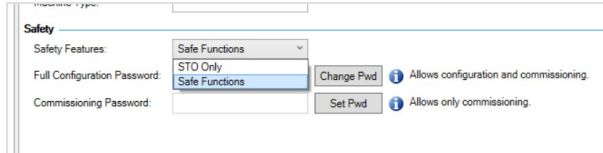

7. Set the **Full Configuration Password**.


This password is required to access and edit the safety configuration for the project and to generate safety packages.

Note: A Commissioning Password is not required for safety setup. However, it is required to download and activate a safety parameter set into a device. The access provided by the Commissioning Password does not allow the user to edit safety parameters.

8. Under Device Topology, open the **Safety** tab.


9. Select the **Safety Group** and change the **Group Name** if required.

10. Select the **Available Device** to be added to the Safety Group.

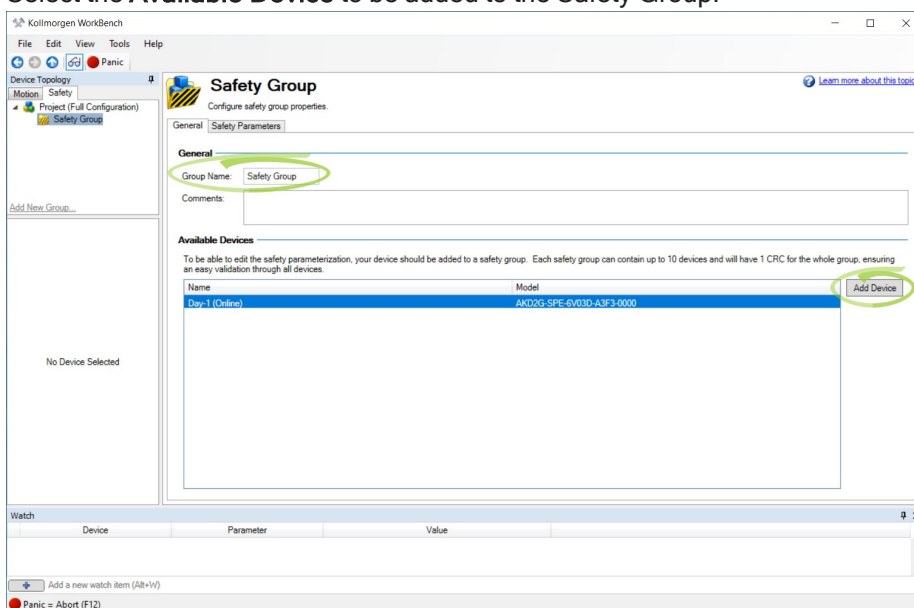

11. Select **Add Device** to add the device to the group.

12. Under Device Topology select the **Parameters Editor** in order to parameterize the safety functions.

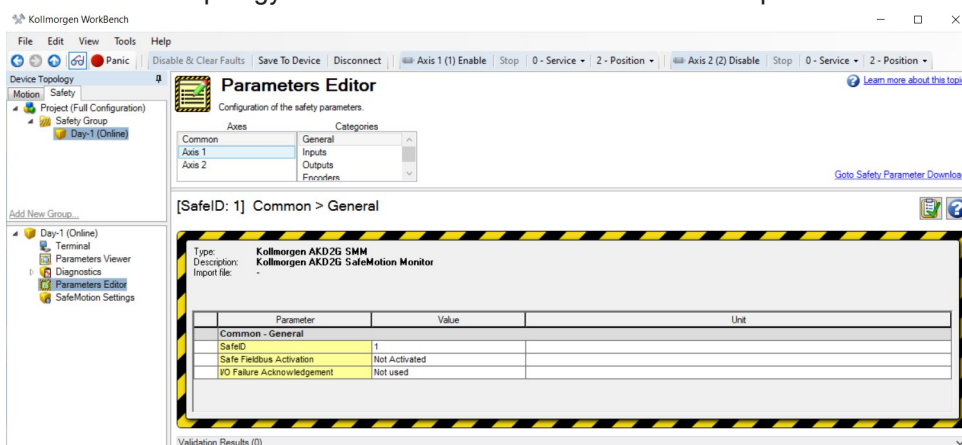

9.5.6.2 Parameters Editor

The Parameters Editor view provides the ability to set up safety parameters and define the safety groups using the options available under Axes, Categories, and other sections that may appear depending on your selection.

Jump to a topic in this section:

- "Common Safety Parameters" (→ # 266)
- "Axis Safety Parameters" (→ # 268)
- "Defining a Parameterization Package" (→ # 268)
- "Viewing, Exporting, or Deleting A Parameterization Package" (→ # 268)

Common Safety Parameters


Common Safety Parameters that may be changed include:

- "General Safety Settings" (→ # 266)
- "Safe Input Settings" (→ # 267)
- "Safe Output Settings" (→ # 267)

General Safety Settings

To access the General safety settings in the Parameters Editor:

1. Under Axes, select **Common**.
2. Under Categories, select **General**.

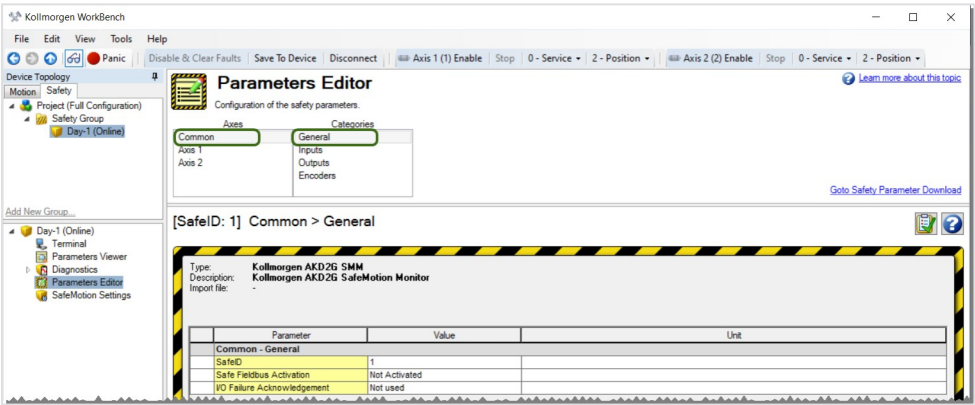


The SafeID (set with the rotary switches on the drive) is visible in the first line.

Safe Input Settings

To access the Safe input settings in the Parameters Editor:

1. Under Axes, select **Common**.
2. Under Categories, select **Inputs**.

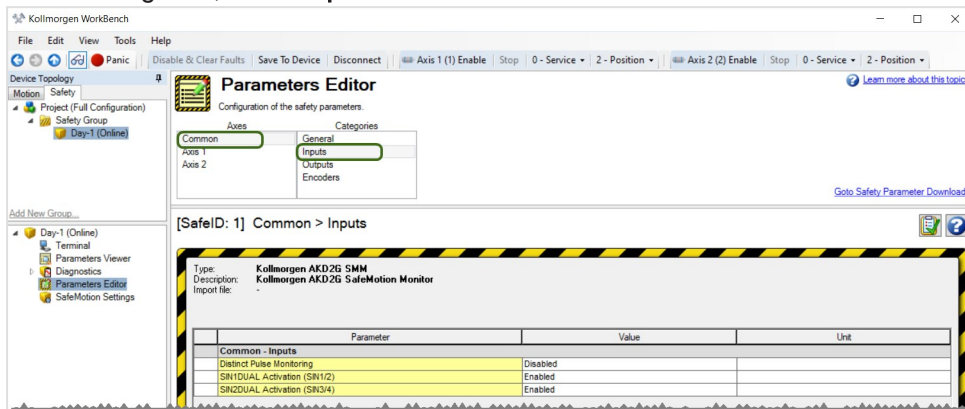


If the application requires dual channel inputs for a safety function, enable the safe input pair to be used. For more information on the SINDUAL# parameters, refer to (SAFEPARAM.SINDUAL#.EN, → # 366).

Safe Output Settings

To access the safe output settings in the Parameters Editor:

1. Under Axes, select **Common**.
2. Under Categories, select **Outputs**.

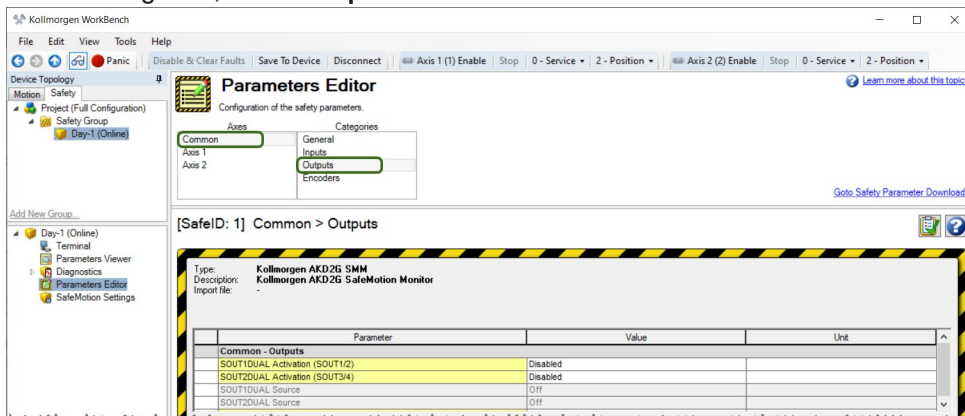


If the application requires dual channel outputs for a status message, enable the output pair to be used. For parameter descriptions, see (SAFEPARAM.SOUTDUAL#.EN, → # 367).

Axis Safety Parameters

To set the axis safety parameters:

- 1. Choose the Axis.
- 2. Under Categories, select a category.
- 3. Under Safe Stop, select the safe function needed.
- 4. Under Instances, select the Instance Number.

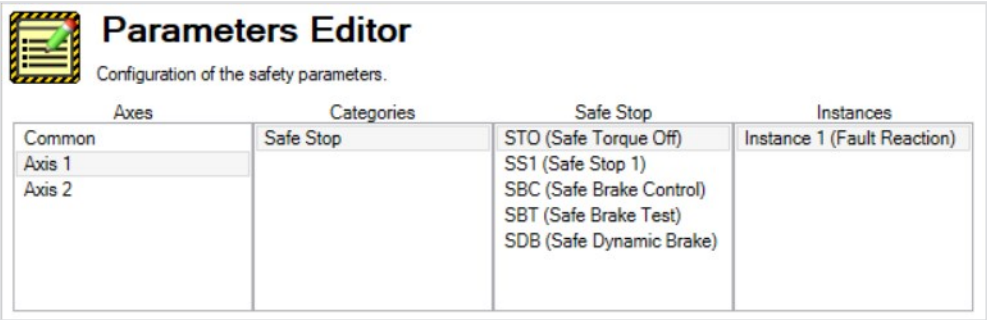


For more information on a specific safety function, (→ # 214) . For parameter descriptions, (→ # 284).

Defining a Parameterization Package


A Parameterization Package (or parameter bundle) must be defined after all parameters for all safety functions and devices are set.

To define a Parameterization Package:

- 1. Select the **Safety** tab under Device Topology and select the **Group Name**.
- 2. Select the **Safety Parameters** tab for that group.
- 3. Under Current Configuration, select **New Package**.

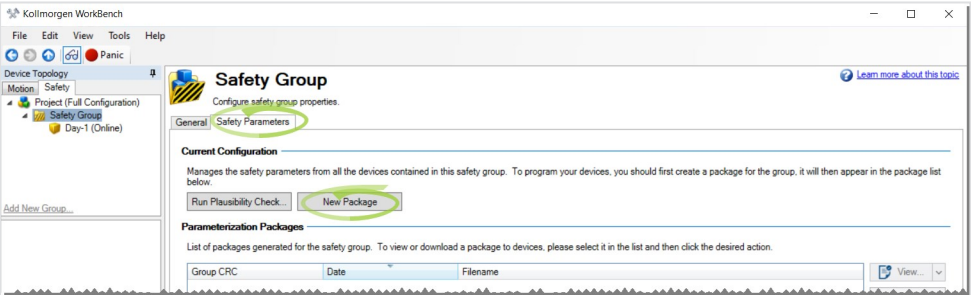

The new package is then listed underneath the Parameterization Packages section.




Viewing, Exporting, or Deleting A Parameterization Package


To view the contents of a Parameterization Package:

- 1. Select the desired package.
- 2. Select the drop-down arrow next to View.

3. Select **View Parameter Report**.

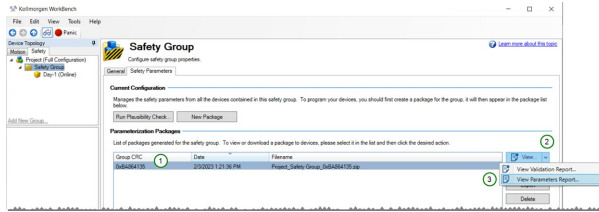

- To save a parameterization package externally, select the package from the list and select **Export**.
- To delete a package, select the package from the list and select **Delete**.

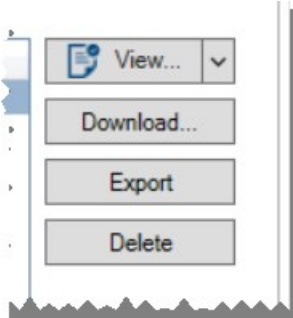


9.5.6.3 Downloading Safety Parameter Packages

This page outlines how to download safety parameter packages created with WorkBench and how to export these packages through EtherCAT FoE and FSoE. If you need help setting up safety parameters, see (WorkBench Safety Function Setup, → # 263).

Downloading Safety Parameter Packages through WorkBench

The following steps outline how to download a safety parameter package using the WorkBench GUI:

1. Go to the **Safety** tab under **Device Topology**. Then, select **Safety Group** under **Project**.
2. In the **Safety Group** view, navigate to the **Safety Parameters** tab, then under **Parametrization Packages**, select the package to be sent to the drive.
3. Select the **Download...** button.

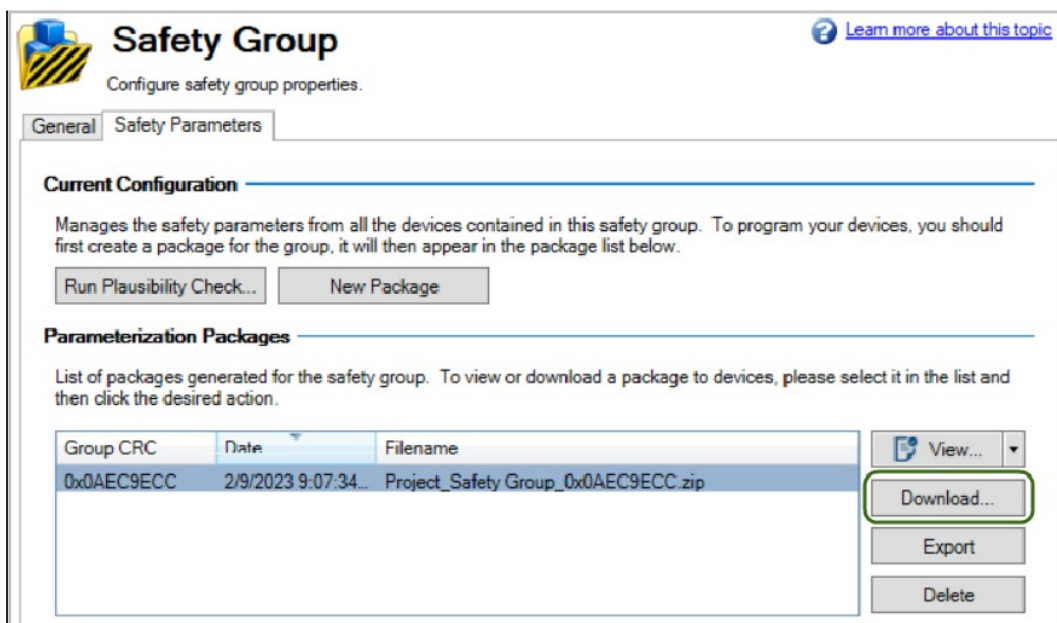

4. A **Safety Parameters Download** window will pop-up after **Download...** is selected.
Enter your user name and password under **Download & Verify**.
Any alphanumeric text between 8 and 25 characters can be put in the user name field. The default password is SafeMotionMonitorxyz, where xyz is the last three characters of the drive's serial number. The serial number can be found by entering DRV.INFO in the terminal or by checking the device name plate. If the serial number is R2-2022-00004, the default password is SafeMotionMonitor004.
5. Select the **Download** button to transmit the package to the drive.

Safety Parameters Download

Parameterization Package

Group: Safety Group

File: C:\Users\...\AppData\Local\Temp\4b972da3-3a88-475e-b603-d3b217f601e8\Safety\ParameterizationPackages\3f4c1001-f5df-473f-9cc0-b64dbc319f0e\Pr...

CRC: 0x616EB67A

Workflow

More Info...

Download & Verify

User Name: User1 Password:

Name	Model	Connected	SafelD	Download Allowed	System CRC	Verified	Status	Ident	Action
Demo	AKD2G-SPE-6V03D-A3F3-0000	✓	01	✓	CRC Mismatch				Blink Download

6. Enter the drive's SafelD (1), then select **Verify** (2). This ensures the intended matching parameter package is loaded to the drive.

Download & Verify

User Name: User1 Password:

Name	Model	Connected	SafelD	Download Allowed	System CRC	Verified	Status	Ident	Action
Day-1	AKD2G-SPE-6V03D-A3F3-0000	✓	01	✓	0x0AEC9ECC				Blink Enter SafelD Verify

The safety configuration will be persistent and no configuration is required after power cycle.


Downloading Safety Parameter Packages via FoE

The AKD2G drive allows users to download safety parameter files and validate the safety configuration via the file access over EtherCAT (FoE) protocol.


The following steps outline how to export and download safety parameter packages through FoE:

Step 1: Export the file via FoE

1. Go to the **Safety** tab under **Device Topology** and select the safety group for your project.
2. In the **Safety Group** view, navigate to the **Safety Parameters** tab, then select the safety parameter package to be exported under **Parametrization Packages**.
3. Select the **Export** button.

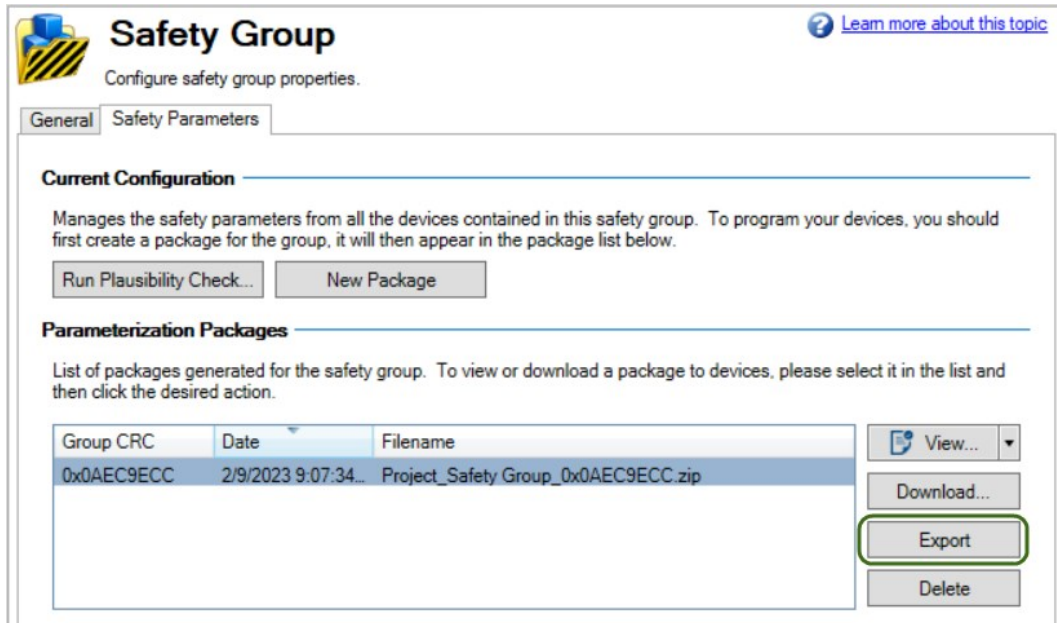

4. After **Export** is selected, a **Save As** window will pop-up.
The file must be saved in the **.i00** format.

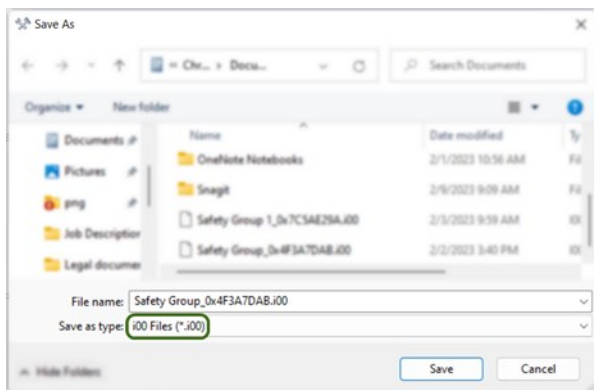

5. The exported file is ready for use by the EtherCAT master for FoE download.

Step 2: Download the file via FoE

The EtherCAT master must set the drive to the "Boot" state before the safety parameter package is downloaded to the drive. Downloading a corrupted or incompatible safety parameter package will generate an FoE error message stating, "Failed loading file to flash", and the SafeMotion Monitor (SMM) will stay in state 3 - Configuration required.

Step 3: Validate the file via CoE and SDO Access

File validation must be done through SDO access if the safety parameters are downloaded through FoE. The SMM (Index: 0x37C1, Subindex: 0x00) will transition from state 3 - Configuration required - to state 5 - Parameter validation required - after the safety parameter package is downloaded. The SMM must be in state 5 for file validation.

NOTE

If the SafeID is set to 1 and the drive still has its default parameter values, you must delete those defaults to proceed. Complete the following steps to transition to state 3:

1. Change the SafeID from 1 to another valid SafeID.
2. Power cycle the drive.
3. Reset the SafeID.
4. Power cycle the drive again.

To validate the downloaded safety parameters, write the CoE objects in the order outlined in the table.

All CoE objects have an index of 0x37C0.

Step	Object	SubIndex	Format	Notes
1	User name	0x01	1 - 8 ASCII characters	- Enter this object additionally as a string for service personnel who are not familiar with the data. - The user name is logged after successful validation.
2	Date and Time	0x02	YYYY-MM-DDThh:mm:ssZ Date: YYYY = year, MM = month, DD = day Time: T = separator, hh = hour, mm =minute, ss =second, Z = time zone designator Example: "2021-03-03T16:10:10Z" is March 3rd, 2021, 16:10:10 UTC	- Enter this object additionally as a string for service personnel who are not familiar with the data. - The timestamp is logged after successful validation.
3	SafeID	0x03	Integer value	Enter the SafeID of the device that will be configured.
4	Password	0x04	8 - 25 ASCII characters	- This is the password that will validate the downloaded safety parameters. - Enter this object additionally as a string for service personnel who are not familiar with the data. - To change this password, see (SAFE.CHANGEPASSWORD, → # 343)

If the validation is successful, the SMM will transition to state 6 - Normal operation.

If validation fails, the safety configuration will NOT be activated. The SMM will stay in state 5 and the SDO write will return an abort message. If the process fails, refer to (Safety Faults, Safety Warnings, → # 280).

The safety configuration is persistent when downloaded through FoE and is retained after power cycling.

Downloading Safety Parameters via FSoE

The safety parameters can be downloaded via EtherCAT through FSoE (Fail Safe over EtherCAT) using SRA-Parameters (Safety Related Application).

1. Configure the SRA parameters in the FSoE-Master and download them to the drive using EtherCAT SDO access and FSoE.
All safety parameters are available in the object dictionary. Default parameter values are found in the ESI file.
2. Validate the safety configuration via the FSoE master.
The FSoE master will send the cyclic redundancy check (CRC) to the AKD2G FSoE slaves during startup.
The SMM must be in state 3 - Configuration required - for the validation process to occur. If the validation is successful, the SMM will transition to state 6 - Normal operation. Otherwise, the SMM will stay in state 3.


NOTE

If the drive already has a persistent safety configuration, clear the existing configuration to set the SMM to state 3. See (SafeID, → # 261) for details on clearing the configuration.

The safety configuration is non-persistent when downloaded through FSoE. The configuration will be cleared after a reboot or a FSoE connection reset.

9.5.6.4 Safety Configuration Diagram

A safety configuration diagram displays when you select the **Safety** status button at the bottom of the WorkBench window. The diagram shows the safety state and the relationship between safety functions. If an error occurs, reference the CANopen object dictionary for more information (see CANopen Object Table).

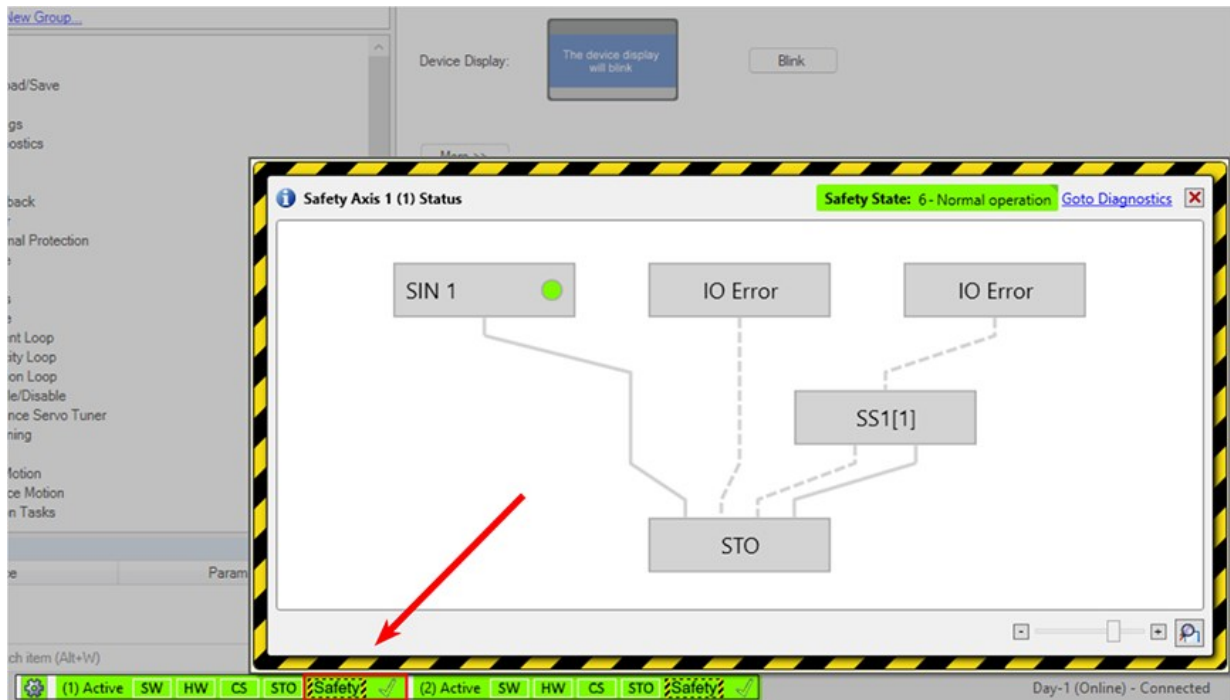


9.5.6.5

Parameters Viewer

The **Parameters Viewer** is located in the View Tree under the **Safety** tab. Select the **Parameters Viewer** to display the actual values of all safety parameters activated in the drive.

9.5.6.6 Diagnostics

For help with fine-tuning, debugging, and verification of your safety project, WorkBench Diagnostics offers live information about internal safety related values.

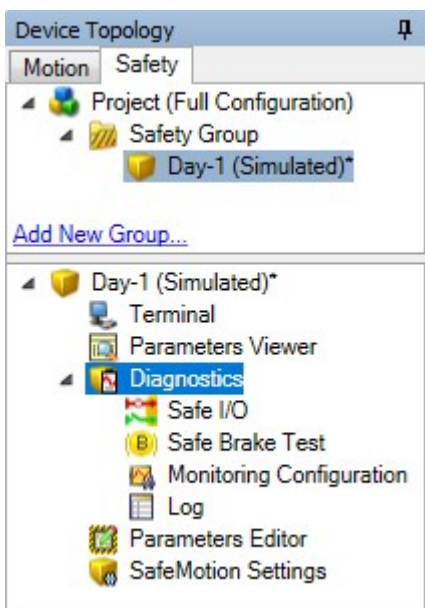

Diagnostics

This view offers information about the SMM and the overall safety system status, such as:

- SMM Hardware Revision and Firmware Version
- Safe ID and System CRC
- Active errors and object instances of errors
- Safe fieldbus status

Safe I/O

This view displays the current configuration and values of the safe I/Os. It includes the dual configuration information for inputs and outputs and the source of the output signal.

Safe Brake Test

This view displays the current safe brake configuration with the test status including the time remaining to the next test. The safe brake test can also be started and monitored within that view.

Monitoring Configurations


This view has information concerning function states, safe velocity, safe position and safe acceleration can either be monitored directly or added to the Watch Panel for permanent surveillance or added to the WorkBench internal oscilloscope. A maximum of two values can be observed simultaneously.

Log

This view displays the log stored in the SMM. All actions related to SafeID and parameter validation are logged with user name and date.

9.5.6.7 SafeMotion Settings

SafeMotion Settings allows you to set a specific user parametrization password for parameter validation. The root safety password is used as default. It is recommended you change your password after initial use. For more information, see (Commissioning, → # 211).

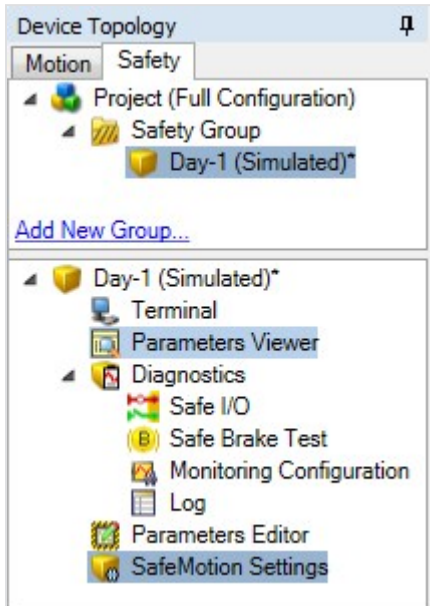

9.6 Validation

Validation is done on transferred parameters using CRC. Parameters transferred with FSoE (when FSoE parametrization is used) do not require user validation.

More information referring to parameter download (→ # 269).

9.6.1 Validation of SafeID

If the SafeID is not flagged as validated when booting, you will get the message: "SafeID not validated". Then do the following:

1. Compare the displayed SafeID with the paperwork.
2. If the SafeID is correct, press button B2 twice within 10 seconds to validate. If you do not press B2, the drive remains in the safe state.

Validation of the SafeID is performed through FSoE

- if FSoE parameterization is used and
- if the SafeID is not validated yet and
- if the SafeID matched the safe address defined in the safe PLC.

9.6.2 Validation of Safety Parameters

NOTE

The parameter CRC is equal to the system CRC. The character string of the SafeID is concatenated with the character string of the CRC.

The purpose of validation is to ensure that all safety parameters as a group are suitable for the application.

Example for invalid parameters: The parameters are valid for an elevator drive, but they are not for a paper machine drive.

The person responsible for validation must document decisions. Therefore the safety related system stores information about the user (user name, date of validation).


- The user checks the System CRC. This value is read from the drive (see parameter value [SAFE.CRC](#)). This may require the user to sign a document about the correct parameters having been entered.
- The user must check if all drives have been programmed correctly.

9.6.3 Validation of Safe I/O Installation

The person conducting the validation must be independent of the Safety Function Design. See ISO 13849-2:2012, 4.1 Validation principles.

9.6.4 Validation Report

To assist commissioning and documentation, WorkBench offers to print a “Safe Motion Validation Report” suiting the safety parameter configuration. Select the corresponding safety parameter package (1). To view the validation report, click on “View” (2) directly or “View Validation Report” (3).

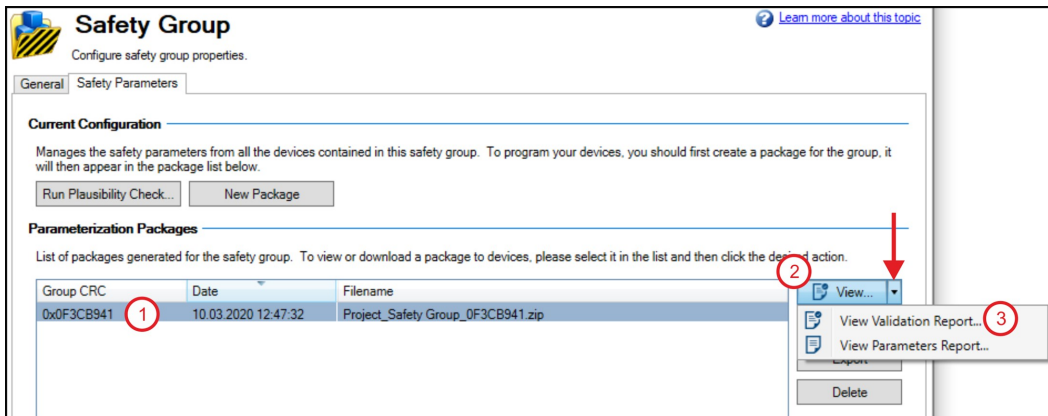

The “Safe Motion Validation Plan” lists all configured functions and their parameterized values (expected behavior). The validators can use it as guidance to verify all parameters and functions.

Example for a Validation Report (extract):

KOLLMORGEN 2020.01.22

AKD Safe Motion Validation Report
Machine Related Information

General Information:

Project name	Project Demo
Safety group	Demo Group
Company name	Kollmorgen
Validator 1	
Validator 2	
Machine type	Demo Machine
Comments	Demonstration for a possible Validation Report

Project and Components:

Source project filename	Project Demo.wbp
Safety package filename	Project Demo_Demo Group_A3157E81.zip
CRC for the safety group	0xA3157E81

Safe ID	23
Device name	Demo
Device model	AKD2G-SPE-6V06D-42F3-0000
Safety License	Basic Safety Features
Axes	
Axis 1 Safe Encoder	No Encoder
Axis 2 Safe Encoder	No Encoder

Validator 1: Validator 2: 1 of 5

KOLLMORGEN 2020.01.22

Safe ID 23 - STO (Safe Torque Off)

Analysis of STO (Safe Torque Off) for device with Safe ID 23 (no_name)

Parameter	Value	Results
Axis 1 - Safe Stop - STO - Instance 1 (Fault Reaction)		
Function Activation	Ready for Activation	☐ OK ☐ Not OK
Safe Input	Not Used	☐ OK ☐ Not OK
FSOE	Not Used	☐ OK ☐ Not OK
Restart Acknowledge Behavior	Manual Restart	☐ OK ☐ Not OK
Restart Acknowledge Source	Safe input 3 (SIN3)	☐ OK ☐ Not OK
Axis 2 - Safe Stop - STO - Instance 1 (Fault Reaction)		
Function Activation	Ready for Activation	☐ OK ☐ Not OK
Safe Input	Safe dual input 1 (SIN1/SIN2)	☐ OK ☐ Not OK
FSOE	Not Used	☐ OK ☐ Not OK
Restart Acknowledge Behavior	Manual Restart	☐ OK ☐ Not OK
Restart Acknowledge Source	Safe input 4 (SIN4)	☐ OK ☐ Not OK

Test of STO (Safe Torque Off) for device with Safe ID 23 (no_name)

Step	Required Action	Expected Behavior	Results
Axis 1 - Safe Stop - STO - Instance 1 (Fault Reaction)			
1	Move axis forward or backward.	Axis is moving.	☐ OK ☐ Not OK
2	Activate STO on axis.	STO is activated on the axis.	☐ OK ☐ Not OK
3	Check movement.	Axis is stopped, no movement.	☐ OK ☐ Not OK
Axis 2 - Safe Stop - STO - Instance 1 (Fault Reaction)			
1	Move axis forward or backward.	Axis is moving.	☐ OK ☐ Not OK
2	Activate STO on axis.	STO is activated on the axis.	☐ OK ☐ Not OK
3	Check movement.	Axis is stopped, no movement.	☐ OK ☐ Not OK

Validator 1: Validator 2: 3 of 5

9.7 Operation

NOTICE

After the initial commissioning and validation, it must be ensured the initial state is permanently retained. Modification of any kind is prohibited without a proper modification process.

In case of a fault reaction occurring (STO-, SS1-Active without being activated on purpose) the drive should not be restarted before:

- the cause of the fault reaction is investigated and found;
- the reason of the fault reaction is removed/resolved;
- safe operation of the application is ensured.

Every occurring incident must be documented.

If the investigation of the fault reaction results in the discovery of a potential hazard or risk the application shall not return to normal operation before proper risk reduction is achieved.

In order to maintain functional safety, safety chains containing elements that cannot be tested regularly or without activation during normal operation, need to be periodically tested at least:

- once per year for SIL 2, PL d / Cat. 3;
- once every three months for SIL 3, PL e / Cat. 3;
- once every day for SIL 3, PL e / Cat. 4.

See IEC 61800-5-2 and ISO 13849 for further information.

In addition, tests for brakes need to be carried out independently (SBT (Safe Brake Test), → # 248).

The drive itself does not require any maintenance (Maintenance and Cleaning, → # 29).

Replacement is only necessary in case of a defect or if the max. service life of the device (Mission Time, TM) is exceeded (Field Replacement, → # 279).

Wear parts of safety chains such as relays, brakes or SDB-Contactors, need to be swapped at the end of their lifetime as well as damaged or defect auxiliary equipment.

The replacement of any parts of the safety chain does not allow any changes or modifications to the safety characteristics or functionality of a safety chain. A new validation of the safety functions is necessary after working on any safety related equipment. In case of a modification a risk reevaluation and modification process needs to be carried out before retuning the drive to normal operation.

Every maintenance activity must be documented.

Periodic audits have to be carried out and documented in order to ensure the functional safety of the machine.

Check the drives information display for faults and warnings regularly.

9.7.1 Operation States

The status bar in WorkBench offers a brief overview of the safety operation status.

Safety bar indicator	Status
	Axis is in normal operation from the safety system perspective. No safety functions are active.
	Axis is in normal operation from the safety system perspective. No safety functions are active. A non-safety relevant warning is active.
	Axis is in normal operation from the safety system perspective. A non-safe error prevents non-safe operation.
	Axis is in normal operation from the safety system perspective. One or more safety functions are active, such as SOS or SLS.
	Axis is in normal operation from the safety system perspective. STO is active.
	Drive is in safe state due to an internal failure or an I/O failure in the safety system. Normal operation is prevented.

Clicking on the safety symbol will open a pop-up window containing more detailed information on the safety configuration and status (→ # 273). The view give information about which function(s) are or were activated, and which caused a fault reaction.

9.7.2 Field Replacement

NOTICE

Field replacement must be performed by a trained and qualified personnel. After the drive is replaced and re-configured, the drive must be verified and proof tested before normal operation is started.

The replacement drive must


- match the specification of the replaced drive in term of voltage, features and safety option, see "Part Number Scheme" (→ # 35),
- contain firmwares with same versions, particularly for the SMM. If not, a firmware upgrade or downgrade must be performed, see (Updating the SMM Firmware, → # 209),
- have invalidated safety parameters.

Reconfiguring the replacement drive:



- Other drives of the same safety group or of the same machine should not be impacted by this process.
- Before power on, the replacement drive SafeID must match the one of the replaced drive. Change the rotary switches accordingly.
- Validate the new SafeID if needed during the boot of the drive, see "Validation" (→ # 276).
Important: Configure and validate the SafeID before downloading new parameters.
- Download safety parameters on the replacement drive. SafeID value is used to choose the right set of parameters for this drive (see "Downloading Safety Parameter Packages" (→ # 269)). Depending on your application, this could be:
 - using WorkBench. Use the project of your safety application to download the parameters,
 - using non-safe field bus,
 - using FSoE.
- Validate that the correct parameters have been downloaded by comparing the CRC, see "Validation of Safety Parameters" (→ # 276)

9.8 Safety Faults, Safety Warnings

Example: dual axes, Fault Axis 2

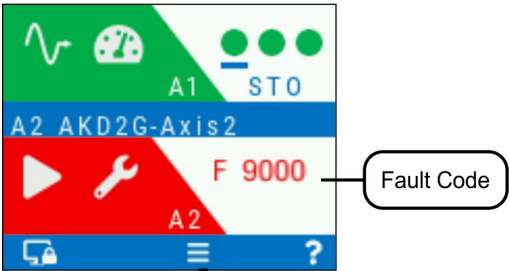

Example: single axis, Warning Axis 1

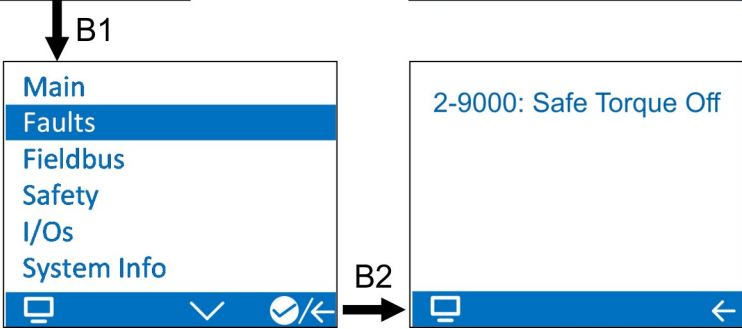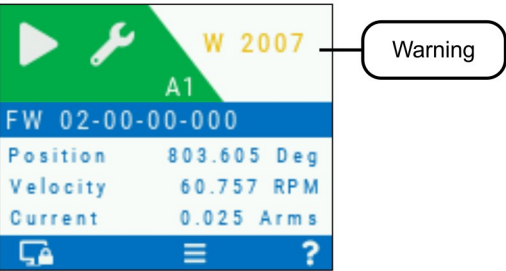

9.8.1 Failure Categories

AKD2G with SMM (safety option 2) have the following safety circuit fault states:

Failure category	Description	Reaction
1	I/O Failure A problem is detected around the drive. Example: encoder problem, missing OSSD test pulses or a wiring issue. Resolving: by the user or by using FSoE Restart: acknowledge fault, power off/on, normal operation can be resumed.	If the velocity is >0, SS1_1 is activated. The axis executes a controlled stop.
2	Internal failure The drive detected a problem in the drive or in the internal SMM itself. The problem prevents further normal operation, but allows to transmit diagnostic data for diagnosis. Example: problem in switching the brake output. Resolving: power off/on Restart: not possible unless fault is removed.	If the velocity = 0, the drive applies the brake and activates SS1 or STO.
3	Internal failure, reset may occur The drive detected an internal problem, that may result in resets, and other erroneous behavior. As further operation cannot be executed safely, all communication is dropped. Resets of the internal SMM may occur. Example: RAM failure. Resolving: power on/off Restart: not possible unless fault is removed.	Safe outputs are switched off.

NOTE

An internal failure occurs, when a problem in the internal SMM is detected. Therefore, deceleration, applying the brakes and switching off the output may not be possible under all circumstances. Safety Faults and Safety Warnings cannot be muted or suspended.

Stuck at faults on the STO output, the digital outputs or the brake output show up as I/O failures or internal failures. Power supply faults (over and under voltage) show up as internal or fatal failure. Many diagnostic errors are false positives.

The fault tolerance time for each diagnostic measure (diagnostic test interval) is maximum $T_2 = 1 \text{ h}$.

9.8.2 SMM Failure Classification and Behavior

The parameter [SAFE.ERROR](#) gives the current error code of the SMM, accessible through CoE.

[SAFE.ERRORINSTANCE](#) indicates the current instance of the error code.

The SMM send the failure ID to the drive, if possible. The drive creates faults and warnings listed in the next chapter.

9.8.3 Drive Safety Faults

NOTE

More information about servo drive fault messages, remedy and clearing faults can be found in the WorkBench User Manual.

Fault	Description	Cause	Remedy
F9000	Safe Torque Off	STO function has been triggered while the axis was enabled.	See (STO (Safe Torque Off), → # 229)
F9002	SMM communication failed	SMM not communicating as expected	Restart drive. If issue persists, contact technical support.
F9003	Incorrect safety card detected	Physical SMM does not match the expected module	Restart drive. If issue persists, return hardware to supplier.
F9004	Safe Torque Off digital and analog lines don't match	Hardware fault on the power board.	Restart drive. If issue persists, contact technical support.
F9006	Internal failure of the SMM	See SAFE.ERROR and SAFE.ERRORINSTANCE .	Restart drive. If issue persists, contact technical support.
F9007	Safe brake parameters inconsistent	AXIS#.SAFEPARAM.SBC.BRAKE#.ATTACHED indicates a brake is attached, but non-safe brake parameters (AXIS#.MOTOR.BRAKE, BRAKE#.Axis) do not.	From the safety parameter screen in WorkBench under safe brake control (SBC), verify that the SBC Brake parameters agree with the drive related parameters that a brake is either configured or not.

9.8.4 Safety Warnings

NOTE

More information about servo drive warnings can be found in the WorkBench User Manual.

Warning	Description	Cause	Remedy
W9000	Safe Torque Off	STO function has been triggered.	See (F9000 , → # 282)
W9007	Safe brake parameters inconsistent	AXIS#.SAFEPARAM.SBC.BRAKE#.ATTACHED indicates a brake is attached, but non-safe brake parameters (AXIS#.MOTOR.BRAKE, AXIS#.BRAKE) do not.	From the safety parameter screen in WorkBench under safe brake control (SBC), verify that the SBC Brake parameters agree with the drive related parameters that a brake is either configured or not.
W9008	Safe Brake Test Time Overflow	No SBT has been executed within the configured time limit	Extend SBT limit or execute an SBT
W9009	SMM Over Temperature	SMM is over temperature	Make sure that the ambient temperature complies with the specified limits for the given hardware (Ambient Conditions, Ventilation and Mounting Position, → # 40). If the problem persists, return hardware to manufacturer.
W9010	SMM State not operational	SMM is not ready to enable. Refer to SAFE.STATE .	Verify SafeID and safe parameters are validated and correct. Check for other faults on the SMM.
W9011	SMM I/O failure detected	SMM detected a safety I/O failure and prohibits operation. - Digital inputs or outputs failed - STO pulse failed - Brake output failed	Use diagnostics to determine cause and replace external hardware if issue reoccurs. I/O failure can be acknowledged with FSoE or a safe input (configurable).

9.8.5 Troubleshooting Functional Safety

NOTICE

Eliminate errors and faults in compliance with work safety rules. Troubleshooting must only be performed by qualified and trained staff.

Problem	Possible Causes	Remedy causes
A group "90" safety fault or safety warning message is visible in the drive LCD display	Refer to the Drive Safety Fault and Warning tables (→ # 282).	
A fault or warning message of another group than "90" is visible in the drive LCD display	Refer to the drive fault and drive warnings tables (→ # 199) and more detailed descriptions in the WorkBench User Manual.	
Safety faults and warnings are not visible/reported	AXIS#.SAFE.STO.REPORTFAULT is set to 0	Set AXIS#.SAFE.STO.REPORTFAULT to 1
STO cannot be deactivated (no torque)	1. External safety device defective. 2. STO wiring defective. 3. Auxiliary voltage low. 4. STO inputs defective. 5. F9004 visible 6. F9005 visible.	1. Check external safety device. 2. Check STO wiring for short-circuit or similar. 3. Check voltage level (→ # 221). 4. Send drive to manufacturer for repair. 5. Send drive to manufacturer for repair. 6. Check safety hardware system. 7. Check safety controller. 8. Check external safety device.
Drive does not enable	1. STO is still active.	1. Deactivate STO prior to HW Enable.
SS1-t does not execute till the end of the configured time	Non-safe emergency timeout interrupts the deceleration ramp of SS1-t.	Set emergency-timeout to a higher value than t_SS1
Safety parameter package cannot be downloaded. Error messages: • "The parameter set does not contain parameters for this device." • "Parameter does not exist." • "Loading file to flash has failed."	The SafeID set in configuration does not match the SafeID set on the target Device.	Either parametrize the correct SafeID in the parameters or change the SafeID on the desired drive to the configured value, restart and validate the SafeID.
Monitoring configuration: Monitoring field can not be added to the scope	All sources of the scope are already occupied.	Remove at least one source / slot in the scope and try again. Then add the desired monitoring field to the scope.

9.9 Functional Safety Parameter Reference

Abbreviations

- Acc. = Access: RO = Read Only, RW = Read/Write, WO = Write Only
- N/A = Not Available, Y = Yes, N = No
- Vel Unit = Velocity User Units, Acc Unit = Acceleration User Units, Dec Unit = Deceleration User Units, Pos Unit = Position User Units
- Parameters are sorted alphanumerically

Parameters related to safety functions	Acc.	Default	Parameter Package	CAN over EtherCAT			FSOE Object
				Axis1 Index 0x....	Axis2 Index 0x....	Sub	
AXIS#.SAFE.BRAKE#.STATE	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.ERROR.ACTIVE	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.FSOE.APPLPARAMLENGTH	RO	N/A	N/A	E901	E911	8	N
AXIS#.SAFE.FSOE.COMMPARAMLENGTH	RO	N/A	N/A	E901	E911	7	N
AXIS#.SAFE.FSOE.CONNECTIONID	RO	N/A	N/A	E901	E911	3	N
AXIS#.SAFE.FSOE.CONNECTIONTYPE	RO	N/A	N/A	E901	E911	6	N
AXIS#.SAFE.FSOE.LASTEROR	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.FSOE.PROTOCOLVERSION	RO	N/A	N/A	E901	E911	1	N
AXIS#.SAFE.FSOE.SAFETYADDR	RO	N/A	N/A	E901	E911	2	N
AXIS#.SAFE.FSOE.SRACRC	RO	N/A	N/A	E901	E911	9	N
AXIS#.SAFE.FSOE.STATE	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.FSOE.WATCHDOGTIME	RO	N/A	N/A	E901	E911	4	N
AXIS#.SAFE.FUNCTIONGRAPH	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.FUNCTIONSTATUS	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.RESTARTACK.REQUESTED	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.SBC.ACTIVE	RO	N/A	N/A	2061	2161	0	Y
AXIS1.SAFE.SBT.ERROR	RO	N/A	N/A	40F1	-	1	N
AXIS2.SAFE.SBT.ERROR	RO	N/A	N/A	-	40F1	2	N
AXIS1.SAFE.SBT.MOVE	WO	N/A	N/A	2FC0	-	1	N
AXIS2.SAFE.SBT.MOVE	WO	N/A	N/A	-	2FC0	2	N
AXISx.SAFE.SBT.SBA.ACTIVE	RO	N/A	N/A	2060	2161	0	Y
AXIS1.SAFE.SBT.STATE	RO	N/A	N/A	40F0	-	1	N
AXIS2.SAFE.SBT.STATE	RO	N/A	N/A	-	40F0	2	N
AXIS#.SAFE.SS1_#.ACTIVE	RO	N/A	N/A	665F	6E5F	Inst1: 1 Inst2: 2 Inst3: 3	Y
AXIS#.SAFE.SS1_#.DEC	RW	div	Servo Drive	N/A	N/A	N/A	N
AXIS#.SAFE.SS1_#.INTERNALSTATE	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS#.SAFE.SS1_#.MODE	RW	0	Servo Drive	N/A	N/A	N/A	N
AXIS#.SAFE.STO.ACTIVE	RO	N/A	N/A	6640	6E40	0	Y
AXIS#.SAFE.STO.REPORTFAULT	RW	1	Servo Drive	5007	5007	1	N
AXIS#.SAFE.TEMPWARNING.ACTIVE	RO	N/A	N/A	N/A	N/A	N/A	N
AXIS1.SAFEPARAM.AXISCFGEN	RO	1	Safety	3100	-	2	N
AXIS2.SAFEPARAM.AXISCFGEN	RO	1	Safety	-	3100	3	N
AXIS#.SAFEPARAM.SBC.BRAKETIMEDELAY	RW	100ms	Safety	3156	3256	3	N
AXIS1.SAFEPARAM.SBC.BRAKE1ATTACHED	RW	see keyword chapter	Safety	3156	-	4	N

Parameters related to safety functions	Acc.	Default	Parameter Package	CAN over EtherCAT			FSOE Object
				Axis1 Index 0x....	Axis2 Index 0x....	Sub	
AXIS1.SAFEPARAM.SBC.BRAKE2ATTACHED	RW	see keyword chapter	Safety	3156	-	5	N
AXIS2.SAFEPARAM.SBC.BRAKE1ATTACHED	RW	see keyword chapter	Safety	-	3256	4	N
AXIS2.SAFEPARAM.SBC.BRAKE2ATTACHED	RW	see keyword chapter	Safety	-	3256	5	N
AXIS#.SAFEPARAM.SBC.MUTINGSOURCE	RW	0	Safety	3156	3256	4	N
AXIS#.SAFEPARAM.SBT.FUNCTIONACTIVATION	RW	1	Safety	3157	3257	1	N
AXIS#.SAFEPARAM.SBT.MAXAPPLLOAD	RW	1000mA	Safety	3157	3257	3	N
AXIS1.SAFEPARAM.SBT.MAXMOTIONBRAKE1	RW	300arcmin	Safety	3157	-	4	N
AXIS1.SAFEPARAM.SBT.MAXMOTIONBRAKE2	RW	300arcmin	Safety	3157	-	5	N
AXIS2.SAFEPARAM.SBT.MAXMOTIONBRAKE1	RW	300arcmin	Safety	-	3257	4	N
AXIS2.SAFEPARAM.SBT.MAXMOTIONBRAKE2	RW	300arcmin	Safety	-	3257	5	N
AXIS#.SAFEPARAM.SBT.MAXTIMEINTERVAL	RW	480min	Safety	3157	3257	2	N
AXIS#.SAFEPARAM.SBT.TORQUEDURATION	RW	500ms	Safety	3157	3257	6	N
AXIS#.SAFEPARAM.SDB.DELAYBEFORESWITCHING	RW	1ms	Safety	3158	3258	3	N
AXIS#.SAFEPARAM.SDB.FUNCTIONACTIVATION	RW	0	Safety	3158	3258	1	N
AXIS#.SAFEPARAM.SDB.READBACKSOURCE	RW	0	Safety	3158	3258	3	N
AXIS#.SAFEPARAM.SS1_#.FSOE	RW	0	Safety	Inst1: 3153 Inst2: 3154 Inst3: 3155	Inst1: 3253 Inst2: 3254 Inst3: 3255	3	N
AXIS#.SAFEPARAM.SS1_#.FUNCTIONACTIVATION	RW	Inst1: 1 Inst2: 0 Inst3: 0	Safety	Inst1: 3153 Inst2: 3154 Inst3: 3155	Inst1: 3253 Inst2: 3254 Inst3: 3255	1	N
AXISx.SAFEPARAM.SS1_#.SAFEINPUT	RW	0	Safety	Inst1: 3153 Inst2: 3154 Inst3: 3155	Inst1: 3253 Inst2: 3254 Inst3: 3255	2	N
AXIS#.SAFEPARAM.SS1_#.TIMETOSTO	RW	2ms	Safety	Inst1: 3153 Inst2: 3154 Inst3: 3155	Inst1: 3253 Inst2: 3254 Inst3: 3255	4	N
AXIS#.SAFEPARAM.STO.FSOE	RW	see keyword chapter	Safety	3152	3252	3	N

Parameters related to safety functions	Acc.	Default	Parameter Package	CAN over EtherCAT			FSOE Object
				Axis1 Index 0x....	Axis2 Index 0x....	Sub	
AXIS#.SAFEPARAM.STO.FUNCTIONACTIVATION	RW	1	Safety	3152	3252	1	N
AXIS#.SAFEPARAM.STO.RESTARTACKMODE	RW	0	Safety	3152	3252	4	N
AXIS#.SAFEPARAM.STO.RESTARTACKSOURCE	RW	0	Safety	3152	3252	5	N
AXIS1.SAFEPARAM.STO.SAFEINPUT	RW	see keyword chapter	Safety	3152	-	2	N
AXIS2.SAFEPARAM.STO.SAFEINPUT	RW	see keyword chapter	Safety	-	3252	2	N
BRAKE1.SAFE.SBT.ELAPSED	RO	N/A	N/A	40F2	40F2	1	N
BRAKE2.SAFE.SBT.ELAPSED	RO	N/A	N/A	40F2	40F2	2	N
BRAKE1.SAFE.SBT.STATE	RO	N/A	N/A	40F3	40F3	1	N
BRAKE2.SAFE.SBT.STATE	RO	N/A	N/A	40F3	40F3	2	N
SAFE.CFGERROR	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.CHANGEPASSWORD	WO	N/A	N/A	N/A	N/A	N/A	N
SAFE.CLEARSAFEID	WO	N/A	N/A	N/A	N/A	N/A	N
SAFE.CRC	RO	N/A	N/A	37C3	37C3	0	N
SAFE.DEVICECRC	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.ERROR	RO	N/A	N/A	37C4	37C4	0	N
SAFE.ERRORINSTANCE	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.ID	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.IDANDCRC	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.INVALIDATEPARAMS	WO	N/A	N/A	N/A	N/A	N/A	N
SAFE.MONITOR#.AXIS	RW	0	N/A	N/A	N/A	N/A	N
SAFE.MONITOR#.DATA	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.MONITOR#.INSTANCE	RW	0	N/A	N/A	N/A	N/A	N
SAFE.MONITOR#.SOURCE	RW	0	N/A	N/A	N/A	N/A	N
SAFE.STATE	RO	N/A	N/A	37C1	37C1	0	N
SAFE.SWITCH	RO	N/A	N/A	37C2	37C2	0	N
SAFE.VALIDATEPARAM	WO	N/A	N/A	37C0	37C0	1,2,3,4	N
SAFE.VALIDATIONLOG	RO	N/A	N/A	N/A	N/A	N/A	N
SAFE.VERIFYFW	WO	N/A	N/A	N/A	N/A	N/A	N
SAFEPARAM.IOFAILUREACKSOURCE	RW	0	Safety	3100	3100	1	N
SAFEPARAM.SAFEFIELDDBUS.ACTIVATION	RW	see keyword chapter	Safety	N/A	N/A	N/A	N
SAFEPARAM.SIN.DISTINCTPULSE	RW	0	Safety	3101	3101	1	N
SAFEPARAM.SINDUAL#.EN	RW	see keyword chapter	Safety	3101	3101	Inst1: 2 Inst2: 3	N
SAFEPARAM.SOUTDUAL#.EN	RW	0	Safety	3102	3102	Inst1: 1 Inst2: 2	N
SAFEPARAM.SOUTDUAL#.SOURCE	RW	0	Safety	3102	3102	Inst1: 3 Inst2: 4	N

Parameters related to safety functions	Acc.	Default	Parameter Package	CAN over EtherCAT			FSOE Object
				Axis1 Index 0x....	Axis2 Index 0x....	Sub	
SAFEPARAM.SOUT#.SOURCE	RW	see keyword chapter	Safety	3102	3102	Inst1: 5 Inst2: 6 Inst3: 7 Inst4: 8	N
SINDUAL#.STATE	RO	N/A	N/A	N/A	N/A	N/A	N
SIN#.STATE	RO	N/A	N/A	N/A	N/A	N/A	N
SOUTDUAL#.STATE	RO	N/A	N/A	N/A	N/A	N/A	N
SOUT#.STATE	RO	N/A	N/A	N/A	N/A	N/A	N

9.9.1 Safety Parameters, sorted alphanumeric

9.9.1.1 AXIS#.SAFE.BRAKE#.STATE

Description

Indicates the internal state of the brake state machine.

Value	Description
0	Brake engaged
1	Releasing brake
2	Brake released
3	Engaging brake

Context

For complete SBC information refer to "SBC (Safe Brake Control)" (→ # 238).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read Only
Units	N/A
Range	0 or 4
Default Value	0
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.2 AXIS#.SAFE.ERROR.ACTIVE

Description

Indicates whether the safety system is in error or not. "SAFE.ERROR" (→ # 347) and "SAFE.ERRORINSTANCE" (→ # 349) can be used to retrieve information about the error.

Value	Description
0	No error
1	Error

Versions

Action	Version	Notes
Implemented	02-04-00-000	Implemented in SMM revision v0.56

General Information

Type	Read Only
Units	N/A
Range	0, 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.3 AXIS#.SAFE.FSOE.APPLPARAMLENGTH

Description

Indicates the size of the FSoE application parameters. If using WorkBench safety parameters, this is 0 and if using application parameters over FSoE it is 4 bytes.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	0-65535
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.4 AXIS#.SAFE.FSOE.COMMPARAMLENGTH

Description

Indicates the length of FSoE communication parameters. This is fixed at 2 bytes because the only com parameter transferred is the watchdog time which is U16.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	2
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.5 AXIS#.SAFE.FSOE.CONNECTIONID

Description

Indicates the current FSoE connection ID assigned by the FSoE master once the connection FSoE state is reached.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	1-65535
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.6 AXIS#.SAFE.FSOE.CONNECTIONTYPE

Description

This returns the FSoE connection type parameter. In the case of the AKD2G, this value is a constant 2 to indicate a slave device.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	2
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.7 AXIS#.SAFE.FSOE.LASTERROR

Description

This parameter gives the last error shown to the Fail Safe over EtherCAT (FSoE) stack with one of the following values:

Value	Description
0	Local reset or acknowledgement of a RESET command
1	Unexpected command
2	Unknown command
3	Invalid connection ID
4	CRC error
5	Watchdog has expired
6	Invalid FSoE slave address
7	Invalid safety data
8	Invalid communication parameter length
9	Invalid communication parameter data
10	Invalid application parameter length
11	Invalid application parameter data

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	Implemented in SMM v0.54

General Information

Type	Read Only
Units	N/A
Range	0, 0xFF
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.8 AXIS#.SAFE.FSOE.PROTOCOLVERSION

Description

Displays the version of the FSoE protocol in use.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	0-65535
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.9 AXIS#.SAFE.FSOE.SAFETYADDR

Description

This command is the FSoE safety address for this axis. The format of the safety address is nnaa where nn is the SafeID and aa is the axis ID.

Example

If SafeID is 10 then AXIS1.SAFE.FSOE.SAFETYADDR is 1001 and AXIS2.SAFE.FSOE.SAFETYADDR is 1002.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	101 to 9901 for Axis 1 102 to 9902 for Axis 2
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.10 AXIS#.SAFE.FSOE.SRACRC

Description

Returns the Safety Related Application (SRA) Cyclic Redundancy Check (CRC) used to validate safety parameters through Fail Safe over EtherCAT (FSoE).

Versions

Action	Version	Notes
Implemented	02-04-00-000	Implemented in SMM revision v0.56

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.11 AXIS#.SAFE.FSOE.STATE

Description

This is the EtherCAT FSoE command word being sent to the drive from the FSoE master.

Value	Description
0x36	ProcessData – Process data is passed between FSoE master and slave.
0x2A	Reset – FSoE communication is in reset state.
0x4E	Session – FSoE session is being established between master and slave.
0x64	Connection – FSoE connection is being established between master and slave.
0x52	Parameter – Safe parameters are being downloaded to slave.
0x08	FailSafeData – Fail-safe values are being used (usually due to an error).

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	0x08, 0x2A, 0x36, 0x4E, 0x52, 0x64
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.12 AXIS#.SAFE.FSOE.WATCHDOGTIME

Description

The current FSoE watchdog time in milliseconds. If an FSoE packet is not received within the configured time the drive enters a safe state. This is configured by using the FSoE master.

Context

For complete FSoE information refer to the *AKD2G EtherCAT Manual*.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	7 to 65535
Default Value	100
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.13 AXIS#.SAFE.FUNCTIONGRAPH

This parameter returns the graph of the safety functions configured in the safety parameters.

The following format is used:

NODEID: Name(**NODENAME**); Type(**NODETYPE**); State(**NODESTATE**); FunctionSource(**LIST_OF_FUNCTION_SOURCE**); FaultReactionSource(**LIST_OF_FAULT_REACTION**); InputSource(**LIST_OF_INPUTSOURCE**); FSoESource(**LIST_OF_FSOE_SOURCE**); Properties(**LIST_OF_PROPERTIES**)

- **NODEID**: node unique ID, built as follows:
 - Safe functions: SOS, SS1_1, SLS_3, ...
 - Safe inputs: SIN1_SOS, SINDUAL2_SS1_2, ...
 - FSoE: FSOE_SOS, FSOE_SS1_1, ...
 - I/O Error: IOError
- **NODENAME**: function name to display (eg FSoE, SIN1, SS1_1, ...) [displayed in the block]
- **NODETYPE**: node type - SIN, SINDUAL, FSOE, FUNCTION, ERROR [type of graphical block]
- **NODESTATE** can be: [colorization of the block]
 - For FUNCTION: "Idle", "ProcessComplete", "Active", "Faulted"
 - For SIN, SINDUAL or FSoE: "On", "Off"
 - For ERROR: "Normal", "Error"
- **LIST_OF_FUNCTION_SOURCE**, **LIST_OF_FAULT_REACTION**, **LIST_OF_INPUTSOURCE** and **LIST_OF_FSOE_SOURCE** are a list of **NODEIDs** separated by a comma
- **LIST_OF_PROPERTIES**: string list to display separated by commas

Versions

Action	Version	Notes
Implemented	Next release	Implemented in SMM revision v0.54

General Information

Type	Info
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	N/A

9.9.1.14 AXIS#.SAFE.FUNCTIONSTATUS

Description

This value returns a bit field which contains a status for some safety functions. The bit field is described in the following table:

Applicable to SMM 2

Bit	Value	Contents
0	STO state	= 1 when STO is active
1	SSM state Instance 1	= 1 when SSM Instance 1 reports the speed in the given range
2	SSM state Instance 2	= 1 when SSM Instance 2 reports the speed in the given range
3	SOS Instance 1	= 1 when SOS is active
4	SSR Instance 1	= 1 while the speed is limited
5	SDIp status	= 1 when the motor is moving in positive direction
6	SDIn status	= 1 when the motor is moving in negative direction
7	Error active	= 1 when an error is active
8	SCA Instance 1	= 1 while the position is within the given limits
9	SCA Instance 2	= 1 while the position is within the given limits
10	SCA Instance 3	= 1 while the position is within the given limits
11	SLA state	= 1 while the limited acceleration is held
12	SAR Instance 3	= 1 while the acceleration is limited
13	SSR Instance 2	= 1 while the speed is limited
14	SSR Instance 3	= 1 while the speed is limited
15	Not used	Not used
16	SLS state Instance 1	= 1 while the limited speed is held
17	SLS state Instance 2	= 1 while the limited speed is held
18	SLS state Instance 3	= 1 while the limited speed is held
19	SS1 status Instance 1	= 1 while SS1 is active
20	SS1 status Instance 2	= 1 while SS1 is active
21	SS1 status Instance 3	= 1 while SS1 is active
22	SS2 status Instance 1	= 1 while SS2 is active
23	SS2 status Instance 2	= 1 while SS2 is active
24	SLI Instance 1	= 1 while the position is limited
25	SLI Instance 2	= 1 while the position is limited
26	SLI Instance 3	= 1 while the position is limited
27	SLP Instance 1	= 1 while the position is limited
28	SLP Instance 2	= 1 while the position is limited
29	SLP Instance 3	= 1 while the position is limited
30	SAR Instance 1	= 1 while the acceleration is limited
31	SAR Instance 2	= 1 while the acceleration is limited
32	SDIp active	= 1 when is not allowed to move in the positive direction
33	SDIn active	= 1 when is not allowed to move in the negative direction
34	SOS Instance 2	= 1 when SOS is active

NOTE

Please note that this keyword replaces AXIS#.SAFE.ACTIVE.

Versions

Action	Version	Notes
Implemented	02-05-03-002	

General Information

Type	Read Only
Units	Bit field
Default Value	0
Data Type	U64
Stored in Non-Volatile Memory	No

9.9.1.15 AXIS#.SAFE.RESTARTACK.REQUESTED

Description

Indicates whether an acknowledge is requested by Safe Operating Stop (SOS) or Safe Torque Off (STO) to restart. When the acknowledge is requested, the parameter is 1, otherwise 0. Restart acknowledge is requested when:

- STO or SOS is configured to restart manually.
- The condition which activates STO or SOS is cleared.

Value	Description
0	No restart acknowledges requested
1	Restart acknowledge requested

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.56

General Information

Type	Read Only
Units	N/A
Range	0, 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.16 AXIS#.SAFE.SBC.ACTIVE

Description

Indicates whether Safe Brake Control (SBC) is active or not. When SBC is active the brake cannot be commanded to release. If SBC is enabled, it is executed once stopped during all stopping safety functions. Once the safety function condition clears, SBC will stop and allow the brake to be released.

Context

For complete SBC information refer to "SBC (Safe Brake Control)" (→ # 238).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.17 AXIS#.SAFE.SBT.ERROR

Description

Read the error of the Safe Brake Test (SBT) on the specified axis. The return value can be one of the following:

Value	Description
0	No error.
1	Fail to start the safe brake test. To start safe brake test, the axis must be enabled, the attached brakes must be released, and the axis must be at standstill.
2	Brakes are not released. To start safe brake test, the axis must be enabled, the attached brakes must be released, and the axis must be at standstill.
3	Fail to apply the brake. To find which brakes failed, see (→ # 341).
4	Fail to release the brake. To find which brakes failed, see (→ # 341).
5	Fail to apply current on the axis.
6	Motion limit exceed. Brake may be broken. To find which brakes failed, see (→ # 341).
7	Current feedback out of range. To find which brakes failed, see (→ # 341).
8	Communication error between the non-safe system part and the SMM.
9	Timeout. The safe brake test wasn't able to complete.
10	System error on the SMM.
11	Interrupted by user.
12	Measured load is bigger than the configured maximum load.
255	Unknown error.

Code

```
--> AXIS1.SAFE.SBT.ERROR
0
```

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 - 11
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.18 AXIS#.SAFE.SBT.MOVE

Description

Executes Safe Brake Test (SBT) on the specified axis. All brakes attached to this axis are tested. A maximum of two brakes can be attached to a specific axis. For this command to work, Safe Brake Control (SBC) and SBT must be configured consistently in the SMM using safety parameters.

Code

```
--> AXIS1.SAFE.SBT.MOVE
```

Context

For complete information on SBT, refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.19 AXIS#.SAFE.SBT.SBA.ACTIVE**Description**

Indicates the safe brake acknowledge state.

Value	Description
1	Brake state is safe
0	Brake needs an acknowledge

Context

For complete SBC/SBT information refer to "SBC (Safe Brake Control)" (→ # 238) / "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-02-00-000	

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.20 AXIS#.SAFE.SBT.STATE

Description

Reads the state of the Safe Brake Test (SBT) on the specified axis. The return value can be one of the following:

Value	Description
0	The test is not running.
1	The test is starting.
2	The test is started.
3	The brake is tested.
4	The test is stopping.

Code

```
--> AXIS1.SAFE.SBT.STATE
0
```

Context

For more information on "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0...4
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.21 AXIS#.SAFE.SS1_#.ACTIVE

Description

Indicates whether the specified safe stop instance is active. This signal is set to 1 when Safe Stop 1 (SS1) is activated. When finally SS1 activates the STO function (often after SS1_#.TIMETOSTO but it could be before if you are using a safe encoder), this active signal transition back to 0.

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.22 AXIS#.SAFE.SS1_#.DEC

Description

Sets the deceleration rate for the corresponding safe stop instance. When the safe stop instance is executed via safe input or FSoE the drive will attempt to stop following the associated deceleration rate. If multiple safe stop instances occur at the same time, the instance with the fastest deceleration rate will be used.

If [AXIS#.SAFE.SS1_#.MODE](#) is set to fieldbus control, the drive will not decelerate on its own and this parameter is ignored.

If the deceleration rate is too slow for the configured max. time ([AXIS#.SAFEPARAM.SS1_#.TIMETOSTO](#)), the drive will be disabled via STO. The maximum time, normal operating speed, and the deceleration rate should be configured to ensure the drive stops under control before the time expires.

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	02-01-00-000	

General Information

Type	Read/Write
Units	Rotary: RPM/s, RPS/s, deg/s ² , (custom units)/s ² , rad/s ² Linear: counts/s ² , mm/s ² , µm/s ² , (custom units)/s ²
Range	Depends on units.
Default Value	10,000 RPM/s, depends on units.
Data Type	Float
Stored in Non-Volatile Memory	Yes

9.9.1.23 AXIS#.SAFE.SS1_#.INTERNALSTATE

Description

Indicates the internal state of the Safe Stop 1 (SS1) state machine.

SS1-t is executed when the drive is FS2 or “Deceleration & Velocity monitoring” is disabled in the safety parameters.

SS1-r is executed when “Deceleration & Velocity monitoring” is enabled in the safety parameters.

SS1-t		SS1-r	
Value	Description	Value	Description
0	Not Running	0	Not Running
1	Delay Before STO	1	Delay Before Monitoring
		2	Target Velocity Not Reached
		3	Target Velocity Reached
4	STO Activated	4	STO Activated
		5	Fault Reaction

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read Only
Units	N/A
Range	0 to 5
Default Value	0 (Idle)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.24 AXIS#.SAFE.SS1_#.MODE

Description

Sets the behavior of the drive when the corresponding Safe Stop 1 (SS1) input is triggered.

Value	Description
0	Drive Controlled - Drive performs a controlled stop following AXIS#.SAFE.SS1_#.DEC deceleration rate.
1	Fieldbus Controlled - The drive will not perform any stopping action, the fieldbus master should stop the drive within the configured AXIS#.SS1_#.TIMETOSTO amount of time before the drive triggers the STO signal. The manufacturer status object 50EFh is used to signal to the fieldbus master that an SS1 input has been triggered.

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	02-01-00-000	

General Information

Type	Read/Write
Units	N/A
Range	0 to 1
Default Value	0 (Drive Controlled)
Data Type	Integer
Stored in Non-Volatile Memory	Yes

9.9.1.25 AXIS#.SAFE.STO.ACTIVE

Description

Indicates the Safe Torque Off (STO) state of the axis.

Value	Description
1	STO active (inputs +0V)
0	STO inactive (inputs 24V)

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.26 AXIS#.SAFE.STO.REPORTFAULT

Description

This parameter controls whether a Safe Torque Off (STO) fault F9000 will be created when STO is activated while the axis is enabled. The STO warning W9000 is always generated if this parameter is 1 and the STO function is active.

Value	Description
1	W9000 / F9000 are generated when axis is enabled and an STO occurs (default)
0	W9000 / F9000 are not generated

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read/Write
Units	N/A
Range	0 or 1
Default Value	1
Data Type	Integer
Stored in Non-Volatile Memory	Yes

9.9.1.27 AXIS#.SAFE.TEMPWARNING.ACTIVE

Description

Indicates whether the SMM temperature is in the expected range.

Value	Description
0	SMM temperature is not in the expected range
1	SMM temperature is ok

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.56

General Information

Type	Read Only
Units	N/A
Range	0, 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.28 AXIS#.SAFEPARAM.AXISCFGEN

Description

Indicates whether the axis is enabled in the safety configuration. This parameter is for information only. It is handled automatically when using safety parameters from WorkBench. When using FSoE parameters the defaults are properly filled out based on single or dual axis EtherCAT product codes.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

Fieldbus Information

EtherCAT CoE and CANopen

Command	Index	SubIndex	Data Type	Units	Float Scale	Access	PDO Mappable
AXIS1.SAFEPARAM.AXISCFGEN	3100h	02h	Unsigned8	-	-	Read/Write	No
AXIS2.SAFEPARAM.AXISCFGEN	3100h	03h	Unsigned8	-	-	Read/Write	No

9.9.1.29 AXIS#.SAFEPARAM.SBC.BRAKETIMEDELAY

Description

Indicates the delay required to apply the brake.

If the brake is configured without SDB (Safe Dynamic Brake) (brake before STO [Safe Torque Off]), the drive stays energized for the delay time once stopped to hold position and waits for the brake to apply before de-energizing the power stage.

If the brake is configured with SDB (brake simultaneously with STO), the delay time does not have any effect.

To ensure proper brake operation, this parameter should be the same or longer than the AXIS#.MOTOR.TBRAKEAPP time.

NOTICE

Ensure that the delay specified is enough time for the brake to fully engage. If an STO occurs prior to the brake fully engaged and the power stage is disabled, the axis load may fall.

Context

For complete SBC information refer to "SBC (Safe Brake Control)" (→ # 238).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	ms
Range	1-60,000 ms
Default Value	100 ms
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.30 AXIS#.SAFEPARAM.SBC.BRAKE#ATTACHED

Description

Indicates whether Safe Brake Control (SBC) is enabled on this axis. Axis 1 can have SBC enabled with two assigned brakes. Axis 2 can only have SBC enabled with one brake (ie: BRAKE2ATTACHED cannot be set).

Value	Description
0	No brake configured
1	Brake attached – without SDB (brake is applied before STO occurs according to 9.9.1.29 "AXIS#.SAFEPARAM.SBC.BRAKETIMEDELAY")
2	Brake attached – with SDB (brake is applied after STO occurs)

NOTE

If (see AXIS#.MOTOR.BRAKE) and (see BRAKE#.AXIS) indicates no brake is attached to the axis but this safety parameter indicates a brake is attached, a warning will occur.

NOTE

NOTE

It is allowed to have a brake configured on the axis without enabling SBC using (see AXIS#.MOTOR.BRAKE) and (see BRAKE#.AXIS).

NOTE

Context

For complete SBC information refer to "SBC (Safe Brake Control)" (→ # 238).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read/Write
Units	N/A
Range	0, 1, 2
Default Value	0 (on FSoE only)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.31 AXIS#.SAFEPARAM.SBC.MUTINGSOURCE

Description

This parameter allows the user to specify a safe input to bypass Safe Brake Control (SBC) and permit the brake to release regardless of whether SBC is active or not. The feature is referred to as ‘SBC Muting’ in documentation and WorkBench.

Value	Description
0	Not used
1	Safe input 1
2	Safe input 2
3	Safe input 3
4	Safe input 4
5	Safe dual input 1
6	Safe dual input 2

NOTE

If using this feature, make sure it is safe to release the brake and there is not a heavy load being held solely by the brake.

Context

For complete SBC information refer to "SBC (Safe Brake Control)" (→ # 238).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 or 6
Default Value	N/A
Data Type	Integer
Stored in Non- Volatile Memory	No

9.9.1.32 AXIS#.SAFEPARAM.SBT.FUNCTIONACTIVATION

Description

Indicates whether Safe Brake Test (SBT) can be activated. When ready for activation and SBT has not been run within the specified interval, a warning is activated indicating the need to run SBT. When the SBT is set to never be active, it is not possible to execute the safe brake test while there is no warning activated for SBT.

Value	Description
0	Never active
1	Ready for activation

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1
Default Value	0
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.33 AXIS#.SAFEPARAM.SBT.MAXAPPLOAD

Description

Specifies the maximum load of the application reflected to the motor shaft converted to current in mA. This value is scalar without regard to direction. It defines the 100% maximum application load. The Safe Brake Test (SBT) is done with 130% of maximum load (current).

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	mA
Range	1 – 200000 mA
Default Value	1000 mA (1 amp)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.34 AXIS#.SAFEPARAM.SBT.MAXMOTIONBRAKE#

Description

Indicates the amount of rotation that should occur for the shaft attached to the specified brake. If the amount of motion detected is larger than this specified amount, the Safe Brake Test (SBT) will enter a failed state and the Safe Brake Acknowledge (SBA) signal is low.

NOTE

The drive will still be allowed to be enabled and command motion. It is up to the safety system to prevent motion in the event of a failed/expired SBT (ie: SBA signal).

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	Arc minutes
Range	1 to 10500 arc minutes
Default Value	300 arc minutes
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.35 AXIS#.SAFEPARAM.SBT.MAXTIMEINTERVAL

Description

Indicates the time in minutes that Safe Brake Test (SBT) must be executed before a warning becomes active that indicates SBT should be run and the Safe Brake Acknowledge (SBA) signal becomes low.

NOTE

If the SBT period has elapsed the drive will permit enabling and movement. It is up to the safety system design to prevent motion, if required.

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	Minutes
Range	1 – 480 minutes
Default Value	480 minutes
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.36 AXIS#.SAFEPARAM.SBT.TORQUEDURATION

Description

Indicates the duration in milliseconds that current is applied to the motor with the brake applied during the Safe Brake Test (SBT).

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	ms
Range	500 ms to 60000 ms
Default Value	500 ms
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.37 AXIS#.SAFEPARAM.SDB.DELAYBEFORESWITCHING

Description

Indicates the time in milliseconds from STO being activated until the Safe Dynamic Brake (SDB) relay is energized.

Context

For complete SDB information refer to "SDB (Safe Dynamic Brake)" (→ # 254).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read/Write
Units	Milliseconds
Range	1 ms to 60,000 ms
Default Value	1 ms
Data Type	Integer
Stored in Non-Volatile Memory	No

Industrial Ethernet Information

EtherCAT CoE and CANopen

Command	Index	SubIndex	Data Type	Units	Float Scale	Access	PDO Mappable
AXIS1.SAFEPARAM.SDB.DELAYBEFORESWITCHING	3158h	03h	Unsigned16	-	-	Read/Write	No
AXIS2.SAFEPARAM.SDB.DELAYBEFORESWITCHING	3258h	03h	Unsigned16	-	-	Read/Write	No

9.9.1.38 AXIS#.SAFEPARAM.SDB.FUNCTIONACTIVATION

Description

Indicates whether Safe Dynamic Brake (SDB) is ready for activation.

Value	Description
0	Never active
1	Ready for activation

Context

For complete SDB information refer to "SDB (Safe Dynamic Brake)" (→ # 254).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1
Default Value	0 (Never active)
Data Type	Integer
Stored in Non -Volatile Memory	No

9.9.1.39 AXIS#.SAFEPARAM.SDB.READBACKSOURCE

Description

Indicates the digital input that is used for the read back input.

Value	Description
0	Not used
1	Safe Input 1
2	Safe Input 2
3	Safe Input 3
4	Sage Input 4
5	Safe dual input 1
6	Safe dual input 2

Context

For complete SDB information, refer to "SDB (Safe Dynamic Brake)" (→ # 254).

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Read/Write
Units	N/A
Range	0 or 6
Default Value	0 (Not used)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.40 AXIS#.SAFEPARAM.SS1_#.FSOE

Description

Indicates if the Safe Stop 1 (SS1) function instance can be activated through FSoE. This parameter can only be set to “Used” when FSoE is activated ([SAFEPARAM.SAFEFIELDBUS.ACTIVATION](#) is set to 1 - “Activated”).

Value	Description
0	Not used
1	Used

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1
Default Value	0 (Not used)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.41 AXIS#.SAFEPARAM.SS1_#.FUNCTIONACTIVATION

Description

Indicates how the function can be activated.
Safe Stop 1 (SS1) Instance 1 is always ready for activation (fault reaction).
SS1 Instance 2 and SS1 Instance 3 can be set to one of the two following values:

Value	Description
0	Never active
1	Ready for activation

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	1 for Instance 1 0, 1 for Instance 2 or 3
Default Value	Instance 1 : 1 (Ready for activation) Instance 2 and 3 : 0 (Never active)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.42 AXIS#.SAFEPARAM.SS1_#.SAFEINPUT

Description

Indicates which safe input can trigger the Safe Stop 1 (SS1) safety function.

Value	Description
0	Not used
1	Safe Input 1 (SIN1)
2	Safe Input 2 (SIN2)
3	Safe Input 3 (SIN3)
4	Safe Input 4 (SIN4)
5	Safe dual input 1 (SIN1/SIN2)
6	Safe dual input 2 (SIN3/SIN4)

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	2-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1, 2, 3, 4, 5, 6
Default Value	0 (Not used)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.43 **AXIS#.SAFEPARAM.SS1_#.TIMETOSTO**

Description

Indicates the maximum time delay in milliseconds to initiate Safe Torque Off (STO) when SS1 is activated.

Context

For complete SS1 information refer to (→ # 234).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	Milliseconds
Range	[2, 60000]
Default Value	2
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.44 AXIS#.SAFEPARAM.STO.FSOE

Description

Indicates if the Safe Torque Off (STO) function can be activated through FSoE. This parameter can only be set to "Used" when FSoE is activated ([SAFEPARAM.SAFEFIELDBUS.ACTIVATION](#) is set to 1 - "Activated").

Value	Description
0	Not used
1	Used

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1
Default Value	Default (WorkBench): 0 (Not Activated) Default (FSoE): 1 (Activated)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.45 AXIS#.SAFEPARAM.STO.FUNCTIONACTIVATION

Description

Indicates how the function can be activated. For Safe Torque Off (STO), the function is ready for activation.

Value	Description
1	Ready for activation

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	1
Default Value	Axis 1 – 1 (Ready for activation) Axis 2 – 1 (Ready for activation)
Data Type	Integer
Stored in Non-Volatile Memory	No

Fieldbus Information

EtherCAT CoE and CANopen

Command	Index	SubIndex	Data Type	Units	Float Scale	Access	PDO Mappable
AXIS1.SAFEPARAM.STO.FUNCTIONACTIVATION	3152h	01h	Unsigned 8	-	-	Read/Write	No
AXIS2.SAFEPARAM.STO.FUNCTIONACTIVATION	3252h	01h	Unsigned 8	-	-	Read/Write	No

9.9.1.46 AXIS#.SAFEPARAM.STO.RESTARTACKMODE

Description

Indicates whether the Safe Torque Off (STO) will automatically reset or requires a manual reset using safe input or FSoE. In Automatic Restart mode, when the STO input clears, the STO automatically restarts and the drive is enabled. In Manual Restart mode, when the STO input clears, the STO remains active until the configured input triggers the STO to restart. See 9.9.1.47 "AXIS#.SAFEPARAM.STO.RESTARTACKSOURCE").

Value	Description
0	Automatic Restart (default)
1	Manual Restart

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 (Automatic Restart) 1 (Manual Restart)
Default Value	0 (Automatic Restart)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.47 AXIS#.SAFEPARAM.STO.RESTARTACKSOURCE

Description

Indicates the input to use to manually clear the Safe Torque Off (STO) once the STO input is cleared. Only used when the STO is configured for Manual Restart mode (see 9.9.1.46 "AXIS#.SAFEPARAM.STO.RESTARTACKMODE").

Value	Description
0	Not Used
1	Safe Input 1
2	Safe Input 2
3	Safe Input 3
4	Safe Input 4
5	Safe dual input 1
6	Safe dual input 2

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 or 6
Default Value	0 (Not used)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.48 AXIS#.SAFEPARAM.STO.SAFEINPUT

Description

Indicates which safety input can trigger the Safe Torque Off (STO) safety function.

Value	Description
0	Not used
1	Safe Input 1 (SIN1)
2	Safe Input 2 (SIN2)
3	Safe Input 3 (SIN3)
4	Safe Input 4 (SIN4)
5	Safe dual input 1 (SIN1/SIN2)
6	Safe dual input 2 (SIN3/SIN4)

Context

For complete STO information refer to "STO (Safe Torque Off)" (→ # 229).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.54

General Information

Type	Read/Write
Units	N/A
Range	0, 1, 2, 3, 4, 5, 6
Default Value	0 (not used)
Data type	Integer
Stored in Non-Volatile Memory	No

9.9.1.49 BRAKE#.SAFE.SBT.ELAPSED

Description

Returns the elapsed milliseconds since the last successful Safe Brake Test (SBT) on the specified brake. When the returned time reaches the max period defined by the safety parameters [AXIS#.SAFEPARAM.SBT.MAXTIMEINTERVAL](#), the Safe Brake Acknowledgment (SBA) signal is set to low.

Code

```
--> BRAKE1.SAFE.SBT.ELAPSED
3306031
```

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.50 BRAKE#.SAFE.SBT.STATE

Description

Read the state of the Safe Brake Test (SBT) on the specified brake. The return value is one of the following:

Value	Description
0	The brake is not tested.
1	The brake has been successfully tested.
2	The brake failed to test. It may be broken.
3	The brake is applying.
4	The brake is tested.
5	The brake is releasing.

Code

```
--> BRAKE1.SAFE.SBT.STATE  
0
```

Context

For complete SBT information refer to "SBT (Safe Brake Test)" (→ # 248).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 - 7
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.51 SAFE.CFGERROR

Description

In case the safety parameters validation fails due to invalid configuration, this parameter returns information about which parameters failed to validate and why.

Code

--> SAFE.CFGERROR

Parameter: [PARAMETER_NUMBER] PARAMETER_KEYWORD_NAME

Axis: AXIS_ID

Instance: INSTANCE_ID

Error: [ERROR_NUMBER] ERROR_DESCRIPTION

Context

For information on validation refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Stored in Non-Volatile Memory	No

9.9.1.52 SAFE.CHANGEPASSWORD

Description

Change or create the password used for safety parameters operation. The master password remains unchanged and valid. The password must be at least 8 characters long but not more than 25 characters. This password cannot be retrieved if lost but the master password can be used to reset it.

NOTE

The master password is SafeMotionMonitorXXX where XXX are the last 3 digits of the drive serial number.

Usage

SAFE.CHANGEPASSWORD <new_password> <confirmation_password>

All parameters are mandatory. The drive will return an error if:

- Not enough parameters are provided .
- Too much parameters are provided .
- At least one of the parameter is out of range.
- The confirmation password is not valid (error returned by the SMM)

NOTE

The password strings cannot contain any spaces.

<new_password>: String of 8 bytes min and 25 bytes max

<confirmation_password>: String of 8 bytes min and 25 bytes max

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.53 SAFE.CLEARSAFEID

Description

Clear the SafeID and invalidate the safety parameters. It clears the SafeID and invalidate the safety parameters and in consequence the SMM will go in a safe-state “SafeID not validated” (SAFE.STATE is 2). The SafeID can now be changed using the physical rotary-switches and then the drive must be rebooted to re-validate the SafeID.

Usage

```
Format is: SAFE.CLEARSAFEID <user_name> <password> <date_and_time>
```

```
<user_name>: Username used to perform the safety parameters operation. Max 8 characters.
```

```
<password>: Password used for safety parameters operation. Min 8 characters, max 25 characters.
```

```
<date_and_time>: Format is YYYY-MM-DDThh:mm:ssZ.
```

Example: 2019-02-05T16:10:10Z which is 5th of February 2019, 16:10:10 UTC. Time zone must always UTC.

Example: SAFE.CLEARSAFEID john my_password 2019-02-05T16:10:10Z

Context

For information on validation refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.54 SAFE.CRC

Description

Returns the Cyclic Redundancy Check (CRC) of the complete safety parameters file stored in this device. The CRC returned is 0, if there are no safety parameters available.

Bytes 0..3: System CRC

SAFE.CRC is accessible through telnet.

CoE gives the CRC (Index: 0x37C3, SubIndex: 0).

Code

```
--> SAFE.CRC  
0x31a564de
```

Context

For information on validation and CRC refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	All
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.55 SAFE.DEVICECRC

Description

Returns the Cyclic Redundancy Check (CRC) of the device's safety parameters dedicated to this device stored inside the complete safety parameters file. If there are no safety parameters available, the CRC returned is 0.

Code

```
--> SAFE.DEVICECRC
0x72d5a4df
```

Context

For information on CRC and validation refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	All
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.56 SAFE.ERROR

Description

Indicates the current error code of the SMM. Possible values of SAFE.ERROR are:

ID	Failure	Comments
0	No fault	
1	Safe input fault	
2	SDB failure	
3	Safe output fault	
4	STO output fault	
5	Encoder startup timeout	The communication with the encoder reported a fatal problem. The timeout for the startup of the encoder occurred.
6	Encoder fault: No position available	No encoder position is available but is needed. No valid data is available.
7	Power supply fault (Vcc)	Undervoltage lead to a reset of the SMM.
8	Black-channel fault	The safe fieldbus detected a failure.
9..11	Fatal faults	No transmission to drive due to a lack of active communication.
12	Safety parameter invalid	The drive enters a safe state engaging the brake and removing power simultaneously. This happens when the configured sequence is unknown.
13	Brake output fault	
14	Temperature fault	The temperature cools down when the drive is switched off.
15	Internal discrepancy	A discrepancy between two micro controllers on the SMM was detected.
16	FPGA not suitable	The FPGA software is not suitable for use with this SMM.
17	Internal fault	Error occurred.
18	I/O Fault	Error occurred which can be fixed.
19	Reserved	
20	External memory fault	A failure occurred at the external non-volatile memory.
21	Manufacturing parameter invalid	The manufacturing data is invalid.
22	External discrepancy	The two inputs used for a dual input are different.
23	Brake current fault	The brake current is out of range.
24	Encoder fault: No speed available	No speed is available but needed. No valid data is available.
25	Encoder fault: Invalid association	The association of the encoder to an axis is invalid. No valid data is available.
26	Encoder fault: Invalid type	The encoder type is invalid. No valid data is available.

Code

--> SAFE.ERROR
0

Context

For information on validation refer to "Safety Faults, Safety Warnings" (→ # 280).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.57 SAFE.ERRORINSTANCE

Description

Indicates the current instance of the error code returned by [SAFE.ERROR](#) (if applicable).

The parameter returns 0 when there is no instance or no error. If not, it returns the instance ID (for example, it returns 1 for Axis 1). The instance is dependent on the value returned by SAFE.ERROR. Depending on the context, it could be an Axis ID, Brake ID, encoder ID or Safe I/O ID.

Code

```
--> SAFE.ERRORINSTANCE
1
```

Versions

Action	Version	Notes
Implemented		Implemented in SMM revision v0.53

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.58 SAFE.ID

Description

Returns the SafeID of the device. The SafeID returned is 0, if there are no SafeID available.
SAFE.ID is accessible through telnet.

Code

```
--> SAFE.ID
0x31
```

Context

For information on validation and CRC refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	All
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.59 SAFE.IDANDCRC

Description

Returns the Cyclic Redundancy Check (CRC) and the SafeID of the complete safety parameters file stored in this device. The CRC returned is 0, if there are no safety parameters available.

Bytes 0..3: System CRC

Byte 4: SafeID

SAFE.IDANDCRC is accessible through telnet.

Code

```
--> SAFE.IDANDCRC
0x1031a564de
```

Context

For information on validation and CRC, refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	All
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.60 SAFE.INVALIDATEPARAMS

Description

Invalidate the safety parameters. This command is executed when the SMM is in “operational” (SAFE.STATE is 6). It will invalidate the safety parameters and in consequence the SMM will go in a safe-state “configuration needed” (SAFE.STATE is 3).

Usage

```
Format is: SAFE.INVALIDATEPARAMS <user_name> <password> <date_and_time>
```

```
<user_name>: Username used to perform the safety parameters operation. Max 8 characters.
```

```
<password>: Password used for safety parameters operation. Min 8 characters, max 25 characters.
```

```
<date_and_time>: Format is YYYY-MM-DDThh:mm:ssZ.
```

Example: 2019-02-05T16:10:10Z which is 5th of February 2019, 16:10:10 UTC. Time zone must always be UTC.

Example: SAFE.INVALIDATEPARAMS john my_password 2019-02-05T16:10:10Z

Context

For more information refer to "Validation" (→ # 276) and "Downloading Safety Parameter Packages" (→ # 269).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.61 SAFE.MONITOR#.AXIS

Description

Defines the axis of the monitored SMM variable returned by SAFE.MONITOR#.DATA. Two variables can be configured at the same time using SAFE.MONITOR1.AXIS and SAFE.MONITOR2.AXIS.

Code

```
--> SAFE.MONITOR1.AXIS 1
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read/Write
Units	N/A
Range	1 to 2 on dual axis product. 1 on single axis product
Default Value	1
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.62 SAFE.MONITOR#.DATA

Description

Reads the value of the monitored SMM variables. Two variables can be read at the same time using SAFE.MONITOR1.DATA and SAFE.MONITOR2.DATA. The variable to monitor is configured by using SAFE.MONITOR#.SOURCE, SAFE.MONITOR#.AXIS and SAFE.MONITOR#.INSTANCE.

Code

```
--> SAFE.MONITOR1.DATA
1
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.63 SAFE.MONITOR#.INSTANCE

Description

Defines the instance of the monitored SMM variable returned by [SAFE.MONITOR#.DATA](#). Two variables can be configured at the same time using SAFE.MONITOR1.INSTANCE and SAFE.MONITOR2.INSTANCE.

Code

```
--> SAFE.MONITOR1.INSTANCE 1
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read/Write
Units	N/A
Range	1 to 4
Default Value	1
Data Type	N/A
Stored in Non-Volatile Memory	N/A

9.9.1.64 SAFE.MONITOR#.SOURCE

Description

Defines the source of the monitored safe variable SAFE.MONITOR#.DATA. Two variables can be configured at the same time using SAFE.MONITOR1.SOURCE and SAFE.MONITOR2.SOURCE. The source can be one of the following values:

Value	Content
1	Current state of the internal state machine of the STO function
2	Current state of the internal state machine of the SS1 function
3	Current state of the internal state machine of the SBC function
4	Current state of the internal state machine of the brake (Axis information is ignored, Two instances for brake 1 and 2 are provided)
5 to 20	reserved, Functional Safety Option 3 only

Code

```
--> SAFE.MONITOR1.SOURCE 2
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read/Write
Description	Source of the monitored SMM variable
Units	N/A
Range	0 to 20
Default Value	1
Data Type	N/A

9.9.1.65 SAFE.STATE

Description

SAFE.STATE indicates the current state of the SMM. It's accessible through telnet and through CoE (Index: 0x37C1, SubIndex: 0). The possible values of SAFE.STATE are:

Value	Name	Description
0, 16...254	Invalid	Reserved.
1	Start-up	The SMM is starting up. This will be present, while the connection to the safe fieldbus starts up.
2	SafeID not validated	SafeID is not validated or invalid. Validation process required.
3	Configuration required	A new configuration is required. The configuration of the SMM may be broken.
4	Configuration invalid	The last configuration is invalid and new configuration is required.
5	Parameter validation required	Safety parameters are not validated.
6	Normal operation	The SMM is working normally. In this state, STO or the brake may be active.
7	Safe brake test	A brake test is occurring. The test will be triggered by the drive processor. This state is activated for the complete device, even though only a single axis is tested.
8	IO Failure	The SMM detected a fault that may be acknowledged. During this state STO and the brakes will be active.
9	Internal Failure	Some catastrophic failure occurred. The SMM does not release operation until it was power cycled.

Code

```
--> SAFE.STATE
6
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	1, 2, 3, 4, 5, 6, 7, 8, 9, 255
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.66 SAFE.SWITCH

Description

Returns a value defined by the state of the two rotary switches S1 and S2. The returned value is equal to (10*S1 + S2). When this value is validated, it becomes the SafeID.

Code

```
--> SAFE.SWITCH
16
```

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.67 SAFE.VALIDATEPARAM

Description

Validates the safety parameters. Safety parameters must first be downloaded to the device.

Format is: SAFE.VALIDATE <user_name> <password> <date_and_time> <safe_id>

All parameters are mandatory. The drive will return an error if:

- Not enough parameters are provided
- Too many parameters are provided
- At least one of the parameter is out of range.

Note that the user_name and the password strings cannot contain any spaces.

- <user_name>: String of 8 bytes max
- <password>: String of 8 bytes min and 25 bytes max
- <date_and_time>: In the format defined by the RFC3339. The date must be in the UTC time zone.

Code

```
--> SAFE.VALIDATE john john_password 2019-02-22T10:58:30Z 16
```

Context

For more information refer to "Validation" (→ # 276) and "Downloading Safety Parameter Packages" (→ # 269).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.68 SAFE.VALIDATIONLOG

Description

Returns logged information about safety parameters validation and SafeID management. First displayed entry is the newest one (Index: 0). 32 entries can be stored at a maximum. Each entry contains:

- A username to indicate who performs the operation. Note that for the SafeID the user validation is done using the push button. Then the user recorded is called HW_BUTTON.
- An information string can be:
 - "PARAM VAL (X, Z)" for safety parameters validation where X is the SafeID and Z is the CRC of the validated safety parameters.
 - "PARAM CLR (X)" for safety parameters invalidation where X is the SafeID.
 - "ID VAL (X)" for SafeID validation where X is the validated SafeID.
 - "ID CLR" for SafeID invalidation.
- A date in the format defined by the RFC3339. The date is always in UTC time zone. No date is recorded when the SafeID is validated (user operation through push button).

Code

```
--> SAFE.VALIDATIONLOG

0;john;PARAM VAL (16, 0x3F3A0F07);2019-02-18T14:58:55Z

1;rob;PARAM VAL (16, 0x3F3A0F07);2019-02-01T15:19:09Z

2;HW BTN;ID VAL (16);0000-00-00T00:00:00Z

3;john;PARAM CLR (16);2019-01-31T14:39:39Z

4;john;ID CLR;2019-01-31T14:39:39Z

5;john;PARAM VAL (16, 0x3F3A0F07);2019-01-31T14:58:19Z

6;john;PARAM CLR (16);2019-01-31T14:39:39Z
```

Context

For more information refer to "Validation" (→ # 276).

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	N/A
Default Value	N/A
Data Type	String
Stored in Non-Volatile Memory	No

9.9.1.69 SAFE.VERIFYFW

Description

Sets the username, password, and checksum that is used for an SMM firmware update. WorkBench automatically sends this command when using the firmware update dialog window. Once this command is sent, SMM firmware must be sent by HTTP within 30 seconds.

Usage

```
Format is: SAFE.VERIFYFW <user_name> <password> <checksum>
<user_name>: Username used to perform the safety firmware update. Max 8 characters.
<password>: Password used for safety firmware update. Min 8 characters, max 25
characters. <checksum>: Checksum of the firmware update binary.
```

Example: SAFE.VERIFYFW john my_password 0xa1878800

Versions

Action	Version	Notes
Implemented	02-00-00-000	

General Information

Type	Command
Units	N/A
Range	N/A
Default Value	N/A
Data Type	N/A
Stored in Non-Volatile Memory	No

9.9.1.70 SAFEPARAM.IOFAILUREACKSOURCE

Description

Indicates which safe input, if any, is configured as the I/O Failure acknowledge source. This parameter is configured using FSoE or WorkBench . When configured, it allows clearing of an I/O Failure warning (W9011) using the configured safety input.

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0...4
Default Value	0 (No safe input)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.71 SAFEPARAM.SAFEFIELDDBUS.ACTIVATION

With this parameter, the user configures if the safe fieldbus can have control of the safety functions. The following table shows the possible settings for the different use cases:

Case	Safety parameter configuration using	Use of FSoE connection	Safe fieldbus activation setting
1	WorkBench	Yes	Activated
2	WorkBench	No	Not activated
3	SRA (FSoE)	Yes	Activated*
4	FoE	Yes	Activated
5	FoE	No	Not activated

*automatically set when the connection is established and no valid safety configuration is present.

NOTE

If there is no valid safety configuration, but the FSoE master tries to establish a safety connection **without** SRA parameters, the connection is rejected.

Case 1: If this parameter is activated through safety configuration using WorkBench, the drive expects a FSoE connection and stays in safe state until this connection is successfully established. **Only if this parameter is activated, then** a safety function is allowed to be controlled by FSoE or activated by local safe digital inputs.

Case 2: If this parameter is set to “Not activated” in the safety configuration using WorkBench, safety functions can **only** be activated by local safe digital inputs.

Case 3: If there is no valid safety configuration, this parameter has the value “not activated”. However, if the FSoE master provides valid safety configuration through SRA parameters, the safety function can be assigned to be activated by FSoE or local safe digital inputs and SAFEFIELDDBUS.ACTIVATION is set to “Activated”.

Case 4: Same behavior as “case 1”, but the parameter file is downloaded using EtherCAT master.

Case 5: Same behavior as “case 2”, but the parameter file is downloaded using EtherCAT master.

NOTE

If a safety function is activated through FSoE, it is required this parameter is set to “Activated” and the parameter “FSoE” of the safety function is set to “Used”, e.g., for the STO function the parameter name is “SAFEPARAM.STO.FSOE”..

NOTE

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 (Not Activated) or 1 (Activated)
Default Value	Default (WorkBench): 0 (Not Activated) Default (FSoE): 1 (Activated)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.72 SAFEPARAM.SIN.DISTINCTPULSE

Description

This setting indicates whether pulses on safe inputs must all be distinct from each other (i.e., offset from each other or different periods).

NOTE

This does not disable the check for pulses on safe inputs. It only allows or disallows having the same pulse signal across safe inputs.

NOTE

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 (Disabled) or 1 (Enabled)
Default Value	0 (Disabled)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.73 SAFEPARAM.SINDUAL#.EN

Description

Enables dual safe inputs for SIN (Safe INput)1-4.

NOTE

NOTE

The corresponding single safety inputs are not allowed to be used when being used in a dual configuration. Safety functions must be configured with the dual input.

NOTE

NOTE

When enabled, paired inputs must be transitioned together within a certain period or an I/O failure warning ("W9011 " (→ # 282)) will occur putting the drive in a safe state.

Context

For more information, see "Safe Digital Inputs" (→ # 221)

Versions

Action	Version	Notes
Implemented	2-00-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 (Disabled) or 1 (Enabled)
Default Value	0 (Disabled)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.74 SAFEPARAM.SOUTDUAL#.EN

Description

Indicates whether the safe outputs are configured as dual outputs or not. When configured as dual, the paired outputs are triggered together.

Context

For more information, see "Safe Digital Outputs" (→ # 222)

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0 (Disabled) or 1 (Enabled 0
Default Value	0 (Disabled)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.75 SAFEPARAM.SOUTDUAL#.SOURCE

Description

When outputs are configured for dual outputs, this controls what safety function will trigger the safe output.

NOTE

WorkBench will not allow the user to select this setting unless the corresponding SOUTDUAL# is enabled. See [SAFEPARAM.SOUTDUALx.EN](#).

Value	Description	Value	Description	Value	Description	Value	Description
0x00	Off, no output signal driven	0x13	SLS – Axis 2 Instance 2	0x26	SAR – Axis 2 Instance 1	0x39	SCA – Axis 2 Instance 2
0x01	STO – Axis 1	0x14	SLS – Axis 2 Instance 3	0x27	SAR – Axis 2 Instance 2	0x3A	SCA – Axis 2 Instance 3
0x02	STO – Axis 2	0x15	SSM – Axis 1	0x28	SAR – Axis 2 Instance 3	0x3B	SDB – Axis 1
0x03	SS1 – Axis 1 Instance 1	0x16	SSM – Axis 2	0x29	SLI – Axis 1 Instance 1	0x3C	SDB – Axis 2
0x04	SS1 – Axis 1 Instance 2	0x17	SSR – Axis 1 Instance 1	0x2A	SLI – Axis 1 Instance 2	0x3D	SBC – Axis 1
0x05	SS1 – Axis 1 Instance 3	0x18	SSR – Axis 1 Instance 2	0x2B	SLI – Axis 1 Instance 3	0x3E	SBC – Axis 2
0x06	SS1 – Axis 2 Instance 1	0x19	SSR – Axis 1 Instance 3	0x2C	SLI – Axis 2 Instance 1	0x3F	SBA – Axis 1
0x07	SS1 – Axis 2 Instance 2	0x1A	SSR – Axis 2 Instance 1	0x2D	SLI – Axis 2 Instance 2	0x40	SBA – Axis 2
0x08	SS1 – Axis 2 Instance 3	0x1B	SSR – Axis 2 Instance 2	0x2E	SLI – Axis 2 Instance 3	0x43	Ready signal (always on)
0x09	SS2 – Axis 1 Instance 1	0x1C	SSR – Axis 2 Instance 3	0x2F	SLP – Axis 1 Instance 1	0x45	Restart acknowledge request – Axis 1
0x0A	SS2 – Axis 1 Instance 2	0x1D	SDIp – Axis 1	0x30	SLP – Axis 1 Instance 2	0x46	Restart acknowledge request – Axis 2
0x0B	SS2 – Axis 2 Instance 1	0x1E	SDIp – Axis 2	0x31	SLP – Axis 1 Instance 3	0xFF	Always On
0x0C	SS2 – Axis 2 Instance 2	0x1F	SDIn – Axis 1	0x32	SLP – Axis 2 Instance 1		
0x0D	SOS – Axis 1	0x20	SDIn – Axis 2	0x33	SLP – Axis 2 Instance 2		
0x0E	SOS – Axis 2	0x21	SLA – Axis 1	0x34	SLP – Axis 2 Instance 3		
0x0F	SLS – Axis 1 Instance 1	0x22	SLA – Axis 2	0x35	SCA – Axis 1 Instance 1		
0x10	SLS – Axis 1 Instance 2	0x23	SAR – Axis 1 Instance 1	0x36	SCA – Axis 1 Instance 2		
0x11	SLS – Axis 1 Instance 3	0x24	SAR – Axis 1 Instance 2	0x37	SCA – Axis 1 Instance 3		
0x12	SLS – Axis 2 Instance 1	0x25	SAR – Axis 1 Instance 3	0x38	SCA – Axis 2 Instance 1		

Context

For more information, see "Safe Digital Outputs" (→ # 222)

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0x00-0xFF
Default Value	0x00 (Off)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.76 SAFEPARAM.SOUT#.SOURCE

Description

When outputs are configured for single outputs, this controls what safety function triggers the safe output.

NOTE

WorkBench will not allow the user to select this setting if the corresponding output is being used in dual output mode. See [SAFEPARAM.SOUTDUALx.EN](#).

NOTE

Value	Description	Value	Description	Value	Description	Value	Description
0x00	Off, no output signal driven	0x13	SLS – Axis 2 Instance 2	0x26	SAR – Axis 2 Instance 1	0x39	SCA – Axis 2 Instance 2
0x01	STO – Axis 1	0x14	SLS – Axis 2 Instance 3	0x27	SAR – Axis 2 Instance 2	0x3A	SCA – Axis 2 Instance 3
0x02	STO – Axis 2	0x15	SSM – Axis 1	0x28	SAR – Axis 2 Instance 3	0x3B	SDB – Axis 1
0x03	SS1 – Axis 1 Instance 1	0x16	SSM – Axis 2	0x29	SLI – Axis 1 Instance 1	0x3C	SDB – Axis 2
0x04	SS1 – Axis 1 Instance 2	0x17	SSR – Axis 1 Instance 1	0x2A	SLI – Axis 1 Instance 2	0x3D	SBC – Axis 1
0x05	SS1 – Axis 1 Instance 3	0x18	SSR – Axis 1 Instance 2	0x2B	SLI – Axis 1 Instance 3	0x3E	SBC – Axis 2
0x06	SS1 – Axis 2 Instance 1	0x19	SSR – Axis 1 Instance 3	0x2C	SLI – Axis 2 Instance 1	0x3F	SBA – Axis 1
0x07	SS1 – Axis 2 Instance 2	0x1A	SSR – Axis 2 Instance 1	0x2D	SLI – Axis 2 Instance 2	0x40	SBA – Axis 2
0x08	SS1 – Axis 2 Instance 3	0x1B	SSR – Axis 2 Instance 2	0x2E	SLI – Axis 2 Instance 3	0x43	Ready signal (always on)
0x09	SS2 – Axis 1 Instance 1	0x1C	SSR – Axis 2 Instance 3	0x2F	SLP – Axis 1 Instance 1	0x45	Restart acknowledge request – Axis 1
0x0A	SS2 – Axis 1 Instance 2	0x1D	SDIp – Axis 1	0x30	SLP – Axis 1 Instance 2	0x46	Restart acknowledge request – Axis 2
0x0B	SS2 – Axis 2 Instance 1	0x1E	SDIp – Axis 2	0x31	SLP – Axis 1 Instance 3	0xFF	Always On
0x0C	SS2 – Axis 2 Instance 2	0x1F	SDIn – Axis 1	0x32	SLP – Axis 2 Instance 1		
0x0D	SOS – Axis 1	0x20	SDIn – Axis 2	0x33	SLP – Axis 2 Instance 2		
0x0E	SOS – Axis 2	0x21	SLA – Axis 1	0x34	SLP – Axis 2 Instance 3		
0x0F	SLS – Axis 1 Instance 1	0x22	SLA – Axis 2	0x35	SCA – Axis 1 Instance 1		
0x10	SLS – Axis 1 Instance 2	0x23	SAR – Axis 1 Instance 1	0x36	SCA – Axis 1 Instance 2		
0x11	SLS – Axis 1 Instance 3	0x24	SAR – Axis 1 Instance 2	0x37	SCA – Axis 1 Instance 3		
0x12	SLS – Axis 2 Instance 1	0x25	SAR – Axis 1 Instance 3	0x38	SCA – Axis 2 Instance 1		

Context

For more information, see "Safe Digital Outputs" (→ # 222)

Versions

Action	Version	Notes
Implemented	02-01-02-000	

General Information

Type	Read/Write
Units	N/A
Range	0x00-0xFF
Default Value	0x00 (Off)
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.77 SINDUAL#.STATE

Description

Reads the state of one safe dual digital input according to the number identified in the command. The safe dual input is composed of two physical safe inputs. The configuration of the safe dual input is determined by the safety parameters.

Usage

The state of the safe dual input is determined by the state of the two underlying safe inputs.

SIN1.STATE	SIN2.STATE	SINDUAL1.STATE
0	0	0
1	0	I/O failure
0	1	I/O failure
1	1	1

When dual channel mode is selected the drive supervises if the two inputs are in a different state for longer than 100 ms. If this occurs, an I/O failure fault is generated and the drive is put in safe-state.

Context

For more information, see "Safe Digital Inputs" (→ # 221)

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.78 SIN#.STATE

Description

SIN1 to SIN4. Reads the state of one safe digital input according to the number identified in the command.

Context

For more information, see "Safe Digital Inputs" (→ # 221) and "OSSD" (→ # 224)

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.79 SOUTDUAL#.STATE

Description

Reads the state of one safe dual digital output according to the number identified in the command. The safe dual output is composed of two physical safe outputs. The configuration of the safe dual output is determined by the safety parameters.

Usage

When dual channel mode is selected, the drive drives the two selected safe outputs as they were one safe output.

SOUT1.STATE	SOUT2.STATE	SOUTDUAL1.STATE
0	0	0
1	0	N/A
0	1	N/A
1	1	1

Context

For more information, see "Safe Digital Outputs" (→ # 222)

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

9.9.1.80 SOUT#.STATE

Description

SOUT1 to SOUT4. Reads the state of one safe digital output according to the number identified in the command.

Context

For more information, see "Safe Digital Outputs" (→ # 222)

Versions

Action	Version	Notes
Implemented	02-00-00-000	Implemented in SMM revision v0.32

General Information

Type	Read Only
Units	N/A
Range	0 or 1
Default Value	N/A
Data Type	Integer
Stored in Non-Volatile Memory	No

10 Approvals

NOTICE

If the drive is labeled Beta, approvals are pending.

10.1	Conformance with UL/cUL	379
10.2	Conformance with EU	383
10.3	Conformance with UK	384

10.1 Conformance with UL/cUL

10.1.1 3-12 A drives

This servo drive is listed under UL (Underwriters Laboratories Inc.) file number **E141084**.

USL, CNL - Power conversion equipment (NMMS, NMMS7)

USL (United States Standards - Listed): Indicates Investigated to United States Standard for Power Conversion Equipment, UL 61800-5-1.

CNL (Canadian National Standards - Listed): Indicates investigation to Canadian Standard for Industrial Control Equipment, CAN/CSA - C22.2, No. 274-17.

UL Markings / Marquages UL

English	Français
Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code, Canadian Electrical Code, or Machinery Directive, and any additional local codes.	Une protection de court-circuit à semi-conducteur intégrale ne fournit pas de protection de la dérivation. Il convient de garantir une protection de la dérivation conforme au NEC et aux réglementations locales en vigueur.
This product is suitable for use on a circuit capable of delivering not more than 10 kA (SCCR) when protected by class J fuses or circuit breakers, and of delivering not more than 65 kA (SCCR) when protected by semi-conductor fuses.	Ce produit peut être utilisé sur un circuit capable de délivrer un maximum de 10 kA (SCCR) lorsqu'il est protégé par des fusibles ou des disjoncteurs de classe J, et de délivrer un maximum de 65 kA (SCCR) lorsqu'il est protégé par des fusibles à semi-conducteurs.
Suitable for motor group installation on a circuit capable of delivering not more than 65 kA (SCCR) symmetrical.	Convient pour une installation de groupe moteur sur un circuit capable de délivrer pas plus de 65 kA rms symétriques.
These drives provide solid state motor overload protection at 125% of the rated FLA current. The drive overload trip point should not be set to less than 10% above the motor rated current: $AXIS\#.IL.FOLDFTHRESHU \geq 1.1 * AXIS\#.MOTOR.ICONT.$	Ces variateurs offrent une protection contre les surcharges de moteur à semi-conducteur à 125% du courant FLA nominal. Le point de déclenchement en surcharge du variateur ne doit pas être réglé à moins de 10% au dessus du courant nominal du moteur: $AXIS\#.IL.FOLDFTHRESHU \geq 1,1 * AXIS\#.MOTOR.ICONT.$
These devices are intended to be used in a pollution degree 2 environment and must be placed in an enclosure with min. size of 16 x 16 x 10 inches	Ces appareils sont prévus pour une utilisation dans un environnement de pollution de niveau 2 et doivent être placés dans une enceinte avec min. taille de 406 x 406 x 254 mm
Surrounding air temperature 40°C. Refer to chapter "Ambient Conditions", for other temperature ratings.	La température de l'air ambiant 40 °C. Voir chapitre "Ambient Conditions", pour connaître les autres températures.
Use minimum 75°C copper wire.	Utilisez un fil en cuivre 75 °C minimum.
- Connector X3 torque requirements: - screw terminals, tightening torque 18 in-lbs - locking screw, tightening torque 3.5 in-lbs	- Exigences de couple du connecteur X3: - bornes à vis, couple de serrage 2 Nm - vis de blocage, couple de serrage 0,35 Nm
CAUTION Risk of Electrical Shock! Capacitors can have dangerous voltages present up to five minutes after switching off the supply power. For increased safety, measure the voltage in the DC bus link and wait until the voltage is below 50 V.	ATTENTION: Risque de choc électrique! Des tensions dangereuses peuvent persister dans les condensateurs jusqu'à cinq minutes après la mise hors tension. Pour plus de sécurité, mesurez la tension dans la liaison de bus CC et attendez qu'elle soit inférieure à 50 V.

10.1.2 7V24S 24 A drives

This drive is listed under UL (Underwriters Laboratories Inc.) file number **E141084**.

USL, CNL - Power conversion equipment (NMMS, NMMS7)

USL (United States Standards - Listed): Indicates Investigated to United States Standard for Power Conversion Equipment, UL 61800-5-1.

CNL (Canadian National Standards - Listed): Indicates investigation to Canadian Standard for Industrial Control Equipment, CAN/CSA - C22.2, No. 274-17.

UL Markings / Marquages UL

English	Français
Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.	Une protection de court-circuit à semi-conducteur intégrale ne fournit pas de protection de la dérivation. Il convient de garantir une protection de la dérivation conforme au NEC et aux réglementations locales en vigueur.
This product is suitable for use on a circuit capable of delivering not more than 10kA (SCCR) when protected by class J fuses or circuit breakers, and of delivering not more than 65kA (SCCR) when protected by semi-conductor fuses.	Ce produit peut être utilisé sur un circuit capable de délivrer au maximum 10 kA (SCCR) lorsqu'il est protégé par des fusibles ou des disjoncteurs de classe J, et de délivrer au maximum 65 kA (SCCR) lorsqu'il est protégé par des fusibles à semi-conducteurs.
Suitable for motor group installation on a circuit capable of delivering not more than 10kA (SCCR) when protected by class J fuses or circuit breakers, and not more than 65kA (SCCR) when protected by semi-conductor fuses.	Convient à l'installation d'un groupe de moteurs sur un circuit capable de délivrer au maximum 10 kA (SCCR) lorsqu'il est protégé par des fusibles ou des disjoncteurs de classe J, et au maximum 65 kA (SCCR) lorsqu'il est protégé par des fusibles à semi-conducteurs.
These drives provide solid state motor overload protection at 125% of the rated FLA current. The drive overload trip point should not be set to less than 10% above the motor rated current: $AXIS\#.IL.FOLDFTHRESHU \geq 1.1 * AXIS\#.MOTOR.ICONT.$	Ces variateurs offrent une protection contre les surcharges de moteur à semi-conducteur à 125 % du courant FLA nominal. Le point de déclenchement en surcharge du variateur ne doit pas être réglé à moins de 10 % au dessus du courant nominal du moteur: $AXIS\#.IL.FOLDFTHRESHU \geq 1,1 * AXIS\#.MOTOR.ICONT.$
These devices are intended to be used in a pollution degree 2 environment and must be placed in an enclosure with min. size of 600 x 600 x 350 mm	Ces appareils sont prévus pour une utilisation dans un environnement de pollution de niveau 2 et doivent être placés dans une enceinte avec min. taille de 600 x 600 x 350 mm
Surrounding air temperature 40°C. Refer to chapter "Ambient Conditions", for other temperature ratings.	La température de l'air ambiant 40 °C. Voir chapitre "Ambient Conditions", pour connaître les autres températures.
Use minimum 75°C copper wire.	Utilisez un fil en cuivre 75 °C minimum.
- Connector X3A/X3B torque requirements: - screw terminals, tightening torque 18 in-lbs - locking screw, tightening torque 3.5 in-lbs	- Exigences de couple du connecteur X3A/X3B: - bornes à vis, couple de serrage 2 Nm - vis de blocage, couple de serrage 0,35 Nm
CAUTION Risk of Electrical Shock! Capacitors can have dangerous voltages present up to five minutes after switching off the supply power. For increased safety, measure the voltage in the DC bus link and wait until the voltage is below 50 V.	ATTENTION: Risque de choc électrique! Des tensions dangereuses peuvent persister dans les condensateurs jusqu'à cinq minutes après la mise hors tension. Pour plus de sécurité, mesurez la tension dans la liaison de bus CC et attendez qu'elle soit inférieure à 50 V.

10.2 Conformance with EU

NOTE

Declarations of Conformity can be found on the Kollmorgen website.

The drives have been tested by an authorized testing laboratory in a defined configuration, using the system components that are described in this documentation. Any divergence from the configuration and installation described in this documentation means that the user will be responsible for carrying out new measurements to ensure conformance with regulatory requirements.

Kollmorgen declares the conformity of the product series AKD2G with the following directives:

- EC Directive 2006/42/EU, Machinery Directive
Used harmonized standard EN 61800-5-2
- EC Directive 2014/35/EU, Low Voltage Directive
Used harmonized standard EN 61800-5-1
- EC Directive 2014/30/EU, EMC Directive
Used harmonized standard EN 61800-3

NOTICE

These devices can cause high-frequency interferences in non industrial environments and may require measures for interference suppression (such as additional external EMC filters). Maximum distance for unshielded I/O lines is 3 m inside the cabinet. If the I/O cable leaves the cabinet, it must be EMC shielded.

AKD2G-Sxx-6Vxx

NOTE

AKD2G-Sxx-6Vxx drives do not have integrated AC line EMC filters. External mains filters are described in the *Accessories Manual* (1~: FN2090, 3~: FN3288).

With external EMC mains filters for noise emission the AKD2G-Sxx-6Vxx meet the noise immunity requirements of the second environmental category (industrial environment).

- Motor cable < 10 m: use filter FN 3288 in industrial environment, category C2.
- Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C3.

AKD2G-Sxx-7Vxx

NOTE

AKD2G-Sxx-7Vxx drives have integrated EMC filters.

The AKD2G-Sxx-7Vxx meet the noise immunity requirements to the 2nd environmental category (industrial environment).

- AKD2G-Sxx-7V up to 12 Amps:
Motor cable < 10 m: no filter, in industrial environment, category C3.
Motor cable < 10 m: use filter FN 3288 in industrial environment, category C2.
Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C3.
- AKD2G-Sxx-7V 24:
Motor cable < 10 m: no filter, in industrial environment, category C2.
Motor cable ≥ 10 m: no filter, in industrial environment, category C3.
Motor cable ≥ 10 m: use filter FN 3288 in industrial environment, category C2.

10.2.1 Functional Safety

NOTE

TÜV Certificate for Functional Safety can be found on the Kollmorgen website.

Kollmorgen offers 3 levels of functional safety implementation for AKD2G:

- Functional Safety Option 1: STO; SIL2 PLd , safe digital I/O command.
- Functional Safety Option 2: STO, SS1-t, SBC, SBT, SDB; SIL3 PLe (→ # 214), safe digital I/O command or FSoE.
- Functional Safety Option 3: STO, SS1-t, SS1-r, SS2, SOS, SLS, SSM, SSR, SDI, SLA, SAR, SLI, SLP, SCA, SBC, SDB, SBT; SIL3 PLe , safe digital I/O command or FSoE.

This manual is valid for AKD2G drives with Functional Safety Option 2.

10.2.2 Conformance with RoHS

The drives are manufactured in conformance with the Directive 2011/65/EU (RoHS), including Delegated Directive 2015/863/EU for installation into Finished Electrical and Electronic Equipment (EEE). One or more exemptions per Annex III of Directive 2011/65/EU may be applicable.

The conformity is only valid on the delivery date.

The chemical composition of the product may change due to environmental influences.

10.2.3 Conformance with REACH

REGULATION (EC) No 1907/2006 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL as of 18 December 2006 concerning the Registration, Evaluation, Authorization and Restriction of Chemicals [REACH Regulations].

EU REACH Article 33 - Communication on SVHC identified in the Candidate List of Substances of Very High Concern (SVHC) for Authorisation.

Articles used in AKD2G drives may contain REACH SVHCs in concentrations above 0.1%.

Contact your Kollmorgen Sales Representative for the latest REACH SVHC information.

The conformity is only valid on the delivery date.

The chemical composition of the product may change due to environmental influences.

10.2.3.1 Waste Framework Directive Substances of Concern in Products (SCIP) Database

Standard Products constructed using Articles containing an SVHC in excess of 0.1% weight by weight, have been registered in the SCIP Database. SCIP Registration numbers for Standard Products can be found at [scip-database](#).

10.3 Conformance with UK

NOTE

Declarations of Conformity can be found on the Kollmorgen website.

Kollmorgen declares the conformity of the product series with these regulations:

- S.I. 2008/1597, Supply of Machinery (Safety) Regulations 2008
 - Used designated standards EN 61800-5-2
- S.I. 2016/1101, Electrical Equipment (Safety) Regulations 2016
 - Used designated standard EN 61800-5-1
- S.I. 2016/1091, Electromagnetic Compatibility Regulations 2016
 - Used designated standard EN 61800-3

These products comply with **The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012** for installation in a machine.

Kollmorgen authorized representative for UK government authority: Twiflex, Ampthill Road, Bedford, MK42 9RD, UK

11 Index

A

Abbreviations	16, 206
Address	
Fieldbus	188
FSoE	189
MAC	188
SafelD	188
Service IP	188
AKD 2G Family	38
Ambient Conditions	40
Analog setpoints	173
Aux. supply 24V, interface	106

B

Brake Requirements (FS)	228
-------------------------------	-----

C

Cable and Wire Requirements	65
Cable Length	65
CANbus	
Baud rate	167
Cable	165
CANopen interface	165
Node address	167
Termination	167
Commissioning	211
Conformance	
CE	383
Functional Safety	383
REACH	384
RoHS	384
UK	384
UL, cUL	379
Connector Position	73

D

DC Bus Capacitance	50
DC bus link, interface	107
Decommission	29
Dimensions	58
Disassemble	29
Display	51
Disposal	31
Document revisions	387
DSL	113
Dynamic Drive Braking	49

E

EEO	157
Electronic Gearing	157
Emergency Off	25
Emergency Stop Function	25
Emulated Encoder Output	157

Enclosure (FS)	207
EtherCAT	162
EtherNet	
Modbus TCP Protocol	169
EtherNet Fieldbus	162
EtherNet/IP	164

F

Factory Defaults without FSoE	222
Fault messages	199
Feedback Connection	122
Field replacement (FS)	279
FSOE Node Address	262
Functional Safety (FS)	202
Functional Safety 2 (FS2)	214
Fusing	
24V supply	107
Brake resistor	110
DC Bus Link	109
Mains supply	101

G

Grounding	62
Grounding Plates	73

H

Hardware requirements WorkBench	191
Hiperface DSL	113

I

I/O Connection	169
Initial Drive Test	187
Inputs	
Analog	173
Basic Data	171
Digital	175
Installation	
Electrical	61
Mechanical	57
Software WorkBench	192
Installation, Setup, Normal Operation	28
Instances	262

L

Leakage current	23
-----------------------	----

M

Mains supply, interface	95
Maintenance	29
Master-Slave	160
Mating Connectors	64
Mechanical Data	40
Modbus	169
Motor dual cable connection	114
Motor Holding Brake Connection	118
Motor interface	111

Motor single cable connection	112
N	
Nameplate	34
O	
Operating systems WorkBench	191
Operation (FS)	278
Operation States (FS)	279
OSSD	224
Outputs	
Analog	175
Basic Data	171
Digital	180
Relay	184
P	
Package supplied	34
Part Number Scheme	35
PC connection	167
Product Safety	19
PROFINET	163
Prohibited Use	
Functional Safety	205
General	22
Pushbuttons	51
R	
REACH	384
Re-forming	186
Regen circuit	49
Regen resistor	110
Regeneration Braking	49
Relay	184
Repair	31
RoHS	384
Rotary Switches	55
S	
SafeID	261
Safety	
Functional Safety	202
Product Safety	19
Safety Faults	280
Safety Instructions	
Drive Setup	186
Electrical Installation	62
General	20
Mechanical Installation	58
Safety Parameter Download	269
Safety Properties	214
Safety Warnings	280
SBC	238
SBT	248
SD Card Slot	56
SDB	254
Service Interface	167

Setup	186
Setup Software	190
SFA	143
SFD3	113
SFD-M	113
Shield connection	69
Shielding	62
Shock-hazard protection	23
Site	40
SS1-t	234
STO	229
Stop Function	25
Switch-on, switch-off behavior	192
Symbols used	15

T

Tightening torque	
X1, X2	82
X3	83
X3A	84
X3B	84
X23	90
X41	91
Trouble Shooting	200

U

UL Markings	379, 381
Update SMM Firmware	209
Use as directed	
Drive	22
Functional Safety	205
WorkBench Setup Software	190

V

Validation (FS)	276
Ventilation	40

W

Warning Messages	199
Warning note labels	23
Wiring	64

X

X23 / X41 Feedback Wiring Pinout Diagrams	130
X41 Feedback Wiring Pinout Diagrams	145

12 Record of Document Revisions

Edition	Remarks
...	Table with lifecycle information of this document (→ # 387)
A, 05/2021	First edition
B, 07/2022	SD Card text updated, Letter of Volatility link added, chapter "Shielding on drive" improved, Incr. Encoder feedback on X21 added, BiSS-C and SSI feedbacks on X41 (SFA) added, new motor connector image, chapter "Motion Bus interface" updated, PROFINET certified and available, chapter "Gearing" restructured, chapter "Feedback connector" restructured, SCCR rating for MV breaker changed, EtherNet/IP table updated, chapter "Mechanical Installation": Texts restructured and dimension table adapted, chapter "Mains supply": semi-conductor added, fusing chapter restructured, EAC approval removed, max. cable length per feedback type added, X23 feedback connector graphic expanded, conformity with UK added
C, 03/2024	7V24S drive contents added, including updated cover image, connector position image, general wiring diagrams, specifications and data, X3A and X3B connector content, X4 and X5 content, individual X23 / X41 feedback wiring diagrams and specifications added, added connection to various mains supply network pages, limitations table edited, addition to part number scheme, added connector options availability table, added Projection of molten particles hazard warning, updated Safety Manual version compatibility table, updated AC and DC bus drive groupings to define number of axes limits, updated DIO X22 and X23 diagrams and bullets to better define termination and differential or single-ended options, updated 7V24S 24 A drives UL Approvals table to align with 65kA Certification, update EEO X22 diagrams.
D, 10/2024 (INTERNAL)	Removed content referring to DVD, new limitations for SMM1 and 2, new support page, wiring diagram corrected for drive test without load, addition to REACH and RoHS conformity
E, 02/2025	Note on mission time added to chapter "Disposal", Removed content referring to DVD, new limitations for SMM 1.04 and SMM R_02-07-000, new support page, wiring diagram corrected for servo drive test without load, addition to REACH and RoHS conformity
F, 12/2025	new limitations added, SFD-M feedback added

12.1 Limitations

Limitation	Remarks	Solved in SMM FW
Restart the SMM if you download a new configuration which changes the used encoder protocols.	Restart the SMM when - the current configuration already uses HDSL and/or EnDat 2.2 and - you download a new configuration which adds or removes one of the encoder protocols. Example: Restart the SMM, if the current configuration uses only HDSL and you download a new configuration which only uses EnDat 2.2.	
No Safe Brake Test (SBT) for linear motors	Safe Brake Test is designed for rotary motors/brakes and thus does not support linear motors.	
Speed limitation for all safe encoders	Rotary encoders: a max. speed of 30,000rpm must not be exceeded. Linear encoders: depending on the resolution, the following speed must not be exceeded: 1nm res. / 8.38m/s 5nm res. / 41.9m/s 10nm res. / 83.8m/s	
A safe EnDat 2.2 encoder cannot be used with a safe HIPERFACE DSL encoder	If an EnDat 2.2 encoder is configured as a safe feedback on one of the two axes, the other axis cannot use a safe encoder, such as HIPERFACE DSL.	
HIPERFACE DSL EFX50 encoders are not supported.	The EFX50 encoder series is not supported and phased out by Sick. Workaround: Use a more recent Hiperface-DSL encoder series.	-
Do not use FSoE Status Word bit "Error acknowledge status".	The status Word bit "Error acknowledge status" is set to true when either an I/O failure is detected, the safe encoder is not configured or the safe speed is not available. In case of an I/O failure, FSoE will send "FailSafeData" anyway. Therefore, this bit doesn't serve any purpose in real applications. Workaround: Check for I/O failures using the FSoE state instead of the Status Word.	-
Position monitoring limits have to be less than half of the max. position with SOS/SLI/SDI.	When using position monitoring with functions that use relative position (SOS/SLI/SDI), the position limit parameters (upper and lower) have to be less than half of the max. position of the encoder. Workaround: -	
Position monitoring limits have to be less than half of the max. position with SLP/SCA and signed-range.	When using position monitoring with functions that use absolute position (SLP/SCA), the position limit parameters (upper and lower) have to be less than half of the max. position of the encoder when using a signed range. For an unsigned range, the position limit parameters have to be less than the max. position of the encoder. Workaround: -	
The deceleration ramp parameters for the safety functions SS1 (a_SS1), SS2 (a_SS2), SLS (a_SLS) and SSR (a_SSR) are using the defined velocity user unit per second instead of the defined acceleration user unit.	Example: When the velocity user unit is rpm, the acceleration user unit is m/s² and a_SS1 is set to 1000, then the unit will be 1000 rpm/s instead of 1000 m/s². Workaround: -	

Limitation	Remarks	Solved in SMM FW
Reset the absolute position when a safe encoder is physically replaced by another safe encoder.	Reset the absolute position when: - the safe encoder is physically replaced by another one (with the same or different model) and - the application is using at least one of the SLP or SCA instances (the application then requires a valid absolute position to operate).	
The Safe Parameters File upload function (see "Parameters Viewer") is broken and should not be used.	Using this function will either put the servo drive into safe state ((→ # 357)) or return garbage data.	

13 Copyrights, Trademarks, Patents, and Disclaimers

Copyright © 2025 Regal Rexnord Corporation, All Rights Reserved.

Information in this document is subject to change without notice. The software package described in this document is furnished under a license agreement. The software package may be used or copied only in accordance with the terms of the license agreement.

This document is the intellectual property of Kollmorgen and contains proprietary and confidential information. The reproduction, modification, translation or disclosure to third parties of this document (in whole or in part) is strictly prohibited without the prior written permission of Kollmorgen.

Kollmorgen Trademarks

Regal Rexnord and [Kollmorgen](#) are trademarks of [Regal Rexnord Corporation](#) or one of its affiliated companies. These trademarks or tradenames are owned by or under the control of Regal Rexnord Corporation or any of its affiliates:

- SafeMotion
- SMM

Other Trademarks

These trademarks or tradenames are **not** owned by or under the control of Regal Rexnord Corporation or any of its affiliates:

- EnDat, Dr. Johannes Heidenhain GmbH.
- EtherCAT and Safety over EtherCAT, Beckhoff Automation GmbH, Germany.
- EtherNet/IP, ODVA, Inc.
- HIPERFACE, Max Stegmann GmbH.
- Modbus, Schneider Electric USA, Inc.
- PROFINET, PROFIBUS Nutzerorganisation e.V.
- Windows, Microsoft Corporation.

Patents

Current patents

- US Patent 2017/0211640 (method and apparatus for power saving, fail-safe control of an electromechanical brake), patent pending
- US Patent 16,247,478 (method and apparatus for limiting the output voltages of switching mode power supplies), patent pending
- US Patent 8,154,228 (Dynamic Braking For Electric Motors)
- US Patent 8,214,063 (Auto-tune of a Control System Based on Frequency Response)
- US Patent 10,374,468 (System and method for improved DC power line communication)

Patents referring to fieldbus functions are listed in the matching fieldbus manual.

Disclaimers

Technical changes which improve the performance of the device may be made without prior notice!

This document is the intellectual property of Kollmorgen Corporation ("Kollmorgen"). All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

The information in this document is believed to be accurate and reliable at the time of its release. Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or

consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

Technische Änderungen, die der Verbesserung der Geräte dienen, vorbehalten!

Dieses Dokument ist geistiges Eigentum von Kollmorgen Corporation ("Kollmorgen"). Alle Rechte vorbehalten. Kein Teil dieses Werkes darf in irgendeiner Form (Fotokopie, Mikrofilm oder in einem anderen Verfahren) ohne schriftliche Genehmigung von Kollmorgen reproduziert oder unter Verwendung elektronischer Systeme verarbeitet, vervielfältigt oder verbreitet werden.

Die Genauigkeit und Verlässlichkeit der Informationen in diesem Dokument entspricht dem Kenntnisstand zum Zeitpunkt der Veröffentlichung. Kollmorgen übernimmt keine Verantwortung für Schäden oder Verluste, die sich aus der Verwendung dieser Hilfe ergeben, und lehnt ausdrücklich jegliche Haftung sowie Schadensersatzansprüche für Datenverlust, entgangene Nutzung und Sachschäden jeglicher Art ab, inklusive direkter, zufälliger oder Folgeschäden im Zusammenhang mit der Funktion oder Form des hierin oder in einem der mit diesem Dokument gelieferten Software enthaltenen Materials.

Es posible que se implementen sin aviso previo cambios técnicos que mejoran el rendimiento del dispositivo.

La propiedad intelectual de este documento pertenece a Kollmorgen Corporation ("Kollmorgen"). Todos los derechos reservados. Se prohíbe la reproducción de este documento por ningún medio (fotocopia, microfilm u otro método), así como su almacenamiento, procesamiento, copia o distribución por medios electrónicos, sin el consentimiento por escrito de Kollmorgen.

La información incluida en este documento se considera correcta y confiable en el momento de su publicación. Kollmorgen no asume ninguna responsabilidad por ningún daño o pérdida causados por el uso de este documento de ayuda y rechaza explícitamente toda responsabilidad o daño por pérdida de datos, pérdida de uso y daños en la propiedad de cualquier tipo, ya sea directos, incidentales o consecuentes, en relación con el rendimiento o la forma de los materiales aquí publicados, o con los programas de software que acompañan a este documento, o que surjan de estos.

Les modifications techniques qui améliorent les performances du dispositif peuvent être apportées sans avis préalable !

Ce document est la propriété intellectuelle de Kollmorgen Corporation ("Kollmorgen"). Tous droits réservés. Aucune partie de ce document ne peut être reproduite sous quelque forme que ce soit (photocopie, microfilm ou autre méthode) ni stockée, traitée, copiée ou distribuée de manière électronique sans l'autorisation écrite de Kollmorgen.

Les informations contenues dans ce document sont considérées exactes et fiables au moment de leur publication. Kollmorgen n'assume aucune responsabilité pour tout dommage ou perte résultant de l'utilisation de cette aide, et rejette expressément toute responsabilité ou tous dommages pour la perte de données, la perte d'utilisation et les dommages matériels de toute nature, directs, accessoires ou indirects, en ce qui concerne ou découlant des performances ou de la forme des matériaux présentés ici ou dans tout programme logiciel accompagnant ce document.

Modifiche tecniche volte a migliorare le prestazioni del dispositivo possono essere apportate senza preavviso.

Il presente documento è proprietà intellettuale di Kollmorgen Corporation ("Kollmorgen"). Tutti i diritti riservati. È vietata la riproduzione di qualsiasi parte di quest'opera in qualsiasi forma (fotocopia, microfilm o qualunque altro metodo) così come la memorizzazione, il trattamento, la copia o la distribuzione tramite mezzi elettronici senza l'autorizzazione scritta di Kollmorgen.

Le informazioni contenute nel presente documento sono ritenute accurate e affidabili al momento della pubblicazione. Kollmorgen non si assume alcuna responsabilità per eventuali danni o perdite risultanti dall'uso di questa guida e declina espressamente qualsiasi responsabilità o danni dovuti a perdita di dati, mancato utilizzo e danni materiali di qualunque tipo, diretti, accidentali o consequenziali, in relazione a o derivanti dal funzionamento o dalla forma dei materiali presentati qui o in eventuali programmi software che accompagnano il presente documento.

Alterações técnicas que melhoram o desempenho do dispositivo podem ser feitas sem aviso prévio!

Este documento é propriedade intelectual da Kollmorgen Corporation ("Kollmorgen"). Todos os direitos reservados. Nenhuma parte deste trabalho pode ser reproduzida sob qualquer forma (por fotocópia, microfilme ou qualquer outro método) ou armazenada, processada, copiada ou distribuída por meios eletrônicos sem a permissão escrita da Kollmorgen.

Acredita-se que as informações contidas neste documento sejam precisas e confiáveis no momento de sua divulgação. A Kollmorgen não assume nenhuma responsabilidade por quaisquer danos ou perdas resultantes do uso desta ajuda, e se isenta expressamente de qualquer responsabilidade ou danos por perda de dados, perda de uso e danos materiais de qualquer espécie, direta, incidental ou subsequente em relação a ou resultante do desempenho ou da forma dos materiais apresentados aqui ou em quaisquer programas de software que acompanhem este documento.

我们可能会进行技术更改以提高设备性能，恕不另行通知！

本文档知识产权归 Kollmorgen Corporation ("Kollmorgen") 所有，Kollmorgen 保留所有权利。未经 Kollmorgen 书面许可，不得以任何形式（影印、缩微胶片或其他任何方式）复制本文档任何内容，亦不得以任何电子手段存储、处理、复制或分发本文档的任何内容。

据我们所知，本文档所含信息截至发布日是准确可靠的。对于因使用本帮助文档而导致的任何损害或损失，Kollmorgen 概不承担任何责任。Kollmorgen 特此明确声明，对于因本文档中的任何材料或随附本文档之任何软件程序的性能或形式导致的或与之相关的任何类型的数据丢失、使用中断损失或财产损失（包括直接、间接和衍生性损失或损害），Kollmorgen 不承担任何法律责任或损害赔偿赔偿责任。

Support and Services

About Kollmorgen

When you need motion and automation systems for your most demanding applications and environments, count on Kollmorgen - the innovation leader for more than 100 years. We deliver the industry's highest-performing, most reliable motors, drives, AGV control solutions and automation platforms, with over a million standard and easily modifiable products to meet virtually any motion challenge. We offer manufacturing facilities, distributors and engineering expertise in all major regions around the world, so you can bring a better machine to market faster and keep it profitable for many years to come.

Kollmorgen Support Network



See the [Kollmorgen Support Network](#) for product support, product downloads, knowledge base answers, and information.



Kollmorgen Support Locations

North America

Kollmorgen Corporation

201 West Rock Road
Radford, VA 24141, USA

Web: www.kollmorgen.com

Email: kollmorgen.support@regalrexnord.com

Tel.: +1-540-633-3545

Fax: +1-540-639-4162

Europe

Kollmorgen Europe GmbH

Pempelfurtstr. 1
40880 Ratingen, Germany

Web: www.kollmorgen.com

Email: Technical.Support.EU@regalrexnord.com

Tel.: +49-2102-9394-0

Fax: +49-2102-9394-3155

South America

Altra Industrial Motion do Brasil

Equipamentos Industriais Ltda.

Avenida João Paulo Ablas, 2970
Jardim da Glória, Cotia – SP
CEP 06711-250, Brazil

Web: www.kollmorgen.com

Email: kollmorgen.contato@regalrexnord.com

Tel.: (+55 11) 4615-6300

China and SEA

A and S Industry Technology (Tianjin) Co., Ltd.

Room 302, Building 5, Libao Plaza,
88 Shenbin Road, Minhang District,
Shanghai, China.

Web: www.kollmorgen.cn

Email: Sales.China@regalrexnord.com

Tel.: +86-400 668 2802

KOLLMORGEN

A REGAL REXNORD BRAND